

R&S® SMJ100A

Vector Signal Generator

Operating Manual



1403.7458.32 – 14

This document describes the R&S®SMJ100A, stock no. 1403.4507.02 and its options.

- R&S®SMJ-B9/-B10/-B11
- R&S®SMJ-B13
- R&S®SMJ-B16
- R&S®SMJ-B18
- R&S®SMJ-B20
- R&S®SMJ-B50/-B51
- R&S®SMJ-B81
- R&S®SMJ-B90
- R&S®SMJ-B103/-B106
- R&S®SMJ-K61
- R&S®SMJ-K62
- R&S®SMJ-K80

This manual describes firmware version FW 3.20.286.xxx and later of the R&S®SMU200A, R&S®SMATE200A, R&S®SMJ100A and R&S®AMU200A.

© 2016 Rohde & Schwarz GmbH & Co. KG

Mühlhofstr. 15, 81671 München, Germany

Phone: +49 89 41 29 - 0

Fax: +49 89 41 29 12 164

Email: info@rohde-schwarz.com

Internet: www.rohde-schwarz.com

Subject to change – Data without tolerance limits is not binding.

R&S® is a registered trademark of Rohde & Schwarz GmbH & Co. KG.

Trade names are trademarks of the owners.

The following abbreviations are used throughout this manual: R&S®SMJ100A is abbreviated as R&S SMJ, R&S®WinIQSIM2™ is abbreviated as R&S WinIQSIM2.

Basic Safety Instructions

Always read through and comply with the following safety instructions!

All plants and locations of the Rohde & Schwarz group of companies make every effort to keep the safety standards of our products up to date and to offer our customers the highest possible degree of safety. Our products and the auxiliary equipment they require are designed, built and tested in accordance with the safety standards that apply in each case. Compliance with these standards is continuously monitored by our quality assurance system. The product described here has been designed, built and tested in accordance with the EC Certificate of Conformity and has left the manufacturer's plant in a condition fully complying with safety standards. To maintain this condition and to ensure safe operation, you must observe all instructions and warnings provided in this manual. If you have any questions regarding these safety instructions, the Rohde & Schwarz group of companies will be happy to answer them.

Furthermore, it is your responsibility to use the product in an appropriate manner. This product is designed for use solely in industrial and laboratory environments or, if expressly permitted, also in the field and must not be used in any way that may cause personal injury or property damage. You are responsible if the product is used for any purpose other than its designated purpose or in disregard of the manufacturer's instructions. The manufacturer shall assume no responsibility for such use of the product.

The product is used for its designated purpose if it is used in accordance with its product documentation and within its performance limits (see data sheet, documentation, the following safety instructions). Using the product requires technical skills and, in some cases, a basic knowledge of English. It is therefore essential that only skilled and specialized staff or thoroughly trained personnel with the required skills be allowed to use the product. If personal safety gear is required for using Rohde & Schwarz products, this will be indicated at the appropriate place in the product documentation. Keep the basic safety instructions and the product documentation in a safe place and pass them on to the subsequent users.

 
Observing the safety instructions will help prevent personal injury or damage of any kind caused by dangerous situations. Therefore, carefully read through and adhere to the following safety instructions before and when using the product. It is also absolutely essential to observe the additional safety instructions on personal safety, for example, that appear in relevant parts of the product documentation. In these safety instructions, the word "product" refers to all merchandise sold and distributed by the Rohde & Schwarz group of companies, including instruments, systems and all accessories. For product-specific information, see the data sheet and the product documentation.

Safety labels on products

The following safety labels are used on products to warn against risks and dangers.

Symbol	Meaning	Symbol	Meaning
	Notice, general danger location Observe product documentation		ON/OFF Power
	Caution when handling heavy equipment		Standby indication
	Danger of electric shock		Direct current (DC)

Basic Safety Instructions

Symbol	Meaning	Symbol	Meaning
	Caution ! Hot surface		Alternating current (AC)
	Protective conductor terminal To identify any terminal which is intended for connection to an external conductor for protection against electric shock in case of a fault, or the terminal of a protective earth		Direct/alternating current (DC/AC)
	Earth (Ground)		Class II Equipment to identify equipment meeting the safety requirements specified for Class II equipment (device protected by double or reinforced insulation)
	Frame or chassis Ground terminal		EU labeling for batteries and accumulators For additional information, see section "Waste disposal/Environmental protection", item 1.
	Be careful when handling electrostatic sensitive devices		EU labeling for separate collection of electrical and electronic devices For additional information, see section "Waste disposal/Environmental protection", item 2.
	Warning! Laser radiation For additional information, see section "Operation", item 7.		

Signal words and their meaning

The following signal words are used in the product documentation in order to warn the reader about risks and dangers.



Indicates a hazardous situation which, if not avoided, will result in death or serious injury.



Indicates a hazardous situation which, if not avoided, could result in death or serious injury.



Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.



Indicates information considered important, but not hazard-related, e.g. messages relating to property damage.

In the product documentation, the word ATTENTION is used synonymously.

These signal words are in accordance with the standard definition for civil applications in the European Economic Area. Definitions that deviate from the standard definition may also exist in other economic areas or military applications. It is therefore essential to make sure that the signal words described here are always used only in connection with the related product documentation and the related product. The use of signal words in connection with unrelated products or documentation can result in misinterpretation and in personal injury or material damage.

Basic Safety Instructions

Operating states and operating positions

The product may be operated only under the operating conditions and in the positions specified by the manufacturer, without the product's ventilation being obstructed. If the manufacturer's specifications are not observed, this can result in electric shock, fire and/or serious personal injury or death. Applicable local or national safety regulations and rules for the prevention of accidents must be observed in all work performed.

1. Unless otherwise specified, the following requirements apply to Rohde & Schwarz products: predefined operating position is always with the housing floor facing down, IP protection 2X, use only indoors, max. operating altitude 2000 m above sea level, max. transport altitude 4500 m above sea level. A tolerance of $\pm 10\%$ shall apply to the nominal voltage and $\pm 5\%$ to the nominal frequency, overvoltage category 2, pollution degree 2.
2. Do not place the product on surfaces, vehicles, cabinets or tables that for reasons of weight or stability are unsuitable for this purpose. Always follow the manufacturer's installation instructions when installing the product and fastening it to objects or structures (e.g. walls and shelves). An installation that is not carried out as described in the product documentation could result in personal injury or even death.
3. Do not place the product on heat-generating devices such as radiators or fan heaters. The ambient temperature must not exceed the maximum temperature specified in the product documentation or in the data sheet. Product overheating can cause electric shock, fire and/or serious personal injury or even death.

Electrical safety

If the information on electrical safety is not observed either at all or to the extent necessary, electric shock, fire and/or serious personal injury or death may occur.

1. Prior to switching on the product, always ensure that the nominal voltage setting on the product matches the nominal voltage of the mains-supply network. If a different voltage is to be set, the power fuse of the product may have to be changed accordingly.
2. In the case of products of safety class I with movable power cord and connector, operation is permitted only on sockets with a protective conductor contact and protective conductor.
3. Intentionally breaking the protective conductor either in the feed line or in the product itself is not permitted. Doing so can result in the danger of an electric shock from the product. If extension cords or connector strips are implemented, they must be checked on a regular basis to ensure that they are safe to use.
4. If there is no power switch for disconnecting the product from the mains, or if the power switch is not suitable for this purpose, use the plug of the connecting cable to disconnect the product from the mains. In such cases, always ensure that the power plug is easily reachable and accessible at all times. For example, if the power plug is the disconnecting device, the length of the connecting cable must not exceed 3 m. Functional or electronic switches are not suitable for providing disconnection from the AC supply network. If products without power switches are integrated into racks or systems, the disconnecting device must be provided at the system level.
5. Never use the product if the power cable is damaged. Check the power cables on a regular basis to ensure that they are in proper operating condition. By taking appropriate safety measures and carefully laying the power cable, ensure that the cable cannot be damaged and that no one can be hurt by, for example, tripping over the cable or suffering an electric shock.

Basic Safety Instructions

6. The product may be operated only from TN/TT supply networks fuse-protected with max. 16 A (higher fuse only after consulting with the Rohde & Schwarz group of companies).
7. Do not insert the plug into sockets that are dusty or dirty. Insert the plug firmly and all the way into the socket provided for this purpose. Otherwise, sparks that result in fire and/or injuries may occur.
8. Do not overload any sockets, extension cords or connector strips; doing so can cause fire or electric shocks.
9. For measurements in circuits with voltages $V_{rms} > 30$ V, suitable measures (e.g. appropriate measuring equipment, fuse protection, current limiting, electrical separation, insulation) should be taken to avoid any hazards.
10. Ensure that the connections with information technology equipment, e.g. PCs or other industrial computers, comply with the IEC 60950-1 / EN 60950-1 or IEC 61010-1 / EN 61010-1 standards that apply in each case.
11. Unless expressly permitted, never remove the cover or any part of the housing while the product is in operation. Doing so will expose circuits and components and can lead to injuries, fire or damage to the product.
12. If a product is to be permanently installed, the connection between the protective conductor terminal on site and the product's protective conductor must be made first before any other connection is made. The product may be installed and connected only by a licensed electrician.
13. For permanently installed equipment without built-in fuses, circuit breakers or similar protective devices, the supply circuit must be fuse-protected in such a way that anyone who has access to the product, as well as the product itself, is adequately protected from injury or damage.
14. Use suitable overvoltage protection to ensure that no overvoltage (such as that caused by a bolt of lightning) can reach the product. Otherwise, the person operating the product will be exposed to the danger of an electric shock.
15. Any object that is not designed to be placed in the openings of the housing must not be used for this purpose. Doing so can cause short circuits inside the product and/or electric shocks, fire or injuries.
16. Unless specified otherwise, products are not liquid-proof (see also section "Operating states and operating positions", item 1). Therefore, the equipment must be protected against penetration by liquids. If the necessary precautions are not taken, the user may suffer electric shock or the product itself may be damaged, which can also lead to personal injury.
17. Never use the product under conditions in which condensation has formed or can form in or on the product, e.g. if the product has been moved from a cold to a warm environment. Penetration by water increases the risk of electric shock.
18. Prior to cleaning the product, disconnect it completely from the power supply (e.g. AC supply network or battery). Use a soft, non-linting cloth to clean the product. Never use chemical cleaning agents such as alcohol, acetone or diluents for cellulose lacquers.

Operation

1. Operating the products requires special training and intense concentration. Make sure that persons who use the products are physically, mentally and emotionally fit enough to do so; otherwise, injuries or material damage may occur. It is the responsibility of the employer/operator to select suitable personnel for operating the products.

Basic Safety Instructions

2. Before you move or transport the product, read and observe the section titled "Transport".
3. As with all industrially manufactured goods, the use of substances that induce an allergic reaction (allergens) such as nickel cannot be generally excluded. If you develop an allergic reaction (such as a skin rash, frequent sneezing, red eyes or respiratory difficulties) when using a Rohde & Schwarz product, consult a physician immediately to determine the cause and to prevent health problems or stress.
4. Before you start processing the product mechanically and/or thermally, or before you take it apart, be sure to read and pay special attention to the section titled "Waste disposal/Environmental protection", item 1.
5. Depending on the function, certain products such as RF radio equipment can produce an elevated level of electromagnetic radiation. Considering that unborn babies require increased protection, pregnant women must be protected by appropriate measures. Persons with pacemakers may also be exposed to risks from electromagnetic radiation. The employer/operator must evaluate workplaces where there is a special risk of exposure to radiation and, if necessary, take measures to avert the potential danger.
6. Should a fire occur, the product may release hazardous substances (gases, fluids, etc.) that can cause health problems. Therefore, suitable measures must be taken, e.g. protective masks and protective clothing must be worn.
7. Laser products are given warning labels that are standardized according to their laser class. Lasers can cause biological harm due to the properties of their radiation and due to their extremely concentrated electromagnetic power. If a laser product (e.g. a CD/DVD drive) is integrated into a Rohde & Schwarz product, absolutely no other settings or functions may be used as described in the product documentation. The objective is to prevent personal injury (e.g. due to laser beams).
8. EMC classes (in line with EN 55011/CISPR 11, and analogously with EN 55022/CISPR 22, EN 55032/CISPR 32)
 - Class A equipment:
Equipment suitable for use in all environments except residential environments and environments that are directly connected to a low-voltage supply network that supplies residential buildings
Note: Class A equipment is intended for use in an industrial environment. This equipment may cause radio disturbances in residential environments, due to possible conducted as well as radiated disturbances. In this case, the operator may be required to take appropriate measures to eliminate these disturbances.
 - Class B equipment:
Equipment suitable for use in residential environments and environments that are directly connected to a low-voltage supply network that supplies residential buildings

Repair and service

1. The product may be opened only by authorized, specially trained personnel. Before any work is performed on the product or before the product is opened, it must be disconnected from the AC supply network. Otherwise, personnel will be exposed to the risk of an electric shock.

Basic Safety Instructions

- Adjustments, replacement of parts, maintenance and repair may be performed only by electrical experts authorized by Rohde & Schwarz. Only original parts may be used for replacing parts relevant to safety (e.g. power switches, power transformers, fuses). A safety test must always be performed after parts relevant to safety have been replaced (visual inspection, protective conductor test, insulation resistance measurement, leakage current measurement, functional test). This helps ensure the continued safety of the product.

Batteries and rechargeable batteries/cells

If the information regarding batteries and rechargeable batteries/cells is not observed either at all or to the extent necessary, product users may be exposed to the risk of explosions, fire and/or serious personal injury, and, in some cases, death. Batteries and rechargeable batteries with alkaline electrolytes (e.g. lithium cells) must be handled in accordance with the EN 62133 standard.

- Cells must not be taken apart or crushed.
- Cells or batteries must not be exposed to heat or fire. Storage in direct sunlight must be avoided. Keep cells and batteries clean and dry. Clean soiled connectors using a dry, clean cloth.
- Cells or batteries must not be short-circuited. Cells or batteries must not be stored in a box or in a drawer where they can short-circuit each other, or where they can be short-circuited by other conductive materials. Cells and batteries must not be removed from their original packaging until they are ready to be used.
- Cells and batteries must not be exposed to any mechanical shocks that are stronger than permitted.
- If a cell develops a leak, the fluid must not be allowed to come into contact with the skin or eyes. If contact occurs, wash the affected area with plenty of water and seek medical aid.
- Improperly replacing or charging cells or batteries that contain alkaline electrolytes (e.g. lithium cells) can cause explosions. Replace cells or batteries only with the matching Rohde & Schwarz type (see parts list) in order to ensure the safety of the product.
- Cells and batteries must be recycled and kept separate from residual waste. Rechargeable batteries and normal batteries that contain lead, mercury or cadmium are hazardous waste. Observe the national regulations regarding waste disposal and recycling.

Transport

- The product may be very heavy. Therefore, the product must be handled with care. In some cases, the user may require a suitable means of lifting or moving the product (e.g. with a lift-truck) to avoid back or other physical injuries.
- Handles on the products are designed exclusively to enable personnel to transport the product. It is therefore not permissible to use handles to fasten the product to or on transport equipment such as cranes, fork lifts, wagons, etc. The user is responsible for securely fastening the products to or on the means of transport or lifting. Observe the safety regulations of the manufacturer of the means of transport or lifting. Noncompliance can result in personal injury or material damage.
- If you use the product in a vehicle, it is the sole responsibility of the driver to drive the vehicle safely and properly. The manufacturer assumes no responsibility for accidents or collisions. Never use the product in a moving vehicle if doing so could distract the driver of the vehicle. Adequately secure the product in the vehicle to prevent injuries or other damage in the event of an accident.

Instrucciones de seguridad elementales

Waste disposal/Environmental protection

1. Specially marked equipment has a battery or accumulator that must not be disposed of with unsorted municipal waste, but must be collected separately. It may only be disposed of at a suitable collection point or via a Rohde & Schwarz customer service center.
2. Waste electrical and electronic equipment must not be disposed of with unsorted municipal waste, but must be collected separately.
Rohde & Schwarz GmbH & Co. KG has developed a disposal concept and takes full responsibility for take-back obligations and disposal obligations for manufacturers within the EU. Contact your Rohde & Schwarz customer service center for environmentally responsible disposal of the product.
3. If products or their components are mechanically and/or thermally processed in a manner that goes beyond their intended use, hazardous substances (heavy-metal dust such as lead, beryllium, nickel) may be released. For this reason, the product may only be disassembled by specially trained personnel. Improper disassembly may be hazardous to your health. National waste disposal regulations must be observed.
4. If handling the product releases hazardous substances or fuels that must be disposed of in a special way, e.g. coolants or engine oils that must be replenished regularly, the safety instructions of the manufacturer of the hazardous substances or fuels and the applicable regional waste disposal regulations must be observed. Also observe the relevant safety instructions in the product documentation. The improper disposal of hazardous substances or fuels can cause health problems and lead to environmental damage.

For additional information about environmental protection, visit the Rohde & Schwarz website.

Instrucciones de seguridad elementales

¡Es imprescindible leer y cumplir las siguientes instrucciones e informaciones de seguridad!

El principio del grupo de empresas Rohde & Schwarz consiste en tener nuestros productos siempre al día con los estándares de seguridad y de ofrecer a nuestros clientes el máximo grado de seguridad. Nuestros productos y todos los equipos adicionales son siempre fabricados y examinados según las normas de seguridad vigentes. Nuestro sistema de garantía de calidad controla constantemente que sean cumplidas estas normas. El presente producto ha sido fabricado y examinado según el certificado de conformidad de la UE y ha salido de nuestra planta en estado impecable según los estándares técnicos de seguridad. Para poder preservar este estado y garantizar un funcionamiento libre de peligros, el usuario deberá atenerse a todas las indicaciones, informaciones de seguridad y notas de alerta. El grupo de empresas Rohde & Schwarz está siempre a su disposición en caso de que tengan preguntas referentes a estas informaciones de seguridad.

Además queda en la responsabilidad del usuario utilizar el producto en la forma debida. Este producto está destinado exclusivamente al uso en la industria y el laboratorio o, si ha sido expresamente autorizado, para aplicaciones de campo y de ninguna manera deberá ser utilizado de modo que alguna persona/cosa pueda sufrir daño. El uso del producto fuera de sus fines definidos o sin tener en cuenta las instrucciones del fabricante queda en la responsabilidad del usuario. El fabricante no se hace en ninguna forma responsable de consecuencias a causa del mal uso del producto.

Instrucciones de seguridad elementales

Se parte del uso correcto del producto para los fines definidos si el producto es utilizado conforme a las indicaciones de la correspondiente documentación del producto y dentro del margen de rendimiento definido (ver hoja de datos, documentación, informaciones de seguridad que siguen). El uso del producto hace necesarios conocimientos técnicos y ciertos conocimientos del idioma inglés. Por eso se debe tener en cuenta que el producto solo pueda ser operado por personal especializado o personas instruidas en profundidad con las capacidades correspondientes. Si fuera necesaria indumentaria de seguridad para el uso de productos de Rohde & Schwarz, encontraría la información debida en la documentación del producto en el capítulo correspondiente. Guarde bien las informaciones de seguridad elementales, así como la documentación del producto, y entréguelas a usuarios posteriores.

Tener en cuenta las informaciones de seguridad sirve para evitar en lo posible lesiones o daños por peligros de toda clase. Por eso es imprescindible leer detalladamente y comprender por completo las siguientes informaciones de seguridad antes de usar el producto, y respetarlas durante el uso del producto. Deberán tenerse en cuenta todas las demás informaciones de seguridad, como p. ej. las referentes a la protección de personas, que encontrarán en el capítulo correspondiente de la documentación del producto y que también son de obligado cumplimiento. En las presentes informaciones de seguridad se recogen todos los objetos que distribuye el grupo de empresas Rohde & Schwarz bajo la denominación de "producto", entre ellos también aparatos, instalaciones así como toda clase de accesorios. Los datos específicos del producto figuran en la hoja de datos y en la documentación del producto.

Señalización de seguridad de los productos

Las siguientes señales de seguridad se utilizan en los productos para advertir sobre riesgos y peligros.

Símbolo	Significado	Símbolo	Significado
	Aviso: punto de peligro general Observar la documentación del producto		Tensión de alimentación de PUESTA EN MARCHA / PARADA
	Atención en el manejo de dispositivos de peso elevado		Indicación de estado de espera (standby)
	Peligro de choque eléctrico		Corriente continua (DC)
	Advertencia: superficie caliente		Corriente alterna (AC)
	Conexión a conductor de protección		Corriente continua / Corriente alterna (DC/AC)
	Conexión a tierra		El aparato está protegido en su totalidad por un aislamiento doble (reforzado)
	Conexión a masa		Distintivo de la UE para baterías y acumuladores Más información en la sección "Eliminación/protección del medio ambiente", punto 1.

Instrucciones de seguridad elementales

Símbolo	Significado	Símbolo	Significado
	Aviso: Cuidado en el manejo de dispositivos sensibles a la electrostática (ESD)		Distintivo de la UE para la eliminación por separado de dispositivos eléctricos y electrónicos Más información en la sección "Eliminación/protección del medio ambiente", punto 2.
	Advertencia: rayo láser Más información en la sección "Funcionamiento", punto 7.		

Palabras de señal y su significado

En la documentación del producto se utilizan las siguientes palabras de señal con el fin de advertir contra riesgos y peligros.



Indica una situación de peligro que, si no se evita, causa lesiones graves o incluso la muerte.



Indica una situación de peligro que, si no se evita, puede causar lesiones graves o incluso la muerte.



Indica una situación de peligro que, si no se evita, puede causar lesiones leves o moderadas.



Indica información que se considera importante, pero no en relación con situaciones de peligro; p. ej., avisos sobre posibles daños materiales.

En la documentación del producto se emplea de forma sinónima el término CUIDADO.

Las palabras de señal corresponden a la definición habitual para aplicaciones civiles en el área económica europea. Pueden existir definiciones diferentes a esta definición en otras áreas económicas o en aplicaciones militares. Por eso se deberá tener en cuenta que las palabras de señal aquí descritas sean utilizadas siempre solamente en combinación con la correspondiente documentación del producto y solamente en combinación con el producto correspondiente. La utilización de las palabras de señal en combinación con productos o documentaciones que no les correspondan puede llevar a interpretaciones equivocadas y tener por consecuencia daños en personas u objetos.

Estados operativos y posiciones de funcionamiento

El producto solamente debe ser utilizado según lo indicado por el fabricante respecto a los estados operativos y posiciones de funcionamiento sin que se obstruya la ventilación. Si no se siguen las indicaciones del fabricante, pueden producirse choques eléctricos, incendios y/o lesiones graves con posible consecuencia de muerte. En todos los trabajos deberán ser tenidas en cuenta las normas nacionales y locales de seguridad del trabajo y de prevención de accidentes.

Instrucciones de seguridad elementales

1. Si no se convino de otra manera, es para los productos Rohde & Schwarz válido lo que sigue: como posición de funcionamiento se define por principio la posición con el suelo de la caja para abajo, modo de protección IP 2X, uso solamente en estancias interiores, utilización hasta 2000 m sobre el nivel del mar, transporte hasta 4500 m sobre el nivel del mar. Se aplicará una tolerancia de $\pm 10\%$ sobre el voltaje nominal y de $\pm 5\%$ sobre la frecuencia nominal. Categoría de sobrecarga eléctrica 2, índice de suciedad 2.
2. No sitúe el producto encima de superficies, vehículos, estantes o mesas, que por sus características de peso o de estabilidad no sean aptos para él. Siga siempre las instrucciones de instalación del fabricante cuando instale y asegure el producto en objetos o estructuras (p. ej. paredes y estantes). Si se realiza la instalación de modo distinto al indicado en la documentación del producto, se pueden causar lesiones o, en determinadas circunstancias, incluso la muerte.
3. No ponga el producto sobre aparatos que generen calor (p. ej. radiadores o calefactores). La temperatura ambiente no debe superar la temperatura máxima especificada en la documentación del producto o en la hoja de datos. En caso de sobrecalentamiento del producto, pueden producirse choques eléctricos, incendios y/o lesiones graves con posible consecuencia de muerte.

Seguridad eléctrica

Si no se siguen (o se siguen de modo insuficiente) las indicaciones del fabricante en cuanto a seguridad eléctrica, pueden producirse choques eléctricos, incendios y/o lesiones graves con posible consecuencia de muerte.

1. Antes de la puesta en marcha del producto se deberá comprobar siempre que la tensión preseleccionada en el producto coincida con la de la red de alimentación eléctrica. Si es necesario modificar el ajuste de tensión, también se deberán cambiar en caso dado los fusibles correspondientes del producto.
2. Los productos de la clase de protección I con alimentación móvil y enchufe individual solamente podrán enchufarse a tomas de corriente con contacto de seguridad y con conductor de protección conectado.
3. Queda prohibida la interrupción intencionada del conductor de protección, tanto en la toma de corriente como en el mismo producto. La interrupción puede tener como consecuencia el riesgo de que el producto sea fuente de choques eléctricos. Si se utilizan cables alargadores o regletas de enchufe, deberá garantizarse la realización de un examen regular de los mismos en cuanto a su estado técnico de seguridad.
4. Si el producto no está equipado con un interruptor para desconectarlo de la red, o bien si el interruptor existente no resulta apropiado para la desconexión de la red, el enchufe del cable de conexión se deberá considerar como un dispositivo de desconexión. El dispositivo de desconexión se debe poder alcanzar fácilmente y debe estar siempre bien accesible. Si, p. ej., el enchufe de conexión a la red es el dispositivo de desconexión, la longitud del cable de conexión no debe superar 3 m). Los interruptores selectores o electrónicos no son aptos para el corte de la red eléctrica. Si se integran productos sin interruptor en bastidores o instalaciones, se deberá colocar el interruptor en el nivel de la instalación.
5. No utilice nunca el producto si está dañado el cable de conexión a red. Compruebe regularmente el correcto estado de los cables de conexión a red. Asegúrese, mediante las medidas de protección y de instalación adecuadas, de que el cable de conexión a red no pueda ser dañado o de que nadie pueda ser dañado por él, p. ej. al tropezar o por un choque eléctrico.

Instrucciones de seguridad elementales

6. Solamente está permitido el funcionamiento en redes de alimentación TN/TT aseguradas con fusibles de 16 A como máximo (utilización de fusibles de mayor amperaje solo previa consulta con el grupo de empresas Rohde & Schwarz).
7. Nunca conecte el enchufe en tomas de corriente sucias o llenas de polvo. Introduzca el enchufe por completo y fuertemente en la toma de corriente. La no observación de estas medidas puede provocar chispas, fuego y/o lesiones.
8. No sobrecargue las tomas de corriente, los cables alargadores o las regletas de enchufe ya que esto podría causar fuego o choques eléctricos.
9. En las mediciones en circuitos de corriente con una tensión $U_{\text{eff}} > 30 \text{ V}$ se deberán tomar las medidas apropiadas para impedir cualquier peligro (p. ej. medios de medición adecuados, seguros, limitación de tensión, corte protector, aislamiento etc.).
10. Para la conexión con dispositivos informáticos como un PC o un ordenador industrial, debe comprobarse que éstos cumplan los estándares IEC60950-1/EN60950-1 o IEC61010-1/EN 61010-1 válidos en cada caso.
11. A menos que esté permitido expresamente, no retire nunca la tapa ni componentes de la carcasa mientras el producto esté en servicio. Esto pone a descubierto los cables y componentes eléctricos y puede causar lesiones, fuego o daños en el producto.
12. Si un producto se instala en un lugar fijo, se deberá primero conectar el conductor de protección fijo con el conductor de protección del producto antes de hacer cualquier otra conexión. La instalación y la conexión deberán ser efectuadas por un electricista especializado.
13. En el caso de dispositivos fijos que no estén provistos de fusibles, interruptor automático ni otros mecanismos de seguridad similares, el circuito de alimentación debe estar protegido de modo que todas las personas que puedan acceder al producto, así como el producto mismo, estén a salvo de posibles daños.
14. Todo producto debe estar protegido contra sobretensión (debida p. ej. a una caída del rayo) mediante los correspondientes sistemas de protección. Si no, el personal que lo utilice quedará expuesto al peligro de choque eléctrico.
15. No debe introducirse en los orificios de la caja del aparato ningún objeto que no esté destinado a ello. Esto puede producir cortocircuitos en el producto y/o puede causar choques eléctricos, fuego o lesiones.
16. Salvo indicación contraria, los productos no están impermeabilizados (ver también el capítulo "Estados operativos y posiciones de funcionamiento", punto 1). Por eso es necesario tomar las medidas necesarias para evitar la entrada de líquidos. En caso contrario, existe peligro de choque eléctrico para el usuario o de daños en el producto, que también pueden redundar en peligro para las personas.
17. No utilice el producto en condiciones en las que pueda producirse o ya se hayan producido condensaciones sobre el producto o en el interior de éste, como p. ej. al desplazarlo de un lugar frío a otro caliente. La entrada de agua aumenta el riesgo de choque eléctrico.
18. Antes de la limpieza, desconecte por completo el producto de la alimentación de tensión (p. ej. red de alimentación o batería). Realice la limpieza de los aparatos con un paño suave, que no se deshilache. No utilice bajo ningún concepto productos de limpieza químicos como alcohol, acetona o diluyentes para lacas nitrocelulósicas.

Instrucciones de seguridad elementales

Funcionamiento

1. El uso del producto requiere instrucciones especiales y una alta concentración durante el manejo. Debe asegurarse que las personas que manejen el producto estén a la altura de los requerimientos necesarios en cuanto a aptitudes físicas, psíquicas y emocionales, ya que de otra manera no se pueden excluir lesiones o daños de objetos. El empresario u operador es responsable de seleccionar el personal usuario apto para el manejo del producto.
2. Antes de desplazar o transportar el producto, lea y tenga en cuenta el capítulo "Transporte".
3. Como con todo producto de fabricación industrial no puede quedar excluida en general la posibilidad de que se produzcan alergias provocadas por algunos materiales empleados —los llamados alérgenos (p. ej. el níquel)—. Si durante el manejo de productos Rohde & Schwarz se producen reacciones alérgicas, como p. ej. irritaciones cutáneas, estornudos continuos, enrojecimiento de la conjuntiva o dificultades respiratorias, debe avisarse inmediatamente a un médico para investigar las causas y evitar cualquier molestia o daño a la salud.
4. Antes de la manipulación mecánica y/o térmica o el desmontaje del producto, debe tenerse en cuenta imprescindiblemente el capítulo "Eliminación/protección del medio ambiente", punto 1.
5. Ciertos productos, como p. ej. las instalaciones de radiocomunicación RF, pueden a causa de su función natural, emitir una radiación electromagnética aumentada. Deben tomarse todas las medidas necesarias para la protección de las mujeres embarazadas. También las personas con marcapasos pueden correr peligro a causa de la radiación electromagnética. El empresario/operador tiene la obligación de evaluar y señalar las áreas de trabajo en las que exista un riesgo elevado de exposición a radiaciones.
6. Tenga en cuenta que en caso de incendio pueden desprenderse del producto sustancias tóxicas (gases, líquidos etc.) que pueden generar daños a la salud. Por eso, en caso de incendio deben usarse medidas adecuadas, como p. ej. máscaras antigás e indumentaria de protección.
7. Los productos con láser están provistos de indicaciones de advertencia normalizadas en función de la clase de láser del que se trate. Los rayos láser pueden provocar daños de tipo biológico a causa de las propiedades de su radiación y debido a su concentración extrema de potencia electromagnética. En caso de que un producto Rohde & Schwarz contenga un producto láser (p. ej. un lector de CD/DVD), no debe usarse ninguna otra configuración o función aparte de las descritas en la documentación del producto, a fin de evitar lesiones (p. ej. debidas a irradiación láser).
8. Clases de compatibilidad electromagnética (conforme a EN 55011 / CISPR 11; y en analogía con EN 55022 / CISPR 22, EN 55032 / CISPR 32)
 - Aparato de clase A:
Aparato adecuado para su uso en todos los entornos excepto en los residenciales y en aquellos conectados directamente a una red de distribución de baja tensión que suministra corriente a edificios residenciales.
Nota: Los aparatos de clase A están destinados al uso en entornos industriales. Estos aparatos pueden causar perturbaciones radioeléctricas en entornos residenciales debido a posibles perturbaciones guiadas o radiadas. En este caso, se le podrá solicitar al operador que tome las medidas adecuadas para eliminar estas perturbaciones.
 - Aparato de clase B:
Aparato adecuado para su uso en entornos residenciales, así como en aquellos conectados directamente a una red de distribución de baja tensión que suministra corriente a edificios residenciales.

Instrucciones de seguridad elementales

Reparación y mantenimiento

1. El producto solamente debe ser abierto por personal especializado con autorización para ello. Antes de manipular el producto o abrirlo, es obligatorio desconectarlo de la tensión de alimentación, para evitar toda posibilidad de choque eléctrico.
2. El ajuste, el cambio de partes, el mantenimiento y la reparación deberán ser efectuadas solamente por electricistas autorizados por Rohde & Schwarz. Si se reponen partes con importancia para los aspectos de seguridad (p. ej. el enchufe, los transformadores o los fusibles), solamente podrán ser sustituidos por partes originales. Después de cada cambio de partes relevantes para la seguridad deberá realizarse un control de seguridad (control a primera vista, control del conductor de protección, medición de resistencia de aislamiento, medición de la corriente de fuga, control de funcionamiento). Con esto queda garantizada la seguridad del producto.

Baterías y acumuladores o celdas

Si no se siguen (o se siguen de modo insuficiente) las indicaciones en cuanto a las baterías y acumuladores o celdas, pueden producirse explosiones, incendios y/o lesiones graves con posible consecuencia de muerte. El manejo de baterías y acumuladores con electrolitos alcalinos (p. ej. celdas de litio) debe seguir el estándar EN 62133.

1. No deben desmontarse, abrirse ni triturarse las celdas.
2. Las celdas o baterías no deben someterse a calor ni fuego. Debe evitarse el almacenamiento a la luz directa del sol. Las celdas y baterías deben mantenerse limpias y secas. Limpiar las conexiones sucias con un paño seco y limpio.
3. Las celdas o baterías no deben cortocircuitarse. Es peligroso almacenar las celdas o baterías en estuches o cajones en cuyo interior puedan cortocircuitarse por contacto recíproco o por contacto con otros materiales conductores. No deben extraerse las celdas o baterías de sus embalajes originales hasta el momento en que vayan a utilizarse.
4. Las celdas o baterías no deben someterse a impactos mecánicos fuertes indebidos.
5. En caso de falta de estanqueidad de una celda, el líquido vertido no debe entrar en contacto con la piel ni los ojos. Si se produce contacto, lavar con agua abundante la zona afectada y avisar a un médico.
6. En caso de cambio o recarga inadecuados, las celdas o baterías que contienen electrolitos alcalinos (p. ej. las celdas de litio) pueden explotar. Para garantizar la seguridad del producto, las celdas o baterías solo deben ser sustituidas por el tipo Rohde & Schwarz correspondiente (ver lista de recambios).
7. Las baterías y celdas deben reciclarse y no deben tirarse a la basura doméstica. Las baterías o acumuladores que contienen plomo, mercurio o cadmio deben tratarse como residuos especiales. Respete en esta relación las normas nacionales de eliminación y reciclaje.

Transporte

1. El producto puede tener un peso elevado. Por eso es necesario desplazarlo o transportarlo con precaución y, si es necesario, usando un sistema de elevación adecuado (p. ej. una carretilla elevadora), a fin de evitar lesiones en la espalda u otros daños personales.

Instrucciones de seguridad elementales

2. Las asas instaladas en los productos sirven solamente de ayuda para el transporte del producto por personas. Por eso no está permitido utilizar las asas para la sujeción en o sobre medios de transporte como p. ej. grúas, carretillas elevadoras de horquilla, carros etc. Es responsabilidad suya fijar los productos de manera segura a los medios de transporte o elevación. Para evitar daños personales o daños en el producto, siga las instrucciones de seguridad del fabricante del medio de transporte o elevación utilizado.
3. Si se utiliza el producto dentro de un vehículo, recae de manera exclusiva en el conductor la responsabilidad de conducir el vehículo de manera segura y adecuada. El fabricante no asumirá ninguna responsabilidad por accidentes o colisiones. No utilice nunca el producto dentro de un vehículo en movimiento si esto pudiera distraer al conductor. Asegure el producto dentro del vehículo debidamente para evitar, en caso de un accidente, lesiones u otra clase de daños.

Eliminación/protección del medio ambiente

1. Los dispositivos marcados contienen una batería o un acumulador que no se debe desechar con los residuos domésticos sin clasificar, sino que debe ser recogido por separado. La eliminación se debe efectuar exclusivamente a través de un punto de recogida apropiado o del servicio de atención al cliente de Rohde & Schwarz.
2. Los dispositivos eléctricos usados no se deben desechar con los residuos domésticos sin clasificar, sino que deben ser recogidos por separado.
Rohde & Schwarz GmbH & Co.KG ha elaborado un concepto de eliminación de residuos y asume plenamente los deberes de recogida y eliminación para los fabricantes dentro de la UE. Para desechar el producto de manera respetuosa con el medio ambiente, dirijase a su servicio de atención al cliente de Rohde & Schwarz.
3. Si se trabaja de manera mecánica y/o térmica cualquier producto o componente más allá del funcionamiento previsto, pueden liberarse sustancias peligrosas (polvos con contenido de metales pesados como p. ej. plomo, berilio o níquel). Por eso el producto solo debe ser desmontado por personal especializado con formación adecuada. Un desmontaje inadecuado puede ocasionar daños para la salud. Se deben tener en cuenta las directivas nacionales referentes a la eliminación de residuos.
4. En caso de que durante el trato del producto se formen sustancias peligrosas o combustibles que deban tratarse como residuos especiales (p. ej. refrigerantes o aceites de motor con intervalos de cambio definidos), deben tenerse en cuenta las indicaciones de seguridad del fabricante de dichas sustancias y las normas regionales de eliminación de residuos. Tenga en cuenta también en caso necesario las indicaciones de seguridad especiales contenidas en la documentación del producto. La eliminación incorrecta de sustancias peligrosas o combustibles puede causar daños a la salud o daños al medio ambiente.

Se puede encontrar más información sobre la protección del medio ambiente en la página web de Rohde & Schwarz.

Quality management and environmental management

Certified Quality System
ISO 9001

Certified Environmental System
ISO 14001

Sehr geehrter Kunde,

Sie haben sich für den Kauf eines Rohde&Schwarz Produktes entschieden. Sie erhalten damit ein nach modernsten Fertigungsmethoden hergestelltes Produkt. Es wurde nach den Regeln unserer Qualitäts- und Umweltmanagementsysteme entwickelt, gefertigt und geprüft. Rohde&Schwarz ist unter anderem nach den Managementsystemen ISO9001 und ISO 14001 zertifiziert.

Der Umwelt verpflichtet

- Energie-effiziente, RoHS-konforme Produkte
- Kontinuierliche Weiterentwicklung nachhaltiger Umweltkonzepte
- ISO 14001-zertifiziertes Umweltmanagementsystem

Dear customer,

You have decided to buy a Rohde&Schwarz product. This product has been manufactured using the most advanced methods. It was developed, manufactured and tested in compliance with our quality management and environmental management systems. Rohde&Schwarz has been certified, for example, according to the ISO9001 and ISO 14001 management systems.

Environmental commitment

- Energy-efficient products
- Continuous improvement in environmental sustainability
- ISO 14001-certified environmental management system

Cher client,

Vous avez choisi d'acheter un produit Rohde&Schwarz. Vous disposez donc d'un produit fabriqué d'après les méthodes les plus avancées. Le développement, la fabrication et les tests de ce produit ont été effectués selon nos systèmes de management de qualité et de management environnemental. La société Rohde&Schwarz a été homologuée, entre autres, conformément aux systèmes de management ISO 9001 et ISO 14001.

Engagement écologique

- Produits à efficience énergétique
- Amélioration continue de la durabilité environnementale
- Système de management environnemental certifié selon ISO 14001



Customer Support

Technical support – where and when you need it

For quick, expert help with any Rohde & Schwarz equipment, contact one of our Customer Support Centers. A team of highly qualified engineers provides telephone support and will work with you to find a solution to your query on any aspect of the operation, programming or applications of Rohde & Schwarz equipment.

Up-to-date information and upgrades

To keep your instrument up-to-date and to be informed about new application notes related to your instrument, please send an e-mail to the Customer Support Center stating your instrument and your wish. We will take care that you will get the right information.

Europe, Africa, Middle East

Phone +49 89 4129 12345
customersupport@rohde-schwarz.com

North America

Phone 1-888-TEST-RSA (1-888-837-8772)
customer.support@rsa.rohde-schwarz.com

Latin America

Phone +1-410-910-7988
customersupport.la@rohde-schwarz.com

Asia/Pacific

Phone +65 65 13 04 88
customersupport.asia@rohde-schwarz.com

China

Phone +86-800-810-8228 /
+86-400-650-5896
customersupport.china@rohde-schwarz.com



Contents

1	Preface	15
1.1	Documentation Overview.....	15
1.2	Typographical Conventions.....	16
1.3	Notes on Screenshots.....	17
2	Preparing for Use	19
2.1	Front Panel Tour.....	19
2.1.1	Utility Keys.....	20
2.1.2	Standby LEDs and Standby Key.....	20
2.1.3	Display.....	21
2.1.4	Setup Keys.....	21
2.1.4.1	Keys for Setting Parameters.....	21
2.1.4.2	Display Keys.....	22
2.1.5	Keypad for data entry.....	23
2.1.6	Rotary Knob and Navigation Keys.....	24
2.1.7	Front Panel Connectors.....	25
2.2	Rear Panel Tour.....	27
2.2.1	Description of the Connectors.....	27
2.3	Putting into Operation.....	31
2.3.1	EMI Suppression.....	32
2.3.2	Unpacking and Checking the Instrument.....	33
2.3.3	Placing or Mounting the Instrument.....	33
2.3.4	Connecting the Instrument to the AC Supply.....	35
2.3.5	Starting the Instrument.....	35
2.3.5.1	Standby and Ready state.....	36
2.3.5.2	Start Display and Booting.....	36
2.3.5.3	Function Check.....	37
2.3.5.4	Default Settings.....	37
2.3.6	Shutting Down the Instrument.....	38
2.4	Connecting External Accessories.....	39
2.4.1	Connecting USB Devices.....	39
2.4.2	Connecting a Monitor.....	41

2.5	Windows Operating System.....	41
2.5.1	Virus Protection.....	42
2.5.2	Service Packs and Updates.....	42
2.5.3	Login.....	43
2.5.4	Accessing the Start Menu.....	43
2.6	Setting Up a Network (LAN) Connection.....	43
2.6.1	Connecting the Instrument to the Network.....	44
2.6.2	Assigning the IP Address.....	45
2.6.3	Using computer names.....	46
2.6.4	Changing the Windows Firewall Settings.....	46
2.6.5	Working with Directories.....	47
2.7	Remote Access via an External Controller.....	48
2.7.1	Using a Web Browser for Remote Access.....	49
2.7.2	Remote Desktop Connection.....	50
2.7.3	Remote Access via a VNC Client Software.....	53
2.8	Using Virus-Protection Software.....	59
2.9	LXI Configuration.....	60
2.9.1	LXI Browser Settings.....	62
2.9.2	LAN Configuration.....	64
2.9.2.1	IP Configuration.....	64
2.9.2.2	Advanced LAN Configuration.....	65
2.9.2.3	Ping Client.....	66
2.9.2.4	Web Control.....	67
2.9.2.5	SCPI Remote Trace.....	68
3	Getting Started.....	71
3.1	Brief Introduction to the Instrument's Concept.....	71
3.2	Applications of the Instrument.....	73
3.2.1	Internally generated I/Q signal.....	73
3.2.2	Analog Wideband I/Q operation.....	74
3.3	Baseband Section.....	75
3.3.1	Description of Individual Diagram Blocks of the Baseband Section.....	76
3.4	RF Section.....	76
3.4.1	Description of Individual Diagram Blocks of the RF Section.....	77

3.5	Example of Setup.....	78
4	Manual Operation.....	85
4.1	Key Features.....	85
4.2	Display.....	89
4.2.1	Settings Displayed in the Header Section.....	90
4.2.2	Status Information and Messages.....	91
4.2.2.1	Status Information.....	91
4.2.2.2	Messages.....	91
4.2.2.3	Volatile messages.....	91
4.2.2.4	Permanent Messages.....	92
4.2.3	Info Window.....	92
4.2.4	Block Diagram	93
4.2.4.1	Function Blocks in the Block Diagram.....	93
4.2.4.2	Signal Flow and Input/Output Symbols in the Block Diagram.....	94
4.2.5	Winbar and Softkeys.....	95
4.2.6	Structure of the Dialogs.....	95
4.2.7	Graphical Display of Output Signal Characteristics.....	96
4.3	Accessing Dialogs.....	97
4.4	Setting Parameters.....	98
4.4.1	Working with the Cursor.....	99
4.4.2	Selecting a Control Element.....	100
4.4.3	Switching Parameters On/Off.....	100
4.4.4	Entering a Value.....	100
4.4.5	Working with Units	102
4.4.6	Selecting a Value from a List.....	103
4.4.7	Terminating Entries with Confirmation.....	103
4.4.8	Restoring the Previous Value.....	104
4.5	Editors.....	105
4.5.1	Working with List Editor.....	106
4.5.2	Working with Data Editor.....	107
4.5.3	Working with Control and Marker List Editor.....	109
4.6	How to Use the Help System.....	112
4.7	File Management.....	114

4.7.1	File Select Dialog.....	116
4.7.2	File Manager.....	117
4.7.2.1	Extensions for User Files.....	118
4.8	Legend of Front-Panel Controls.....	120
4.8.1	Front Panel Key Emulation.....	122
4.8.2	On-screen Keyboard.....	122
5	Instrument Function.....	125
5.1	Overview of Instrument Functions.....	125
5.2	General Instrument Settings.....	128
5.2.1	Overview of General Instrument Settings.....	128
5.2.2	Default Instrument Settings - Preset Key.....	128
5.2.3	General Configuration of Instrument - Setup Key.....	129
5.2.3.1	Internal Adjustments.....	130
5.2.3.2	Hardware Config.....	132
5.2.3.3	Software / Options.....	133
5.2.3.4	Manage License Keys.....	134
5.2.3.5	NRP-Z Info/Update.....	136
5.2.3.6	Update.....	137
5.2.3.7	Display Update.....	138
5.2.3.8	Selftest.....	138
5.2.3.9	Check Front Panel.....	139
5.2.3.10	Global Trigger/Clock/External Input Settings.....	141
5.2.3.11	Display/Keyboard Settings.....	143
5.2.3.12	User Marker / AUX I/O Settings.....	144
5.2.3.13	Remote Channel Settings.....	146
5.2.3.14	LXI Status.....	147
5.2.3.15	Protection.....	148
5.2.3.16	Security.....	149
5.2.3.17	Save/Recall.....	152
5.2.3.18	Factory Preset.....	152
5.2.3.19	Help.....	153
5.2.4	Switching to Manual Control - Local Key.....	153
5.2.5	Generating a Hard Copy of the Display.....	154

5.2.5.1	Hard Copy Settings.....	154
5.2.5.2	Hardcopy Options.....	155
5.2.6	Messages - Info Key.....	157
5.2.7	Help System - Help Key.....	157
5.2.8	Storing and Loading Instrument Data - File Key.....	158
5.2.8.1	Save/Recall Menu.....	159
5.2.8.2	Storing Instrument Settings.....	159
5.2.8.3	Loading Instrument Settings.....	161
5.2.8.4	File Select Dialog.....	163
5.2.8.5	File Manager.....	165
5.2.8.6	Accessing the File System of the Instrument and Transferring Files from and to the Instrument.....	167
5.3	Graphical Display - Graphics.....	168
5.3.1	Graphics Settings Menu.....	170
5.3.2	Bar of Graphics Window.....	172
5.3.3	Signal Displays.....	174
5.3.3.1	I/Q Diagram.....	174
5.3.3.2	Vector Diagram.....	175
5.3.3.3	Constellation Diagram.....	176
5.3.3.4	Eye Diagram.....	177
5.3.3.5	CCDF Display.....	178
5.3.3.6	Power Spectrum.....	179
5.4	Bit and Block Error Rate Measurements - BERT Block.....	180
5.4.1	Test setup.....	181
5.4.2	PRBS data.....	182
5.4.3	CRC polynomial.....	182
5.4.4	Clock signal.....	182
5.4.5	Ending the measurement.....	183
5.4.6	Interrupt-free measurement.....	183
5.4.7	Restart function.....	183
5.4.8	Data Enable.....	184
5.4.9	Pattern Ignore.....	185
5.4.10	Bit Error Rate Menu.....	185
5.4.10.1	General Settings.....	186

5.4.10.2	Configuration.....	189
5.4.11	Block Error Rate Menu.....	193
5.4.11.1	General Settings.....	194
5.4.11.2	Configuration.....	196
5.5	RF Signal and Analog Modulations - RF Block.....	199
5.5.1	Overview of RF Signal.....	199
5.5.1.1	RF Output.....	199
5.5.1.2	RF Signal Modes and Characteristics.....	200
5.5.2	RF Frequency.....	201
5.5.2.1	RF Frequency vs. RF Output Frequency.....	201
5.5.2.2	Setting the RF Frequency.....	201
5.5.2.3	RF Frequency Dialog.....	202
5.5.2.4	Frequency Settings.....	202
5.5.2.5	User Variation Settings.....	203
5.5.2.6	Phase Continuous Frequency Settings.....	204
5.5.3	Phase.....	204
5.5.3.1	Phase Settings.....	204
5.5.3.2	Phase Continuous Frequency.....	205
5.5.4	Reference Oscillator.....	209
5.5.4.1	Reference Oscillator Settings.....	211
5.5.5	Local Oscillator - LO Coupling.....	212
5.5.5.1	Phase Coherence.....	213
5.5.5.2	Typical Applications.....	213
5.5.5.3	LO Coupling Settings.....	213
5.5.6	RF Level.....	215
5.5.6.1	Overview of RF Level.....	215
5.5.6.2	RF Level Dialog.....	216
5.5.6.3	Power-On/EMF Settings.....	220
5.5.7	Automatic Level Control - ALC.....	220
5.5.7.1	Automatic Level Control Settings.....	221
5.5.8	User Correction.....	222
5.5.8.1	User Correction Menu.....	223
5.5.8.2	Filling the Correction List automatically.....	228

5.5.8.3	Filling the Correction List with Power Sensor Measurement Data.....	229
5.5.9	Reverse Power Protection.....	232
5.5.10	RF Measurement.....	233
5.5.10.1	NRP-Z Power Viewer.....	233
5.5.11	Analog Modulation.....	240
5.5.11.1	Overview.....	240
5.5.11.2	Amplitude Modulation (AM).....	242
5.5.11.3	Broadband Amplitude Modulation (BB-AM).....	244
5.5.11.4	Frequency Modulation (FM).....	246
5.5.11.5	Phase Modulation (PhiM).....	248
5.5.11.6	Pulse Modulation (PM).....	251
5.5.12	Modulation Generator and LF Output.....	253
5.5.12.1	Overview of LF Generator.....	253
5.5.12.2	LF Output.....	254
5.5.13	LF Frequency Sweep.....	255
5.5.14	RF Sweep and List Mode.....	260
5.5.14.1	Overview.....	260
5.5.14.2	RF Frequency Sweep.....	261
5.5.14.3	RF Level Sweep.....	268
5.5.15	List Mode.....	273
5.5.15.1	List Mode Dialog.....	274
5.5.15.2	Filling the List Mode Data automatically.....	280
5.6	I/Q Modulation - I/Q Mod Block.....	282
5.6.1	I/Q Modulator.....	282
5.6.2	I/Q Settings	283
5.6.2.1	General I/Q Mod Settings.....	284
5.6.2.2	Impairments.....	284
5.6.2.3	I/Q Swap and I/Q Wideband.....	285
5.6.2.4	Analog Wideband I/Q Input.....	287
5.7	Impairment of Digital I/Q Signal and Noise Generator - AWGN/IMP Block.....	288
5.7.1	Impairments.....	289
5.7.1.1	Gain and Gain Imbalance.....	289
5.7.1.2	I and Q Offset.....	290

5.7.1.3	Quadrature Offset.....	290
5.7.1.4	Impairment Settings Menu.....	291
5.7.2	AWGN - Noise Generator.....	293
5.7.2.1	AWGN Settings Dialog.....	294
5.7.3	Output of the Baseband Signal - I/Q Out.....	301
5.7.3.1	I/Q Out Settings Menu.....	301
5.7.3.2	Analog I/Q Output.....	302
5.7.3.3	Digital I/Q Output Settings.....	306
5.7.4	I/Q Level - Info.....	310
5.7.4.1	Baseband Signal Level.....	310
5.7.4.2	Baseband Signal Power Measurement.....	311
5.8	Baseband Signal - Baseband Block.....	313
5.8.1	Data and Signal Sources in Baseband.....	313
5.8.1.1	Internal PRBS Data and Data Patterns.....	314
5.8.1.2	Internal Modulation Data from Lists.....	315
5.8.1.3	External Synchronous Modulation Data.....	315
5.8.1.4	Clock Signals.....	316
5.8.1.5	Synchronizing Data Signals and Clock Signals.....	317
5.8.1.6	Control Signals.....	321
5.8.1.7	Trigger Signals.....	323
5.8.1.8	Marker Output Signals.....	324
5.8.2	Digital Modulation - Custom Digital Modulation.....	326
5.8.2.1	Overview and Required Options.....	326
5.8.2.2	Modulation Types - Custom Digital Mod.....	326
5.8.2.3	Coding - Custom Digital Mod.....	330
5.8.2.4	Baseband Filter - Custom Digital Mod.....	333
5.8.2.5	Conflicting Settings - Custom Digital Mod.....	338
5.8.2.6	Custom Digital Mod User Interface.....	338
5.8.3	Arbitrary Waveform Generator ARB.....	367
5.8.3.1	Introduction.....	367
5.8.3.2	ARB User Interface.....	372
5.8.3.3	Multi Segment Waveforms.....	394
5.8.3.4	Multi Carrier Waveforms.....	411

5.8.4	Multi Carrier Continuous Wave.....	424
5.8.4.1	Multi Carrier CW User Interface.....	424
6	Remote Control Basics.....	439
6.1	Remote Control Interfaces and Protocols.....	439
6.1.1	VISA Libraries.....	440
6.1.2	Messages.....	440
6.1.3	LAN Interface.....	441
6.1.3.1	HiSLIP Protocol.....	443
6.1.3.2	VXI-11 Protocol.....	443
6.1.3.3	Socket Communication.....	443
6.1.3.4	LAN Interface Messages.....	444
6.1.4	GPIB Interface (IEC/IEEE Bus Interface).....	444
6.1.4.1	GPIB Interface Messages.....	445
6.1.4.2	GPIB Instrument Address.....	446
6.1.5	LXI Browser Interface.....	446
6.2	Starting a Remote Control Session.....	446
6.2.1	Switching to Remote Control.....	447
6.2.2	Returning to Manual Operation.....	448
6.2.3	Examples.....	449
6.2.3.1	Remote Control over GPIB.....	449
6.2.3.2	Remote Control over LAN using VXI-11 Protocol.....	450
6.2.3.3	Remote Control over LAN using Socket Communication.....	455
6.3	SCPI Command Structure.....	462
6.3.1	Syntax for Common Commands.....	462
6.3.2	Syntax for Device-Specific Commands.....	463
6.3.3	SCPI Parameters.....	465
6.3.4	Overview of Syntax Elements.....	468
6.3.5	Structure of a command line.....	468
6.3.6	Responses to Queries.....	469
6.4	Command Sequence and Synchronization.....	470
6.4.1	Preventing Overlapping Execution.....	471
6.5	Status Reporting System.....	473
6.5.1	Hierarchy of the Status Registers.....	473

6.5.2	Structure of a SCPI Status Register.....	475
6.5.3	Status Byte (STB) and Service Request Enable Register (SRE).....	477
6.5.4	Event Status Register (ESR) and Event Status Enable Register (ESE).....	478
6.5.5	Questionable Status Register (STATus:QUESTionable).....	478
6.5.6	Operation Status Register (STATus:OPERation).....	479
6.5.7	Application of the Status Reporting System.....	479
6.5.7.1	Service Request.....	479
6.5.7.2	Serial Poll.....	480
6.5.7.3	Query of an instrument status.....	480
6.5.7.4	Error Queue.....	480
6.5.8	Reset Values of the Status Reporting System.....	481
6.6	General Programming Recommendations.....	481
7	Remote Control Commands.....	483
7.1	Conventions used in SCPI Command Descriptions.....	483
7.2	Common Commands.....	483
7.3	Preset Commands.....	488
7.4	Waveform and List Format.....	490
7.4.1	Tag Description.....	490
7.4.2	How to Define Periodically Repeating Traces.....	503
7.4.3	How to Manually Create a Waveform Using Tag File Format.....	505
7.4.4	Creating an ASCII C-List Manually.....	509
7.4.5	Editing Waveform Files, Data and Control Lists.....	511
7.5	BERT and BLER Subsystems.....	511
7.6	CALibration Subsystem.....	521
7.7	CLOCK Subsystem.....	524
7.8	DIAGnostic Subsystem.....	526
7.9	DISPlay Subsystem.....	528
7.10	FORMat Subsystem.....	530
7.11	HCOPY Subsystem.....	532
7.12	KBOARD Subsystem.....	542
7.13	MMEMory Subsystem.....	543
7.13.1	File Naming Conventions.....	543
7.13.2	Extensions for User Files.....	544

7.13.3	Examples.....	546
7.13.4	Remote Control Commands.....	547
7.14	OUTPut Subsystem.....	553
7.15	SENSe, READ and INITiate Subsystems.....	558
7.16	SOURce Subsystem.....	568
7.16.1	SOURce:AM Subsystem.....	568
7.16.2	SOURce:AWGN Subsystem.....	571
7.16.3	SOURce:BB Subsystem.....	580
7.16.3.1	SOURce:BB Subsystem General Commands.....	580
7.16.3.2	SOURce:BB:ARB Subsystem.....	580
7.16.3.3	SOURce:BB:DM Subsystem.....	629
7.16.3.4	SOURce:BB:GRAPhics Subsystem.....	666
7.16.3.5	SOURce:BB:IMPairment Subsystem.....	669
7.16.3.6	SOURce:BB:MCCW Subsystem.....	672
7.16.3.7	SOURce:BB:MEASurement Subsystem.....	692
7.16.3.8	SOURce:BB:POWer Subsystem.....	695
7.16.3.9	SOURce:BB:PROGress Subsystem General Commands.....	696
7.16.4	SOURce:CORRection Subsystem.....	697
7.16.5	SOURce:FM Subsystem.....	709
7.16.6	SOURce:FREQUency Subsystem.....	712
7.16.7	SOURce:INPut Subsystem.....	720
7.16.8	SOURce:IQ Subsystem.....	723
7.16.9	SOURce:IQ:OUTput Subsystem.....	728
7.16.9.1	Analog I/Q Outputs.....	728
7.16.9.2	Digital I/Q Outputs.....	732
7.16.10	SOURce:LFOutput Subsystem.....	737
7.16.11	SOURce:LIST Subsystem.....	746
7.16.12	SOURce:MODulation Subsystem.....	758
7.16.13	SOURce:PHASe Subsystem.....	759
7.16.14	SOURce:PM Subsystem.....	760
7.16.15	SOURce:POWer Subsystem.....	762
7.16.16	SOURce:PULM Subsystem.....	771
7.16.17	SOURce:ROSCillator Subsystem.....	774

7.16.18	SOURce:SWEEp Subsystem.....	777
7.17	STATus Subsystem.....	788
7.18	SYSTem Subsystem.....	792
7.19	TEST Subsystem.....	801
7.20	TRIGger Subsystem.....	803
7.21	UNIT Subsystem.....	809
8	Maintenance.....	811
8.1	Storing and Packing.....	811
9	Status Information, Error Messages and Troubleshooting.....	813
9.1	Status Information.....	813
9.1.1	Status information displayed between the frequency and level fields.....	813
9.1.2	Status information displayed to the left of the Info line.....	815
9.1.3	Status information displayed in the Info line.....	815
9.2	Error Messages.....	816
9.2.1	Volatile messages.....	817
9.2.2	Permanent messages.....	817
9.3	SCPI-Error Messages.....	817
9.4	Device-Specific Error Messages.....	817
9.5	Resolving Network Connection Failures.....	819
9.6	Obtaining Technical Support.....	820
	Annex.....	823
A	Hardware Interfaces.....	823
A.1	GPIB Bus Interface.....	823
A.2	AUX I/O Connector.....	824
A.3	Monitor Connector (MONITOR).....	826
A.4	BERT Connector.....	826
	List of Commands.....	829
	Index.....	845

1 Preface

1.1 Documentation Overview

The user documentation for the R&S SMJ consists of the following parts:

- Quick start guide, printed manual
- Online help system on the instrument
- Operating manuals and online manual for base unit and options provided on the product page
- Service manual provided on the internet for registered users
- Instrument security procedures provided on the product page
- Release notes provided on the product page
- Data sheet and brochures provided on the product page
- Application notes provided on the Rohde & Schwarz website



You find the user documentation on the R&S SMJ product page mainly at:

<http://www.rohde-schwarz.com/product/SMJ100A.html> > "Downloads" > "Manuals"

Additional download paths are stated directly in the following abstracts of the documentation types.

Quick Start Guide

Introduces the R&S SMJ and describes how to set up and start working with the product. Includes basic operations, typical measurement examples, and general information, e.g. safety instructions, etc.

Online Help

Offers quick, context-sensitive access to the information needed for operation and programming. It contains the description for the base unit and the software options.

Operating Manuals and Online Manual

Separate manuals are provided for the base unit and the software options:

- **Base unit** manual
Contains the description of the graphical user interface, an introduction to remote control, the description of all SCPI remote control commands, programming examples, and information on maintenance, instrument interfaces and error messages. Includes the contents of the **quick start guide** manual.
- **Software option** manuals
Describe the specific functions of this option. Basic information on operating the R&S SMJ is not included.

The **online manual** provides the contents of the operating manual for immediate display on the internet.

Service Manual

Describes the performance test for checking the rated specifications, module replacement and repair, firmware update, troubleshooting and fault elimination, and contains mechanical drawings and spare part lists.

The service manual is available for registered users on the global Rohde & Schwarz information system (GLORIS).

Instrument Security Procedures

Deals with security issues when working with the R&S SMJ in secure areas.

Data Sheet and Brochures

The data sheet contains the technical specifications of the R&S SMJ. Brochures provide an overview of the instrument and deal with the specific characteristics, see <http://www.rohde-schwarz.com/product/SMATE200A.html> > "Download" > "Brochures and Data Sheets".

The data sheet contains the technical specifications of the R&S SMJ. Brochures provide an overview of the instrument and deal with the specific characteristics, see <http://www.rohde-schwarz.com/product/SMJ100A.html> > "Download" > "Brochures and Data Sheets".

Release Notes

Describes the firmware installation, new and modified features and fixed issues according to the current firmware version. You find the latest version at:

<http://www.rohde-schwarz.com/product/SMJ100A.html> > "Downloads" > "Firmware"

Application Notes, Application Cards, White Papers, etc.

These documents deal with special applications or background information on particular topics, see <http://www.rohde-schwarz.com/appnotes>.

1.2 Typographical Conventions

The following text markers are used throughout this documentation:

Convention	Description
"Graphical user interface elements"	All names of graphical user interface elements on the screen, such as dialog boxes, menus, options, buttons, and softkeys are enclosed by quotation marks.
KEYS	Key names are written in capital letters.
File names, commands, program code	File names, commands, coding samples and screen output are distinguished by their font.
<i>Input</i>	Input to be entered by the user is displayed in italics.

Convention	Description
Links	Links that you can click are displayed in blue font.
"References"	References to other parts of the documentation are enclosed by quotation marks.

1.3 Notes on Screenshots

When describing the functions of the product, we use sample screenshots. These screenshots are meant to illustrate as much as possible of the provided functions and possible interdependencies between parameters. The shown values may not represent realistic test situations.

The screenshots usually show a fully equipped product, that is: with all options installed. Thus, some functions shown in the screenshots may not be available in your particular product configuration.

2 Preparing for Use

The following topics will help you to get familiar with the instrument and perform the first steps:

- [Front Panel Tour](#)
- [Rear Panel Tour](#)
- [Putting into Operation](#)

This section explains the control elements and connectors of the Signal Generator R&S SMJ with the aid of the front and rear views and describes how to put the instrument into operation. It also describes the connection of peripherals such as printer, keyboard or mouse. Specifications of interfaces can be found in the data sheet.

The [Chapter 3, "Getting Started"](#), on page 71 of this manual provides an overview of the generator functions and introduces the operating concept. Detailed operating instructions and an overview of menus follow in [Chapter 4, "Manual Operation"](#), on page 85.

For all reference information concerning manual and remote control of the instrument refer to the online help system or its printed/printable version. A more detailed description of the hardware connectors and interfaces is also part of the help system.

2.1 Front Panel Tour

The front panel of the R&S SMJ consists of the VGA display with the softkey area, some utility keys (left side) and the hardkey area with connectors and control interfaces (right side). The subsequent sections provide brief explanations on the controls and connectors, the hardkey area and the front panel.



Figure 2-1: Front panel view

2.1.1 Utility Keys



The keys to the left of the display cause the R&S SMJ to return to a definite instrument state and provide information on the instrument and assistance.

For more information refer to chapter "Instrument Settings".

PRESET

Sets the instrument to a defined state (see [Chapter 2.3.5.4, "Default Settings"](#), on page 37).

LOCAL

Switches from remote control to local (manual) control.

SETUP

Opens the "Setup" dialog for configuring presettings.

For more information, see [Chapter 5.2.3, "General Configuration of Instrument - Setup Key"](#), on page 129.

HCOPI

Opens the "Hardcopy" menu for configuring and starting printing.

For more information, see [Chapter 5.2.5, "Generating a Hard Copy of the Display"](#), on page 154.


INFO

Displays status messages, error messages and warnings.

HELP

Displays context-sensitive help text.

2.1.2 Standby LEDs and Standby Key

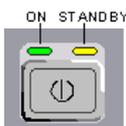

The standby LEDs and the ON/STANDBY key are located in the bottom left corner of the front panel.

The ON/STANDBY key toggles the instrument between standby and ready state (indicated by the standby LEDs).

The standby LEDs indicate the instrument states as follow:

- the green LED (left) is on when the instrument is ready for operation,
- the yellow LED (right) is on in the standby mode.

See also [Chapter 2.3.5.1, "Standby and Ready state"](#), on page 36.

2.1.3 Display

The display clearly shows all main settings and signal generator states.

The display is divided into the following sections:

- Frequency and level display with info line
 - Frequency and level settings containing offset and peak envelope power (PEP).
 - Status messages
 - Brief error messages.
To access a window with detailed information for a message, use the INFO key.
- Block diagram
The block diagram shows the current configuration and the signal flow in the generator with the aid of function blocks containing an on/off switch. Selecting a function block opens a list of associated setting menus. Active menus, info windows and graphs are displayed on top of the block diagram. The block diagram can be displayed in the foreground anytime with the [DIAGRAM](#) key.
- "Winbar" with labelled softkeys
Open menus are indicated by a labelled button in the "Winbar". The buttons determine the softkey functions for front-panel control. When a button or softkey is pressed, the associated menu is displayed either in the foreground or minimized in the "Winbar".
If required, the WINBAR is covered by a row of buttons to which menu-specific functions of the active menu are assigned. By pressing the WINBAR key, the "Winbar" can be displayed in the foreground again. This allows the user to toggle between the button and softkey functions.

For detailed information, see [Chapter 4.2, "Display"](#), on page 89.

2.1.4 Setup Keys

The keys to the right of the display set parameters, select views and control the windows.

2.1.4.1 Keys for Setting Parameters

These keys provide direct access to the settings in the header of the instrument and can be used for fast changing the state of the modulation and the RF signal.



For more information refer to chapter "Instrument Functions".

FREQ

Activates frequency entry.

RF ON/OFF

Switches the RF signal on and off.

"RF OFF" is displayed in the header next to the "Frequency" field.

LEVEL

Activates level entry.

MOD ON/OFF

Switches the modulations on and off.

"MOD OFF" is displayed in the info line of the header next to the "Level" field.

FILE

Activates the menu for storing or loading files (see [Chapter 4.7, "File Management"](#), on page 114).

RECALCULATE

Starts the recalculation of instrument settings.

If time-consuming calculations are required, the active modulation is automatically switched off and the calculation is interrupted to allow the user to make further settings. Calculation is restarted by a keystroke and the modulation is switched on again after the calculation is completed.

2.1.4.2 Display Keys



The keys on top of the rotary knob and the keys below the numeric key pad arrange different windows on the display.

DIAGRAM

Brings the block diagram to the foreground. Active menus are minimized.

Active menus are indicated by the buttons in the "Winbar".

ESC

The function of this key depends on the current cursor position.

- Calls the next higher selection level.
- Closes the open window without accepting new entries; the old value or parameter is retained.
- In dialog boxes that contain a "Cancel" button it activates that button.
- Closes all kinds of dialog boxes, if the edit mode is not active.
- Quits the edit mode, if the edit mode is active.
- Switches between different entry fields of a menu.
- Shifts the entry cursor from the header display to the previously active menu, or to the previously highlighted block in the block diagram if no menu is active.

- Shifts the cursor from a function block in the diagram to the first item in the "Winbar". If no menus are open, the current cursor position remains unchanged.

TOGGLE

- Switches highlighted elements or a function block on and off.
- Switches between two or more settings, e.g. items of selection lists. At the end of a list, the cursor is set on the first entry again.

MENU

Calls the menu tree.



CLOSE

Closes the active menu.

- If the entry mode is active, changes are cancelled.
- If settings in this menu require acknowledgment by means of an "Accept" button, a query is displayed asking whether the changes made should be cancelled.

HIDE

Minimizes the active open menu. The associated button in the "Winbar" remains visible.

REARR

Automatic rearrangement of open menus.

WINBAR

Toggles between display and blanking of the "Winbar".

2.1.5 Keypad for data entry

The keys in the data entry keypad are used to enter alphanumeric data and units.

Data entry keys are only enabled while the cursor is placed on a data input field in a dialog. Their function depends on the data type of the input field.



Keys	Description
0...9/abc	Enters the corresponding numbers (in numeric input fields) or characters (character input fields).
.	Inserts a decimal point (numeric input fields) or dot (character input fields) at the cursor position. Multiple decimal points are not allowed.
+/-	Changes the sign of a numeric parameter. In the case of an alphanumeric parameter, inserts a hyphen at the cursor position.
Unit keys	Selects a unit and thus determine the absolute value, or changes the unit, i.e. trigger a recalculation without changing the absolute value. The function depends on the time at which the UNIT key is used during parameter entry (see Chapter 4.4.5, "Working with Units" , on page 102). For unit-free values, the X1 key is equivalent to ENTER. It confirms the previous entry and deactivates the input field.
_	Adds a blank in a character input field.
*... #	Enters special characters. Toggles through the available characters if the key is pressed several times in a row.
A <-> a	Toggles between uppercase and lowercase characters.
A, B, C, D, E, F	Enters hexadecimal values. The letters assigned to the keys are automatically active when an entry field with a hexadecimal value is active.

INSERT

Toggles between insert and overwrite mode (see also [Chapter 4.4.4, "Entering a Value"](#), on page 100).

BACKSPACE

Deletes the last character before the cursor position or the selected character sequence.

ENTER

Pressing the rotary knob has the same effect.

- Concludes the entry of dimensionless entries. For other entries, this key can be used instead of the default unit key. The new value is accepted.
- Confirms ("OK") and closes open input windows.
- In a dialog box, selects the default or focused button.
- In a dialog box, activates the edit mode for the focused area, if available.
- In a dialog box, activates or deactivates the selected option of the focused area, if the edit mode is active.
- Calls the next menu level.

2.1.6 Rotary Knob and Navigation Keys

The rotary knob and the arrow keys are alternative control elements for data variation and navigation in the graphical user interface.



ROTARY KNOB

The rotary knob has several functions:

- Increases (clockwise direction) or decreases (counter-clockwise direction) numeric values at a defined step width in editing mode
- Moves the cursor, e.g. to a function block in the block diagram
- Scrolls within lists, tables or tree views
- Acts like the ENTER key, when it is pressed.
- Shifts the selection bar within focused areas (e.g. lists), if the edit mode is activated.

Note: Turning or pressing the rotary knob is equivalent to pressing the UP and DOWN keys or the ENTER key in the keypad.



NAVIGATION KEYS

The navigation keys consist of 4 arrow keys which are used for navigation, alternatively to the rotary knob.

UP/ DOWN KEYS

The up and down arrow keys do the following:

- In a numeric edit dialog box, increase or decrease the instrument parameter.
- In a list, table, window or dialog box, scroll vertically.

LEFT/ RIGHT KEYS

The left and right arrow keys do the following:

- In an alphanumeric edit dialog box, move the cursor forward and back.
- In a list, table, window or dialog box, scroll horizontally.

2.1.7 Front Panel Connectors

The RF and I/O connectors and various additional interface connectors are located on the front panel.



I, Q

I and Q inputs for the external analog modulation signal in case of I/Q modulation.

For more information see:

- [Chapter 5.8.1, "Data and Signal Sources in Baseband"](#), on page 313



DATA

Input for external serial data signal in case of digital modulation.

Output for serial data signal in case of digital modulation.

For more information see:

- [Chapter 5.8.1, "Data and Signal Sources in Baseband"](#), on page 313



CLOCK

Input for external clock signal (bit or symbol clock, multiple of symbol clock) for synchronizing the external data signal in case of multivalent modulation. The active edge can be set.

Output for clock signal (bit or symbol clock) in the internal mode.



RF OUTPUT

Outputs for the RF signal.

NOTICE! Maximum Input Levels. Do not overload the RF output.

The instrument is equipped with a reverse power protection that prevents the RF output against back feed, see [Chapter 5.5.9, "Reverse Power Protection"](#), on page 232. Nevertheless, the maximum permissible reverse power is specified in the data sheet.

The RF signal is output via an N female connector.

NOTICE! Risk of RF connector and cable damage. Excessive tightening of the connectors can damage the cables and connectors. Too weak tightening leads to inaccurate results.

Always use an appropriate torque wrench suitable for this type of connector and apply the torque specified in the application note [1MA99](#).

The application notes are available on the Internet and provide additional information on care and handling of RF connectors.

Rohde & Schwarz offers appropriate torque wrenches for various connectors. For ordering information see the R&S SMJ data sheet or product brochure.



TRIGGER 1

Input for triggering digital modulations, standards and ARB.



MARKER 1, 2

Outputs 1 and 2 for triggering and control of external devices with user-definable marker signals.

The instrument provides four outputs for marker signals. Marker signals 1 to 3 are permanently assigned to the outputs; marker signal 4 can be routed to one of the four USER outputs. The assignment is as follow:

- Marker 1,2: BNC connectors MARKER 1 / 2 on the front panel.
- Marker 3: BNC connector MARKER 3 on the rear panel.
- Marker 4: BNC connector USER 1 or USER 2/3/4 pins of AUX I/O connector on rear panel.

For more information see [Chapter 5.2.3.10, "Global Trigger/Clock/External Input Settings"](#), on page 141.



USB

USB (universal serial bus) interfaces of type A (host USB).

- Connection of peripherals such as mouse or keyboard
- Connection of memory stick for file transmission
- Firmware update

Note: Another USB interface type A (host USB) and a USB interface type B (device USB for data transmission) are available on the rear panel.

See also [Chapter 2.4.1, "Connecting USB Devices"](#), on page 39.



SENSOR

Connector for R&S NRP-Zxx sensors.

With the aid of the "User Correction" function, a table with correction values for external test assemblies can be automatically determined, e.g. for compensating the frequency response of cables.

The power sensors are connected by inserting the male connector. To disconnect hold the connector by its sleeve. Pulling on the sensor cable will not release the sensor connector.

See also [Chapter 5.5.10.1, "NRP-Z Power Viewer"](#), on page 233.

2.2 Rear Panel Tour

This section gives an overview of connectors on the rear panel of the instrument. Each connector is briefly described and a reference is given to the chapters containing detailed information. For technical data of the connectors refer to the data sheet.

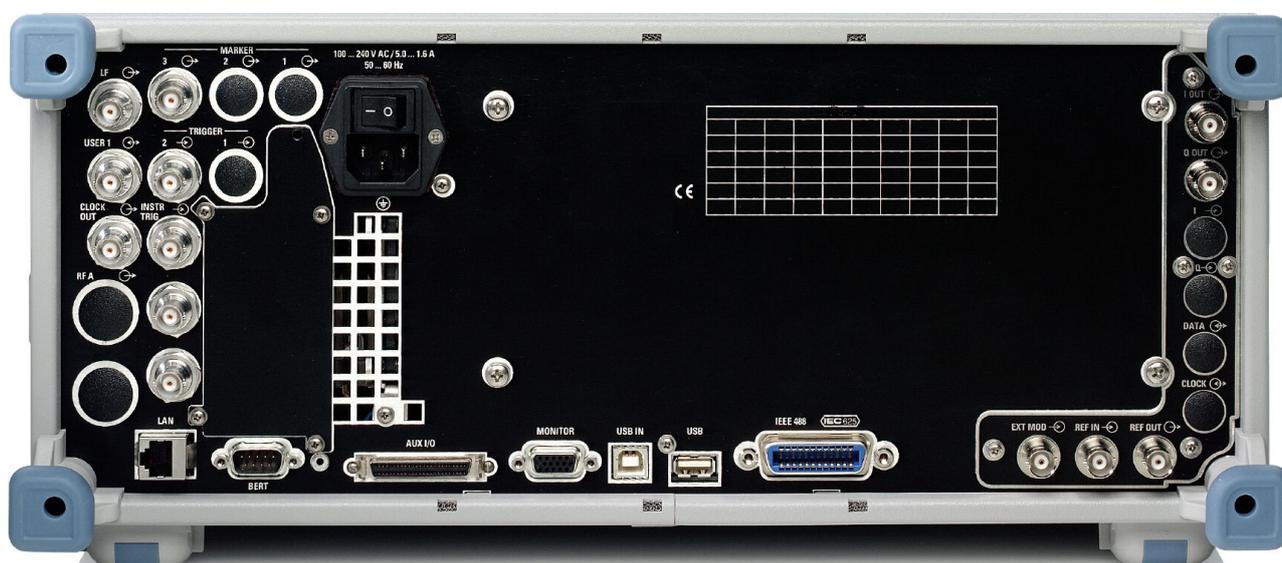


Figure 2-2: Rear panel view


2.2.1 Description of the Connectors



LF

Output for internal LF modulation generator signal.


See also data sheet and [Chapter 5.5.12.1, "Overview of LF Generator"](#), on page 253, [Chapter 5.5.12.2, "LF Output"](#), on page 254.

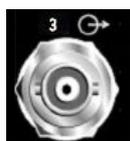

MARKER 3

Output for user-programmable marker signal 3 for triggering and control of external devices.

Marker outputs are permanently assigned (see ["MARKER 1, 2"](#) on page 26).

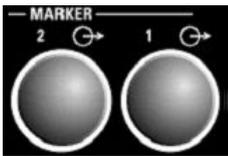**MARKER 1/ MARKER 2**

Rear Panel Connectors (option R&S SMJ-B81).

These options are recommended for use of the instrument in a 19" rack. Installing the instrument in a 19" rack requires a rack adapter or an adapter for telescopic sliders (refer to data sheet for order number).

Marker outputs are permanently assigned (see "MARKER 1, 2" on page 26).

See also [Chapter 2.3.3, "Placing or Mounting the Instrument"](#), on page 33.

**AC SUPPLY AND POWER SWITCH**

When the R&S SMJ is connected to the AC supply, it automatically sets itself to the correct range for the applied voltage (range: see type label). There is no need to set the voltage manually or change fuses.

The instrument comes with or without a power switch, depending on the design of the otherwise technically equivalent power supply unit.

The power switch can be set to two positions:

- **0**
The instrument is disconnected from the mains.
- **I**
The instrument is power-supplied. It is either ready for operation (STANDBY) or in operating mode, depending on the position of the ON/STANDBY switch on the instrument front.

See also data sheet and [Chapter 2.3.4, "Connecting the Instrument to the AC Supply"](#), on page 35.

**I OUT / Q OUT**

Direct output or Differential (non-inverting) output for analog I/Q signal.

Option option R&S SMJ-B16 is required.

See also [Chapter 5.7.3, "Output of the Baseband Signal - I/Q Out"](#), on page 301.

**I OUT BAR / Q OUT BAR**

Differential (inverting) output for analog I/Q signal.

See also [Chapter 5.7.3, "Output of the Baseband Signal - I/Q Out"](#), on page 301.

I/Q/DATA/CLOCK

Rear Panel Connectors (option R&S SMJ-B81)

This options are recommended for use of the instrument in a 19" rack. Installing the instrument in a 19" rack requires a rack adapter or an adapter for telescopic sliders (refer to data sheet for order number).

See also [Chapter 2.3.3, "Placing or Mounting the Instrument"](#), on page 33.

Note: Option R&S SMJ-B16 (Differential Outputs) and option R&S SMJ-B81 cannot be fitted both, because they use the same connectors.

**REF OUT**

Output of internal reference signal.

See also [Chapter 5.5.4, "Reference Oscillator"](#), on page 209.

**REF IN**


Input for external reference signal.

See also [Chapter 5.5.4, "Reference Oscillator"](#), on page 209.

**EXT MOD**

Input for external analog modulation signals.

See also ["External Modulation Sources"](#) on page 241.

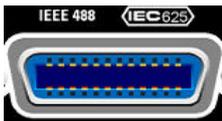**IEC 625/IEEE 488**

IEC-bus (IEEE 488) interface for remote control of the instrument.

See also [Chapter A.1, "GPIB Bus Interface"](#), on page 823 and [Chapter 6.1.4, "GPIB Interface \(IEC/IEEE Bus Interface\)"](#), on page 444.

Note: In order to avoid electromagnetic interference (EMI) caused by open lines, always terminate any connected IEC-bus cable with an instrument or a controller.

**USB CONNECTORS TYPE A**

USB (universal serial bus) interfaces of type A (host USB).

- Connection of peripherals such as mouse, keyboard, etc.
- Connection of memory stick for file transmission
- Firmware update

Further USB interface type A are available on the front panel.

See also [Chapter 2.4.1, "Connecting USB Devices"](#), on page 39.

**USB IN**

 
USB (universal serial bus) interface of type B (device USB).

This port is reserved for future extensions.

**MONITOR**

Connector for external monitor (see [Chapter 2.4.2, "Connecting a Monitor"](#), on page 41).

For description of this connector, refer to [Chapter A.3, "Monitor Connector \(MONITOR\)"](#), on page 826.

AUX I/O

Parallel input/output for data signals as well as settable trigger and control signals of the baseband. Input for device trigger.

Assignment of the AUX I/O interface and of USER pins can be configured in the "Setup > Global Trigger/Clock/External Inputs" and "Setup > USER Marker / AUX I/O Settings".

Note: An adapter of the AUX I/O interface to coaxial BNC connectors is available as an accessory (R&S SMJ-Z5, see data sheet).

 
See also [Chapter 5.2.3.10, "Global Trigger/Clock/External Input Settings"](#), on page 141 and [Chapter 5.2.3.12, "User Marker / AUX I/O Settings"](#), on page 144.

For detailed description of the AUX I/O connector, refer to [Chapter A.2, "AUX I/O Connector"](#), on page 824.



BERT

Input for data, clock and control signals for bit and block error rate measurements, level 0.0128..1.998V.



LAN CONNECTOR

Ethernet interface

- For integrating signal generators in a network
- Remote control of signal generator
- Input of external asynchronous data
- Remote access to the signal generator
- Firmware update

See also:

- [Chapter 2.6, "Setting Up a Network \(LAN\) Connection"](#), on page 43
- [Chapter 6.1.3, "LAN Interface"](#), on page 441

RF A

Rear Panel Connector (option R&S SMJ-B81. These options are recommended for use of the instrument in a 19" rack. Installing the instrument in a 19" rack requires a rack adapter or an adapter for telescopic sliders (refer to data sheet for order number).

See also [Chapter 2.3.3, "Placing or Mounting the Instrument"](#), on page 33.



LO IN, LO OUT

Local oscillator input and output:

- LO IN: Input for external LO signals
- LO OUT: Output for internal LO signals.

See also [Chapter 5.5.5, "Local Oscillator - LO Coupling"](#), on page 212.



CLOCK OUT

Output for internal clock signal.

See also [Chapter 5.8.1.4, "Clock Signals"](#), on page 316.



INSTR TRIG

Input for external trigger of analog modulations, sweeps and list mode. HOP input for control of the frequency hop mode with external source in the list mode.

See also [Chapter 5.5.15, "List Mode"](#), on page 273 and [Chapter 5.5.14.1, "Overview"](#), on page 260.




USER

Input/output for configurable signals for triggering and control.

The following signals can be applied to the connector:

- Marker 4
- CW mode Out
- No signal (blank) marker
- HOP

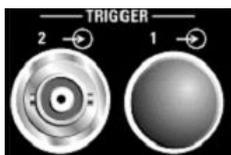**TRIGGER 1 / 2**

TRIGGER 2: Input for external triggering of digital modulations and standards and ARB.

TRIGGER 1: Rear Panel Connectors (option R&S SMJ-B81).

This options are recommended for use of the instrument in a 19" rack. Installing the instrument in a 19" rack requires a rack adapter or an adapter for telescopic sliders (refer to data sheet for Order No.).

See also [Chapter 2.3.3, "Placing or Mounting the Instrument"](#), on page 33.

2.3 Putting into Operation

This section describes the basic steps to be taken when setting up the R&S SMJ for the first time.

WARNING**Risk of injury and instrument damage**

The instrument must be used in an appropriate manner to prevent electric shock, fire, personal injury, or damage.

- Do not open the instrument casing.
- Read and observe the "Basic Safety Instructions" delivered as a printed brochure with the instrument.

In addition, read and observe the safety instructions in the following sections. Notice that the data sheet may specify additional operating conditions.

NOTICE**Risk of instrument damage**

Note that the general safety instructions also contain information on operating conditions that will prevent damage to the instrument. The instrument's data sheet may contain additional operating conditions.

NOTICE**Risk of instrument damage during operation**

An unsuitable operating site or test setup can cause damage to the instrument and to connected devices. Ensure the following operating conditions before you switch on the instrument:

- All fan openings are unobstructed and the airflow perforations are unimpeded. The minimum distance from the wall is 10 cm.
- The instrument is dry and shows no sign of condensation.
- The instrument is positioned as described in the following sections.
- The ambient temperature does not exceed the range specified in the data sheet.
- Signal levels at the input connectors are all within the specified ranges.
- Signal outputs are correctly connected and are not overloaded.

NOTICE**Risk of electrostatic discharge (ESD)**

Electrostatic discharge (ESD) can cause damage to the electronic components of the instrument and the device under test (DUT). ESD is most likely to occur when you connect or disconnect a DUT or test fixture to the instrument's test ports. To prevent ESD, use a wrist strap and cord and connect yourself to the ground, or use a conductive floor mat and heel strap combination.

For details refer to the basic safety instructions included at the front of the manual.

2.3.1 EMI Suppression

Electromagnetic interference (EMI) may affect the measurement results.

To suppress generated Electromagnetic Interference (EMI),

- Use suitable shielded cables of high quality. For example use double-shielded RF and LAN cables.
Note: USB cables are of varying and often poor quality. Therefore, check the quality of each individual USB cable as described in the service manual.
- Always terminate open cable ends.
- Use the cable R&S SMU-Z6 for connection to the DIG I/Q interfaces of the instrument. The required cable is available under part number 1415.0201.02.
- Note the EMC classification in the data sheet

2.3.2 Unpacking and Checking the Instrument

To remove the instrument from its packaging and check the equipment for completeness, proceed as follows:

1. Pull off the polyethylene protection pads from the instrument's rear feet and then carefully remove the pads from the instrument handles at the front.
2. Pull off the corrugated cardboard cover that protects the rear of the instrument.
3. Carefully unthread the corrugated cardboard cover at the front that protects the instrument handles and remove it.
4. Check the equipment for completeness using the delivery note and the accessory lists for the various items.
5. Check the instrument for any damage. If there is damage, immediately contact the carrier who delivered the instrument. Make sure not to discard the box and packing material.



Packing material

Retain the original packing material. If the instrument needs to be transported or shipped at a later date, you can use the material to protect the control elements and connectors.

2.3.3 Placing or Mounting the Instrument

The R&S SMJ is designed for use under laboratory conditions, either on a bench top or in a rack using a rack adapter kit (order number see data sheet).


Bench Top Operation

If the R&S SMJ is operated on a bench top, the surface should be flat. The instrument can be used in horizontal position, standing on its feet, or with the support feet on the bottom extended.

⚠ CAUTION**Risk of injury if feet are folded out**

The feet may fold in if they are not folded out completely or if the instrument is shifted. This may cause damage or injury.


- Fold the feet completely in or completely out to ensure stability of the instrument. Never shift the instrument when the feet are folded out.
- When the feet are folded out, do not work under the instrument or place anything underneath.
- The feet can break if they are overloaded. The overall load on the folded-out feet must not exceed 500 N.

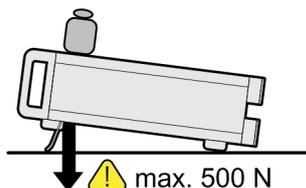**⚠ CAUTION****Risk of injury and instrument damage if stacking instruments**

A stack of instruments may tilt over and cause injury. Furthermore, the instruments at the bottom of the stack may be damaged due to the load imposed by the instruments on top.

Observe the following instructions when stacking instruments:

- Never stack more than three instruments with the same dimensions (width and length). If you need to stack more than three instruments, install them in a rack.
- The overall load imposed on the lowest instrument must not exceed 500 N.
- All instruments should have the same dimensions (width and length). If you need to stack smaller instruments on the top, the overall load imposed on the lowest instrument must not exceed 250 N.
- If the instruments have foldable feet, fold them in completely.

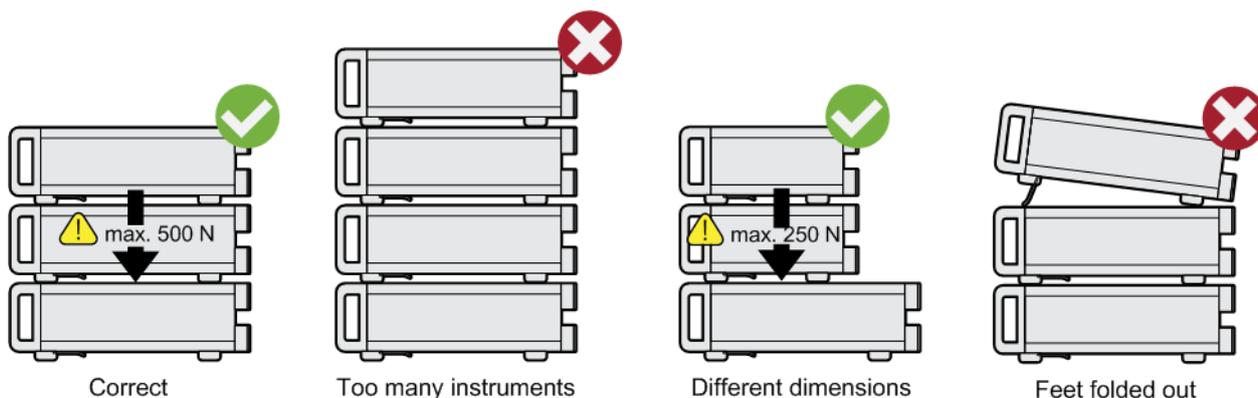

Rackmounting

The R&S SMJ can be installed in a rack using a rack adapter kit (Order No. see data sheet). The installation instructions are part of the adapter kit.

NOTICE

Risk of instrument damage in a rack

An insufficient airflow can cause the instrument to overheat, which may disturb the operation and even cause damage.

Make sure that all fan openings are unobstructed, that the airflow perforations are unimpeded, and that the minimum distance from the wall is 10 cm.

2.3.4 Connecting the Instrument to the AC Supply

The R&S SMJ is automatically adapted to the AC voltage supplied. There is no need to set the voltage manually or change fuses. The [AC SUPPLY AND POWER SWITCH](#) is at the rear of the unit.

- ▶ Connect the instrument to the AC power source using the AC power cable delivered with the instrument.

Note: The instrument is in compliance with safety class EN61010-1. Connect the instrument only to a socket with earthing contact.

2.3.5 Starting the Instrument

The R&S SMJ comes with or without a power switch, depending on the design of the otherwise technically equivalent power supply unit.




Switching off the AC power

You can leave the AC power on permanently to preserve your last instrument settings. Switching off is required only if the instrument must be completely disconnected from all power supplies.



Starting up instruments with power switch

1. [Connect the instrument to the AC supply.](#)
2. To turn the power on, press the main power switch to position I (On).
After power-up, the instrument is in [standby or ready state](#), depending on the state of the ON/STANDBY key at the front panel of the instrument when the instrument was switched off for the last time.
3. In case the instrument is in standby mode, i.e. the yellow LED is on, press the ON/STANDBY key to switch the instrument to ready state.

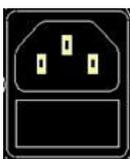


Starting up instruments without power switch

1. [Connect the instrument to the AC supply.](#)

After connection to the AC supply, the instrument is in [standby or ready state](#), depending on the state of the ON/STANDBY key at the front panel of the instrument when the instrument was switched off for the last time.

2. In case the instrument is in standby mode, i.e. the yellow LED is on, press the ON/STANDBY key to switch the instrument to ready state.

2.3.5.1 Standby and Ready state

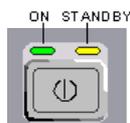

The ON/STANDBY key is located in the bottom left corner of the front panel.

Switching between standby and ready state

- ▶ Press the ON/STANDBY key briefly to switch the instrument from the standby to ready state or vice versa.

In ready state, the left, green LED is on. The instrument is ready for operation. All modules are power-supplied and the R&S SMJ initiates its [startup procedure](#).

In standby state, the right, yellow LED is on. The standby power only supplies the power switch circuits and the oven-controlled crystal oscillator to keep it at its operating temperature. In this state it is safe to switch off the AC power and disconnect the instrument from the power supply.

2.3.5.2 Start Display and Booting

After power-on, the start display indicates for a few seconds the installed BIOS version and the processor characteristics.

The instrument boots the operating system, starts the instrument firmware and automatically performs a selftest. If the previous session was terminated regularly, the instrument uses the last setup with the relevant instrument settings.

Once the startup procedure has been terminated, the block diagram opened in the previous session is displayed and the instrument is ready for operation.



Use the PRESET key to return the instrument to its definite reset/preset state, if the current setup is not anymore relevant.

To customize the start settings, use the "File" dialog.



Rebooting the instrument

Press the STANDBY key for approx. 5 s. to reboot the instrument, if the software stops unexpectedly.

2.3.5.3 Function Check

The signal generator automatically monitors the main functions when the instrument is switched on and continuously during operation.

A detected fault is indicated by a "ERROR" message displayed in the info line together with a brief error description. For in-depth identification of the error, press the INFO key. In response, a description of the error(s) is displayed.

For more information, refer to [Chapter 9, "Status Information, Error Messages and Troubleshooting"](#), on page 813.

Additionally to the automatic monitoring, the R&S SMJ offers the following capabilities to ensure correct functioning:

- **Internal Adjustments**
Press the SETUP key and select "System > Internal Adjustments" to access the dialog for performing and configuring of the adjustments settings. A maximum level accuracy can be obtained, for instance.
- **Selftest**
A selftest is provided for service purposes. The selftest is a protected test procedure, which can be accessed if protection level 1 is disabled.

2.3.5.4 Default Settings

When the instrument is switched on, it is not the preset state that is active, but rather the instrument state that was set before the instrument was switched off. It is also recommended that you use the PRESET key to return the instrument to its defined preset state every time a new configuration is required or the current setup is not anymore relevant.

The R&S SMJ offers a three-stage preset concept:

- **Preset of the settings belonging to a digital standard or associated with one dialog.**
Most of the dialog boxes provide a special "Set to Default" button that resets directly the settings associated to the corresponding dialog, e.g. all digital modulation settings in the "Custom Digital Mod" dialog.
These settings are identical to those which are called up using the PRESET key.
- **Preset the instrument to a predefined state**
The PRESET key calls up a defined instrument setup. All parameters and switching states are preset (also those of inactive operating modes). The default instrument settings provide a reproducible initial basis for all other settings. However, functions that concern the integration of the instrument into a measurement setup are not changed, e.g. GPIB bus address or reference oscillator source settings.
- **Preset the instrument to its factory settings**
The instrument can also be forced to load its default factory settings. To access the corresponding dialog box, press the SETUP key and select the "Factory Preset".
For more information and an overview of the settings affected by the factory preset function, see [Chapter 5.2.3.18, "Factory Preset"](#), on page 152.

Overview of the Most Important Preset States

The following list gives an overview of the presets for the most important generator settings. The other presets can be found in the preset tables of the individual menus and the information accompanying the remote commands.

- "RF frequency" = 1 GHz
- "RF level" RF output switched off
- "Offsets" = 0
- "Modulations State" = Off
- Uninterrupted level settings are switched off
"Level Attenuator Mode" = AUTO
- Internal level control "Level ALC" = AUTO
- User correction "Level Ucor" = OFF
- "LF output State" = Off
- "Sweep State" = Off
- "List mode State" = Off

Settings that are not affected by the PRESET key

- Reference frequency settings ("Ref Oscillator" menu)
- Power on settings ("Level/EMF" menu)
- Network settings ("Setup" menu)
- GPIB address ("Setup" menu)
- Password and settings protected by passwords ("Setup" menu)
- Start/Stop Display Update ("Setup" menu)
- Display and keyboard settings ("Setup" menu)



User-defined instrument states can be stored and called up in the "File" dialog.

2.3.6 Shutting Down the Instrument

To shut down the R&S SMJ, proceed as described below.

NOTICE**Risk of losing data**

If you switch off the running instrument using the rear panel switch or by disconnecting the power cord, the instrument loses its current settings. Furthermore, program data may be lost.

Press the ON/STANDBY key first to shut down the application properly.

1. Press the ON/STANDBY key to save the current setup, shut down the operating system and set the instrument to standby state.

The yellow LED must be on.

2. To turn the power off:
 - a) For instruments with power switch, press the main power switch to position 0 (Off).
 - b) For instruments without power switch, pull the power cable at the rear of the instrument.

Tip:

Switching off the AC power

You can leave the AC power on permanently to preserve your last instrument settings. Switching off is required only if the instrument must be completely disconnected from all power supplies.

None of the front-panel LEDs should be on.

2.4 Connecting External Accessories

The equivalent USB ports on the front and/or rear panel of the R&S SMJ can be used to connect a variety of accessories.

In addition the instrument provides interfaces for monitor connection and network integration (see [Chapter 2.4.2, "Connecting a Monitor"](#), on page 41 and [Chapter 2.6.1, "Connecting the Instrument to the Network"](#), on page 44).

2.4.1 Connecting USB Devices

The USB interfaces of the R&S SMJ allow you to connect USB devices directly to the instrument. This number can be increased as necessary by using USB hubs. Due to the large number of available USB devices, there is almost no limit to the expansions that are possible with the R&S SMJ.

The following list shows various USB devices that can be useful:

- Memory stick for easy transfer of data to/from a computer (e.g. firmware updates)
- CD-ROM drives for easy installation of firmware applications
- Keyboard or mouse to simplify the entry of data, comments, file names, etc.

- Printer for printing out measurement results
- Power sensors, e.g. of the NRP Zxy family

Installing USB devices is easy under Windows, because all USB devices are plug&play. After a device is connected to the USB interface, the operating system automatically searches for a suitable device driver.

If Windows does not find a suitable driver, it will prompt you to specify a directory that contains the driver software. If the driver software is on a CD, connect a USB CD-ROM drive to the instrument before proceeding.

When a USB device is subsequently disconnected from the R&S SMJ, Windows immediately detects the change in hardware configuration and deactivates the corresponding driver.

All USB devices can be connected to or disconnected from the instrument during operation.

Connecting a memory stick or CD-ROM drive

If installation of a memory stick or CD-ROM drive is successful, Windows informs you that the device is ready to use. The device is made available as a new drive and is displayed in Windows Explorer. The name of the drive depends on the manufacturer.

Connecting a keyboard

The keyboard is detected automatically when it is connected. The default input language is English – US.

Select "Start > Control Panel > Clock, Language, and Region > Change keyboards or other input methods" to configure the keyboard properties. To access the Windows operating system, press the Windows key on the external keyboard.

Connecting a mouse

The mouse is detected automatically when it is connected.

Select "Start > Control Panel > Devices and Printers > Mouse" to configure the mouse properties. To access the Windows operating system, press the Windows key on the external keyboard.

Connecting a printer

When printing a file, the instrument checks whether a printer is connected and turned on and whether the appropriate printer driver is installed. If required, printer driver installation is initiated. A printer driver needs to be installed only once.

To install a printer, select "Start > Control Panel > Devices and Printers > Add a printer". To access the Windows operating system, press the Windows key on the external keyboard.

You can load updated and improved driver versions or new drivers from an installation disk, USB memory stick or another external storage medium. If the instrument is integrated in a network, you can also install driver data stored in a network directory.

Select "Start > Control Panel > Devices and Printers > Device Manager > Update Device drivers" to install the driver.

2.4.2 Connecting a Monitor

An external monitor with an analog interface can be connected to the MONITOR connector on the rear panel of the instrument. Per default, the external monitor connector is disabled and has to be enabled before operation.



Connecting external devices

Before connecting any external device such as a monitor, make sure that the instrument is switched off (or in standby mode). Otherwise, correct operation cannot be assured. This does not apply to USB devices.

1. **Shut down the instrument.**

None of the front-panel LEDs should be on.

2. Plug in the monitor cable to the MONITOR connector on the rear panel of the instrument.

3. **Start up the instrument.**

The green LED must be on.

The external monitor is detected.

The entire display of the instrument, containing the status bar, the block diagram and the winbar is displayed on the monitor additionally. Further settings are not required.

The MONITOR interface is described in "Appendix A: Hardware Interfaces" in the Operating Manual.

2.5 Windows Operating System

The instrument contains the Windows Embedded Standard operating system which has been configured according to the instrument's features and needs. Changes in the system setup are only required when peripherals like keyboard or a printer are installed or if the network configuration does not comply with the default settings. After the R&S SMJ is started, the operating system boots and the instrument firmware is started automatically.

To ensure that the instrument software functions properly, certain rules must be adhered to concerning the operating system.

NOTICE**Risk of causing instrument unusability**

The instrument is equipped with the Windows Embedded Standard operating system. Additional software can therefore be installed on the instrument. The use and installation of additional software may impair instrument function. Thus, run only programs that Rohde & Schwarz has tested for compatibility with the instrument software.

The drivers and programs used on the instrument under Windows Embedded Standard have been adapted to the instrument. Existing instrument software must always be modified using only update software released by Rohde & Schwarz.

The following program packages have been tested:

- R&S Power Viewer Plus - virtual power meter for displaying results of the Power Sensor R&S NRP-Zxx (install only this component!)
- Symantec Endpoint Security – Virus-protection software
- FileShredder - for reliable deletion of files on the hard disk

In certain cases, the use of these programs can impair the performance of the instrument.

2.5.1 Virus Protection

Users must take appropriate steps to protect their instruments from infection. Beside the use of strong firewall settings and regularly scanning any removable storage device used with a Rohde & Schwarz instrument, it is also recommended that anti-virus software be installed on the instrument. While Rohde & Schwarz does NOT recommend running anti-virus software in the background ("on-access" mode) on Windows-based instruments, due to potentially degrading instrument performance, it does recommend running it during non-critical hours.

For details and recommendations, see the Rohde & Schwarz White Paper [1DC01: Malware Protection](#).

2.5.2 Service Packs and Updates

Microsoft regularly creates security updates and other patches to protect Windows-based operating systems. These are released through the Microsoft Update website and associated update server. Instruments using Windows, especially those that connect to a network, should be updated regularly.

For details and recommendations, see the Rohde & Schwarz White Paper [1DC01: Malware Protection](#).

2.5.3 Login

Windows Embedded Standard requires that users identify themselves by entering a user name and password in a login window. The instrument provides a factory-installed auto login function, i.e. login is carried out automatically in the background. The ID used for autologin has administrator rights so that printer and network installations are possible. The user name and password are set to "instrument".

2.5.4 Accessing the Start Menu

All necessary system settings can be defined in the "Start > Control Panel" menu (for required settings refer to the Windows Embedded Standard documentation and to the hardware description).

Energy saving mode

An energy saving mode is a default setting in the instrument. The hard disk switches to power-save mode if it is not accessed for 30 minutes. The energy-saving mode is exited by accessing the hard disk again.

2.6 Setting Up a Network (LAN) Connection

The R&S SMJ is equipped with a network interface and can be connected to an Ethernet LAN (local area network). Provided the appropriate rights have been assigned by the network administrator and the Windows firewall configuration is adapted accordingly, the interface can be used, for example:

- To transfer data between a controlling device and the test device, e.g. in order to run a remote control program.
See chapter "Remote Control"
- To access or control the measurement from a remote computer using the "Remote Desktop" application (or a similar tool)
- To connect external network devices (e.g. printers)
- To transfer data from a remote computer and back, e.g. using network folders

This section describes how to configure the LAN interface. It includes the following topics:

- [Chapter 2.6.1, "Connecting the Instrument to the Network"](#), on page 44
- [Chapter 2.6.2, "Assigning the IP Address"](#), on page 45



LXI

The R&S SMJ complies with LXI Class C. LXI gives you direct access to the LAN settings described below.



Accessing Operating System

The operating system can only be accessed if an external keyboard and/or a mouse is connected. Windows provides an on-screen keyboard that can be operated using a mouse, thus enabling operation by mouse only. An external keyboard is recommended for extensive entries.

2.6.1 Connecting the Instrument to the Network

There are two methods to establish a LAN connection to the instrument:

- A non-dedicated network (Ethernet) connection from the instrument to an existing network made with an ordinary RJ-45 network cable. The instrument is assigned an IP address and can coexist with a computer and with other hosts on the same network.
- A dedicated network connection (Point-to-point connection) between the instrument and a single computer made with a (crossover) RJ-45 network cable. The computer must be equipped with a network adapter and is directly connected to the instrument. The use of hubs, switches, or gateways is not required, however, data transfer is still performed using the TCP/IP protocol. An IP address has to be assigned to the instrument and the computer, see [Chapter 2.6.2, "Assigning the IP Address"](#), on page 45.

The R&S SMJ uses the IP addresses 192.168.xxx.yyy for this purposes, where xxx and yyy may take values between 1...254; the subnet mask is always 255.255.255.0.

NOTICE

Risk of network failure

Before connecting the instrument to the network or configuring the network, consult your network administrator. Errors may affect the entire network.

- ▶ To establish a non-dedicated network connection, connect a commercial RJ-45 cable to one of the LAN ports.
To establish a dedicated connection, connect a (crossover) RJ-45 cable between the instrument and a single PC.

If the instrument is connected to the LAN, Windows automatically detects the network connection and activates the required drivers.

The network card can be operated with a 10/100/1000 Mbps Ethernet IEEE 802.3u interface.

2.6.2 Assigning the IP Address

Depending on the network capacities, the TCP/IP address information for the instrument can be obtained in different ways.

- If the network supports dynamic TCP/IP configuration using the Dynamic Host Configuration Protocol (DHCP), all address information can be assigned automatically.
- If the network does not support DHCP, or if the instrument is set to use alternate TCP/IP configuration, the addresses must be set manually.

By default, the instrument is configured to use dynamic TCP/IP configuration and obtain all address information automatically. This means that it is safe to establish a physical connection to the LAN without any previous instrument configuration.

NOTICE

Risk of network errors

Connection errors can affect the entire network. If your network does not support DHCP, or if you choose to disable dynamic TCP/IP configuration, you must assign valid address information before connecting the instrument to the LAN. Contact your network administrator to obtain a valid IP address.

Assigning the IP address manually

1. Obtain the IP address and subnet mask for the R&S SMJ and the IP address for the local default gateway from your network administrator. If necessary, also obtain the name of your DNS domain and the IP addresses of the DNS and WINS servers on your network. If you use more than one LAN connector, you need separate address information for each connector.
2. Press the "Windows" key to access the operating system.
3. Open the "Control Panel" by selecting "Start > Settings > Control Panel".
4. Select "Network Connections".
5. Right-click "Local Area Connection" and select "Properties" from the context-sensitive menu, or click "Local Area Connection" and then "File > Properties".
6. On the "General" tab, click "Internet Protocol (TCP/IP)" and then select "Properties".
7. Select "Use the following IP address" and enter the address information as obtained from the network administrator.
8. If necessary, you can also select "Use the following DNS server addresses" and enter your own DNS addresses.

For more information refer to the Windows Help.

2.6.3 Using computer names

In a LAN that uses a DNS server (Domain Name System server), each PC or instrument connected in the LAN can be accessed via an unambiguous computer name instead of the IP address. The DNS server translates the host name to the IP address. This is especially useful when a DHCP server is used, as a new IP address may be assigned each time the instrument is restarted.

Each instrument is delivered with an assigned computer name, but this name can be changed.

The default instrument name is a non-case-sensitive string that follows the syntax `rs<instrument><serial number>`.

The serial number can be found on the rear panel of the instrument. It is the third part of the device ID printed on the bar code sticker:



Querying and changing a computer name

1. Press the "Windows" key to access the operating system.
2. Select "Start > My Computer > Properties > Computer Name".
The computer name is displayed under "Full Computer Name".
3. To change the computer name, select "Change", enter the new computer name and confirm the entry.

2.6.4 Changing the Windows Firewall Settings

A firewall protects an instrument by preventing unauthorized users from gaining access to it through a network. Rohde & Schwarz highly recommends the use of the firewall on your instrument. Rohde & Schwarz instruments are shipped with the Windows firewall enabled and preconfigured in such a way that all ports and connections for remote control are enabled.

For more details on firewall configuration, see the Rohde & Schwarz White Paper [1DC01: Malware Protection](#).

Note that changing firewall settings requires administrator rights.



To transfer waveform files generated on an external PC using R&S WinIQSIM2, you have to disable the firewall.

NOTICE**Risk of Unauthorized Access**

Disabling the firewall or allowing exceptions may make your instrument more vulnerable to viruses and intruders.

It is recommended that you restore the default firewall configuration after completing a task which requires modified settings.

2.6.5 Working with Directories

Access to network drives depends on access rights and whether the drives in question have been enabled. The complete integration of the R&S SMJ into a larger network with the necessary allocation of rights is highly complex and normally performed by a network administrator.

However, the hard disk of a computer also connected to the network can be accessed from the instrument relatively easily. The only precondition is that the directory on the remote computer that the instrument should access is enabled for remote access. Subsequently, this directory is accessed from the instrument using a Windows Embedded Standard search function. This procedure is also of importance for a point-to-point connection, for instance in order to start a firmware update for which the files have been stored on the hard disk of the remote computer.



The computer and the instrument must both be provided with a computer name and an IP address (see [Chapter 2.6.2, "Assigning the IP Address"](#), on page 45).

Enabling directories on the remote computer



The menu name may deviate from the name specified in the operating sequence, depending on the language and on the operating system used on the computer.

1. On the remote computer, in Windows Explorer, click the directory to be enabled.
2. From the context menu, select "Properties".
3. Select the "Sharing" tab and enable "Share this folder".

Accessing the enabled directory

1. On the instrument, select "Start > Search > For Files and Folders > Printers, Computers > A Computer in the Network".
2. Enter the computer name and press ENTER to start the search.
The computer and its name appears in the results list.
3. Click the computer's name to display the enabled directory.

Note: If a user name and password are requested when you click the computer, the login name and password used on the computer must be entered.

The files in this directory can be accessed by the instrument.

2.7 Remote Access via an External Controller

The R&S SMJ can be remote accessed from a remote computer (external controller) via a network link. This allows convenient operation of the instrument from the desktop although the instrument is integrated in a rack somewhere else.



For an overview of the instrument's operating concept and the different ways to control and operate the instrument, see [Chapter 3.1, "Brief Introduction to the Instrument's Concept"](#), on page 71.

There are different ways to establish a remote access connection to the signal generator but all of them require an established LAN connection between the instrument and the remote computer. The simplest way to remote access the instrument is to use a Web browser, such as Windows Internet Explorer or Mozilla Firefox for instance. Alternatively a remote access via a special application can be used.

For example, the free-of-charge programs "Remote Desktop" for PCs with windows operating system, or "Ultr@VNC" for PCs with Linux/Unix or Windows operating system are available for setting up the remote access connection. Using these applications requires additional installation.

See the following table for an overview of the different ways to establish a remote access connection to the signal generator.

Table 2-1: Remote access via an external computer

Remote access via	LAN connection	Installation of the additional application	
		on the instrument	on the remote computer
Web Browser for example Windows Internet Explorer or Mozilla Firefox see Chapter 2.7.1, "Using a Web Browser for Remote Access" , on page 49	required	no	no
Web browser with HTML5 for example LXI Browser, see Chapter 2.9.2.4, "Web Control" , on page 67	required	no	<i>Web sockets</i> must be supported.

Remote access via	LAN connection	Installation of the additional application	
		on the instrument	on the remote computer
Remote Desktop Windows application for PCs with Window operating system see Chapter 2.7.2, "Remote Desktop Connection" , on page 50	required	no	required
VNC Client for example Ultr@VNC or other dedicated client software for PCs with Linux/Unix or Windows operating system see Chapter 2.7.3, "Remote Access via a VNC Client Software" , on page 53	required	required	VNC Viewer required

When the connection is set up with Remote Desktop, the device firmware of the signal generator is disabled. Direct control on the instrument is not possible while manual remote-control is active. The access of an external PC is indicated by the logon screen of the operating system which identifies the accessing user.

When the connection is set up with a VNC client software (Ultr@VNC), direct control on the instrument is possible while remote access is established.

For return to direct operation on the instrument, the connection must be cut. After cutting the connection, it is still enabled and can be established again any time. The connection is disabled only after deactivation of the program.

This section gives an information on how to use the Web browser for remote access, how to install the applications for remote access and how to establish the connection between the instrument and an external computer with Windows operating system. Remote access via an external computer with Linux/Unix operating system is performed accordingly.



Accessing Operating System

The operating system can only be accessed if an external keyboard and/or a mouse is connected. Windows provides an on-screen keyboard that can be operated using a mouse, thus enabling operation by mouse only. An external keyboard is recommended for extensive entries.



Default password

Remote-access and file access require the user "instrument" with default password "instrument".

2.7.1 Using a Web Browser for Remote Access

The instrument can be remote-accessed via any web browser, as for example the Windows Internet Explorer or Mozilla Firefox.




Alternatively, you can also make use of the LXI browser, as described in [Chapter 2.9.2.4, "Web Control"](#), on page 67.

To remote access the instrument via a web browser:

1. Connect the instrument and the remote computer to a LAN, see [Chapter 2.6.1, "Connecting the Instrument to the Network"](#), on page 44.
2. Install the Java Runtime Environment JRE on the remote computer.
3. Type the instruments' IP address in the address field of the Web browser on your PC, e.g. `http://10.111.11.1`

The "VNC Authentication" screen appears.

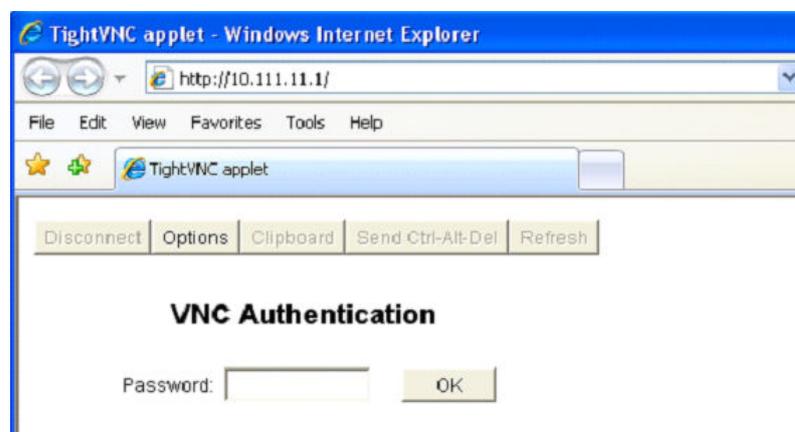

4. Enter the password and select "OK".
The default password is "instrument".

After the connection is established, the current signal generator screen with the block diagram is displayed and the instrument can be remote-accessed from the remote computer.

2.7.2 Remote Desktop Connection

Remote Desktop is a Windows application which can be used to access and control the instrument from a remote computer through a LAN connection. While the instrument is in operation, the instrument screen contents are displayed on the remote computer, and Remote Desktop provides access to all of the applications, files, and network resources of the instrument. Thus, remote operation of the instrument is possible.

NOTICE**Risk of Unauthorized Access**

If the Windows Remote Desktop application is enabled on the instrument (go to "Start > Settings > Control Panel > System"), any user in the network who knows the computer name and login data can access it. To prevent this, make sure that the Remote Desktop application on the instrument is disabled.

To set up a Remote Desktop connection

1. Enable remote desktop control on the instrument.
2. Connect the instrument and the remote computer to a LAN, see [Chapter 2.6.1, "Connecting the Instrument to the Network"](#), on page 44.
3. Set up the Remote Desktop connection between the remote computer and the instrument.

**Remote Desktop Client**

With Windows Embedded Standard, Remote Desktop Client is part of the operating system and can be accessed via "Start > Programs > Accessories > [Communications >] Remote Desktop Connection."

For other versions of Windows, Microsoft offers the Remote Desktop Client as an add-on.

Enabling remote desktop control on the instrument

1. Press the "Windows" key to access the operating system.
2. Open the Control Panel by selecting "Start > Settings > Control Panel".
3. Select "System" and switch to the "Remote" tab.
4. Under "Remote Desktop", activate the "Allow users to connect remotely to this computer" option.

Note: Remote Desktop access and firewall settings.

When you enable or disable the Windows Remote Desktop option (in the "System Properties"), the associated firewall settings are adapted automatically.

5. If necessary, click "Select Remote Users" and select users who are to be given access to the R&S SMJ via Remote Desktop. The user account under which configuration is carried out is automatically enabled for Remote Desktop.

Setting up the Remote Desktop connection on the remote computer

1. On the remote computer, select "Start > Programs > Accessories > [Communications >] Remote Desktop Connection."
2. Enter the instrument's name or IP address in the dialog box (see also [Chapter 2.6.2, "Assigning the IP Address"](#), on page 45).

3. Enter the user ID and password for the instrument (see also [Chapter 2.5, "Windows Operating System"](#), on page 41).
4. Click "Connect".

When the connection has been set up, the instrument's screen appears on the remote computer.



Disabled Direct Control

While remote access is active, the direct control of the instrument is disabled.

Remote access is indicated on the instrument by the logon screen of the operating system. The logon screen identifies the accessing user.

For simultaneous remote access of several instruments from the same PC, a separate Remote Desktop session must be opened for each instrument.

For detailed information about Remote Desktop and the connection refer to the Windows Help.

Helpful settings for Remote Desktop

The following settings for the Remote Desktop connection can make working on the remote PC more convenient.

1. When setting up the connection to the instrument, you can configure the connection settings in the "Remote Desktop Connection" dialog box.
Click the "Options >>" button.
The dialog box is expanded to display the configuration data.
2. Customize the settings:
 - **On the "Experience" tab:**
 - Select the appropriate connection to optimize the connection speed.
 - To improve the performance, you can deactivate options you do not require under "Allow the following".
 - **On the "Local Resources" tab:**
 - If you need to access drives of the remote PC from the instrument (e.g. in order to store settings or to copy files from the PC to the instrument), activate the "Disk drives" option. Windows Embedded Standard will then map drives of the remote PC to the corresponding network drives. When a connection is established, a warning is displayed on the PC indicating that the drives are enabled for access from the instrument.
 - To use printers connected to the remote PC while accessing them from the instrument, activate the "Printers" options. Do not change the remaining settings.
 - **On the "Display" tab:**
 - Under "Remote desktop size", set the size of the R&S SMJ window on the desktop of the remote PC.
 - Activate the "Display the connection bar when in full screen mode" option.

A bar showing the network address of the instrument is displayed on the screen which you can use to reduce, minimize or close the window.

- **On the "General" tab:**

You can save the connection settings for later use using the "Save As" button.

Terminating Remote Desktop Control

A Remote Desktop connection can be terminated either on the R&S SMJ or on the remote PC. The connection can be established again any time as long as remote control is enabled on the instrument. Consider the notice above concerning unauthorized access due to Remote Desktop!

1. To terminate the connection on the instrument, click "Disconnect" in the remote-control message menu of the R&S SMJ.
2. To terminate the connection on the remote PC, close the "Remote Desktop" window, or select "Start > Disconnect".

Disabling Remote Desktop Control

To disable the remote access, deactivate the Remote Desktop on the instrument.

- ▶ Under "Remote Desktop", disable the "Allow users to connect remotely to this computer" option and confirm with "OK".

The connection is disabled, it is no longer possible to access the instrument via Remote Desktop.

2.7.3 Remote Access via a VNC Client Software

A VNC client software is an application which can be used to access and control the instrument from a remote computer via LAN.

The following description explains how to establish the remote access, represented by means of the client software Ultr@VNC. The software is included in Linux/Unix operating system, but it is also available as a free-of-charge download on the Internet <http://www.uvnc.com/download/index.html>. Thus, it is also available for remote computers with Windows operating system.



The GUI appearance of Ultr@VNC may vary if you use a later release. Also, similar programs may deviate in some details, but the basic procedure is the same.

NOTICE

Risk of Unauthorized Access

If the VNC service is enabled on the instrument, any user in the network who knows the computer name and password can access it.

Disable the VNC service on the instrument to prevent unauthorized access.

Setting up a VNC connection

1. Connect the instrument and the remote computer to a LAN, see [Chapter 2.6.1, "Connecting the Instrument to the Network"](#), on page 44.
2. [Install the Ultr@VNC application](#) and enable it on the instrument.
3. In the ICF firewall, enable communication on the network via Ultr@VNC program. See ["Configuring Internet Connection Firewall for VNC Connection"](#) on page 56.
4. Install the VNC Viewer on the remote computer with Windows operating system, see ["Installing the VNC Viewer on a Windows PC"](#) on page 57.
5. Set up the VNC connection between the instrument and:
 - a) the remote computer with Linux/Unix operating system, see ["Setting up the VNC connection on the Linux/Unix remote computer"](#) on page 57;
 - b) the remote computer with Windows operating system, see ["Setting up the VNC connection on the Windows remote computer"](#) on page 58.




Enabled Direct Control


The direct control of the instrument is not disabled and the instrument can be controlled from the front panel and via the remote computer alternately.

Installing the Ultr@VNC application

1. Download the program from the internet and copy it to a directory that can be accessed.
2. On the instrument, shut down firmware using the ALT+F4 key combination.
3. Double click on the setup file to start the installation.
The setup wizard leads through the installation. This description focus only on the relevant settings.
 - a) Select installation of all components.

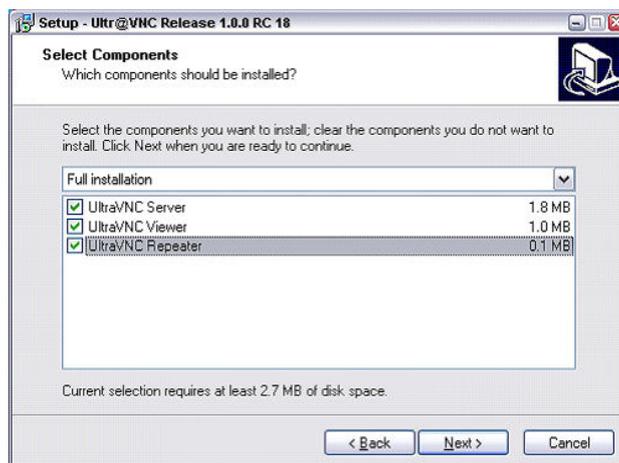

b) In the "Additional Task Panel", enable all entries.

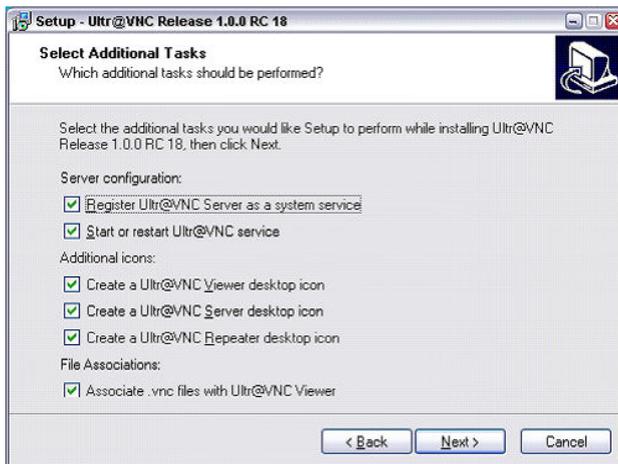

A successful installation is indicated by a message.




At the same time a warning is displayed stating that a password must be set.



4. Select "OK".

The "Default Local System Properties" panel opens.

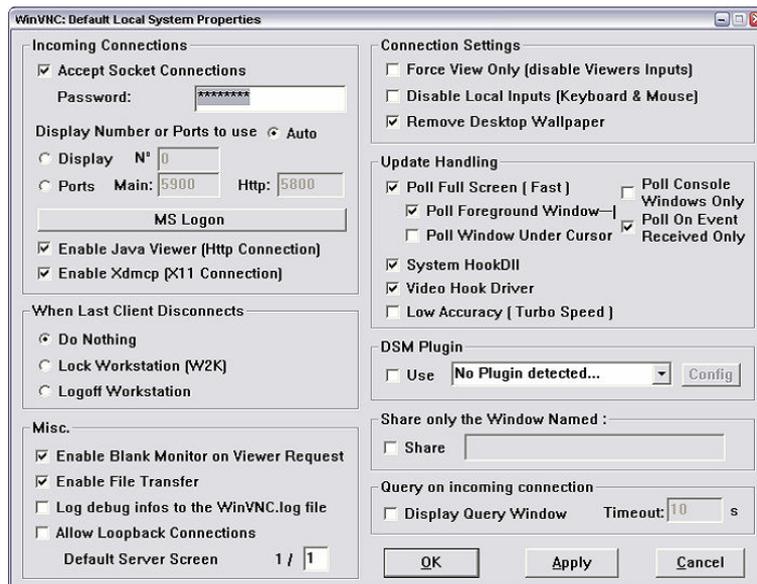

5. Enter a password with a length of at least five digits.

This password is used on the remote computer to access the instrument. Other settings may be changed according to the user-specific security requirements.


After the installation the Ultr@VNC program is automatically started together with the operating system. On mouse over, the IP address of the instrument is indicated.

This IP address and the user-defined password are the prerequisites to enable remote access on the remote computer. Terminated connection is indicated by changed icon color.


Configuring Internet Connection Firewall for VNC Connection

To enable remote access of an instrument in a local network via VNC connection, the connection must be specifically permitted in the firewall.

1. Press the "Windows" key to access the operating system and select "Start > Settings > Control Panel > Windows Firewall" to open the "Windows Firewall".
2. Select "Exceptions > Add Program... > Run Ultr@VNC SERVER" and confirm with "OK".

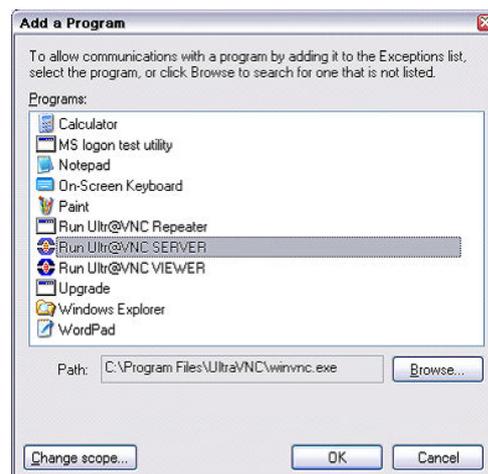

3. In the "Exceptions" tab, enable "Run Ultr@VNC SERVER".

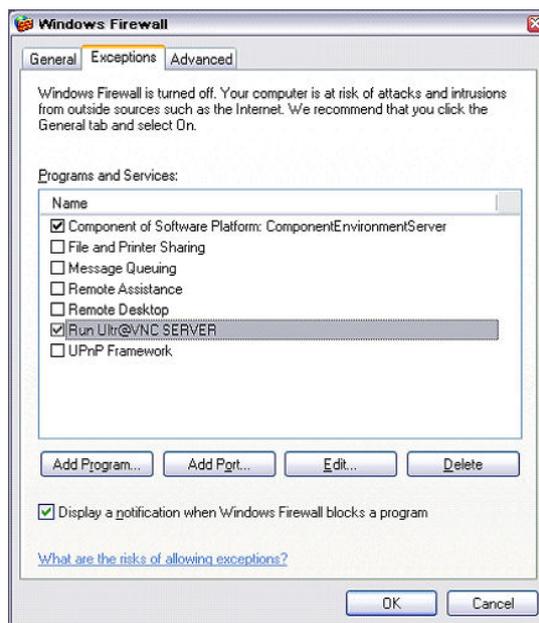

Installing the VNC Viewer on a Windows PC

1. Download the Ultr@VNC program from internet and follow the installation instructions.

Only the program component VNC Viewer is required.

Note: The VNC Viewer program is included in the download for the installation of the Ultr@VNC program on the signal generator if "Full installation" was selected in the "Select Component" panel. In this case, the program `ultr@vncviewer.exe` can be copied to the Windows PC.

2. Install VNC Viewer program component on the remote computer.

Setting up the VNC connection on the Linux/Unix remote computer

The VNC program is available per default for Linux/Unix operating systems.


1. Start a Web browser on the remote computer and enter the IP address of the instrument.
2. Enter the following address:
`vnc://<IP-address of the instrument>`, e.g. `vnc://192.168.1.1`.
A dialog is opened and the password for the remote VNC connection is requested.
3. Enter the password as defined in the "Default Local System Properties" panel of the Ultr@VNC program and select "Log On".

The connection is established, the instrument is remote accessed and the current signal generator screen with the block diagram is displayed. The individual functions are operated using the mouse and keyboard.


In contrast to remote access via Remote Desktop, the direct control of the instrument is not disabled and the instrument can be controlled from the front panel and via the remote computer alternately.

Setting up the VNC connection on the Windows remote computer

1. Start VNC Viewer program component on the PC, select "VNC Server" and enter IP address of the instrument.

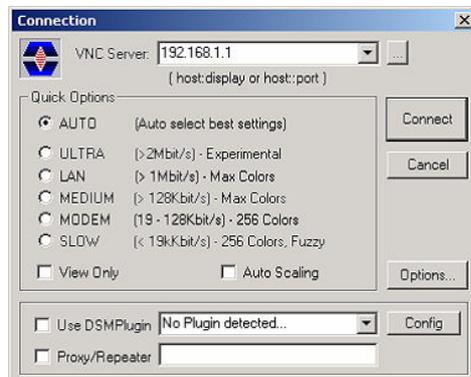

2. To initialize the connection, select "Connect".
A message requesting the password appears.

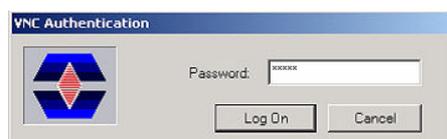

3. Enter the password as defined in the "Default Local System Properties" panel of the Ultr@VNC program and select "Log On".

The connection is established, the instrument is remote accessed and the current signal generator screen with the block diagram is displayed. The individual functions are operated using the mouse and keyboard.



Enabled Direct Control

The direct control of the instrument is not disabled and the instrument can be controlled from the front panel and via the remote computer alternately.

Terminating VNC Connection

The remote access via VNC connection can be terminated either on the R&S SMJ or on the external PC. Terminating the connection does not disable it. It can be established again any time. See the notice above concerning unauthorized access due to VNC connection!

1. Terminate the connection on the R&S SMJ
 - a) Press the "Windows" key to access the operating system.
 - b) Right-click on the VNC icon on the task bar and select "Kill all clients".
2. To terminate the connection on the external Linux/Unix PC, close the internet browser or close the signal generator window.

3. To terminate the connection on the external Windows PC, close the VNC Viewer program.

The connection is terminated. The color of the VNC icon in the status bar of the instrument changes.

A message on the external PC indicates the disconnection.

Disabling Remote Access via Ultr@VNC

The VNC connection can be disabled by removing the program on the instrument or by deactivating the VNC Server service.

1. Remove the VNC program
 - a) Press the "Windows" key to access the operating system and open the "Add or Remove Programs" by selecting "Start > Settings > Control Panel > Add or Remove Programs".
 - b) Remove the VNC program.
2. Deactivate the VNC Server service
 - a) Press the "Windows" key to access the operating system and open the "Services" by selecting "Start > Settings > Control Panel > Services".
 - b) Deactivate the VNC Server service.

The connection is disabled, the VNC icon disappears from the task bar of the instrument.

2.8 Using Virus-Protection Software

Virus-protection software Symantec Antivirus 10.1.7.7000 has been successfully tested for compatibility with the instrument software on R&S SMJ.

However, Symantec Antivirus may affect the behavior of the instrument in terms of settling time or stability. Symantec Antivirus 10.1.7.7000 has been subjected to detailed tests with R&S SMJ and a page file of 1024 MB. The system remains very reliable. However, rare impact on the settling time has been experienced (slight degradations of settling time in 2% of samples out of specification).

Preparing the Installation of Symantec Antivirus

The installation is performed in the operating system.




Accessing Operating System

The operating system can only be accessed if an external keyboard and/or a mouse is connected. Windows provides an on-screen keyboard that can be operated using a mouse, thus enabling operation by mouse only. An external keyboard is recommended for extensive entries.

1. Press the "Windows" key to access the operating system and open the "System" dialog by selecting "Start > Settings > Control Panel > System".

2. In the "System" dialog, select the "Advanced > Performance > Settings > Change".
3. Enable "Drive D: [DATA]" and "System managed size", confirm with "Set" and close the dialog.

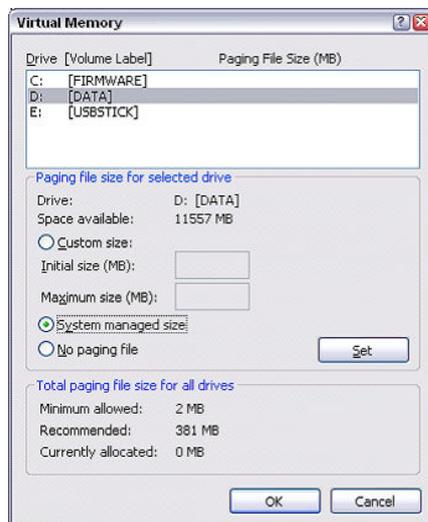

The Symantec Antivirus program can be installed.


2.9 LXI Configuration

LAN eXtensions for Instrumentation (LXI) is an instrumentation platform for measuring instruments and test systems that is based on standard Ethernet technology. LXI is intended to be the LAN-based successor to GPIB, combining the advantages of Ethernet with the simplicity and familiarity of GPIB.

Like GPIB, LXI determines and standardizes the way the instrument behaves in a LAN. The LXI implementation by the Rohde&Schwarz signal generators allows you to change certain LAN settings, to reset the LAN connection as well as to easily identify the instrument.

LXI classes and LXI functionality

LXI-compliant instruments are divided into three classes, A, B and C, with the functionality of the classes hierarchically based one upon the other:

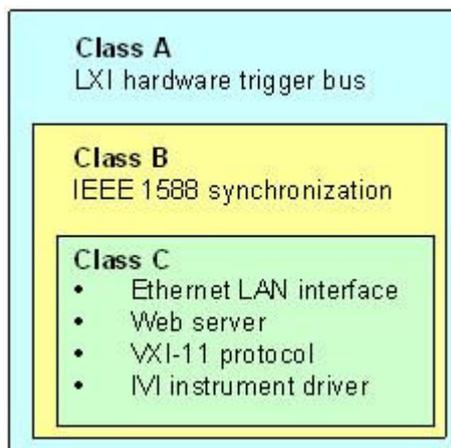

- **Class C** instruments are characterized by a common LAN implementation, including an ICMP ping responder for diagnostics. The instruments can be configured via a web browser; a LAN Configuration Initialize (LCI) mechanism resets the LAN configuration. The LXI class C instruments shall also support automatic detection in a LAN via the VXI-11 discovery protocol and programming by means of IVI drivers.
- **Class B** adds IEEE 1588 Precision Time Protocol (PTP) and peer-to-peer communication to the base class. IEEE 1588 allows all instruments on the same network to automatically synchronize to the most accurate clock available and then provide time stamps or time-based synchronization signals to all instruments with exceptional accuracy.
- **Class A** instruments are additionally equipped with the eight-channel hardware trigger bus (LVDS interface) defined in the LXI standard.



For information about the LXI standard refer to the LXI website at <http://www.lxistandard.org>. See also "News from Rohde & Schwarz, article 2006/II - 190".

Instruments of classes A and B can generate and receive software triggers via LAN messages and communicate with each other without involving the controller.

The R&S SMJ complies with LXI class C and provides an integrated "LXI Status" dialog for LXI status indication and reset of the LAN configuration (LAN Configuration Initialize, LCI). To access the LXI Status dialog, press the SETUP key and select "Remote > LXI Status".

For further information, see section "LXI Status" in the Operating Manual.



Firmware update

After a firmware update, shut-down and re-start the instrument in order to enable the full LXI functionality.

Default state of the network settings

According to the LXI standard, an LCI must set the following parameters to a default state.

Parameter	Value
TCP/IP Mode	DHCP + Auto IP Address
Dynamic DNS	Enabled
ICMP Ping	Enabled
Password for LAN configuration	LxiWeblfc

The LCI for the R&S SMJ also resets the following parameters:

Parameter	Value
Hostname	<Instrument-specific host name>
Description	Vector Signal Generator
Negotiation	Auto Detect
VXI-11 Discovery	Enabled

The LAN settings are configured using the instrument's "LXI Browser Interface".

2.9.1 LXI Browser Settings

To access the instrument via the web browser:

- ▶ Type in the instrument's host name or IP address in the address field of the browser on your PC, for example "http://10.113.1.205".
Note: Do not add the missing zeros in the IP address, while opening the instrument home page.

The instrument home page (welcome page) opens.

The screenshot shows the LXI Instrument Home Page. On the left is a navigation pane with the following elements: LXI, Home, Lan Configuration, Status, Help, Glossary, and www.rohde-schwarz.com. The main content area is titled "Instrument Home Page" and contains an "Instrument Properties" section with the following data:

Instrument Model	R&S SMJ 100A
Manufacturer	Rohde & Schwarz GmbH & Co. KG
Serial Number	100001
Description	Rohde & Schwarz Vector Signal Generator SMJ100A 100001
LXI Class	C
LXI Version	1.1
Host Name	10.111.10.19
MAC Address	00:E0:33:5E:28:88
TCP/IP Address	10.111.10.19
Firmware Revision	02.05.107 beta (Release) (2008-04-23; 14:37:46), Compass 2.1.65.0 (Release)
Current Time	Thursday, 2008/04/24, 15:59:07
Current Time source	Operating System
VISA resource string	TCPIP::10.111.10.19::inst0:INSTR
Device Indicator	<input type="button" value="INACTIVE (press to toggle)"/>

Below the properties is a "Status" section showing "No error". At the bottom right, there is a copyright notice: © 2008 ROHDE&SCHWARZ. All rights reserved.

The navigation pane of the browser interface contains the following elements:

- "LXI"
 - "Home" opens the instrument home page.
The home page displays the device information required by the LXI standard, including the VISA resource string in read-only format.
 - "Device Indicator" activates or deactivates the LXI status indication.
When activated, the LXI LEDs flash, both in the browser dialog and in the LXI dialog of the connected instrument. A green LXI status symbol indicates that a LAN connection has been established; a red symbol indicates that no LAN cable is connected.
 - "Lan Configuration" allows you to configure LAN parameters and to initiate a ping, see [Chapter 2.9.2.3, "Ping Client"](#), on page 66.
 - "Status" displays information about the LXI status of the instrument.
 - "Utilities" provides access to the LXI event log functionality required by the LXI standard.
- "Instrument Control"
 - "Web Control" provides remote access to the instrument, see [Chapter 2.9.2.4, "Web Control"](#), on page 67.
- "Diagnostics"
 - "SCPI Remote Trace" records messages exchanged via the remote control interface, see [Chapter 2.9.2.5, "SCPI Remote Trace"](#), on page 68.
- "Help"
 - "Glossary" explains terms related to the LXI standard.
 - www.rohde-schwarz.com opens the Rohde & Schwarz home page.

- ▶ Press the "INACTIVE (press to toggle)" button to activate the connection.

ACTIVE (press to toggle)



A green flashing status LED indicates the active connection. If the LAN connection fails, the LED turns red.

The status of the LAN connection is also indicated by the "LAN Status indicator" in the "LXI Status" dialog.

For further information, see section "LXI Status" in the Operating Manual.

2.9.2 LAN Configuration

The "LAN Configuration" web page provides access to the parameters required for identifying the R&S SMJ in the network, and allows modification.



Password protection

Changing the LAN configuration is password-protected. The default password is *Lxi-WebIfc* (notice upper and lower case characters). This password cannot be changed in the current firmware version.

It comprises the following navigation entries.

- [IP Configuration](#)..... 64
- [Advanced LAN Configuration](#).....65
- [Ping Client](#).....66
- [Web Control](#)..... 67
- [SCPI Remote Trace](#).....68

2.9.2.1 IP Configuration

The "IP Configuration" page displays all mandatory LAN parameters.

LAN Configuration

LAN Parameters

Hostname: 10.111.10.19

Domain:

Description: Rohde & Schwarz Vector Signal Generator SM

TCP/IP Mode: DHCP + Auto IP Address

IP Address: 10.111.10.19

Subnet Mask: 255.255.0.0

Default Gateway: 10.111.0.1

DNS Server(s): 10.0.2.166
10.0.23.159

Dynamic DNS: Disabled Enabled

Reset Submit (Password required)

Status

No error


© 2008 ROHDE&SCHWARZ. All rights reserved.

The "IP Address Mode" selects a configuration mode for the IP address of the R&S SMJ. With static configuration, the entered IP address, subnet mask, and default gateway are used. With dynamic configuration, DHCP or dynamic link local addressing (automatic IP) are used to obtain the instrument IP address.

See [Chapter 2.6.2, "Assigning the IP Address"](#), on page 45.

2.9.2.2 Advanced LAN Configuration

The "Advanced Config" page provides LAN settings that are not declared mandatory by the LXI standard.

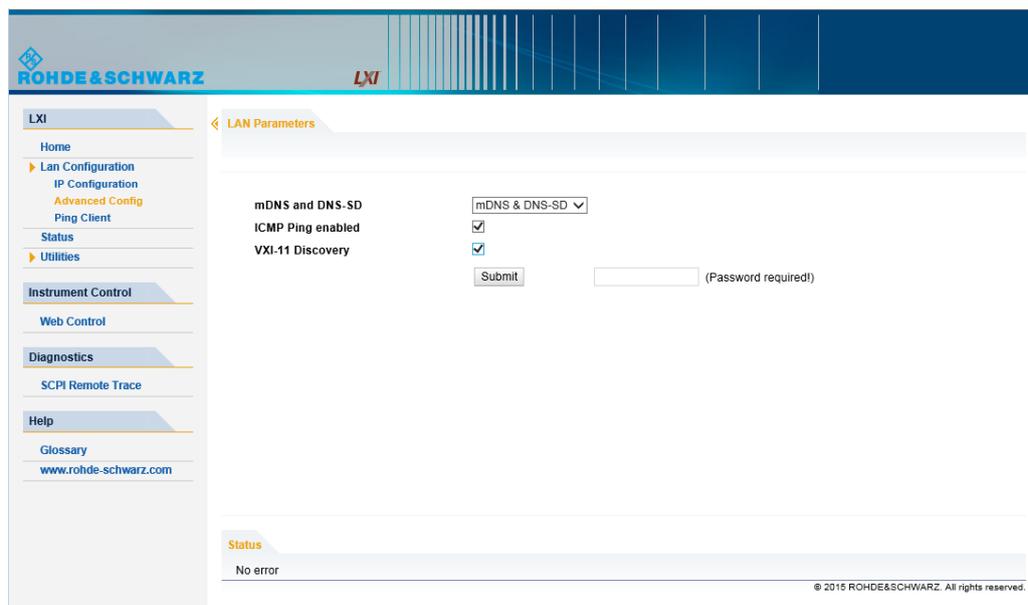

The following advanced parameters are available:

- "mDNS and DNS-SD": The additional protocols "multicast DNS" and "DNS service discovery" are used for device communication in zero configuration networks, working without DNS and DHCP.
- "ICMP Ping enabled": Must be enabled to use the ping utility. If you disable this setting, the instrument does not answer ping requests. The setting does not affect the LXI ping client. You can ping other hosts from the instrument, even if the setting is disabled.
- "VXI-11 Discovery": Must be enabled to detect the instrument in the LAN. If you disable this setting, the instrument cannot be detected by the VXI-11 discovery protocol mechanism. The setting does not affect other detection mechanisms. Setting up a VXI-11 connection via the IP address or the host name is independent of this setting.

2.9.2.3 Ping Client

The "Ping Client" page provides the ping utility to verify the connection between the LXI-compliant instrument and another device.

The ping is initiated from the instrument. Using the `ICMP` echo request and echo reply packets, the function checks whether the communication with a device via LAN works. Ping is useful for the diagnosis of IP network or router failures.

The ping utility is not password-protected.

To initiate a ping from the instrument to the device:

1. Enable "ICMP Ping" on the "Advanced LAN Configuration" page.
2. Select the "Ping Client" page.

3. In the "Destination Address" field, enter the IP address of the device to be pinged (without the ping command and without any further parameters), e.g. *10.113.1.203*.
4. Select "Submit".



2.9.2.4 Web Control

The web control functionality provides remote operation via VNC using a Web browser (with HTML5). This mode does not require additional installation or activation. The VNC protocol allows simultaneous operation from several remote devices. The instrument remains locally operable.

The GUI of the R&S SMJ is visible. To perform the settings, you can operate the instrument as with the manual control. The instrument controls are available via the front panel simulation. File upload and download between the instrument and the remote PC is also available.

Starting a Remote Control via the LXI web browser

This section assumes that the instrument and the controller PC are connected in the LAN.

1. Start a web browser that supports html5 (W3C compliant).
2. Enter the IP address of the R&S SMJ in the browser's address bar.
The R&S SMJ's welcome page is displayed.
3. In the navigation pane, select "Instrument Control" > "Web Control".
Remote access to the instrument requires the password. The default password is *instrument*.
4. Enter the password and confirm with the ENTER key.
After the connection is established, the current screen of the R&S SMJ is displayed in the browser window.

- Use the mouse cursor and keyboard to access the functionality of the instrument as you would directly perform the settings on the instruments front panel.


2.9.2.5 SCPI Remote Trace

The remote trace functionality allows you to trace input and output strings at the remote control interface of the R&S SMJ.

A recorded trace (message log) can be evaluated directly in the dialog. Use the highlighting and navigation functions provided in the lower toolbar to locate error messages and messages containing arbitrary search strings. You can also export the message log to a *.CSV file and evaluate the file using a suitable program.

To trace and display messages:

- In the navigation pane, select "Diagnostics" > "SCPI Remote Trace".
- In the toolbar bar of the "SCPI Remote Trace" page, select "live mode" > "on" and "logging" > "on".
"live mode > on" displays all commands and responses, and "logging > on" also traces messages.
- If you now control the R&S SMJ with SCPI commands, using an appropriate tool, the SCPI remote trace records the information sent and received.

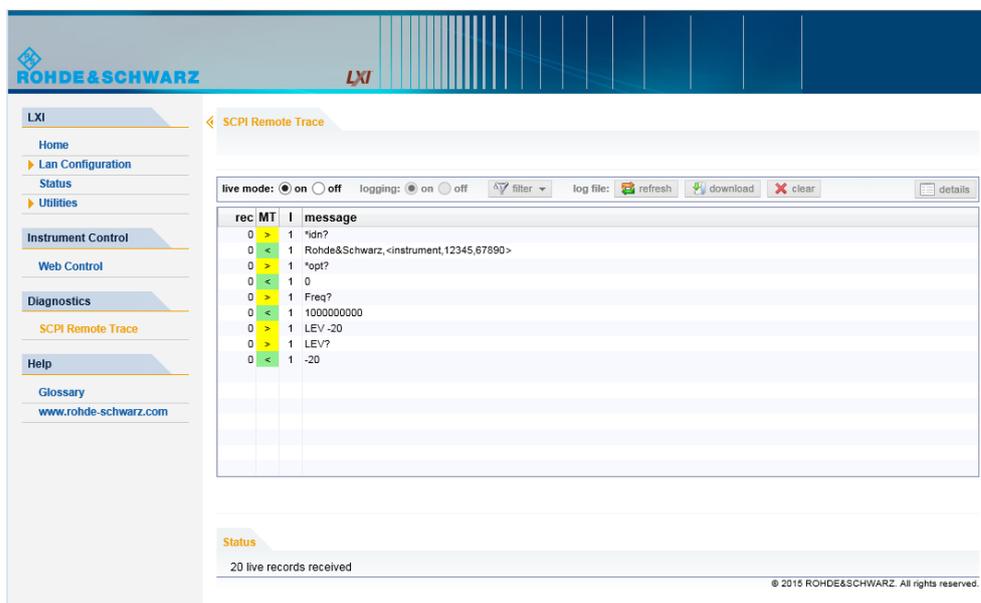

The screenshot shows the LXI SCPI Remote Trace interface. The left sidebar contains navigation options: Home, Lan Configuration, Status, Utilities, Instrument Control, Web Control, Diagnostics (selected), SCPI Remote Trace, and Help. The main area displays the SCPI Remote Trace page with a toolbar for live mode, logging, filter, log file, refresh, download, clear, and details. The message log table is as follows:

rec	MT	message
0	>	*?dn?
0	<	Rohde&Schwarz, <instrument,12345,67890>
0	>	*?op?
0	<	0
0	>	*?Freq?
0	<	1000000000
0	>	*?LEV,-20
0	>	*?LEV?
0	<	-20

 
Below the table, a status bar indicates "20 live records received". The footer shows "© 2015 ROHDE&SCHWARZ. All rights reserved."

The function records all sent commands, received responses and messages, and stores them in an internal database. If "live mode" is disabled, you can display the recent traces upon request, using the "refresh" button. You can also store the log in a file.

Note: The diagnostics functionality will be extended in later releases, e.g. to download or upload SCPI command files from / to the instrument.

Toolbars

The toolbar at the top of the dialog provides basic settings and functions.



- "Live mode" / "logging": If logging is switched on, messages are traced. They are stored in an internal database and can be displayed upon request, using the refresh button (live mode off) or they can be displayed automatically (live mode on).
- "Filter": applies a filter to columns and/or rows when working (live mode off)
- "Refresh": reads the message log from the internal database and displays it
- "Download": stores the SCPI trace log to a *.CSV file
- "Clear": deletes all message log entries in the database and on the screen
- "Details": displays details of the selected message, for example an SCPI command in hex format (also possible by double-clicking a message)

Columns

The following columns are available if no column filter is applied:

- "Rec": record number of the message within the message log
- I: number of the subinstrument
- "MT": indicates the type of the message. Possible values and related message contents are:
 - > = incoming command
 - < = outgoing response to a query
 - E = error message, highlighted by red color
 - T = execution time, i.e. time required by the instrument to process the command internally
- "message": indicates the type of the message. Possible values and related message contents are:
 - > = incoming command
 - < = outgoing response to a query
 - E = error message, denoted in red
 - T = execution time, i.e. time required by the instrument to process the command internally

3 Getting Started

This section helps you to get familiar with the R&S SMJ and provides an introduction to the general concept of the instrument with a sample of the possible application fields as well as a description of the main blocks in the signal generation flow.

This section also explains the operating concept in general and includes a brief introduction to operation by a step-by-step description of the configuration. The example is intended to provide a quick overview of the settings provided. No additional equipment is required.

3.1 Brief Introduction to the Instrument's Concept

The R&S SMJ provides an entirely digital baseband section for generating I/Q signals and an RF section with I/Q modulator. The instrument uses I/Q (vector) modulation. Digital data streams are converted to an I/Q baseband signal. The baseband signal is then D/A-converted and modulated onto the target RF carrier frequency with the aid of an I/Q modulator.

For a detailed description of the blocks in the baseband and RF sections, refer to [Chapter 3.3, "Baseband Section"](#), on page 75 and [Chapter 3.4, "RF Section"](#), on page 76 respectively.

The **operating concept** of the R&S SMJ employs the following three ways of instrument control:

- Manual operation
- Remote control
- Remote access

Manual Operation

The R&S SMJ can be entirely operated from the front panel. Peripherals such as mouse or keyboard can be connected but are not essential.

The R&S SMJ is equipped with an intuitive user interface. The central element of the display is the block diagram that shows the signal flow and processing from the left on the display to most right, i.e. the generated signal can be seen at a glance.

Each block represents a functional unit of the instrument. Thus the user always knows the position at which a parameter has an effect in the signal flow. The main settings of a block are indicated in the block. The interconnection of employed inputs and outputs is also shown. The user is thus always informed about the connection of inputs and outputs in the signal flow and where they can be configured. A window is opened for each menu where parameters can be set. When the window is opened, an entry is made in the "Winbar" below the display. All open menus are of equal priority (not modal) and can be accessed any time.

The block diagram in the figure below shows a fully equipped instrument.

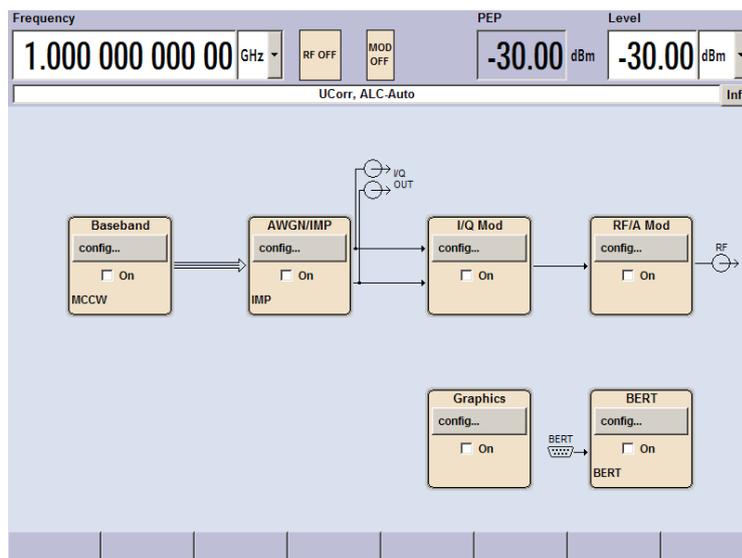


Figure 3-1: Block diagram of a fully equipped R&S SMJ

With the aid of the rotary knob, the user can navigate in the block diagram and the dialogs, and can operate the instrument with one hand. The cursor is moved line by line through the block diagram or dialog. Turning the button clockwise advances the cursor. The selected block can be activated or deactivated with the TOGGLE key. Active blocks are highlighted by a colored background.

The instrument comprises a comprehensive info and help system. Context-sensitive help can be called any time with the HELP (F1) key. The help system indicates the currently selected parameter and offers additional services such as cross references, index and contents. The content of the help system corresponds to the operating manual of the instrument.

Warning and conflict messages caused by incorrect operation as well as further information are displayed in the "Info" line. A complete list of existing conflicts is displayed when the INFO (CTRL+I) key is pressed. Additional information on entries can be requested from the help system. The history function permits display of all messages.

Assistants simplify the completion of tables. After data entry in the assistant, the table is modified only after the "Accept" button has been pressed. Pressing the "Accept" button also stores the assistant data.

For an introduction into the manual operating of the instrument, detailed operating instructions and an overview of menus refer to [Chapter 4, "Manual Operation"](#), on page 85.

For an in-depth description of the dialog boxes and the instrument functions refer to section [Chapter 5.1, "Overview of Instrument Functions"](#), on page 125.

Remote Control

Remote control is an operation of the instrument by means of remote control commands or programs that automatize repeating settings. The instrument is connected to a computer running the program.

The R&S SMJ supports various remote control connections:

- Connecting the instrument to a (LAN) network
- Using the LXI browser interface in a LAN network
- Connecting a PC via the IEC-bus (IEEE 488) interface



Tip: For remote control over LAN, you can use the R&S VISA (Virtual Instrument Software Architecture) library provided for download at the Rohde & Schwarz website <http://www.rohde-schwarz.com/rsvisa>.

This way of operation and the instructions how to set up a connection for remote control are described in the [Chapter 6, "Remote Control Basics"](#), on page 439. The description of the remote control commands is provided in [Chapter 7, "Remote Control Commands"](#), on page 483.

Remote Access

Remote access is the operating of the instrument from a remote computer. Both the R&S SMJ and the computer are connected in a LAN.

Remote access in contrast to **remote control** does not use remote-control commands but a separate software which is installed on the remote computer. After its start, the software simulates the user interface of the instrument. The instrument can thus be operated from the remote computer as on the unit itself. The individual functions are operated using the mouse and keyboard. Specific instrument functions can be executed using specific key combinations on the keyboard or a front panel key emulation that can be operated with the mouse.

This way of operation and the instructions how to set up a connection for remote access are described in [Chapter 2.7, "Remote Access via an External Controller"](#), on page 48.

3.2 Applications of the Instrument

The main field of application of the R&S SMJ is the **generation of digitally modulated signals**. In the instrument, a digitally modulated signal can be generated in several ways. A few examples are given below.

3.2.1 Internally generated I/Q signal

The I/Q signal is generated internally in the R&S SMJ. In this case the instrument must be equipped with a baseband generator (option R&S SMJ-B10) and a baseband main module (option R&S SMJ-B13).

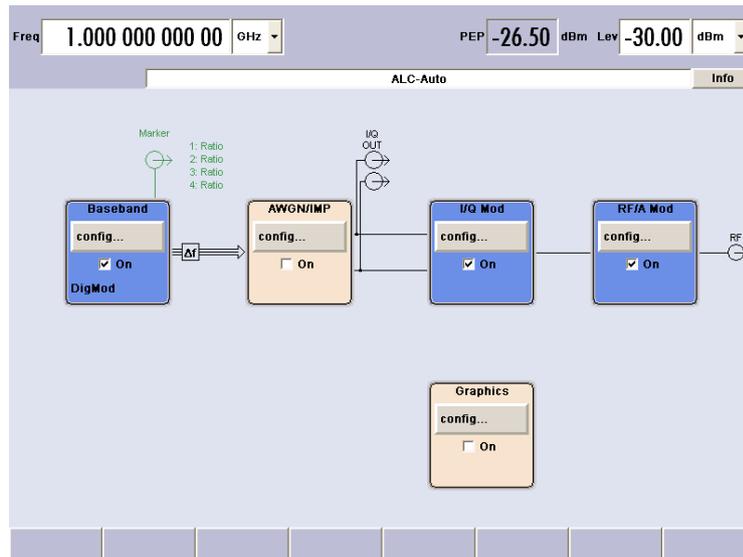


Figure 3-2: Operation of I/Q modulator with I/Q signals from the internal baseband section

3.2.2 Analog Wideband I/Q operation

An external analog I/Q signal is directly applied to the I/Q modulator of the R&S SMJ. In this mode, the entire bandwidth of the I/Q modulator can be utilized. The various capabilities of the baseband section (AWGN, addition of signals, etc) are disabled, however.

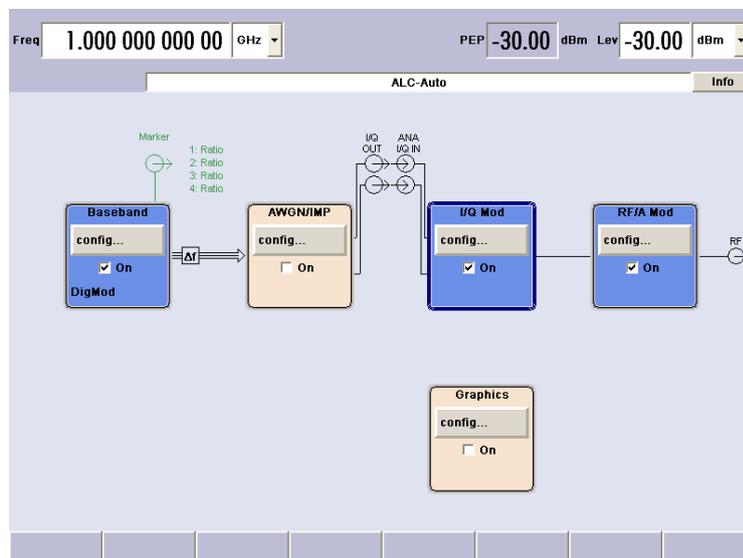


Figure 3-3: Operation of I/Q modulator with external analog I/Q signals directly applied to the I/Q modulator

3.3 Baseband Section

The baseband section of the R&S SMJ is fully digital and contains the hardware for generating and processing I/Q signals.

For detailed information on available options, refer to the R&S SMJ data sheet and the R&S SMJ configuration guide.

Up-to-date information is available at R&S SMJ homepage on the internet <http://www.rohde-schwarz.com/product/smj100a.html>.

Baseband generator (option R&S SMJ-B10)

The generator produces baseband signals. It contains modules for real time signal generation and an arbitrary waveform generator (ARB).

The different baseband options feature a different ARB memory size (see data sheet). But apart from the memory size, all options have the same functionality and are installed alternatively.

The option Baseband Generator contains real time Custom Digital Modulation and ARB. Software options providing various digital standards are offered in addition. Option R&S SMJ-K40, for instance, generates signals to GSM/EDGE standard, option R&S SMJ-K42 signals to 3GPP FDD standard.

Baseband main module (option R&S SMJ-B13)

At the end of the baseband path, the digital signal is converted to an analog I/Q signal. The analog I/Q signal is fed to the I/Q modulator of the RF path. This module also routes signals to the analog I/Q outputs. The module is absolutely required for coupling out the baseband signal from the baseband section.

This module also offers digital I/Q impairment functions. The I/Q signal can be deliberately corrupted, e.g. for testing the receiver quality.

Additional White Gaussian Noise (option R&S SMJ-K62)

Additive white noise, which may be required for instance for measurements on mobile radio base stations, can be produced with the AWGN software option (R&S SMJ-K62).

Digital output module (option R&S SMJ-B18)

The R&S SMJ can be equipped with a standardized digital I/Q interface (LVDS) for online transfer of digital I/Q data. The digital output module (option R&S SMJ-B18) enables the digital output of the I/Q baseband signal.



The R&S SMJ-B18 option can be used together with the R&S® EX-IQ-BOX digital interface module, providing a versatile digital baseband interface with various formats.

3.3.1 Description of Individual Diagram Blocks of the Baseband Section



Each function block can be activated or deactivated with the "ON" check box (on/off toggling).

The ON/OFF TOGGLE key at the front panel (see "TOGGLE" on page 23) switches the currently selected block on or off.

A detailed description of the blocks is provided below.



Baseband A block

In this block, the (first) baseband source is configured and activated. The block is displayed only if a baseband generator is available in the instrument.

Depending on the installed software options, various digital standards, user-configured digital real time modulation or the built-in waveform generator (ARB) can be selected. The selected modulation is displayed in the block.



AWGN/IMP A block

This block is displayed only if a baseband main module is installed.

In this block (digital) I/Q impairments for the baseband path can be set. With the aid of the software for AWGN generation (option R&S SMJ-K62), an (additive) noise signal can be produced.

AWGN and impairments can be activated independently of each other in the appropriate menus. The settings are displayed in the block. The entire block can be activated or deactivated. If the block is deactivated, the signal passes through the block unchanged.

In addition, the differential I/Q output is configured in this block (option R&S SMJ-B16).



Graphics block

With this block, the baseband signal can be graphically displayed in real time. The block is displayed only if a baseband main module is installed.



BERT block

In this block an integrated bit and block error rate tester can be set. The bit error tester makes it possible to evaluate a signal demodulated and decoded by a DUT by measuring the bit error rate. The data used to drive the DUT can be generated by the R&S SMJ or an user-defined external source. In addition, the block error rate measurement can be used to verify CRC checksums.

3.4 RF Section

An RF path is configured by installing a frequency option that comprises all required modules.



One of the following options must be installed.

- R&S SMJ-B103 (up to 3 GHz)
- R&S SMJ-B106 (up to 6 GHz)

For detailed information on available options, refer to the R&S SMJ data sheet and the R&S SMJ Configuration guide.

Up-to-date information is available at R&S SMJ homepage on the internet <http://www.rohde-schwarz.com/product/smj100a.html>).

3.4.1 Description of Individual Diagram Blocks of the RF Section

This section gives an overview of the available blocks and a detailed description of their functions.




I/Q Mod A block

The (first) I/Q modulator is configured in this block. Also the Analog Wideband I/Q mode can be selected here, which allows external I/Q signals to be directly applied to the I/Q modulator, i.e. not via the baseband section. If no baseband modules are installed, I/Q modulation is possible only in the Analog Wideband I/Q mode.

I and Q components can also be swapped (I/Q Swap). (Analog) I/Q impairments can be set in addition. Unlike the impairments in the "AWGN/IMP" block, impairments in the "I/Q Mod" block also affect the externally applied signals in the Analog Wideband I/Q mode.

The status display in the block shows whether I/Q impairments and/or I/Q swap is active. I/Q modulation is switched on or off with the TOGGLE ON/OFF key.

Note: An I/Q modulator provided in the R&S SMJ is automatically activated when a connected baseband source is switched on. The I/Q modulator can also be separately switched on and off (select the "I/Q Mod" block and press the TOGGLE ON/OFF key). This permits the following configuration to be obtained with a single-path R&S SMJ. The baseband source generates an I/Q signal that is output via the analog I/Q output. At the same time, the RF section generates an unmodulated carrier.

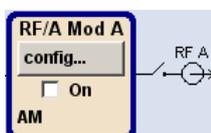

RF/A Mod A block

In this block, the RF parameters and the analog modulation modes are set.

The active analog modulation modes are displayed in the block. The TOGGLE ON/OFF key switches the RF signal on and off. When the RF signal is switched off, the switch before the RF output symbol is open.

RF settings include:

- Frequency and reference frequency
- Attenuator settings.
- Frequency and level sweep
- List Mode settings. In this mode, extremely fast frequency and level settings can be made.

Note: Numeric values for frequency and level are entered best and quickest with the aid of the FREQ and LEVEL keys.

Available analog modulation modes:

- Amplitude modulation
- Broadband amplitude modulation
- Frequency modulation (option R&S SMJ-B20)
- Phase modulation (option R&S SMJ-B20)
- Pulse modulation.

Note: For modulation modes that can be simultaneously used, refer to the R&S SMJ data sheet.


3.5 Example of Setup

This section provides an example on how to configure the instrument to generate and display a simple QPSK-modulated signal.

Configuring and displaying a QPSK-modulated signal


To generate and display a QPSK-modulated signal, proceed as follow:

1. Activate default (preset) state.
Press the PRESET key to set a defined instrument state.

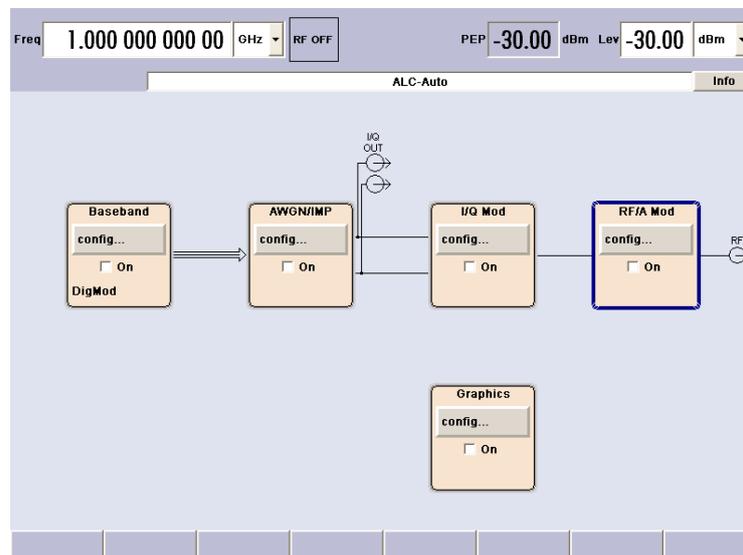


2. Select and activate digital modulation


a) Turn the rotary knob and select the "Baseband A" block.

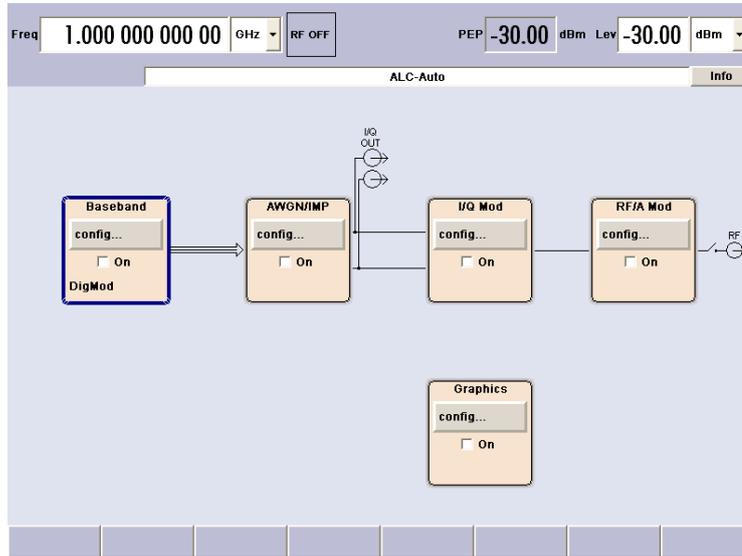


b) Press the rotary knob to open the menu where the digital modulation can be selected (different modulation modes are available depending on the options installed).

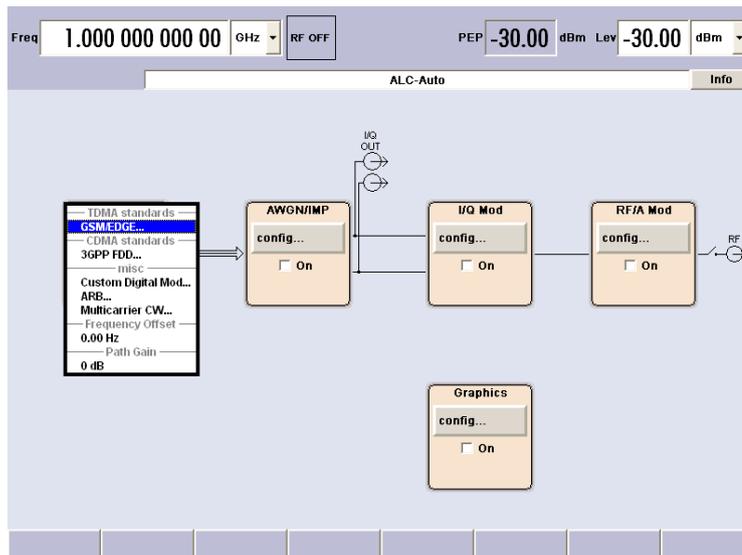


- c) Turn the rotary knob and highlight "Custom Digital Mod...".

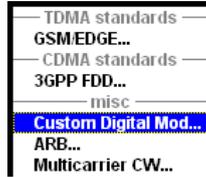


Press the rotary knob to open the "Custom Dig. Mod." dialog.

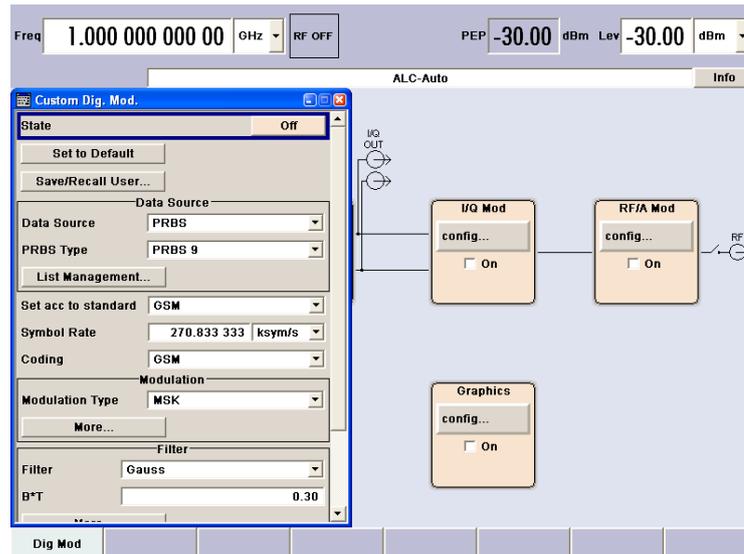


- d) Turn the rotary knob to select parameter "Symbol Rate", press the rotary knob to allow editing and enter the preferred symbol rate with the aid of the numeric keypad and the unit keys.

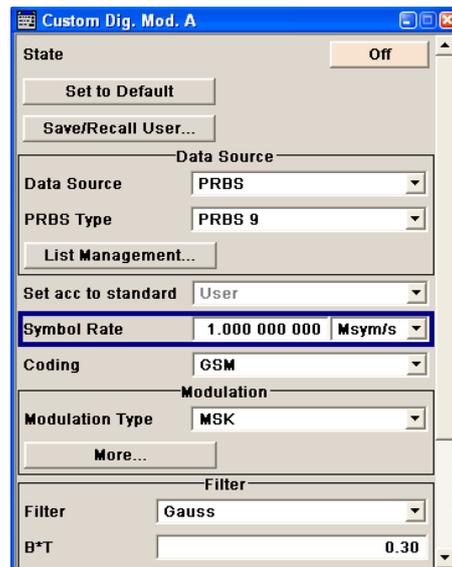


- e) Turn the rotary knob to select parameter "Coding".
Press the button to open the selection list.
Turn the rotary knob to select "Off" and press the knob to activate the selected item.

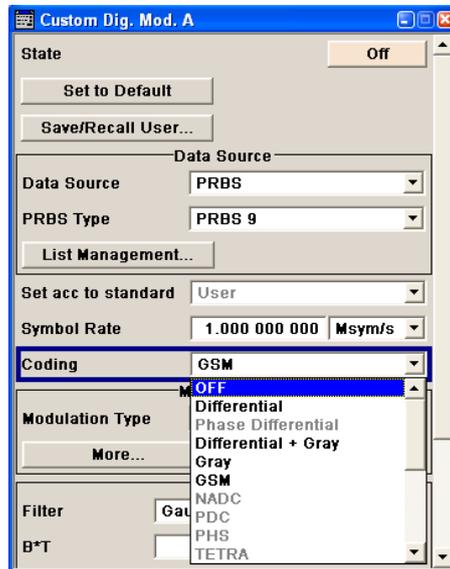


- f) Use the rotary knob in the same way to set "Modulation Type" QPSK and "Filter" Root Cosine with "Roll Off Factor" 0.3.

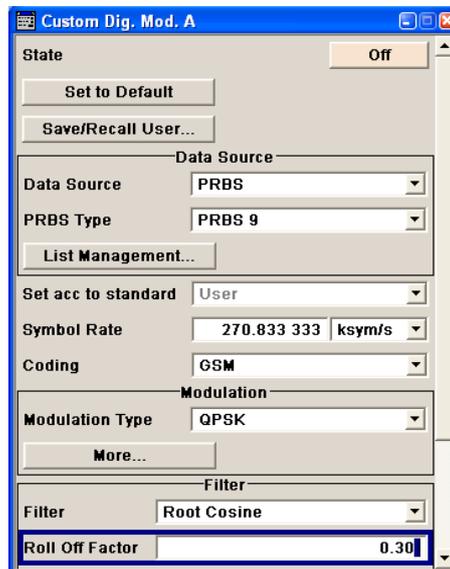

- g) Finally, select "State" and press the rotary knob to switch on the digital modulation.

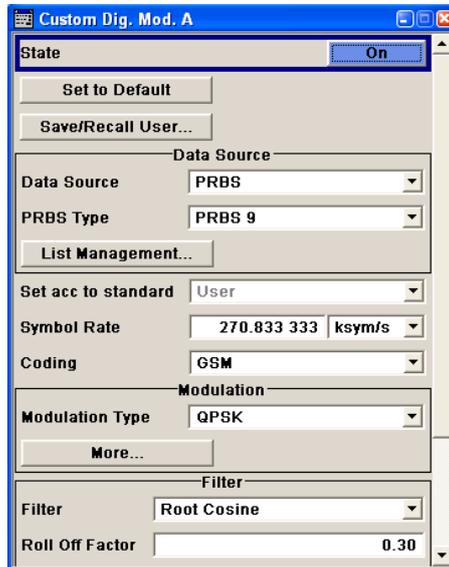


- h) Press the DIAGRAM key to display the complete block diagram.

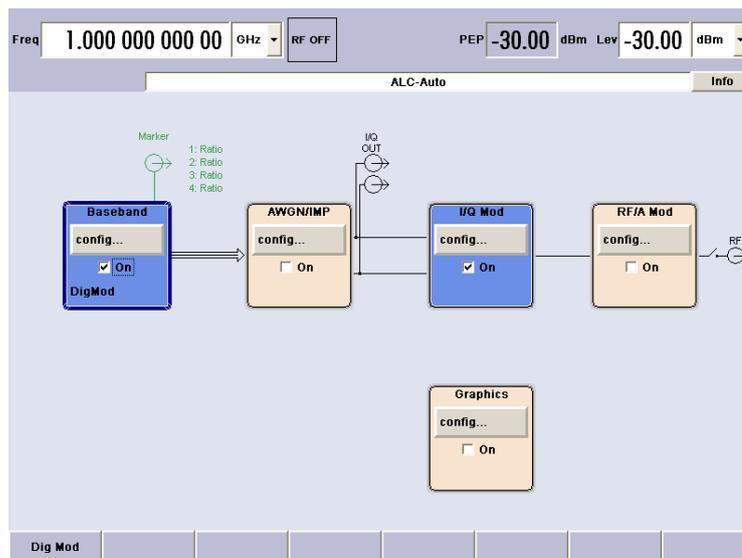

To indicate the active state, the "Baseband" block is displayed in blue.

- i) The entry in the Winbar indicates that the "Custom Dig. Mod." menu is still open in the background.
To display the menu in the foreground, press the softkey below the button in the "Windbar".

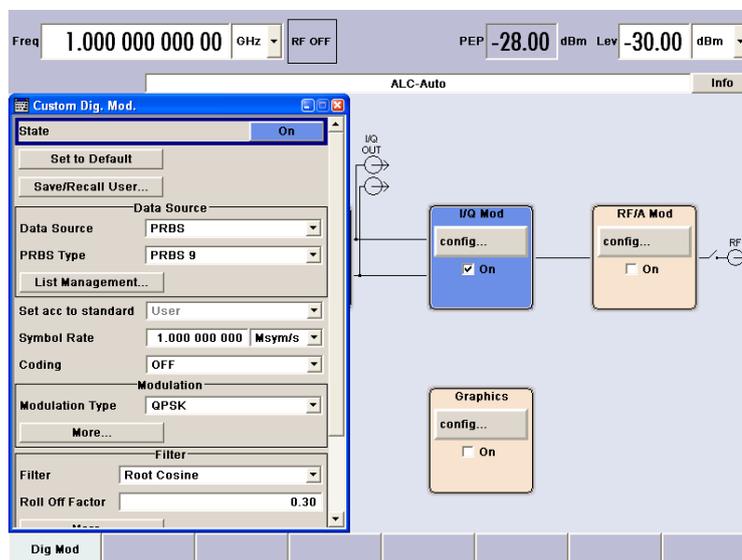

Press the HIDE key to minimize the menu again.

The "I/Q Mod" block is automatically activated.

The "RF/A Mod" is not yet active, which means that no RF signal is output.

3. Set frequency and level and activate RF signal
 - a) Press the FREQ key to activate the editing mode for frequency entry. The "Frequency" entry field in the header section of the display is highlighted.




Enter the frequency using the numeric keypad and terminate the entry by pressing a unit key.

- b) Press the LEVEL key and enter the level settings in the same way.




- c) Press the DIAGRAM key to display the complete block diagram.
 - d) Turn the rotary knob to select the "RF/A Mod" block.
Press the TOGGLE ON/OFF key to activate the "RF/A Mod" block.


The QPSK modulation signal is now present at the RF output.

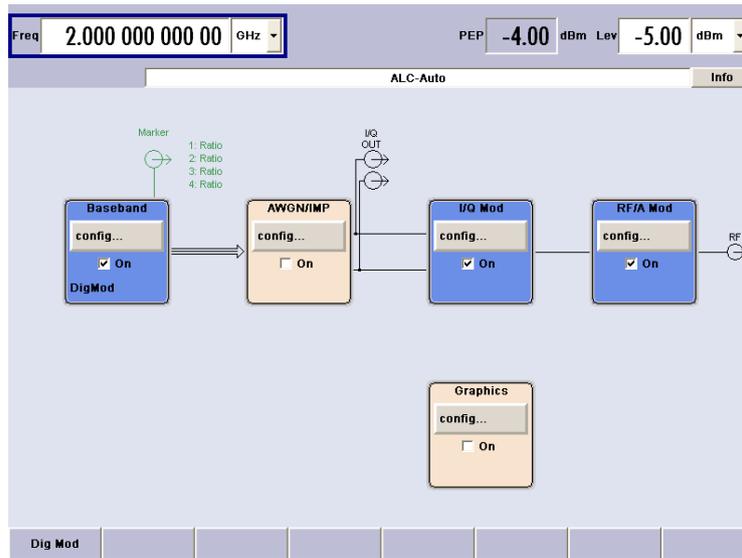

4. Select graphics display of I/Q signal
 - a) Turn the rotary knob to select the "Graphics" block and open the respective menu.

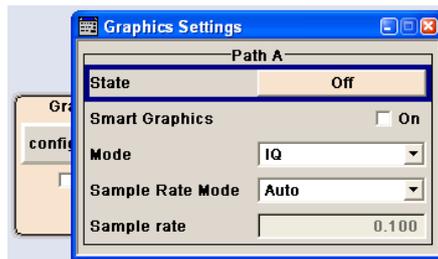

- b) Select "State On" with the rotary knob to activate display of the I/Q diagram.

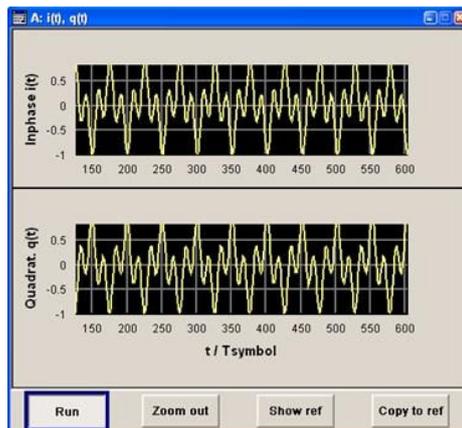

4 Manual Operation

The R&S SMJ can be operated intuitively either via the interactive block diagram or via a menu tree. All menus are in the form of windows that can be operated in the same way. Rotary knob, keys and softkeys, or alternatively a mouse, allow direct and therefore convenient access to entries and settings.

The clear-cut display shows the current signal generator state. Graphs, spectra, vector diagrams, etc. can be called for a visual check of the output signal. Numerous help functions support the user in signal configuration.

This section describes the concept of manual operation of the signal generator. This includes a description of the general structure of a dialog box, working with dialog boxes and the block diagram and the setting of parameters.

For an in-depth description of the dialog boxes and the instrument functions refer to section "Instrument Functions".

4.1 Key Features

The manual operating concept of the R&S SMJ enables the user to make settings as intuitively as possible and at the same time gives a permanent overview of characteristics of the generated signal and of the current instrument state. Numerous online help functions support user settings.

Block diagram

The block diagram is the core of the operating concept.

A graphics display shows the current configuration and the signal flow in the form of a block diagram. All graphical elements can be accessed for operation. An element is selected by means of the arrow keys and the associated setting function is called by pressing Enter. Required menus and graphs are displayed on the block diagram which is displayed again in the foreground whenever the DIAGRAM (CTRL+D) key is pressed.

Permanent frequency and level display

The main characteristics of the RF signal, frequency and level, are permanently displayed in the header section of the screen and can be directly set in the display fields after the FREQ (CTRL+F) or LEVEL (CTRL+L) key is pressed. Status messages for the output signal are displayed in addition to frequency and level.



Operation via Graphical User Interface

- **Functional blocks**

Menus are assigned to the specific function blocks in the block diagram. The function blocks represent elements of signal generation. Function blocks displayed with

a blue frame can be directly switched on and off by means of the TOGGLE ON/OFF (CTRL+T) key. The menus of the highlighted function blocks can be called by pressing the ENTER key.

– **Example:**

The "Baseband" block contains all menus required for baseband signal configuration.




In this block all digital standards and the digital modulation can be selected.



• **Signal flow**

The signal flow between the function blocks and the employed inputs and outputs are also shown.

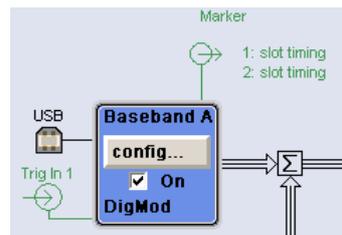

• **Menu tree**

The menu tree can be opened and closed with the MENU (CTRL+M) key. The menu tree is organized in the same way as the directories under Windows. The function blocks correspond to the first directory level, the menus to subdirectories.



Operation corresponds to the Windows concept

To offer the user a familiar environment, operation is very similar to operation of Windows user interfaces. All menus and tables are made up of known elements, such as selection lists, check boxes and entry fields.

A blue frame indicates that the selected item is active. In the highlighted element, entries can be made.

Rotary knob




Operation is possible via front-panel keys, an external keyboard and the mouse. However, most of the settings can be easily made with the rotary knob:

- Turning the rotary knob shifts the entry focus to the target element.
- Pressing the rotary knob activates the selected entry field. Depending on the parameter, the submenu is called, the numeric value varied, the list entry selected or the check box activated or deactivated.
- If a value is entered, the entry is stored by another click on the rotary knob and the editing mode is exited.

Clear settings with the aid of independent subdialogs

A separate window is opened for each dialog and subdialog. The dialogs can be operated independently of each other, i.e. none of the dialogs requires that settings in other dialogs be completed before it can be closed. This ensures flexible operation at all times.

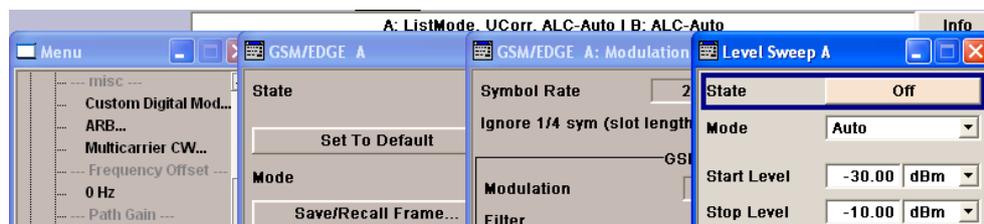


Winbar

The Winbar gives an overview of menus and simplifies their access.

The menus are displayed on top of the block diagram but they can be "hidden" with the aid of the HIDE (CTRL+H) key, i.e. displayed in the form of a button in the "Winbar" at the lower end of the screen.

 They can be displayed again in full size by a keystroke (REARR (CTRL+A) key). This makes room on the screen for other displays that may be required but the setting menus can be still accessed any time.



Keys with assigned simple functions

Most keys on the front panel of the R&S SMJ directly perform a simple function.

Since a great number of settings can thus be made by a keystroke, operation is easy. For instance, the CLOSE (ESC) key closes the active menu; with the RF ON/OFF (CTRL+R) key the RF output signal can be switched on or off.


An exception are keys that call a menu such as the MENU (CTRL+M) key which opens the complete menu tree of the instrument, the SETUP (CTRL+E) key which opens the menus for general instrument settings or the FILE (CTRL+S) key which opens the menu for file management.

Help functions for user support

Numerous help functions support the user in signal configuration.

- **Value ranges**


The valid setting range is displayed for each numeric parameter. This requires a short wait after activation of the entry field. The range is then displayed automatically after a few seconds.

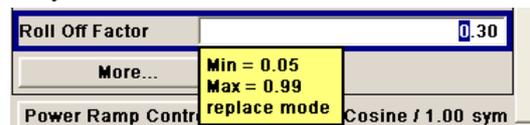

If the entered value is outside the permissible range, the next permissible value is automatically set and a message is output.

- **Context-sensitive help**

Context-sensitive help for each parameter can be called with the HELP or F1 key.

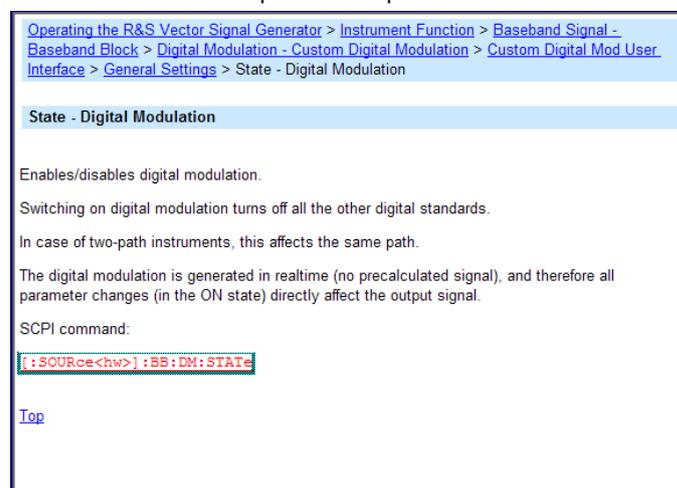

- **Comprehensive online help**

Each help page is part of a comprehensive online help function which can be called by means of an index, a content tree or the "Previous/Next" buttons.


Info line with messages for indication of the current instrument state

A great variety of different messages such as status messages, error messages, warnings or information are displayed in the header field of the screen. With the aid of the INFO (CTRL+I) key, help pages can be called for most of the messages. They provide background information on the message and indicate operating steps that may be required. All messages are explained in the online help which can be called with the HELP (F1) key.




Graphical display of data structure

The structure of the baseband signal is graphically displayed in the respective menus; the individual signal elements can be graphically selected for processing.

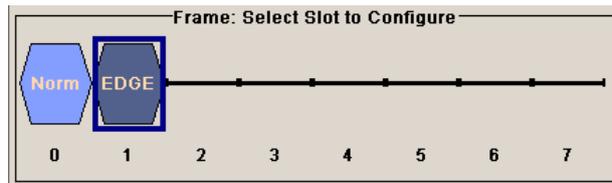


Graphics editor for definition of control signals

Control signals are also graphically configured.

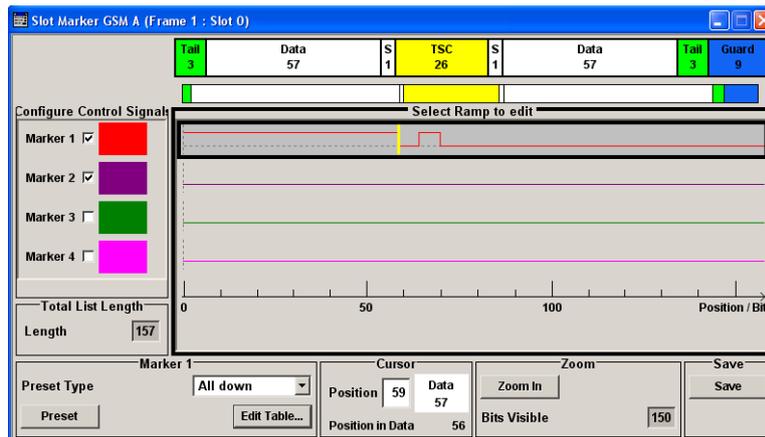

Graphical display of output signal in a diagram

The output signal can be graphically displayed in a number of diagrams. This allows a fast check of signal characteristics. Zoom functions and the insertion of a reference trace permit in-depth evaluation without an external analyzer being required.

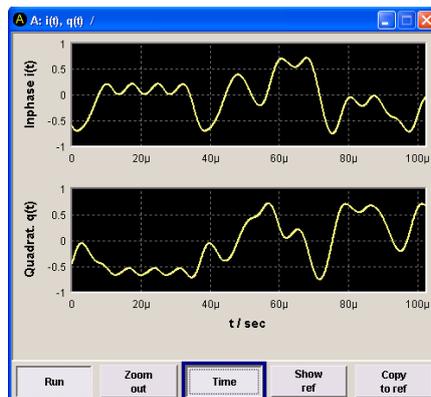

4.2 Display

The display shows the current signal generator state and offers graphical elements for direct operation. It is divided into three sections:

- The frequency and level display with info line indicates the main output signal parameters and reports the current state with status, error and warning messages.

- The block diagram shows the instrument configuration, the signal characteristic as well as the inputs and outputs used and permits interactive operation via graphics elements. Active menus and graphs are displayed on top of the block diagram.
- Winbar with labeled softkeys for menu display.

The block diagram in the figure below shows a fully equipped instrument.

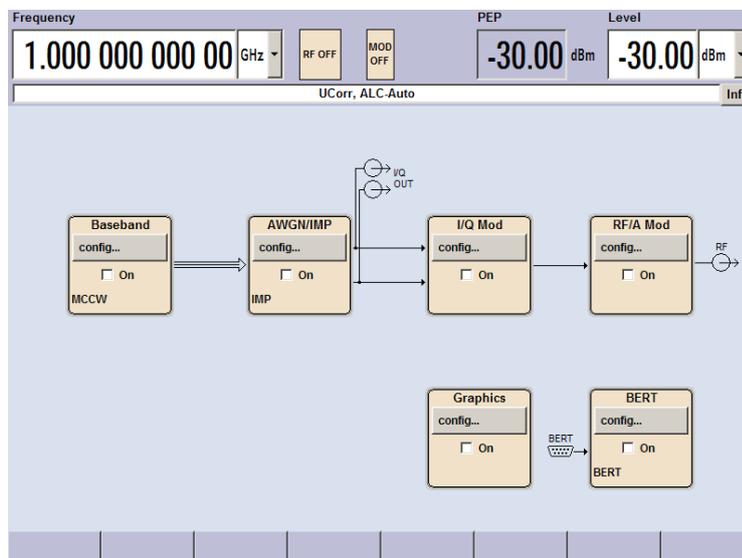


Figure 4-1: Block diagram of a fully equipped R&S SMJ

4.2.1 Settings Displayed in the Header Section

Frequency/level settings and a few status messages (see [Chapter 4.2.2, "Status Information and Messages"](#), on page 91) are displayed in the header field of the screen.

The display may vary depending on the instrument's operating mode:

- In the sweep mode, the current frequency or level of the output signal is displayed. The status message "SweepMode" is displayed in the info line.
- In the list mode, neither the current frequency nor level is displayed, the indication is dimmed.
- If user correction is active, the status message "UCorr" is displayed in the info line.
- In the case of digital modulation, "Freq" indicates the frequency, "PEP" the peak envelope power and "Level" the average level.



The values displayed in the "Freq" and "Level" fields include a set offset or multiplier factor.

For more See also [Chapter 5.5.2, "RF Frequency"](#), on page 201 and [Chapter 5.5.6.1, "Overview of RF Level"](#), on page 215.

4.2.2 Status Information and Messages

The instrument indicates status information and messages in the header section of the screen. The messages differ with respect to their importance (errors, warnings, info) and the time of their appearance (brief and permanent messages), and require different treatment


For additional information refer to the info window (see [Chapter 4.2.3, "Info Window"](#), on page 92).

Refer to [Chapter 9, "Status Information, Error Messages and Troubleshooting"](#), on page 813 for an overview of all status information and messages and corrective actions.

4.2.2.1 Status Information

The status information gives the user an overview of the main operating states and settings of the instrument. The states are indicated for information only and do not necessitate any action by the user.

Status information is displayed between the frequency and level fields, at the left of the info line or in the info line itself.

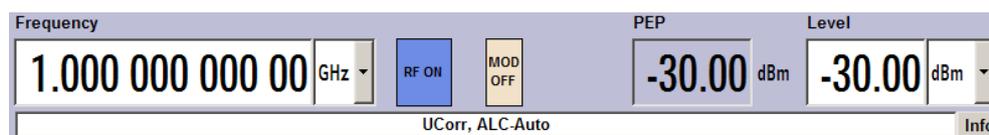

4.2.2.2 Messages

Messages indicate errors in the instrument. They are displayed in the info line in different colors depending on their importance and display duration. Errors (e.g. no calibration data) are displayed in red, information (e.g. file not found) and warnings in black. Warnings indicate less significant errors (e.g. the instrument operates outside specified data).

4.2.2.3 Volatile messages

Brief messages report automatic settings in the instrument (e.g. switching off of incompatible types of modulation) or on illegal entries that are not accepted by the instrument (e.g. range violations). They are displayed in the info line on a yellow background. They are displayed on top of status information or permanent messages.

Volatile messages do not normally demand user actions and disappear automatically after a brief period of time. They are stored in the history, however.

These messages can be read from remote using the commands `:SYSTem:ERRor[:NEXT]?` and `:SYSTem:ERRor:ALL?`.

4.2.2.4 Permanent Messages

Permanent messages are displayed if an error occurs that impairs further instrument operation, e.g. a hardware fault. The error signalled by a permanent message must be eliminated before correct instrument operation can be ensured.


The message is displayed until the error is eliminated. It covers the status display in the info line. After error elimination, the message automatically disappears and is also recorded in the history.

These messages can be read from remote using the command `:SYSTem:SERRor?`.

4.2.3 Info Window

A few operating states and the current message are displayed in the info line.

The INFO window with a list of current permanent messages and a detailed description of each message can be opened with the INFO (CTRL+I) key.

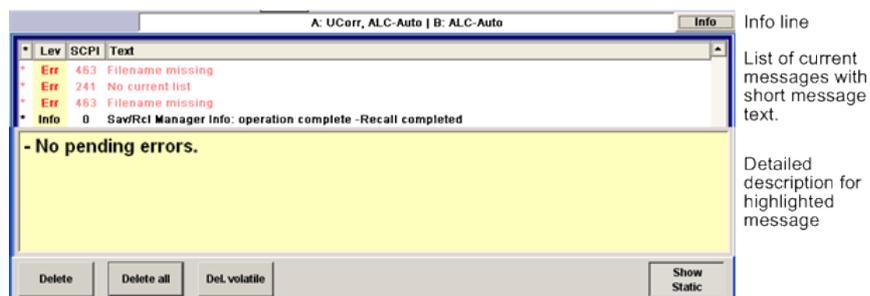

The upper section of the info window contains a list of all current permanent messages in the order of their occurrence, i.e. the most recent message is displayed first. In the lower section of the window, additional information on the highlighted message is displayed. A history of all messages that have occurred since instrument switch-on can be called with the "History" key. The most recent message is displayed first.

The messages are color-coded according to their level. Device-specific messages are red, info and remote control error are black. The level is also indicated in the "Lev" column (Err, Sys or Info). Column "SCPI" indicates the SCPI error code.

With the aid of the softkey buttons, error messages can be cleared and a history of all messages called.

Delete

Clears the highlighted message.

This button is available only if the history of the messages is displayed.

Delete All

Clears all messages.

This button is available only if the history of the messages is displayed.

Del. volatile

Clears all volatile messages.

This button is available only if the history of the messages is displayed.

Remote command:

`:SYSTem:ERRor:ALL?` on page 792

Each time a `SYST:ERR:ALL?` query is sent, the error queue is returned and at the same time cleared.

History

Calls the list of all messages that have occurred since instrument switch-on. The most recent messages are displayed at the top of the list. When the button is pressed again, the list of current messages is displayed.

Remote command:

`:SYSTem:ERRor[:NEXT]?` on page 794 or `:STATus:QUEue[:NEXT]?` on page 791

Each time a `SYST:ERR?` or `STAT:QUE?` query is sent, the oldest entry in the error queue is returned and at the same time cleared in the list.

4.2.4 Block Diagram

The block diagram shows provided options, signal configuration and the currently selected signal flow of the generator with inputs and outputs used. Signal generation can be completely operated from the block diagram. The highlighted function block can be directly switched on and off with the TOGGLE ON/OFF (CTRL+T) key. Pressing the Enter opens the associated setting menu.

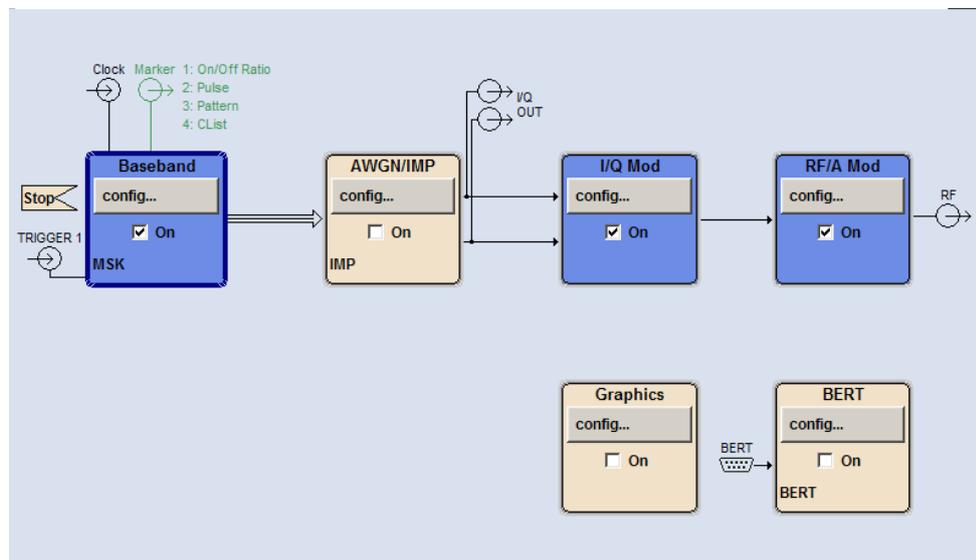


Figure 4-2: Block diagram of the R&S SMJ

4.2.4.1 Function Blocks in the Block Diagram


Each block represents a function of signal generation. The function is indicated in the headline of the block. In the check box, the respective function can be quickly activa-

ted/ deactivated with the TOGGLE ON/OFF (CTRL+T) key. After activation, the block is displayed in blue. Status information is displayed below the check box. It is different for the different blocks.

Pressing the rotary knob (front panel) or the "Config..." button (mouse) opens the associated setting menu.

In all function blocks where the signal flow can be influenced, the top menu level for setting signal routing parameters is offered.

Example: Baseband block

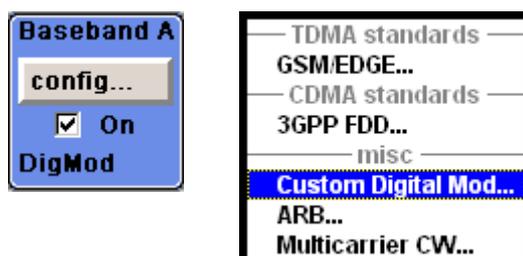


In this block, the digital modulation signal, the digital standards, arbitrary waveform generation and multicarrier CW are set. The status information of the "Baseband" block indicates the selected modulation and associated additional information, e.g. the number of channels.

4.2.4.2 Signal Flow and Input/Output Symbols in the Block Diagram

The input/output symbols in the block diagram show the currently used inputs and outputs of the signal generator. Unused inputs and outputs are not shown. The lines indicate the signal flow.

Symbols and labels refer to the corresponding inputs and outputs on the front and rear panel of the signal generator. The direction - input or output - is indicated by an arrow.


Example:

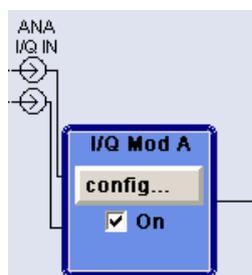

The symbols indicate the inputs for the analog I and Q signal.

If several markers are active, the marker characteristics are listed next to the marker symbol of the active markers.

Symbols and lines are displayed in different colors depending on their function.

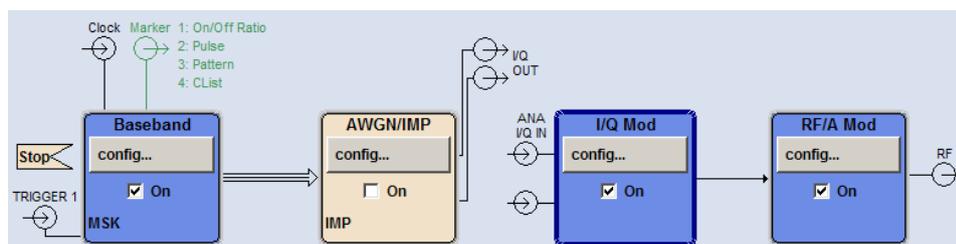


- The baseband signal is indicated by a three line arrow, the I- and Q-components of the signal by a single-line arrow.
- Connections are indicated by a "solder point".
- Black is used for the generated signal.
- Green is used for control signals.

The signal flow is configured in the individual menus. User interfaces are configured in:

- the "Setup > USER Marker /AUX I/O Settings" dialog and
- the "Setup > Global Trigger/Clock/External Inputs" dialog.

4.2.5 Winbar and Softkeys

 The "Winbar" is displayed below the block diagram. Labeled buttons represent open menus, the label indicates the menu. If several menus are open, the button of the currently active menu is displayed in a lighter colour. The buttons also assign functions to the softkeys of the next lower level for front-panel operation. Up to eight menus may be open simultaneously. When the ninth menu is opened, the menu that was opened first is automatically closed.



Some menus, e.g. data and list editor menus, cover the "Winbar" and assign menu-specific functions to the front-panel softkeys by way of the menu buttons.

Any of the open menus can be activated either with the respective button in the "Winbar" or the front-panel softkey. In combination with the keys for menu operation (CLOSE (ESC), HIDE (CTRL+H) and REARR (CTRL+A)), convenient menu operation can be ensured.

Working with menus and dialog boxes is described in [Chapter 4.3, "Accessing Dialogs"](#), on page 97.

4.2.6 Structure of the Dialogs

The parameters are set in the menus. Menus are accessed either via the function blocks in the diagram or by means of the MENU (CTRL+M) key. The menus are displayed on top of the block diagram.

If the menu buttons assign menu-specific functions to the softkeys, the "Winbar" is hidden.

Working with menus and dialog boxes is described in [Chapter 4.3, "Accessing Dialogs"](#), on page 97; the setting of parameters in [Chapter 4.4, "Setting Parameters"](#), on page 98.

The menus are in Windows format. The menus differ in details depending on their function but they consist of the same main elements. Each menu consists of a menu header and one or more menu areas with various fields for setting parameters.

The header line contains the name of the menu and the buttons for minimizing and closing the menu. To operate the buttons, use the mouse or the front keys HIDE (CTRL+H) and CLOSE (ESC).

Several fields of associated but separately set parameters are organized in menu areas. A menu area is framed and labelled with the function common to all parameters.


Example: Impairments

Each of the setting fields is assigned a parameter name. The kind of setting varies depending on the parameter to be set. Some settings can only be made in a specific configuration. If setting is not permitted with the specific configuration selected, the respective item is disabled and displayed in gray and the entry or selection field cannot be accessed.

4.2.7 Graphical Display of Output Signal Characteristics

The graphical display of the output signal enables the user to rapidly check signal characteristics without connecting an analyzer. Zoom functions and the display of a reference trace allow in-depth evaluation. The diagram is displayed on top of the block diagram. It can be minimized and called in the same way as a menu.

Example: I/Q diagram

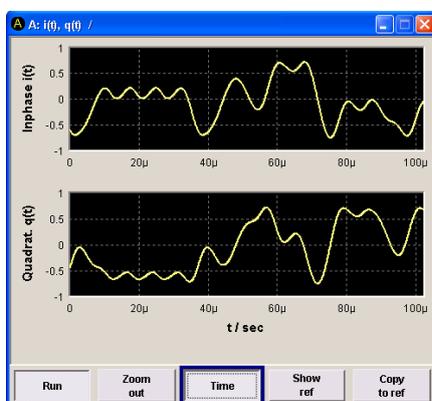

To access the "Graphics Settings" dialog for selecting the graphics display of the output signal, select the "Graphics" function block in the diagram or press the MENU (CTRL+M) key.

Operation of the graphics windows is analogous to menu operation.

The menu and the individual graphical displays are described in [Chapter 5.3, "Graphical Display - Graphics"](#), on page 168.

4.3 Accessing Dialogs

The MENU (CTRL+M) key opens the complete menu tree. Selecting a functional block and pressing the ENTER key opens the menu associated with this block.

An alternatively way to access a dialog is to use the Winbar buttons or front-panel softkeys or to use the HIDE (CTRL+H), CLOSE (ESC), DIAGRAM (CTRL+D) and REARR (CTRL+A) keys on the front panel.

For a quick access to the dialogs, use one of the following alternative methods.

Displaying the block diagram or a dialog in the foreground

1. Press the DIAGRAM (CTRL+D) key to move the cursor to the block diagram.
All active menus are minimized and displayed in the form of Winbar buttons.
2. Press the associated softkey (CTRL+F1 .. F8) to display the dialog in the foreground again.

Accessing the menu tree

- ▶ Press the MENU (CTRL+M) key to open the complete menu tree.

Calling the File, Setup or Hardcopy dialogs

- ▶ Use the FILE (CTRL+S), SETUP (CTRL+E) or HCOPIE (CTRL+Y) keys to open the respective dialog.

Minimizing an active menu

- ▶ Use the HIDE (CTRL+H) key to minimize an active menu.
It is displayed in the form of a Winbar button.

Automatically arranging displayed menus

- ▶ Press the REARR (CTRL+A) key to rearrange all open menus so that they overlap as little as possible.

Activating the Winbar

- ▶ Use the WINBAR (CTRL+W) key to toggle the cursor between a button of the "Winbar" and the block diagram.

The button that was active last in the Winbar is highlighted.

Closing an active menu

- ▶ Press the CLOSE key to close an active menu.

Tip: If the cursor is at the highest menu level, you can also use the ESC key to close the active menu.

Accessing the header area

- ▶ Press the FREQ (CTRL+F) and LEVEL (CTRL+L) keys to activate the "Frequency" or "Level" entry fields in the header area.



Keyboard Shortcuts

Keyboard shortcuts (e.g. "Ctrl + D" for the displaying the block diagram in the foreground) provide direct access to all utility dialogs of the instrument (see [Chapter 4.8, "Legend of Front-Panel Controls"](#), on page 120).

4.4 Setting Parameters

The R&S SMJ offers several and sometimes alternative possibilities for setting parameters. Operation is possible from the front panel, with the aid of a mouse and/or from a PC keyboard.



The examples within this description focus on the operation from the front panel.



For more information, refer to:

- [Chapter 4.8, "Legend of Front-Panel Controls"](#), on page 120 for an overview of key functions and a cross-reference between the front panel keys and the keyboard shortcuts
 - section "Instrument Functions" for a detailed description of key functions.
-

Most of the parameters are set in the different menus. The R&S SMJ provides alternative ways for accessing the dialogs. Turn the rotary knob and navigate to the corresponding block in the block diagram and press the knob to open the dialog or perform a mouse click on the "Config..." button.

An exception are the "Setup", "File" and "Hcopy" dialogs. In the "Setup" dialog, general settings are made which are not directly concerned with signal generation, e.g. setting of the GPIB-bus address. In the "File" dialog, files and lists are managed; in the

"Hcopy" dialog, printout is configured and hardcopies can be made. These menus can only be called with the SETUP (CTRL+E), FILE (CTRL+S) and HCOPI (CTRL+Y) keys.

Frequency and level are directly set in the header area of the display using the FREQ and LEVEL keys.

Specific settings can also be made directly in the block diagram, e.g. activating a function block by means of the TOGGLE ON/OFF (CTRL+T) key or switching the RF output on and off with the aid of the RF ON/OFF (CTRL+R) key. Changes affecting the signal flow are immediately visible in the graphics display.

The R&S SMJ uses the Windows Embedded Standard operating system. Settings at system level are only rarely required, for example installation of a new printer driver. For convenient operation, a keyboard and a mouse are required.

This section provides an information about the parameter handling that comprises of the following main steps:

- [Chapter 4.4.1, "Working with the Cursor"](#), on page 99
- [Chapter 4.4.2, "Selecting a Control Element"](#), on page 100
- [Chapter 4.4.3, "Switching Parameters On/Off"](#), on page 100
- [Chapter 4.4.4, "Entering a Value"](#), on page 100
- [Chapter 4.4.5, "Working with Units "](#), on page 102
- [Chapter 4.4.6, "Selecting a Value from a List"](#), on page 103
- [Chapter 4.4.7, "Terminating Entries with Confirmation"](#), on page 103
- [Chapter 4.4.8, "Restoring the Previous Value"](#), on page 104

4.4.1 Working with the Cursor

After the instrument is switched on, the cursor is always on the first function block of the diagram (default setting).

Moving the cursor on the display

► To move the cursor, use one of the following alternative methods:

- a) Use the rotary knob or the arrow keys.
- b) Use the appropriate softkeys (CTRL+F1..F8) to move the cursor to the "Winbar".
If the "Winbar" is covered by a menu, press the WINBAR (CTRL+W) key to display it in the foreground.
- c) Use the ESC key.

Tip: Be aware that the function of the ESC key depends on the current cursor position.

The function of this key depends on the current cursor position.

- Calls the next higher selection level.
- Closes the open window without accepting new entries; the old value or parameter is retained.
- In dialog boxes that contain a "Cancel" button it activates that button.

- Closes all kinds of dialog boxes, if the edit mode is not active.
- Quits the edit mode, if the edit mode is active.
- Switches between different entry fields of a menu.
- Shifts the entry cursor from the header display to the previously active menu, or to the previously highlighted block in the block diagram if no menu is active.
- Shifts the cursor from a function block in the diagram to the first item in the "Winbar". If no menus are open, the current cursor position remains unchanged.

Moving the cursor to the heading area

- ▶ Press the **FREQ** (CTRL+F) or **LEVEL** (CTRL+L) key to move the cursor to the header area.

4.4.2 Selecting a Control Element

Control elements are always selected in the same way no matter whether a function block in the diagram, a menu in the menu tree, a parameter in the menu or an entry in a list or table is concerned.

- ▶ To activate an element, put the cursor on it.



An active element is highlighted by a blue frame.

4.4.3 Switching Parameters On/Off

A parameter can be activated and deactivated using a button or a check box.

1. Select the parameter.
2. To change the state of a parameter, use the "Enter" function of the different control media:
 - Press the rotary knob
 - Press ENTER
 - Press the **TOGGLE ON OFF** (CTRL+T) key.

Colour and label of a button change, the check box is ticked or the tick is removed.

4.4.4 Entering a Value

Numeric and alphanumeric values can be edited in the entry fields. In the editing mode, cursors of different colour are used. A blue cursor indicates the overwrite mode, a green cursor the insert mode.



Changing between the Insert and Overwrite mode

The insert mode is the default setting.

Use the INSERT key to toggle between the insert and overwrite mode.

Numeric and alphanumeric values can either be newly entered or the existing value can be changed. Incorrect entries are cleared with the BACKSPACE key.

Entering a new numerical value

1. Select the parameter.
2. Press a numeric key to activate the editing mode.

The previous value is cleared and the new value can be entered.

Editing a value in the insert mode (default setting)

1. Press the rotary knob (= Enter) to activate the editing mode.
If the cursor is placed at the right of the total value, the insert mode is always active.
2. Set the cursor to the left of the number to be changed using the LEFT/RIGHT arrow keys.
The cursor is displayed in green.
3. Click on a numeric key to insert a new value.



Editing a value in the overwrite mode

1. Activate the editing mode.
2. Set the cursor on the numeric digit to be changed using the LEFT/RIGHT arrow keys.
The cursor is displayed in blue and the number to be replaced is highlighted.
3. Click on a numeric key to overwrite the highlighted value.



Varying a value

1. Activate the editing mode.
2. Set the cursor to the left of the number to be changed using the LEFT/RIGHT arrow keys.
The value at the cursor position is varied.

- To vary the selected value, use the UP/DOWN arrow key or turn the rotary knob.
The value is increased or decreased.

Entering a new alphanumerical value

- Select the parameter.
- Press an alphanumeric key to start the editing mode.
The new value is entered.

Editing an alphanumerical value

An existing value, e.g. a file name, can be changed in the insert mode (see example) or in the overwrite mode.

- Select the parameter and activate the editing mode.
- Set the cursor to the left of the alphanumerical value using the LEFT/RIGHT arrow keys.
Tip: If hexadecimal values are to be entered, the numeric front-panel keys are automatically changed to hexadecimal values.
- Click on an alphanumeric key to insert a new alphanumerical value.



Terminating the entry of a numeric value

To terminate the entry of a numeric value:

- Press the rotary knob (= Enter).
- Press a UNIT key on the front panel.
- Select a "Unit" in the selection field next to the parameter value.

4.4.5 Working with Units

The unit of a parameter is displayed next to the value. When the parameter is edited, the unit is selected either from the list or by means of the front-panel keys. When the entry is completed, the unit can be changed. In this case the value remains unchanged but is automatically adapted to the new unit.



While operating the instrument by means of a mouse, assign the unit to the selected parameter before entering its value.

Assigning a unit

To assign a unit to a value, use one of the following alternatives:

- Press a UNIT key on the front panel.



2. Select a "Unit" in the selection field next to the parameter value.
Press the ENTER key.
The unit displayed in the entry field next to the value is assigned.

Changing a unit

To subsequently change a unit, i.e. after the entry has been terminated and when the editing mode is not active, use one of the following alternatives:

1. Press a UNIT key on the front panel.
2. Select "Unit" in the selection field next to the parameter value.


The value remains unchanged but the display is automatically adapted to the new unit, i.e. the value is recalculated to suit the new unit.



The new unit is indicated in the value field of the menu.

4.4.6 Selecting a Value from a List

Selection lists provide a list of predefined values for the selected parameter.

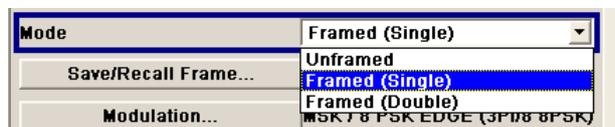

To select a item from a list, proceed as follow:

1. Press ENTER key to open the list.
2. Use one of the following alternatives to navigate through the list:
 - a) Turn the rotary knob or use the UP/DOWN arrow keys.
The selected item is highlighted.
 - b) Press TOGGLE ON/OFF key several times until the preferred entry is displayed in the selection field.
3. To confirm the selection, press the ENTER key.

4.4.7 Terminating Entries with Confirmation

The instrument behaves different by the termination of entries depending on the parameter type and the way this parameter is set.

Confirming settings

- ▶ To confirm the settings, press the rotary knob or one of the UNIT keys (see also [Chapter 4.4.5, "Working with Units"](#), on page 102).

Note: Variations by means of the rotary knob are immediately set.

Confirming multiple values

In some cases, like for instance when configuring the carriers for a multicarrier CW signal in a carrier table, it is useful first to enter few values and to confirm them together. Such settings require additional confirmation. Not yet confirmed settings are displayed on a yellow background as an indication that the currently displayed values do not represent the target signal.

- ▶ To confirm these settings, select the "Accept" button.

Confirming parameters with On/Off state

Most of the instrument functions with enabled and disabled states are calculated and effective only after this functions have been enabled. However, there are functions like the frequency variation of the reference oscillator for instance, that are immediately set after confirmation.

- ▶ To confirm a parameter with On/Off state, enable the parameter.

If time-consuming calculations are required, signal generation is automatically switched off and calculation is interrupted to allow the user to make further settings. Calculation is restarted with the RECALCULATE key and the modulation is switched on again when the calculation is completed.



Preventing recalculation

If an instrument function requires several parameter settings, switch the function off to prevent a recalculation.

Enable the function after the entire configuration of the settings have been completed. The signal is recalculated only once.

4.4.8 Restoring the Previous Value

Parameter variations with the rotary knob are immediately set and therefore not reversible.

Normally, values cannot be restored in the case of mouse control because no explicit confirmation is required in this case and entries are automatically confirmed when the entry or selection field is exited.

Restoring values

In the case of front-panel control or operation from the keyboard, previous values can be restored as long as the new value is not confirmed, i.e. the entry is not completed.


- ▶ To restore the values, press the ESC key.

Restoring values that require confirmation

All settings that are not confirmed with the "Accept" button but require this additional confirmation can be restored.

1. Press the ESC key.

A confirmation query is displayed.

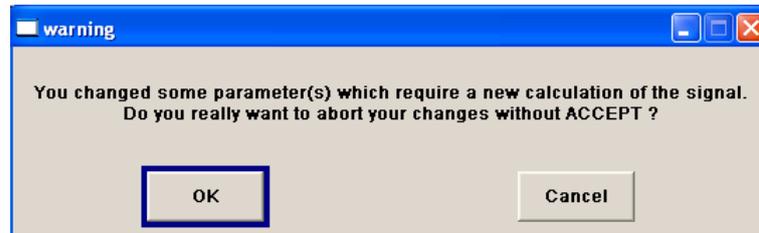

2. Confirm with "OK" to abort the changes.
Select "Cancel" to return to the dialog. The previous selected settings are displayed.

Restoring values after an extended calculation has been started

Calculation and setting might require different period of time. Many settings are made without noticeable calculation times; such operations are indicated by a "BUSY" message displayed in the status field of the header section.

A window with a progress indicates that the instrument performs an extended calculation that requires longer calculation time. The termination of such a calculation restores the previous values.

- ▶ Press the ABORT button to terminate the calculation.

All previous values are restored.

4.5 Editors

The R&S SMJ provides user-friendly editors for defining data lists as well as control and marker signals. Lists containing frequency and level value pairs are used for the list mode and the user-defined level correction.

Internally generated data lists can be used for digital modulation and digital standards; the same applies to internally defined control and marker signals.

The lists are saved to files and may thus have any length. The file name of the lists and the directory to which the files are saved are user-selectable. The file prefix is different for each list type and is permanently assigned by the system.

For information about file handling and overview of the automatically assigned file prefixes, refer to [Chapter 4.7, "File Management"](#), on page 114.


4.5.1 Working with List Editor

The "User Correction" and "List Mode" dialogs provide a list editor for defining the frequency/level value pairs.

Editing list mode data lists

1. To access a list editor and open an existing data list for editing, use the cursor keys to select the associated button "Edit User Correction Data..." or "Edit List Mode Data..." (if available) in the individual menu.

The selected list is displayed and the cursor marks the first row of the "Frequency/Hz" column.

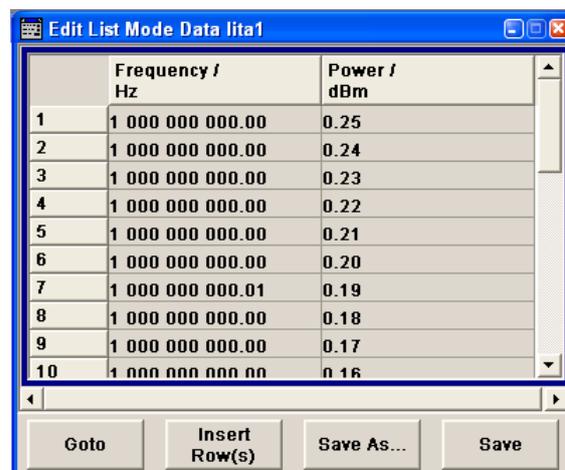

	Frequency / Hz	Power / dBm
1	1 000 000 000.00	0.25
2	1 000 000 000.00	0.24
3	1 000 000 000.00	0.23
4	1 000 000 000.00	0.22
5	1 000 000 000.00	0.21
6	1 000 000 000.00	0.20
7	1 000 000 000.01	0.19
8	1 000 000 000.00	0.18
9	1 000 000 000.00	0.17
10	1 000 000 000.00	0.16

If no list has been selected, a blank list of only one row is displayed.

2. Press the LEFT/RIGHT arrow keys to change between the columns. Use the UP/DOWN arrow keys to mark a row.
3. Use the numeric keys to enter the value for the value pairs in the "Frequency/Hz" and "Power/dBm" table columns. A blank row is inserted at the end of the list. An existing list can be edited in the insert or overwrite mode; use the INSERT key to toggle between this two modes. Terminate the entry by pressing a UNIT key.
4. To select a row, select the "GoTo" button and press the ENTER key. Use the numeric keys to enter the row index in the entry field and press the ENTER key to confirm the entry. The cursor moves to the selected row.
5. To insert a new row in the table, select the row above which the new row is to be inserted and select "Insert Row(s)". A row is inserted above the currently marked row. If no row has been selected, a row is inserted at the beginning of the list.
6. Use the "Save"/"Save As..." function to save the edited list under its current name or under a new name.

Enter the file name in the "File Select" dialog and select the directory (see [Chapter 4.7.1, "File Select Dialog"](#), on page 116).

Only complete value pairs are taken into consideration; rows containing an entry in only one column are ignored.

Creating a new list mode data list

A new list can be created under a new name either by generating a blank file in the "File Select" menu (see section [Chapter 4.7, "File Management"](#), on page 114) or by changing an existing list which will then be saved under a new name.

1. To create an empty data list, select "RF > List Mode > List Mode Data... > New List" or respectively "RF > User Correction > User Cor. Data... > New User Correction Data" and enter the file name of the new data list.
2. To open the data list for editing, select the associated button "Edit User Correction Data..." or "Edit List Mode Data..." in the individual menu. Edit the list and save it under a new name.

4.5.2 Working with Data Editor


The "Data Editor" is used to internally generate binary data lists for digital modulation and digital standards.

A list of binary values with a maximum length of 2^{31} bits can be entered in the "Data Editor". This value corresponds to a file size of approx. 268 Mbyte. While it is being processed, the file is continuously automatically buffered. When the dialog is exited, the file is automatically saved with the new values, i.e. there is no extra "Save" button. Depending on the size of the file, saving may take some time.

Editing an existing data list

1. To **access** a data editor and open an existing data list for editing, use the arrow keys to select the associated button "Edit Data List..." in the individual menu.

The selected data list is displayed.

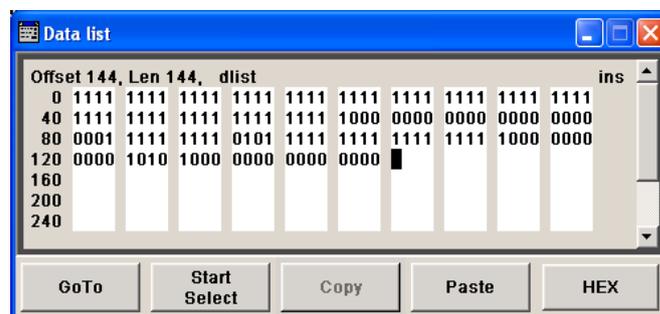

The cursor marks the start value of the list.

To increase readability, the bits are displayed in groups of four. The current cursor position, the length of the list and the list file name are displayed above the list. The offset starts with the value 0 which corresponds to the bit position on the left side of the first row, i.e. the beginning of the list. On the left edge of the editor, the last three offset positions are specified at the beginning of the row.

2. Use the numeric keys to enter the values 0 or 1.
An existing list can be edited in the insert or overwrite mode. Use the INSERT key to toggle between these two modes.
3. To **delete** a value, use the arrow keys to mark the bit that follows the value to be deleted.
Press the INSERT key to activate the insert mode. Values cannot be deleted in the overwrite mode.
Press the BACKSPACE key.
The value before the marked bit is deleted.
4. To **select a bit position**, select the "GoTo" button and press the ENTER key.
Enter the bit position in the "GoTo Offset" entry field by means of the numeric keys and confirm the entry.
The cursor marks the bit at the selected position.
5. To **copy and paste** any range of bits at any position in the list:
 - a) Use the the arrow keys to mark the start bit of the selection.
 - b) Select the "Start Select" button and use the the arrow keys to mark the selection.
 - c) Click the "Copy" button.
 - d) Navigate to the insert position and select "Paste".The selected and copied bits are pasted after the selected position.
6. To **display and edit** the values in hexadecimal form, select the "Hex" button.
Each four bits are displayed as a hexadecimal value: To increase readability, the hexadecimal values in turn are displayed in pairs of two. The hex functions are automatically assigned to the numeric keys at the front panel.
7. To **save** the data list, press the ESC key.
The list is saved automatically when the dialog is closed.

Creating a new data list

1. To create an empty data list, in the individual menu select "List Management > Select Data List to Edit... > Create Data List" and enter the file name of the new data list.
2. To open the data list for editing, select the associated button "Edit Data List..." in the individual menu.

4.5.3 Working with Control and Marker List Editor

The control and marker signals for digital modulation and digital standards can be very conveniently graphically defined in a "Control and Marker List Editor". The available marker signals – and, with custom digital modulation, the CW, Hop, Burst Gate and Lev Att control signals – can be defined in this editor.

While it is being processed, the file is continuously automatically buffered. Depending on the size of the file, saving may take some time.



The various functions of the editor are explained in the individual menus. This section focuses to the general use of the graphic editor.

Example:

The following figure shows the "Slot Marker Definition Editor" of the "GSM/EDGE" dialog as an example.



The upper area displays the signal for which the marker signals are to be defined. On the left side, the available signals (marker and control signals) are listed and colour-coded.

Auxiliary functions are offered in the lower editor area, e.g. presetting for the ramps in the marker signal, cursor positioning by entering the bit position and possible editing by means of value entries in a table.


The actual graphic definition of the control signals occurs in the center area of the editor. Each control signal is represented by means of a colored line along the bit axis. A cursor can be shifted alongside this line and marks the position where a ramp is to be set. The color of the cursor changes depending on the current function.

Use the ENTER key to switch over between the colors (and therefore functions):

- black: marks the bit position on the marker line
- yellow: sets a ramp
- green: activates the marked ramp for shifting.

Accessing control and marker list

- To access the control list editor (e.g. "CList Dig Mod") and open an existing list for editing, use the arrow keys to select "Custom Digital Mod > List Management > Edit Control List".

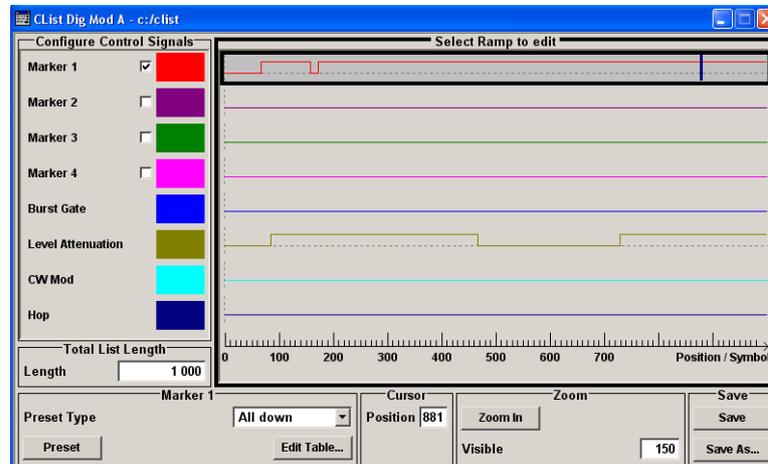

- To access the slot marker list editor (e.g. "Slot Marker") and open an existing list for editing, use the arrow keys to select "GSM/EDGE > Burst Editor > Slot Marker Definition".

Editing an existing control or marker list

- Activate control/marker signal line for editing.
Use the arrow keys to mark the editable graphic area and press the ENTER key.
Select the control/marker signal line to be edit and press the ENTER key.
The cursor is active for the selected line.
- Define the cursor position.
Select the parameter "Cursor Position", specify the position by means of the numeric keys and confirm the entry.
The cursor is positioned according to the entry. If the entered value exceeds the selected length of the definition range, the length is adjusted automatically.
- Configure the control and marker signals (see "[Handling of Ramps](#)" on page 111).
- Define length of control list ("Custom Dig Mod" only).
Select the "Total List Length" entry field and press the ENTER key. Enter the length by means of the numeric keys and confirm the entry.
The control list length is defined.
- Zoom displayed range ("Custom Dig Mod" only) in long control lists.
To zoom the displayed area around the current "Cursor Position", select the parameter "Visible/Bits Visible", enter the number of symbols/bits to be displayed by means of the numeric keys and confirm the entry.
Select the "Zoom In" button and press the ENTER key.

The selected number of symbols/bits around the current cursor position are displayed.

Ramps outside the displayed area are not lost by zooming.

- Use the "Save"/"Save As..." function to save the edited control/marker list under its current name or under a new name.

Enter the file name in the "Create File" dialog and select the directory (see [Chapter 4.7.1, "File Select Dialog"](#), on page 116).

Handling of Ramps

 
- Set a new ramp

Use the arrow keys or use the parameter "Cursor Position" to move the cursor to the position where the ramp is to be inserted. Press the ENTER key.


The ramp transition of the newly set ramp depends on the current status (high or low) of the control signal. If the signal is low, a ramp with low-high transition is generated; if the signal is high, a ramp with high-low transition is generated.



When ramps are set between existing ramps, the transition of the new ramp is also defined by the status of the signal before the new ramp. For this reason, a ramp that has already been set can be assigned low-low or high-high transition (as in the example), i.e. it will have no effect on the control signal in this configuration. However, the ramp remains saved, and its position is indicated by a dashed line.



 If another change produces effective transition, this ramp will be regenerated.



- Shift a ramp

An existing ramp can be shifted to any positions. The transitions are adjusted accordingly.

Use the arrow keys to move the cursor to the ramp position; the cursor changes colour.

Press the ENTER key. The cursor again changes colour. The ramp will now be shifted by means of the cursor. Press the ENTER key. The ramp will be set at the current position.

The ramp transition depends on the status (high or low) of the control/marker signal before the ramp.



- Delete a ramp

Use the arrow keys to move the cursor to the ramp position; the cursor changes colour.

Press the BACKSPACE key.

The ramp will be deleted. The ramp transitions of the other ramps are adapted to the changed signal status (high or low).

4. Set the ramps in a table
Select the "Edit Table..." button and define the positions and states of the ramps for the selected marker.
Confirm the entries with "Accept".
5. Preset a marker signal
Select the "Preset" button to preset the marker signal.
The ramps of the selected marker are adjusted according to the selected "Preset Type".

Creating a new control list

A new control list can be created under a new name either by generating a blank file or by changing an existing list which will then be saved under a new name.


1. To create an empty control list, select "BB > Cust Dig Mod > List Management... > Select Control List to Edit > Create Control List" and enter the file name of the new control list.
2. To open the control list for editing, select the associated button "BB > Cust Dig Mod > List Management... > Select Control List to Edit > Edit Control List..." and select an existing control list.

4.6 How to Use the Help System

The R&S SMJ is equipped with a context-sensitive help function. A help page is available for each parameter and can be called any time during instrument operation.

Calling context-sensitive and general help

- ▶ To display the general help dialog box, press the HELP (F1) key.
The help dialog is displayed. A topic containing information about the current menu or the currently opened dialog box and its function is displayed.

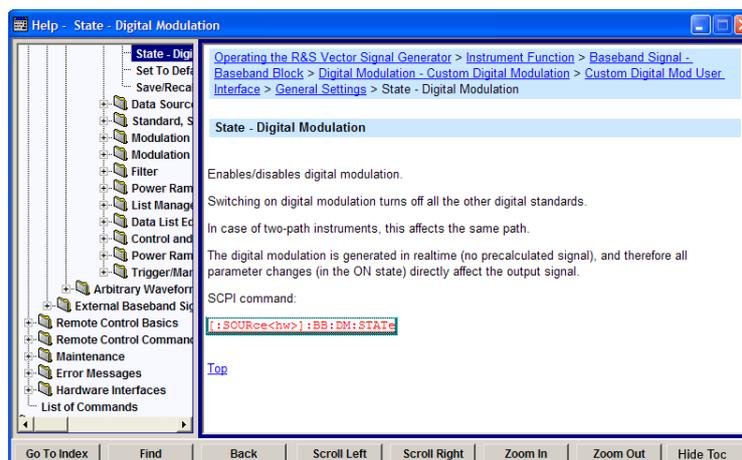

Contents of the help dialog box

The help dialog box contains two main areas:

- "Contents" - contains a table of help contents
- "Topic" - contains a specific help topic

The help system provides additionally an "Index" and a "Find" area, as well as "Zoom" functions that are accessed by means of the corresponding buttons.

Navigating in the table of contents

1. To navigate within the table of contents entries, use the UP/DOWN keys. Entries that contain further entries are marked with a plus sign.
2. To display a help topic, press the "ENTER" key.
The corresponding help topic is displayed.

Navigating in the help topics

1. To scroll through a page, use the UP/DOWN arrow keys.
2. To follow a cross-reference, select the link text.
3. To return to the previous page, select "Back".
This function scrolls back all steps that you have performed before.
4. Use the "Scroll Right" or "Scroll Left" buttons to shift the indicated area of the navigation window to the left or right.
5. To maximize the "Topics" window, you can hide the contents tree with the "Hide Contents" button, and vice versa.

Using the Index

1. Select the "Go to Index" button.
2. Enter the first characters of the topic you are interested in. The entries starting with these characters are displayed.

3. Press the ENTER key to change the focus.
4. Use the UP/DOWN keys to navigate and select the suitable keyword.
5. Press the ENTER key to display the help topic.

The corresponding help topic is displayed.

Closing the help window

- ▶ Press the HELP (F1) key.

4.7 File Management

The R&S SMJ uses files to save all instrument data, i.e. system and user data.

The user data includes saved instrument settings, data for the different digital standards, lists for the List mode and the user correction as well as the waveforms for the arbitrary waveform generator.

The files are stored on the hard disk of the instrument. Drive D: \ can be used to save user-defined data; any directory structure can be created on D: \. Some default directories are predefined, but can be changed at any time. The C: \ drive is a protected system drive. The files on this drive contain data that must not be changed. Therefore, this drive should not be accessed, since reconstruction of the system partition will lead to data loss. To prevent inadvertent deletion or overwriting of system files, this drive is not specified in the file menus. It can be accessed if a protection level (see section "Protection Level" in the Operating Manual) is revoked.

Files can be exchanged either via a memory stick or a connected network. A memory stick is connected to the USB interface and is assigned the E: \ drive. In the case of a connected network, all network drives that can be accessed are available. The files are accessed in a "Save/Recall" dialog in the individual menus.

The files are differentiated according to their extensions; each type of file is assigned a specific file content. The extension is usually of no consequence to the user since access to the files occurs in the individual menu where only the relevant type of file is available. See [Chapter 4.7.2.1, "Extensions for User Files"](#), on page 118 for an overview of the supported file extensions.

The user data can be roughly divided into the following data types:

- Settings
Settings, e.g. the frame setting of the GSM/EDGE standard, can be loaded and current setting saved to the specified file.
- Lists
Lists, e.g. user correction lists, can be loaded. They can be generated either externally or internally. For internal generation, a new list must be created in the "File Select" dialog which will then be edited in the list editor of the individual menu.
- Complex modulation and control data
User data of this type can be loaded. It can be generated either externally or internally. For internal generation, a new list must be created which will then be edited

in the data and control list editor. These functions are offered in the "Data List Management" dialog of the individual modulation menu.

- **Waveforms**
Waveforms are generated externally (e.g. by means of the R&S WinIQSIM2 program that is supplied together with the optional Baseband Generator R&S SMJ-B10) and can be loaded in the "Arbitrary Waveform Generation" dialog.



Softkeys are assigned to some of the functions and can be used for convenient operation.



For more information, refer to:

 
- [Chapter 4.8, "Legend of Front-Panel Controls"](#), on page 120 for an overview of key functions and a cross-reference between the front panel keys and the keyboard shortcuts
- to section "Instrument Functions" for a detailed description of key functions.

Accessing files with user data

1. To access an editable user data file, select the "Save/Recall" or "File Manger" function in the individual dialog.



2. To access a loadable data file, select the "Select/New" or "File Manager" function in the individual dialog.



3. To access the "File Manager" function, press the SETUP (CTRL+E) key and select "Save/Recall > File Manager".

A "File Select" window for loading, saving or creating a file or the "File Manager" dialog for managing all files is displayed.



Saving and loading of all instrument settings


All instrument settings are saved and loaded in the "File" menu.

To access the "File" menu, press the FILE (CTRL+S) key.

For more information, see [Chapter 5.2.8, "Storing and Loading Instrument Data - File Key"](#), on page 158.

4.7.1 File Select Dialog

The "Save/Recall" dialog displays the available drives and directories. In the upper part, "Recent Data Sets", the files last used are listed.

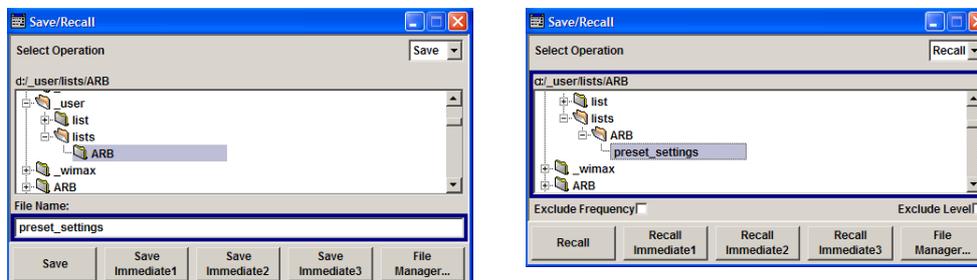


The available drives and directories and the files of the selected directory are displayed. The currently selected path is displayed above the window. Only the relevant files without file extensions are displayed. If the area is opened several times, the path last selected is displayed. When a file is saved or created, its name is user-selectable; the extension is assigned automatically and cannot be entered. The file is saved to the selected path.

In addition to the files saved by the user, some menus also offer files containing predefined contents. These files are saved to a specific directory on system drive; for this reason, this directory cannot be chosen from the "File Select" menu.

Example:

The following example shows the "File Select" menu of the GSM/EDGE digital standard when "Recall Predefined Frames" is selected.

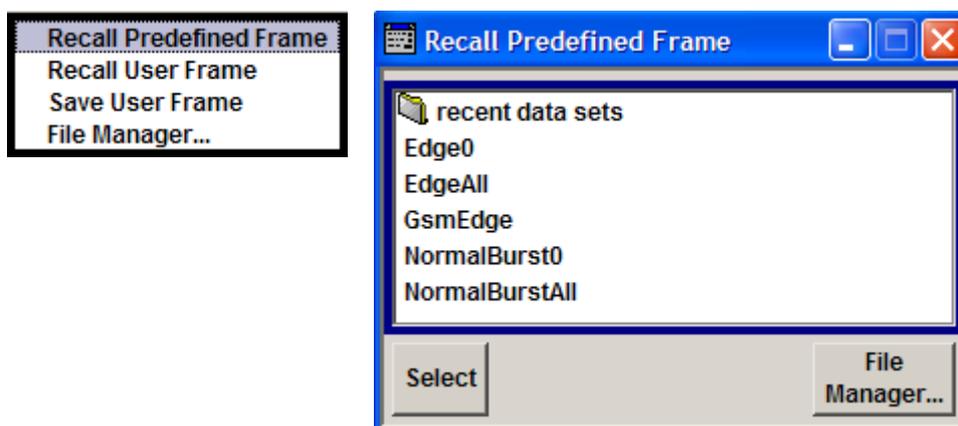

Working with the File Select dialog

1. Access the "File Select" dialog (see ["Accessing files with user data"](#) on page 115).
2. Navigate in the "File Select" dialog.
3. Load an existing file.
In the "Recall Settings" dialog, mark a file and press the "Select" button.


4. Save a file.
In the "Save Settings" dialog, enter file name in the "File Name:" field.
Select the directory to which the file is to be saved and then select the "Save" button.
5. Create a new file.
To create a new file, use the "Save Settings" functionality, i.e. specify file name and directory and save the file.

The created file is empty; it must be filled with the necessary values in the individual editor.

4.7.2 File Manager

The "File Manager" allows general file management such as copying, shifting, renaming and deleting files as well as generating new directories.

Thus, also externally created files, for example waveforms created by using the R&S®WinIQSIM2 program, can be saved to the R&S SMJ by copying them from a memory stick or a network to the internal hard disk.

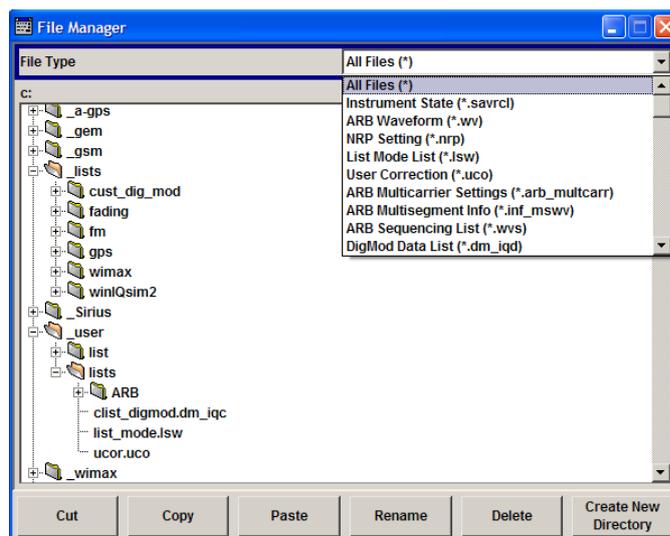

Use the "File Type" to select a file type from the list. This can be used to process either all files (all files (*) selection) or a specific selection of files. See [Chapter 4.7.2.1, "Extensions for User Files"](#), on page 118 for an overview of the supported file extensions. The available drives and directories and the files of the selected directory are displayed. The currently selected path is displayed above the windows. If the area is opened several times, the path last selected is displayed. Unlike the "File Select" window, the "File Manager" displays the full file names including extensions.

Working with the File Manager dialog

1. Accessing the "File Manager" dialog (see ["Accessing files with user data"](#) on page 115).

2. Navigating in the "File Manager" dialog.
Operation is very similar to the operation of a standard Windows explorer.
3. Moving, duplicating, deleting or renaming files
To move a file, select the file and press the "Cut" button. Mark the directory to which the file is to be moved and select the "Paste" button. If the target directory already contains a file with the same name, a confirmation query is displayed to confirm overwriting of this file.
Perform the similar steps and cut/copy/rename/delete the file.
Tip: The operation corresponds to the Windows concept.
4. Creating a new directory
Mark drive or directory level where the new directory is to be created, select the "Create New Directory" button and enter the name of the new directory in the entry window that opens. Confirm with ENTER.

4.7.2.1 Extensions for User Files

The following table lists all available file extensions for user files. The currently available files on the instrument depend on the installed options.

Table 4-1: List of the automatically assigned file extensions in the instrument

Function/Digital Standard	List type	Contents	File suffix
Instrument State	Settings	Instrument settings	*.savrcl
"User Correction"	List	User-defined level correction values	*.uco
"List Mode"	List	User-defined frequency/level value pairs	*.lsw
"Frequency Response Correction"	Settings	User-defined frequency response correction file	*.frc
"Arbitrary Waveform Generator"	Waveform	ARB waveforms ARB multi segment waveforms	*.wv
	Waveform	ARB multi carrier settings	*.arb_multcarr
	Configuration data	Configuration file for creation of multisegment ARB waveforms	*.inf_mswv
	Play List	ARB Sequencing List	*.wvs
"DM"	Data List	Digital modulation data	*.dm_iqd *.tdm
	Control List	Data to control digital modulation	*.dm_iqc
	Settings	Digital modulation settings	*.dm
	User Standard	Digital modulation user standard	*.dm_stu
	User Mapping	Digital modulation user mapping	*.vam
	User Filter	Digital modulation user filter	*.vaf

Function/Digital Standard	List type	Contents	File suffix
"NRP Settings"	Settings	NRP Settings	*.nrp
EX-IQ-BOX	User Settings	EX-IQ-BOX User Defined Settings	*.iqbox
"Fading"	Fading	Fading data	*.fad
"GSM/EDGE"	Settings	GSM/EDGE settings	*.gsm
	Slot	User-defined slot data	*.gsm_slu
	Frame	User-defined frame data	*.gsm_fu
	Slot	Higher symbol rate slot	*.gsm_hslu
	Frame	Higher symbol rate frame	*.gsm_hfu
"Bluetooth"	Bluetooth Settings	Complete setting of the Bluetooth menu	*.bto
"TETRA"	TETRA Settings	Complete setting of the TETRA menu	*.tetra
"3GPP FDD"	Settings	Complete setting of the 3GPP (FDD) menu	*.3g
	Settings	Channel coding enhanced DPCH channels (downlink)	*.3g_ccod_dl_s
	Settings	Channel coding enhanced DPDCH channels (uplink)	*.3g_ccod_ul
"CDMA2000"	Settings	Complete setting of the CDMA2000 menu	*.cdma2k
"TD-SCDMA2000"	Settings	Complete setting of the TD-SCDMA2000 menu	*.tdscdma
	Settings	Test Model for TD-SCDMA2000	*.tdtmd
1xEV-DO	Settings	Complete setting of the 1xEV-DO menu	*.evdo
"IEEE 802.11 WLAN"	Settings	Complete setting of the IEEE 802.11 WLAN menu	*.wlan
"IEEE 802.11 n WLAN"	Settings	Complete setting of the IEEE 802.11n WLAN menu	*.wlann
	Settings	Beamforming data	*.bmf
"IEEE 802.16 WiMAX"	Settings	Complete setting of the IEEE 802.16 WiMAX menu	*.wimax
"EUTRA/LTE"	Settings	Complete setting of the EUTRA/LTE menu	*.eutra
	Settings	TDD Settings	*.lte_tdd
	Settings	User-defined IQ-File	*.iqw
"GPS"	Settings	Complete setting of the GPS/A-GPS menu	*.gps
	Settings	GPS Almanac Settings	*.txt *.alm *.al3
	Settings	GPS Waypoints File	*.txt

Function/Digital Standard	List type	Contents	File suffix
	Settings	GPS Generated Almanac File	*rs_al *.rs_yuma
	Settings	GPS Ionospheric File	*.rs_ion
	Settings	GPS Navigation Data	*.rs_nav
	Settings	GPS UTC File	*.rs_utc *.rs_acq
"FM-Stereo"	Settings	Complete setting of the FM-Stereo menu	*.fmstereo
	Settings	FM-Stereo Group Type Settings	*.fm_gt
	Settings	FM-Stereo Group Hex Type Settings	*.fm_ghex
	Waveform File	Waveform File	*.wav
"Sirius"	Settings	Complete setting of the Sirius menu	*.sirius
"XM-Radio"	Settings	Complete setting of the XM-Radio menu	*.xmradio
	Settings	XM-Radio TWTA Data	*.twta
"DVB"	Settings	Complete setting of the DVB menu	*.dvb
	Settings	DVB Transport Stream	*.gts *.ts *.trp
"DAB/T-DMB"	Settings	Complete setting of the DAB/T-DMB menu	*.dab
	Settings	DAB ETI Files	*.eti *.xeti
NFC	Settings	Complete setting of the NFC menu	*.nfc

4.8 Legend of Front-Panel Controls

The following table lists all key functions available on the front panel. Key combinations used on the PC keyboard to trigger key functions on the instrument front panel are also described. Keyboard labels are described in alphabetical order.

In addition, a front panel key emulation and an on-screen keyboard can be used for manual operation by mouse only.

Table 4-2: Cross-reference between the front panel keys and keyboard shortcuts

Front-panel key	Key of PC keyboard	Function
Turning the rotary knob	Tab key (towards the right) Shift + Tab (towards the left)	Sets the cursor with the rotary knob.
Pressing the rotary knob	Enter	Pressing the rotary knob confirms an entry; it has the same function as the ENTER key.

Legend of Front-Panel Controls

Front-panel key	Key of PC keyboard	Function
Arrow keys	Arrow keys	Moves the cursor.
*1 / dB(m)	ALT + F12	Confirms entries in the base unit and values without a unit. Selects dBm for the RF level and dB for level offset and level step width.
. / *...#	. / *...#	Enters a period/decimal point. Enters a special character.
+/- / A<->a	- / (shift+) a—z	Enters the sign. Switches between upper-case and lower-case letters.
0-9 / a...z	CTRL+ 0-9 / a...z CTRL	Enters the number/letter.
BACKSPACE	Backspace	Clears the last entry (number, sign or decimal point)
CLOSE	CTRL + G	Closes an active menu.
DIAGRAM	CTRL+ D	Sets the cursor on the block diagram and hides all menus.
ENTER	Enter	Terminates an entry.
ESC	ESC	Selects the next higher menu/selection level. When the editing mode is exited with ESC, the previous value is restored.
FILE	CTRL + S	Activates the menu for storing instrument settings.
FREQ	CTRL+ F	Activates the frequency entry.
G/n / dBuV	ALT + F9	Selects the unit Giga/Nano, dBuV for the RF level and dBu for the LF level.
HCOPY	CTRL+ Y	Opens the menu for configuring and starting a hardcopy.
HELP	F1	Opens/closes context-sensitive help.
HIDE	CTRL+ H	Minimizes the active menu. Pressing the respective button in the Winbar opens the menu again.
INFO	CTRL + I	Opens/closes the info window
INSERT	Ins	Activates the insert mode.
k/m / uV	ALT + F11	Selects the units Kilo/Milli and uV for RF levels.
LEVEL	CTRL + L	Activates the level entry.
LOCAL	CTRL + Q	Switches the instrument from remote control to manual control.
M/u / uV	ALT + F10	Selects the units Mega/Micro and uV for levels.
MENU	CTRL + M	Calls the menu selection list.
MOD ON/OFF	CTRL + O	Switches modulation on/off. "MOD OFF" is indicated in the status line.

Front-panel key	Key of PC keyboard	Function
TOGGLE	CTRL + T	Switches a block or parameter on/off. Toggles between the different possibilities of setting a selection parameter.
PRESET	CTRL + P	Restores a defined basic instrument setup.
REARR	CTRL + A	Adjusts the size of the active menu to use the whole height of the display.
RECALCULATE	CTRL + C	Starts recalculation of the signal.
RF ON/OFF	CTRL + R	Switches the RF output signal on/off. "RF OFF" is indicated in the status line.
SETUP	CTRL + E	Opens the setup menu for general instrument settings.
Softkeys	CTRL + F1 – F8	Triggers the function assigned to the softkey.
WINBAR	CTRL + W	Displays the Winbar in the foreground/background.

4.8.1 Front Panel Key Emulation

The R&S SMJ provides a front panel key emulation to enable execution of the front panel key functions by mouse e.g. for remote access. The emulation is called by a right mouse click. The front panel key functions are executed by a mouse click on the associated button.



4.8.2 On-screen Keyboard

In addition, the operating system provides a keyboard emulation that can be used for system settings if no external keyboard but a mouse is available.

To access the on-Screen Keyboard, select "Start > Programs > Accessories > Accessibility > On-Screen Keyboard".



5 Instrument Function

5.1 Overview of Instrument Functions

This chapter explains the functions of the R&S SMJ and the options available in the setting menus. The associated SCPI command is specified for each parameter (where applicable).

The description begins with the general instrument settings which do not directly affect signal generation. The majority of these settings can be accessed by means of front-panel softkey menus and not by means of function block menus.

One exception is, for example, the signal graphics which are called up in the "Graphics" block.

The signal generation functions are then described, beginning with the RF section functions which affect the RF signal and the analog modulations and which are compiled in the "RF/A Mod" block of the block diagram.

This is followed by an explanation of all functions which are in the signal flow prior to being fed into the RF block and which do not affect the internal generation of a baseband signal - I/Q modulation, noise generation and impairment of the digital signal. These functions are accessed by means of the function blocks "I/Q Mod" and "AWGN/IMP".

The remaining (and largest) part of the chapter describes the functions used for the internal generation of the signals in the baseband (these functions are provided in the "Baseband" block).

The general instrument settings include various functions, such as:

- Setting a defined basic setup using the PRESET key
see [Chapter 5.2.2, "Default Instrument Settings - Preset Key"](#), on page 128
- Switching from remote control to manual control using the LOCAL key
see [Chapter 5.2.4, "Switching to Manual Control - Local Key"](#), on page 153
- Configuring the generator and its interfaces in the "Setup" menu - e.g. setting the GPIB address, starting an adjustment, querying instrument data
see [Chapter 5.2.3, "General Configuration of Instrument - Setup Key"](#), on page 129
- Generating a hardcopy of the display using the HCOPY key
see [Chapter 5.2.5, "Generating a Hard Copy of the Display"](#), on page 154
- Calling up the online help using the HELP key
see [Chapter 5.2.7, "Help System - Help Key"](#), on page 157
- Querying messages using the INFO key
see [Chapter 5.2.6, "Messages - Info Key"](#), on page 157
- Loading and storing complete instrument settings in the "File" menu
see [Chapter 5.2.8, "Storing and Loading Instrument Data - File Key"](#), on page 158
- Calling up the baseband signal graphics in the "Graphics" function block
see [Chapter 5.3, "Graphical Display - Graphics"](#), on page 168

The integrated bit error rate and block error tester is configured and activated in the "BERT" function block:

- Bit error rate and block error measurement
see [Chapter 5.4, "Bit and Block Error Rate Measurements - BERT Block"](#),
on page 180

The RF signal is configured and the analog modulations activated in the "RF/A Mod" function block:

- CW mode
see [Chapter 5.5.1, "Overview of RF Signal"](#), on page 199
- List mode
see [Chapter 5.5.15, "List Mode"](#), on page 273
- Sweep mode
see [Chapter 5.5.14.1, "Overview"](#), on page 260
- Analog modulations
see [Chapter 5.5.11.1, "Overview"](#), on page 240

In the "I/Q-Mod" function block, I/Q modulation is possible with external analog signals and internally generated baseband signals.

- I/Q modulator
see [Chapter 5.6, "I/Q Modulation - I/Q Mod Block"](#), on page 282

Noise can be added to the baseband signal and the baseband signal can be impaired before input into the I/Q modulator. It is therefore possible to output a baseband signal with impairments via the I/Q-OUT outputs ("AWGN/IMP" function block). Impairment is also possible during I/Q modulation ("I/Q Mod" function block).

- Impairing the signal
see [Chapter 5.7.1, "Impairments"](#), on page 289
- Adding noise
see [Chapter 5.7.2, "AWGN - Noise Generator"](#), on page 293

The baseband signal is available at the I/O outputs.

- Output of the baseband signal
see [Chapter 5.7.3, "Output of the Baseband Signal - I/Q Out"](#), on page 301

The R&S SMJ offers various possibilities for generating digital modulation signals in compliance with the definitions of digital standards or with characteristics which can to a large extent be freely defined. The range of software options for this is being extended continuously.

- Baseband signals - Introduction
see [Chapter 5.8, "Baseband Signal - Baseband Block"](#), on page 313
- Digital modulation
see [Chapter 5.8.2, "Digital Modulation - Custom Digital Modulation"](#), on page 326
- Arbitrary waveform generator ARB
see [Chapter 5.8.3, "Arbitrary Waveform Generator ARB"](#), on page 367
- Multi Carrier CW signals
see [Chapter 5.8.4, "Multi Carrier Continuous Wave"](#), on page 424
- Digital standard GSM/EDGE
see description "Digital Standard GSM/EDGE"

- Digital standard Bluetooth/EDR
see description "Digital Standard Bluetooth® Enhanced Data Rate"
- Digital standard TETRA2
see description "Digital Standard TETRA Release 2"
- Digital standard 3GPP FDD (WCDMA)
see description "Digital Standard 3GPP FDD (WCDMA)"
- Digital standard CDMA2000®
see description "Digital Standard CDMA2000®"
- Digital standard TD-SCDMA
see description "Digital Standard TD-SCDMA"
- Digital standard 1xEV-DO
see description "Digital Standard 1xEV-DO"
- Digital standard IEEE 802.11 (a/b/g) (WLAN)
see description "Digital Standard IEEE 802.11 (a/b/g) (WLAN)"
- Digital standard IEEE 802.11n (WLAN-N)
see description "Digital Standard IEEE 802.11n (WLAN-N)"
- Digital standard IEEE 802.16 (WiMAX)
see description "Digital Standard IEEE 802.16 (WiMAX)"
- Digital Standard EUTRA/LTE
see description "Digital Standard EUTRA/LTE"
- Digital standard GPS/A-GPS
see description "Digital Standard GPS"
- FM Stereo/RDS
see description "FM Stereo/RDS"
- Sirius Radio
see description "Sirius Radio"
- Digital Standard XM Radio
see description "Digital Standard XM Radio"
- Digital Standard DVB-H
see description "Digital Standard DVB-H"
- Digital Standard DAB / T-DMB
see description "Digital Standard DVB / T-DMB"
- Digital Standard NFC/EMV
see description "Digital Standard NFC A/B/F and EMVCo"

In addition, external baseband signals can be fed into the baseband path with the aid of the external Digital Interface Module R&S EX-IQ-BOX.

- Digital Interface Module
see description "Digital Interface Module R&S EX-IQ-BOX".

5.2 General Instrument Settings

5.2.1 Overview of General Instrument Settings

This section describes the settings which do not directly affect signal generation. Most of these settings can only be accessed by means of menus which are opened using keys or key combinations on the external keyboard or keys on the front panel key emulation.

This does not apply to the graphical representation of output signals which is activated in the "Graphics" function block, or settings which can additionally be called up in the menus of the function blocks, e.g. input configuration which is possible in the "Setup" menu and in almost every menu of the "Baseband" function block.

See also [Chapter 4.8, "Legend of Front-Panel Controls"](#), on page 120.

The general instrument settings therefore affect various functions, such as storing instrument settings using the FILE key or setting the GPIB address in the menu of the SETUP key. The order in which the descriptions are given corresponds to the layout of the keys on the front panel of the R&S SMJ (from top left to bottom right).

5.2.2 Default Instrument Settings - Preset Key

The PRESET key performs a defined instrument setup. All parameters and switching states are preset (also those of inactive operating modes). The default instrument settings provide a reproducible initial basis for further settings.

However, functions concerning the integration of the instrument in a measurement setup are not changed, for example the GPIB address or reference oscillator settings.

In addition, only those settings associated with the menu can be reset directly in the individual dialogs, like the digital modulation settings in the "Custom Digital Mod" menu. These settings are identical with the values set with the PRESET key.

When the instrument is switched on, it is not the preset state that is active, but rather the instrument state that was set before the instrument was switched on.

User-defined instrument states can be accessed and stored in the "File" menu.



Resetting the instrument to the factory state is possible with the [Factory Preset](#) function.

Preset

Presets all parameters and switching states.

The following list gives an overview of the presets for the most important generator settings. The other presets can be found in the preset tables of the individual menus and the information accompanying the remote commands.

- "RF frequency" = 1 GHz

- "RF level" RF output switched off
- "Offsets" = 0
- "Modulations State" = Off
- Uninterrupted level settings are switched off
"Level Attenuator Mode" = AUTO
- Internal level control "Level ALC" = AUTO
- User correction "Level Ucor" = OFF
- "LF output State" = Off
- "Sweep State" = Off
- "List mode State" = Off

 
Settings that are not affected by the PRESET key

- Reference frequency settings ("Ref Oscillator" menu)
- Power on settings ("Level/EMF" menu)
- Network settings ("Setup" menu)
- GPIB address ("Setup" menu)
- Password and settings protected by passwords ("Setup" menu)
- Start/Stop Display Update ("Setup" menu)
- Display and keyboard settings ("Setup" menu)

Remote command:

*RST on page 486

5.2.3 General Configuration of Instrument - Setup Key



The "Setup" menu provides access to basic instrument settings, regardless of the currently set operating mode or measurement. It contains information on the instrument's equipment, and comprises all settings for the general configuration of the instrument and its interfaces.

To access the "Setup" menu, press the SETUP key.

The "Setup" menu is divided into functional sections as follows:

- "System": covers general instrument parameters.
- "Test": used to perform function tests.
- "Environment": used to configure the controller interfaces.
- "Remote": used to configure the remote control interfaces.
- "Protection": used to set the protection level for service functions and security settings.
- "Settings": used to save or recall instrument settings or to preset the instrument to factory settings.

Most submenus of this key can be accessed only via the SETUP key or the menu tree (MENU key), with the following exceptions:

- The "Reference Oscillator" dialog can also be accessed in the "RF" block and is therefore described in the section on this block (see [Chapter 5.5.4, "Reference Oscillator"](#), on page 209).

- The "Save/Recall" dialog can also be accessed with the FILE key and is therefore described in the section on this key (see [Chapter 5.2.8, "Storing and Loading Instrument Data - File Key"](#), on page 158).
- The "Global Trigger/Clock/ External Inputs" dialog is also available in all modulation dialogs of the "Baseband" function block where it can be accessed with the "Global Trigger/Clock Settings" button in the corresponding "Trigger/Marker/Clock" dialog. See also [Chapter 5.2.3.10, "Global Trigger/Clock/External Input Settings"](#), on page 141.

5.2.3.1 Internal Adjustments

The R&S SMJ is extremely accurate due to the integrated adjustment procedures, which you can execute directly on the instrument.



Self-calibration routines that do require additional (external) measurement equipment are either described in the Service Manual of the instrument, or they require to be performed by a Rohde & Schwarz service center.

NOTICE

Risk of invalid adjustment

In order to achieve correct adjustment of the instrument, make sure that the instrument is warm before performing adjustments. The warm-up time is 30 minutes.

When to perform adjustments?


It is recommended to perform internal adjustments prior to any application that requires a maximum of level and frequency accuracy, especially when a long period of time has passed or if the ambient temperature of the instrument significantly differs from the one of the last adjustment.

Additional Information to the Adjustments

During adjustments, a progress indicator shows the status of the process. If any error occurs, the process aborts and an error message appears in the info line.

The extent of the adjustments depends on the installed options.

- ▶ To access the settings for internal adjustments, press the SETUP key and select "System > Internal Adjustments".

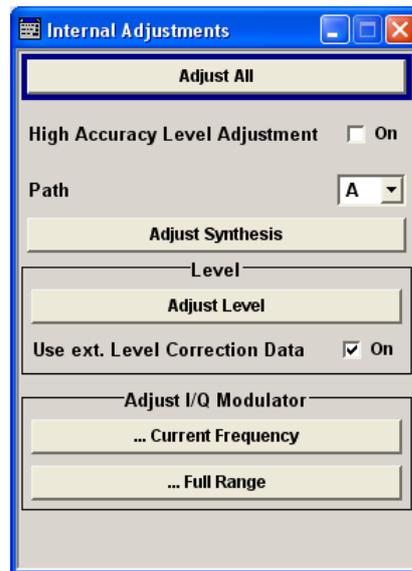

In this dialog you can perform internal calibration routines.

The remote commands required to define these settings are described in [Chapter 7.6, "CALibration Subsystem"](#), on page 521.

Adjust All

Performs all available internal calibration routines of the instrument.

Remote command:

`:CALibration<hw>:ALL[:MEASure]?` on page 521

High Accuracy Level Adjustment

Activates that the instrument performs level adjustment with high accuracy.

Remote command:

`:CALibration<hw>:LEVel:HACCuracy[:STATe]` on page 524

Path (Internal Adjustments)

Indicates the path for which the following adjustments are to be performed.

Remote command:

n.a.

Adjust Synthesis

Performs all adjustments which affect the frequency.

This includes adjustment of option R&S SMJ-B20, FM/PhiM Modulator.

Remote command:

`:CALibration<hw>:FREQuency[:MEASure]?` on page 522

Adjust Level

Performs all adjustments which affect the level. The acquired correction values improve the settling time and the signal quality.

Remote command:

:CALibration<hw>:LEVel[:MEASure]? on page 523

Use ext. Level Correction Data

Switch on or off use of external level correction data (see service manual, chapter 2, "Adjustment"). This switch can be used in case of corrupt external level correction data.

Remote command:

:CALibration<hw>:LEVel:STATe on page 523

Adjust I/Q Modulator Current Frequency

Starts the adjustment for the I/Q modulator for the currently set frequency, I/Q swap, and baseband gain. The I/Q modulator is adjusted with respect to carrier leakage, I/Q imbalance and quadrature.

Adjustment for only the set frequency is considerably faster than adjustment across the entire frequency range. This is possible with "Full Range".

Remote command:

:CALibration<hw>:IQModulator:LOCal? on page 523

Adjust I/Q Modulator Full Range

Starts the adjustment for the I/Q modulator for the entire frequency range. The I/Q modulator is adjusted with respect to carrier leakage, I/Q imbalance and quadrature.


Remote command:

:CALibration<hw>:IQModulator:FULL? on page 522

5.2.3.2 Hardware Config

In the "Hardware Config" dialog, the installed assemblies together with their variants and revision states can be displayed for servicing purposes.

To open the "Hardware Config" dialog, select "System" and press the SETUP or MENU key.

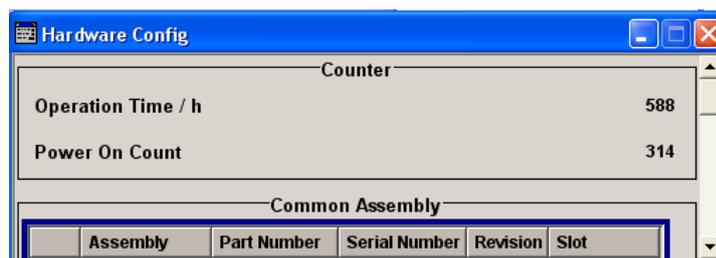

Section "Counter" in the upper part of the menu shows the "Operation Time" (in hours) and the number of power-on ("Power On Counter").

The second part of the menu is a table that lists the installed assemblies. It is divided into the sections:

- "Common Assembly"
- "RF Assembly"

- "Baseband Assembly"

Operation Time / h

Displays the operation time in hours.

Remote command:

:DIAGnostic:INFO:OTIME? on page 527

Power On Count

Displays the number of power-on.

Remote command:

:DIAGnostic:INFO:POCount? on page 527

Assembly

The tables list the installed assemblies.

"Assembly"	Assembly name
"Part Number"	Part Number of assembly
"Serial Number"	Serial Number of assembly
"Revision"	Revision state of assembly
"Slot"	Indicates whether the assembly is connected to the serial bus or PCI bus.

Remote command:

:DIAGnostic<hw>:BGInfo? on page 526

5.2.3.3 Software / Options

The "Software/Options" dialog shows the firmware version of the instrument software as well as all installed hardware and software options.




Software options purchased at a later stage can be activated with a keycode. The activation code is supplied with the software option. How to install options is described in Chapter 4 of the Service Manual (supplied with the instrument).

The installation of hardware options purchased at a later stage is also described in Chapter 4 of the Service Manual (supplied with the instrument). Most hardware options need to be installed at an authorized Rohde&Schwarz service shop.

To access the "Software/Options" dialog, select "System" and press the SETUP or MENU key.

The menu is divided into the following sections:

- "Firmware"
- "Hardware Options"
- "Software Options"
- "WinIQSIM"
- "Loaded Modules"

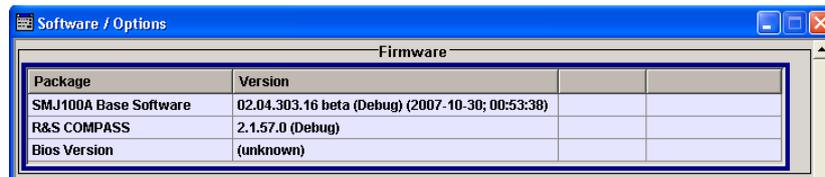

Firmware	
Package	Version
SMJ100A Base Software	02.04.303.16 beta (Debug) (2007-10-30; 00:53:38)
R&S COMPASS	2.1.57.0 (Debug)
Bios Version	(unknown)

Firmware

The Firmware section of the menu shows the firmware version and the version of the software platform.

Note: Your instrument is delivered with the latest firmware version available. Firmware updates as well as the Release Notes describing the improvements and modifications are provided on the Internet at the download site of the Rohde & Schwarz Signal generator home page. This home page always offers the latest information on your signal generator, e.g. also on changes of the firmware update procedure.

Remote command:
n.a.

Hardware Options / Software Options

The tables in the sections "Hardware", "Software" and "WinIQSIM2" list the installed hardware and software options.

"Option" Short name of option

"Designation" Name of Option

"Licenses" (optional)
 Number of licenses.

"Expiration Date"

For regular options, "Permanent" is indicated in this column. Some options are available as trial versions. This column shows their expiration date. After this date, the option is no longer available on the instrument.

Remote command:
*OPT? on page 485
*IDN? on page 485


Loaded Modules

Section "Loaded Modules" is provided for service purposes. It lists all loaded software modules with their versions and offers a short description of each module.

Remote command:
n.a.

5.2.3.4 Manage License Keys

This dialog is the central dialog for managing licenses, like enabling newly purchased and/or newly registered options or performing the required instrument related steps during the process of unregistration of licenses.

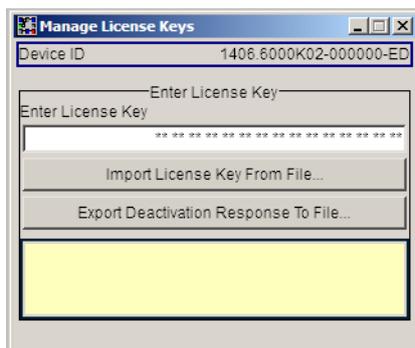

An option is ready to operate after it is enabled by means of a license key code supplied with the option. The license key is delivered as a file or on paper. Unregistered licenses must be registered for a particular instrument prior to the corresponding option can be enabled for operation.



License Registration

If your purchased license is delivered unregistered, you must register it before you can activate the option.

For detailed information about the license registration, refer to the installation instructions provided with the option (Supplement A) and the documentation of the online tool "Manage Licenses" (<https://extranet.rohde-schwarz.com/service>).



Only if the R&S SMJ is equipped with an older firmware version, a firmware update prior to enabling the software option may be required. The information on the valid firmware versions for the purchased software option is provided together with the option.

The firmware update is described in the service manual, chapter 4.

Device ID

Displays the instrument specific identification number. The device ID is a unique string with the following structure:

```
<stock number>-<serial number>-<checksum>
```

Enter License Key

Type here the license key provided with the option.

For license keys delivered as a file, use [Import License Key from File...](#)

Import License Key from File...

Opens a dialog for selecting the file with the license key.

Export Deactivation Response to File...

Exports the generated deactivation response key to a file and opens a file management dialog to save the file. This key is required during the unregistration process.


Status Information

Displays status information.

5.2.3.5 NRP-Z Info/Update

The "NRP-Z Info/Update..." dialog covers information on connected power sensors, like serial number, revision state and features of the particular sensor. You can directly perform an update of the sensor firmware.

- ▶ To access this dialog, select "Setup > System > NRP-Z Info/Update...".

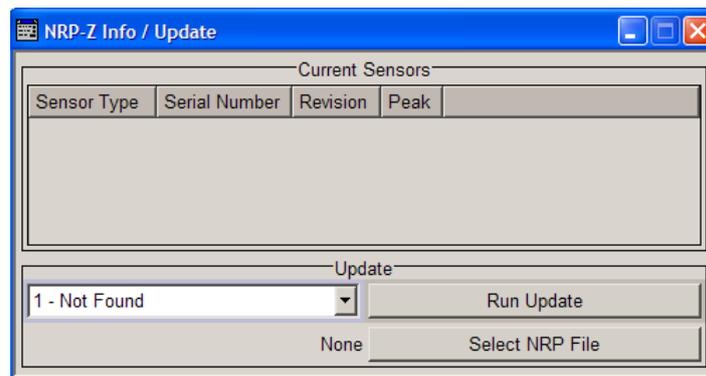

The "NRP-Z Info / Update" dialog indicates the connected R&S NRP-Z Power Sensors with specific information and contains the functions to update the firmware of a connected sensor.

The remote commands required to remotely configure the power sensor settings are described in [Chapter 7.15, "SENSe, READ and INITiate Subsystems"](#), on page 558.

How to update an R&S NRP sensor

To perform an R&S NRP sensor update proceed as follows:

1. Open the R&S website <http://www.rohde-schwarz.com> in section "Power Meters & Voltmeters > R&S NRP-Z Sensors".
2. Select the respective sensor, e.g. R&S NRP-Z81.
3. Select "Downloads > Firmware" and the offered firmware suitable for your sensor.
4. Transfer and save the firmware on the instruments, for example in the `D:\user\` directory.
5. Connect the sensor to the R&S SMJ and select "Setup > System > NRP-Z Info Update" to open the dialog.
6. Select the sensor in the left sensor selection field.
7. Select the update file with "Select NRP File".
8. Start the update procedure with "Run Update".

The update starts and a bar indicates the progress.

How to restart an interrupted update of an R&S NRP sensor

An accidental removal of the sensor during the update process interrupts the update.

If no other sensor is connected to the instrument, proceed as follows to restart the update process:

1. Do not reconnect the sensor but keep it ready to be connected.
2. In the "Setup > System > NRP-Z Info Update" dialog, select "Rescue" in the left sensor selection field
3. Activate "Run Update".
4. Confirm query in message box
5. Connect sensor within 4 seconds

The update starts, a bar informs about the progress.

Current Sensors

Shows the sensors that are connected to the generator with information on serial number, the revision state and some features.

Remote command:

[SENSe<ch>\[:POWer\]:TYPE?](#) on page 567

[SENSe<ch>\[:POWer\]:SVERsion?](#) on page 566

[SENSe<ch>\[:POWer\]:SNUMber?](#) on page 565

Update

Section "Update" provides access to the file system in order to select a file for an R&S NRP sensor update (Button "Select NRP File"), the selected file is indicated to the left of the button. On the left side, the sensor to be updated is selected.

Button "Run Update" starts the update.

Note: If the update is interrupted for example by accidental removal of the sensor during the process, the button "Rescue" appears. Thus, you can restart the update process.

Prerequisite is that no other sensor is connected to the instrument.

Refer to ["How to update an R&S NRP sensor"](#) on page 136 and ["How to restart an interrupted update of an R&S NRP sensor"](#) on page 137 for detailed instructions.

Remote command:

n.a.

5.2.3.6 Update

After a firmware update it is occasionally required to also update the "PCI-FPGA". This is enabled in the "Update" dialog.

At the first start of the new firmware, a message appears during the boot process if a "PCI-FPGA" update is required. Execute a PCI-FPGA update by pressing the "PCI-FPGA" button.

NOTICE**Impairment of instrument functions**

To avoid impairment of instrument functions, the update of the "PCI-FPGA" must not be cancelled and the instrument must not be switched off during this update.

**5.2.3.7 Display Update**

The "Start/Stop Display Update" dialog provides the possibility to switch off update of the displayed parameters in order to increase speed for certain settings.

The indicated values are not updated and may therefore differ from the intern, used values.

**Display Update is On/Off**

Switches on/off update of the displayed parameters.

Switching off the update of the displayed parameters increases the speed for certain settings.


Note: For optimum sweep performance with short dwell times and for fast settling times, it is recommended to switch off the display update .

Remote command:

:SYSTem:DISPlay:UPDate on page 798

5.2.3.8 Selftest

A selftest is provided for service purposes. The selftest is a protected test procedure, which can be accessed if protection level 1 is disabled. The protection dialog is called in the "Setup" menu (see [Chapter 5.2.3.15, "Protection"](#), on page 148).

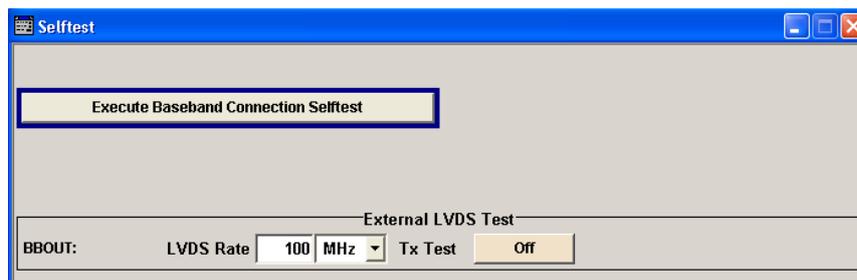

The following tests are only available via remote control:

- `:TEST:CONNeCtor:AUXIo?` on page 802
- `:TEST<hw>:DIRect` on page 802

Execute Baseband Connection Selftest

Performs a connection test on each of the internal digital baseband links. This implies all installed options as baseband inputs, motherboard, universal coding generators, fading simulators, and baseband outputs. The result (succeeded or failed) is displayed in the status field next to the "Execute Baseband Connection Selftest" button.

Remote command:

`:TEST:BB:CONNeCtion?` on page 801

BBOUT LVDS Rate

Sets the interface speed.

The "External LVDS Test" is used to check the correct data transmission of the digital baseband outputs (BBOUT) and the correct data reception of the digital baseband inputs (BBIN).

An external cable connection is needed to perform this test successfully. An output must be connected to an input with the digital I/Q cable. Always an input/output pair is tested together. The input and the output can be on the same instrument, or alternatively on two different instruments. Given an arbitrary cable connection, the appropriate Tx test can be activated with different interface speeds (LVDS rate).

On the connected input, this test sequence is received and can be compared with the expected test signal.

Remote command:

`:TEST<hw>:BBOut:LRATe` on page 801

Tx Test

Activates the transmission of a known pseudo-random sequence (On).

Remote command:

`:TEST<hw>:BBOut:TTESt[:STATe]` on page 802

5.2.3.9 Check Front Panel

With the functions provided in this dialog you can verify the functionality of the control keys of the R&S SMJ.

In case of malfunctions, contact your Rohde & Schwarz Customer Support Center for technical support, see <http://www.customersupport@rohde-schwarz.com>.




Accessing the online help in the check front panel dialog or exiting via ESC

During the test, the actual functions of all keys are disabled, including the HELP and the ESC keys.

Check Front Panel Settings

- ▶ To access this dialog, Press the "setup" key and select "Setup > Test > Check Front Panel".

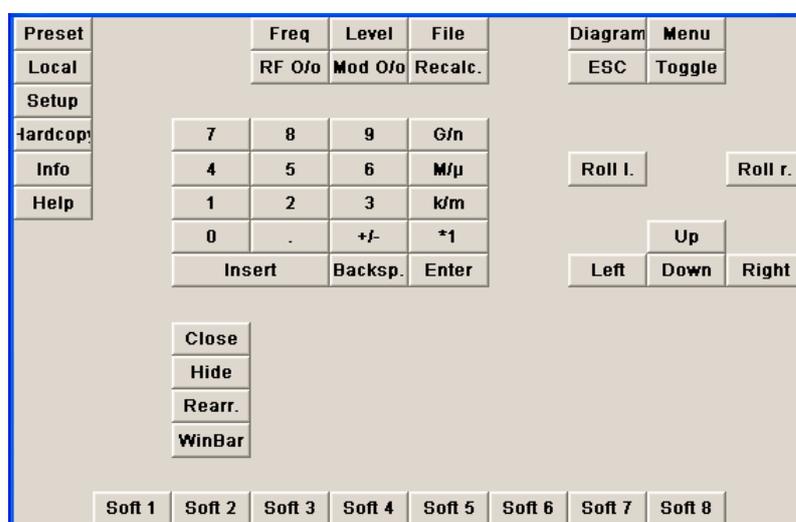

Reflecting the front panel, the "Check Front Panel" dialog contains all functions to test the operating elements of the instrument.

Performing the Front Panel Tests

To perform the front panel test, you operate the keys at the front panel, and check the response of the instrument in the "Check Front Panel" dialog. To perform this test properly, it is essential that you check each key of the front panel. The test is only completed, when you have verified all keys.

During the test, the actual functions of the keys are disabled.


Proceed as follows:

1. Press the SETUP key.
2. Select "Test > Check Front Panel"
The "Check Front Panel" dialog opens.
3. Press a key on the front panel.
Check if the corresponding key in the "Check Front Panel" dialog turns green.
4. Press the same key a second time.

Check that the key in the dialog turns red.

Note: Pressing the same key again has no further effect, with the exception of the ESC key, see [Press the ESC key a third time](#).

- Continue with the next key on the front panel and repeat [step 3](#) to [step 5](#) until all keys are tested.

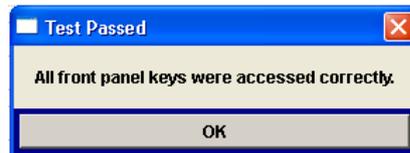

The test is completed, when each key is verified successfully, confirmed by a "Test passed" message.

Select "OK" to exit the test.

- ▶ Press the ESC key a third time.
Exits the "Check Front Panel" dialog, even if you have not yet checked all the keys.

Expected responses:

- Pressing a key once (green), pressing twice (red)
- Pressing the ESC key a third time exits the dialog.

If you detect a malfunction, for example, you press the front panel key the first time, and the color of the button in the dialog turns red (instead of green), the front panel key may be stuck. In this case, contact the Rohde & Schwarz Customer Support Center for technical support, see <http://www.customersupport@rohde-schwarz.com>.

5.2.3.10 Global Trigger/Clock/External Input Settings

The "Global Trigger/Clock/External Inputs" menu can be opened using the SETUP or MENU key under the "Setup" menu as well as in all clock and trigger menus of the "Baseband" function block.

This menu is used to determine the physical characteristics of the input connectors for trigger, clock and control signals.

The user inputs/outputs (BNC connector and pins of the AUX I/O connector) are assigned in the dialog ["User Marker AUX I/O"](#).

A common trigger threshold and input impedance is effective for all trigger and control signal inputs. The settings influence the digital modulations, the generation of waveforms or multicarrier signals, and all digital standards. Irrespective of this, a common threshold and input impedance is effective for the serial and parallel data input. These data sources are available for digital modulation ("Custom Digital Modulation").

The instrument trigger setting influences all sweeps and is effective in the List mode.

Global Trigger/Clock/External Inputs	
Threshold Data Input (Ser/Par)	1.00 V
Threshold Trigger/Control Input	1.00 V
Impedance Data Input (Ser/Par)	1 kΩ / GND
Impedance Trigger/Control Input	1 kΩ / GND
Baseband Trigger Input Slope	Positive
Instrument Trigger Input Slope	Positive
Clock Input Slope	Positive
Clock Output (BNC Rear Panel)	
Clock Source	Baseband A
Clock Mode	Symbol

Threshold Data Input

Sets the high/low threshold in volts for the serial and parallel data input.

The serial data is input at the DATA connector of the instrument. The parallel data is input via the DATA pins of the AUX I/O interface.

Remote command:

[\[:SOURce\]:INPut:DATA:THReshold](#) on page 721

Threshold Trigger/Control Input

Sets the high/low threshold in volts for the trigger and control signal inputs of the baseband section.

The setting affects the TRIGGER 1 and TRIGGER 2 inputs (BNC connectors) and the CW, BURST and LEV_ATT inputs of the AUX I/O interface.

Remote command:

[\[:SOURce\]:INPut:TRIGger:LEVel](#) on page 723

Impedance Data Input

Selects the input impedance for the serial and parallel data inputs.

50 Ohm/GND should be selected for high clock rates.

The serial data is input at the DATA connector of the instrument. The parallel data is input via the DATA pins of the AUX I/O interface.

Remote command:

[\[:SOURce\]:INPut:DATA:IMPedance](#) on page 721

Impedance Trigger/Control Input

Selects the input impedance for the external trigger and control signal inputs.

50 Ohm/GND should be selected for high clock rates.

The setting affects the TRIGGER 1 and TRIGGER 2 inputs (BNC connectors) and the CW, BURST and LEV_ATT inputs of the AUX I/O interface.

Remote command:

[\[:SOURce\]:INPut:TRIGger:IMPedance](#) on page 722

Baseband Trigger Input Slope

Selects the polarity of the active slope of an externally applied trigger signal.

This setting affects the TRIGGER inputs (BNC connectors).

Remote command:

`[:SOURce] : INPut : TRIGger : BBANd : SLOPe` on page 722

Instrument Trigger Input Slope

Sets the polarity of the active slope of an externally applied instrument trigger.

This setting affects the TRIGGER 1/2 input (BNC connector at the rear of the instrument).

"Positive" activates the rising edge of the trigger signal.

"Negative" activates the falling edge of the trigger signal.

Remote command:

`[:SOURce] : INPut : TRIGger : SLOPe` on page 723

Clock Input Slope

Sets the polarity of the active slope of an externally applied bit clock pulse or symbol clock pulse.

This setting affects the CLOCK input (BNC connector).

Remote command:

`:CLOCK:INPut:SLOPe` on page 525

Clock Output Mode

Sets the output of bit or symbol clock pulses at the CLOCK OUT connector at the rear panel.

Remote command:

`:CLOCK:OUTPut:MODE` on page 525

5.2.3.11 Display/Keyboard Settings

In the "Display/Keyboard Settings" dialog the power-save mode and external keyboard settings are made. It is opened using the SETUP or MENU key under "Environment".

**Screen Saver Active**

Activates/deactivates the screen-save mode of the display.

If activated, the display including backlight is completely switched off after the elapse of the "Wait Time" when no entries via front panel, external mouse or external keyboard are made.

This mode is recommended for preserving the display especially if the instrument is exclusively operated via remote control.

Remote command:

`:DISPlay:PSAVe[:STATe]` on page 530

Wait Time

Enters the idle time that must elapse before the display lamp is shut off when no entries are made.

Remote command:

`:DISPlay:PSAVe:HOLDoff` on page 530

Layout (Keyboard Settings)

Selects the keyboard layout for the selected keyboard language.

The assignment of some keys depends on the selected layout and language.

Remote command:

`:KBOard:LAYout` on page 542

`:KBOard:LANGuage` on page 542

5.2.3.12 User Marker / AUX I/O Settings

The R&S SMJ provides four "USER" interfaces which can be freely assigned a selection of signals and which can be configured as both inputs and outputs.

The following table gives an overview of the signals that can be applied at the USER connector.

Table 5-1: USER Connector Signals

Signal	Description
"Marker 4"	A broad selection of suitable marker signals is offered in the marker menus of the "Baseband" block. In addition, they can be freely configured in the "Custom Dig Mod > Control List Editor" and "GSM/EDGE > Slot Marker Editor". The selected markers are activated when switching on the "Baseband" block. When using markers defined in a control list ("Marker" = "CList") the related control list must be loaded in addition ("Custom Dig Mod").
"CW Mode Out"	This signal marks the CW mode in which digital modulation ("Custom Dig Mod") is deactivated and the RF signal is output in unmodulated form. The CW signal is defined in a control list and activated by loading the control list and setting the "Modulation<-> CW Switching State" to On in the "More" submenu. With standards where it is possible to change between various modulation modes, the signal indicates the active modulation mode (standard GSM: signal high (1) = modulation mode GMSK and signal low (0) = modulation mode 8PSK EDGE). In this cases, the signal is generated automatically when the standard is switched on.
"No Signal (Blank) Marker"	This signal marks the blank time in the List mode. The signal is generated automatically when the list mode is switched on.


Signal	Description
"HOP"	This signal marks the hop trigger for frequency hopping in the List mode for "Custom Digital Mod". The hop signal is defined in a control list and activated by loading the control list in the "Custom Dig Mod" menu.
"Trigger"	This signal marks the trigger event caused by the selected trigger signal (internally or externally). The trigger is defined in the respective trigger submenu of the "Baseband" block menus.

To access the "User Marker / AUX I/O" dialog:

1. Select "Setup > Environment > Global Trigger/Clock/External Inputs" or
2. In the "Baseband" function block select any digital standard, e.g. "GSM/EDGE" and select "Trigger > Global Trigger/Clock/External Inputs".

The signals are assigned to the USER interfaces in the "Mapping Configuration" section. The pin assignment of the AUX I/O connector is also displayed. An adapter between the AUX I/O interface and coaxial BNC connections is available as an accessory (accessories for R&S SMJ-Z5, see data sheet).

The polarity of the blank marker is selected in the "No Signal (Blank) Marker" section.

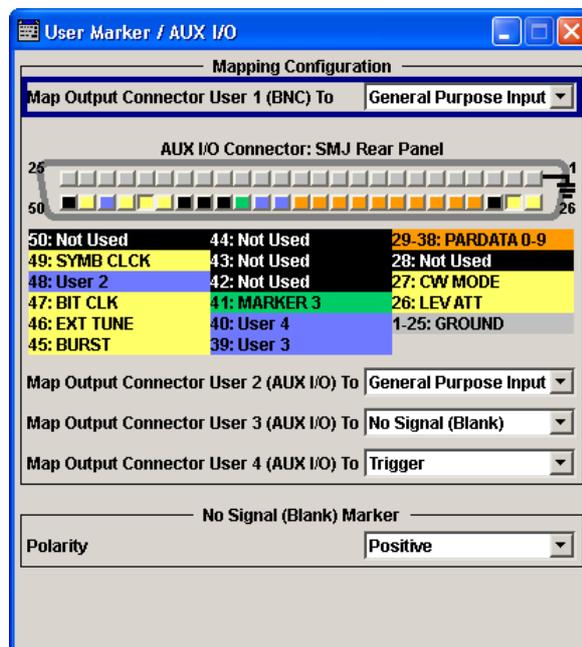

AUX I/O Connector

An illustration of the AUX I/O interface is shown. The inputs are indicated by a "depressed" pin , outputs by a non-depressed pin .

The assignment is shown in tabular form underneath the interface. The colors indicate the signal type. A distinction is made between control signals (yellow), marker signals (green), data (orange), freely selectable signals at the user pins (blue), ground (gray), and unused pins (black).

For detailed description of the AUX I/O connector, refer to [Chapter A.2, "AUX I/O Connector"](#), on page 824.

User Connector Signal

Selects the signal for USER interface 1 (BNC), 2, 3 or 4 (AUX I/O). The signals which are available for selection are given in [Table 5-1](#).

Remote command:

`:OUTPut:USER<ch>:SOURce` on page 557

Polarity (No Signal Marker)

Selects the polarity of the No Signal Marker.

If Positive is selected, the signal is high (2.5 V) when the marker is active; if Negative is selected, the signal is low (0 V).


Remote command:

`:OUTPut:BLANk:POLarity` on page 555

5.2.3.13 Remote Channel Settings

The "Remote Channel Settings" dialog provides access to the settings for remote control. The dialog is opened using the SETUP or MENU key under "Remote".

- ▶ To access this dialog, press the SETUP or MENU key and select "Remote > GPIB,...".

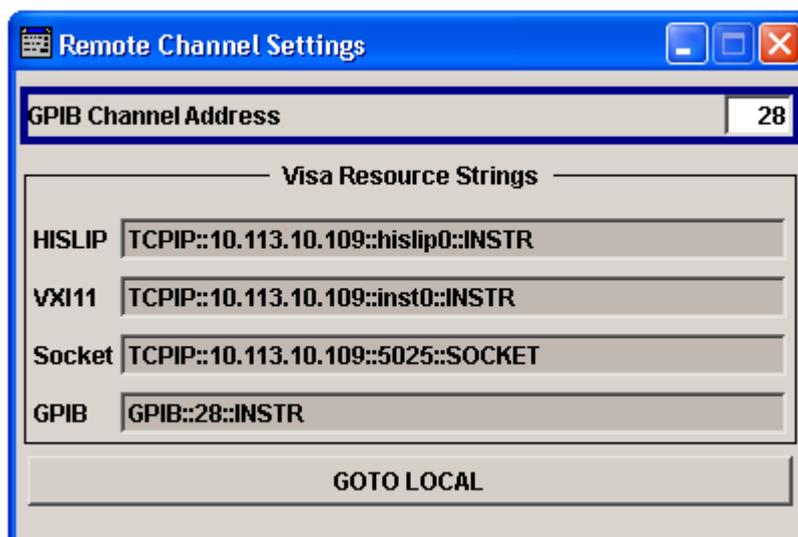

GPIB channel address

Sets the address of the GPIB channel the instrument is connected to.

Remote command:

`:SYSTem:COMMunicate:GPIB[:SELf]:ADDRes` on page 795

Visa Resource Strings

Displays the visa resource strings, used for remote control of the instrument. Each interface requires an individual unique address, to identify the instrument for remote control.

Remote command:

`:SYSTem:COMMunicate:HISLip:RESource?` on page 797

`:SYSTem:COMMunicate:NETWork:RESource?` on page 796

`:SYSTem:COMMunicate:SOCKet:RESource?` on page 797

`:SYSTem:COMMunicate:GPIB:RESource?` on page 796

Goto Local

Switches the instrument to operate in local control mode.

Switching from remote to local control mode can be also done with one of the following actions:

- manually with the LOCAL key on the front panel
- with the interface command `>L` via the remote control interface
- with the key combination CTRL + Q.


Remote command:

`>L`

5.2.3.14 LXI Status

The "LXI - LAN eXtensions for Instruments - Status..." dialog displays the settings and status of the LAN and allows to reset the LAN connection.

For more information on LXI, see [Chapter 2.9, "LXI Configuration"](#), on page 60.

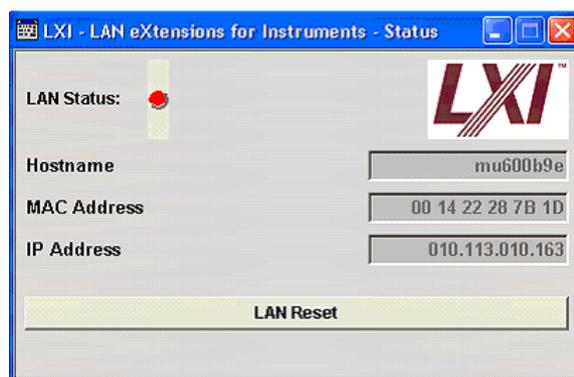

LAN Status

The LED indicates the LXI status.

The LAN Status is also indicated with the LED "LAN Status" on the front panel of the instrument.

"green" normal operation

"green (flashing)"
device identification

"red" LAN fault

Remote command:

n.a.

LAN Reset

Initiates the network configuration reset mechanism for the instrument and resets the hostname, MAC address, and IP address.

According to the LXI standard, an LAN Reset must place the following network settings to a default state:

Parameter	Value
TCP/IP Mode	DHCP + Auto IP Address
Dynamic DNS	Enabled
ICMP Ping	Enabled
Password for LAN configuration	LxiWebIfc

The LAN Reset for the R&S SMJ also resets the following parameters:

Parameter	
Hostname	Instrument-specific host name
Description	Vector Signal Generator
Negotiation	Auto Detect
VXI-11 Discovery	Enabled

The LAN settings are configured using the instrument's LXI Browser Interface described in [Chapter 2.9, "LXI Configuration"](#), on page 60.

To open the "Instrument Home Page" (welcome page), type the instrument's computer name (host name) or IP address in the address field of the browser on your PC, for example *http://10.111.10.175*.

Note: Do not add the missing zeros in the IP address, while opening the Instrument Home Page.


Remote command:

n.a.

5.2.3.15 Protection

This "Protection" dialog provides access to the unlocking of different protection levels. To open this dialog, use the SETUP or MENU key under "Protection".

After the instrument has been switched on, the protection levels 1 to 5 are automatically activated. To deactivate the protection, the correct password has to be entered. With the corresponding check boxes, you can activate the protection again.

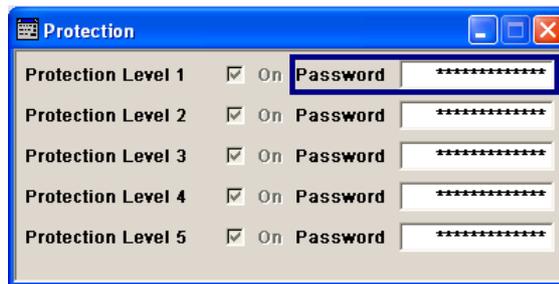

The following functions are protected in the respective levels:

- **Protection Level 1**
protects against accidental changes to certain settings, such as clock and date, network settings or instrument names, etc. This level is accessible to the user.
- **Protection Level 2**
provides access to the unlocking of protected service functions. It is accessible to authorized personnel of R&S Service Departments only.
- **Protection Level 3-5**
are reserved for factory internal use.

Protection Level/Password

Protection Level 1 can be activated to expand the functionality of the internal adjustment and to access the selftests.

The password is 123456.

Remote command:

`:SYSTem:PROTect<ch>[:STATe]` on page 797

5.2.3.16 Security

The security concept of the R&S SMJ helps you to protect your instrument against uncontrolled access and changes. All provided security services require that you enter the security password.

Provided security services are:


- **Password** management secures controlled user access to the instrument
The password concept enables you to assign a security password for accessing the mass storage of the instrument.
For more information concerning the security password, see the description *Resolving Security Issues when Working with an R&S SMJ*. You can find this document on the R&S SMJ product page at "Downloads" > "Manuals".
- **LAN Connections** secures controlled network access.
Remote control via LAN interface requires that the interface is activated.
- **General** security parameters as:
 - **USB Storage** secures controlled access to the mass memory of the instrument.
 - **Annotation** frequency and amplitude prevents reading the display.



Changing the security password requires that you enter the old password, the new password and that you confirm the new password.

To assign the password, press the "Accept" button. This action can not be undone! Keep also in mind, that security settings are never reset, even if you perform a factory preset.

- ▶ To access this dialog, press the SETUP or MENU key and select "Protection " > "Security".

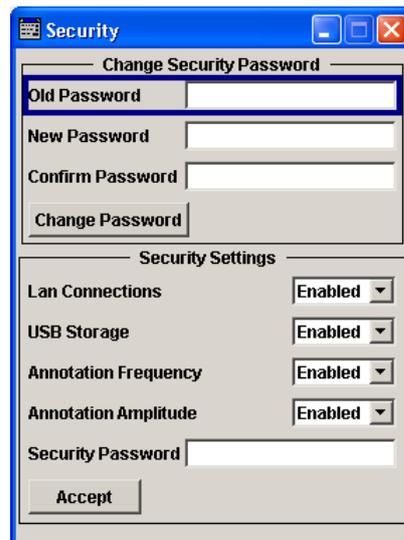

The "Security" dialog comprises the parameters for configuring the passwords, as well as the security settings of the mass storage and the LAN services.



The settings in this dialog will not be assigned until you enter the [Security Password](#) and confirm with the [Accept](#) button.

Change Security Password

Enables you to change and confirm the security password.

Old Password ← Change Security Password

Enters the currently used security password. The default password is '123456'.

Note: It is highly recommended to change the default security password before connecting the instrument to the network.

The security password is required when changing the status of the USB and LAN interface.

New Password ← Change Security Password

Enters the new security password.

The security password may contain decimal characters only.

Confirm Password ← Change Security Password

Confirms the new password by repeating.

Note: The new password will not be assigned until you select the [Change Password](#) button.

Change Password ← Change Security Password

Changes the password accordingly.

Note: Keep in mind, that a changed password is never reset, even if you perform a factory preset.

LAN Connections

Enables the LAN interface.

It is not possible to access the instrument via LAN while the LAN connection is disabled.

Note: The setting will not be assigned until you enter the [Security Password](#) and confirm with [Accept](#).

USB Storage

Enables the USB interfaces.

The instrument does not recognize any device connected to the USB interface when the interface is disabled.

Note: The setting will not be assigned until you enter the [Security Password](#) and confirm with [Accept](#).

Annotation Frequency

Enables/disables the display of the currently used frequency in the header of the instrument.

Note: The setting will not be assigned until you enter the [Security Password](#) and confirm with [Accept](#).

Remote command:

[:DISPlay:ANNotation:FREQuency](#) on page 528

Annotation Amplitude

Enables/disables the display of the currently selected level in the header of the instrument.

Note: The setting will not be assigned until you enter the [Security Password](#) and confirm with [Accept](#).

Remote command:

[:DISPlay:ANNotation:AMPLitude](#) on page 528

Security Password

Enters the password that is required to enable or to disable the settings protected by a security password. Default is '123456'.

Note: It is highly recommended that you to change the default security password before connecting the instrument to the network.

All settings are only accepted after the "Accept" button is pressed.

Accept

Applies the modified settings, provided the security password is entered correctly.

Note: This action can not be undone. Keep in mind, that a changed password is never reset, even if you perform a factory preset.

5.2.3.17 Save/Recall

The "Save/Recall" submenu can also be called up with the FILE key and is therefore described in the section of this key (see [Chapter 5.2.8, "Storing and Loading Instrument Data - File Key"](#), on page 158).

5.2.3.18 Factory Preset

The "Factory Preset" dialog provides a function to reset the instrument's settings to their factory state. This function is activated by pressing the "Execute Factory Preset" button.

**Factory Preset**

Reset the instrument's settings to their factory state.

Note: Since Factory Preset resets the Remote Channel and network settings to the default values, executing Factory Preset via remote control terminates the connection to the instrument, if these settings had been configured to values different to the default ones!

The factory preset function resets nearly all instrument settings. In addition to the regular preset by means of the PRESET key, a "Factory Preset" resets also the following values:

- Reference frequency settings ("Ref Oscillator" menu)
- Power on settings ("Level/EMF" menu)
- Network settings including hostname ("Setup" menu)
- Remote Channel settings including GPIB address ("Setup" menu)
- Start/Stop Display Update ("Setup" menu)
- Display and keyboard settings ("Setup" menu).

To maintain security, password settings and all settings protected by these passwords like disabled USB and LAN connections are not changed.

Not affected by the "Factory Preset" are also user data, lists or instrument settings files, created for example by means of the Save/Recall function.

Remote command:

:SYSTem:FPReset on page 489

5.2.3.19 Help


The "Help" dialog offers comprehensive online help for the R&S SMJ. A desired topic can be selected via the table of contents (select "Manual") or the index (select "Index").

For context-sensitive information about a marked parameter, press the HELP key. For a description of the "Help" menu, refer to the section covering to the HELP key (see [Chapter 5.2.7, "Help System - Help Key"](#), on page 157).

5.2.4 Switching to Manual Control - Local Key

The local key switches from remote control to manual control (local state).

In remote control mode the instrument indicates the remote state in the display header. The rest of the display remains unchanged and shows the current instrument status, that means the status which exists under the remote control settings. The instrument can be operated (for example dialogs can be opened). However, it is not possible to enter or change values.

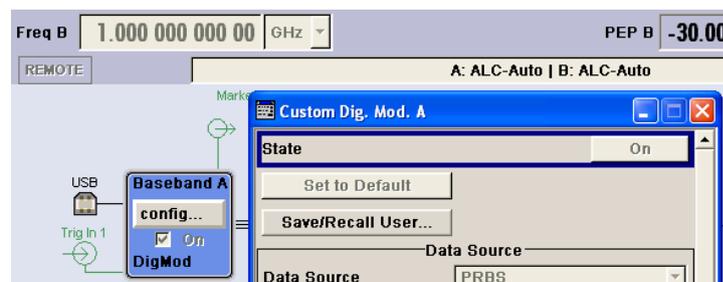

The status message additionally indicates whether the LOCAL key is disabled or enabled.

See also [Chapter 6.2.1, "Switching to Remote Control"](#), on page 447.

The following states are indicated:

- "REMOTE"
The LOCAL key switches the instrument from remote control to manual control. The current command must be fully processed before the mode is switched, otherwise the instrument switches immediately back to remote control.
- "REM-LLO"
The LOCAL key is locked, initiated by the `&LLO` (local lockout) command. The instrument can be switched from remote state to local state only via remote control, for example with `>R` or the Visual Basic command `CALL IBLOC (generator%)`. The LOCAL key has previously been locked by the remote command `&LLO`.

When switching from remote to manual control, the display update function is automatically deactivated ("SETUP" > "Start/Stop Display Update" > "Off").

5.2.5 Generating a Hard Copy of the Display

The save/recall function enables you to store the settings in a file. In addition, you can create a hard copy of the current display to save the most important settings of a performed signal generation in an image file.

5.2.5.1 Hard Copy Settings

- ▶ To access the dialog, press the HCOPIY key.



The dialog contains the parameters for configuring the output format and location of a hardcopy.

The remote commands required to define the hard copy settings are described in [Chapter 7.11, "HCOPIY Subsystem"](#), on page 532.

Destination

Indicates that the hardcopy is stored in a file (see also ["File Options"](#) on page 155).

Remote command:

`:HCOPIY:DEVIce` on page 533

Options

Opens the "Hardcopy Options" dialog for configuring the corresponding parameters (see ["File Options"](#) on page 155).

Remote command:

n.a.

File

Some configuration parameters are already offered in the Hardcopy dialog. All configuration parameters are available in ["File Options"](#) on page 155.

Automatic Naming

Activates automatic generation of the file name. Automatic naming is configured in the "Options..." sub dialog, see ["File Options"](#) on page 155.

Remote command:

`:HCOPIY:FILE[:NAME]:AUTO:STATe` on page 539

File Info

Indicates the file name. The file name can be entered either manually via the file manager (button "File...") or generated automatically (Automatic naming checkbox). Automatic naming is configured in the "Options..." submenu.


Remote command:

`:HCOPY:FILE[:NAME]` on page 534

`:HCOPY:FILE[:NAME]:AUTO:FILE?` on page 535

5.2.5.2 Hardcopy Options

This section describes the "Hardcopy Options" dialog.

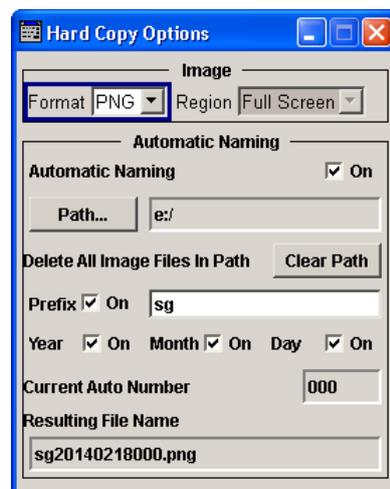

File Options

Dialog for setting the file parameters.

"Format" Selects the output file format, for example *.bmp, *.jpg*.xpm*.png.

Remote command:

`:HCOPY:IMAGe:FORMat` on page 539

`:HCOPY:DEVIce:LANGUage` on page 533

"Region" Selects the snapshot area, either the entire screen or the currently active dialog.

Remote command:

`:HCOPY:REGIon` on page 539

"Automatic Naming" If enabled, creates the output filenames automatically according to rules following the activated components.

"Path..." Selects the directory.

Note: To select the destination path, you have to specify a file name as well. Otherwise an error message is displayed and the selection is canceled.

Directory, path and file name are displayed in the infoline right to the "Path" button.

Remote command:

`:HCOPY:FILE[:NAME]:AUTO:DIRectory` on page 535

`:HCOPY:FILE[:NAME]:AUTO?` on page 534

"Clear Path" Deletes all image files with extensions `bmp`, `img`, `png`, `xpm` and `csv` in the directory set for automatic naming. Before deleting the image files a warning message is displayed requiring the confirmation.

Remote command:

`:HCOPY:FILE[:NAME]:AUTO:DIRectory:CLEar` on page 535

"Prefix, Year, Month, Day" Determines the rules for "Automatic Naming". Per default, the automatically generated file name is composed of: `<Path>/<Prefix><YYYY><MM><DD><Number>.<Format>`, where `Y`, `M` and `D` mean Year, Month, Day; `Number` is the "Current Auto Number". You can deactivate/activate each component separately. The "Resulting File Name" indicates the current file name syntax.

Remote command:

`:HCOPY:FILE[:NAME]:AUTO[:FILE]:PREFix:STATe` on page 538

`:HCOPY:FILE[:NAME]:AUTO[:FILE]:PREFix` on page 538

`:HCOPY:FILE[:NAME]:AUTO[:FILE]:YEAR:STATe` on page 538

`:HCOPY:FILE[:NAME]:AUTO[:FILE]:MONTH:STATe` on page 537

`:HCOPY:FILE[:NAME]:AUTO[:FILE]:DAY:STATe` on page 536

"Current Auto Number" Indicates the number which is used in the automatically generated file name.

Note: When initially switching on the instrument the number is reset to the lowest possible value. Starting with number 0 the output directory is scanned for already existing files. As long as files with the same name are existing the number is increased by 1. The number is automatically set so that the resulting file name will be unique within the selected path. The current number is not in the save/recall file but will be temporarily stored within the database. At following save operations the number is increased.

Remote command:

`:HCOPY:FILE[:NAME]:AUTO[:FILE]:NUMBer?` on page 537

"Resulting File Name" Indicates the automatically generated file name.

Remote command:

`:HCOPY:FILE[:NAME]:AUTO:FILE?` on page 535

Save

Stores the hardcopy.

Remote command:


:HCOPY [:EXECute] on page 534

5.2.6 Messages - Info Key

The INFO key opens a window containing a detailed description of every message displayed in the info bar, see [Chapter 4.2.3, "Info Window"](#), on page 92 and [Chapter 9, "Status Information, Error Messages and Troubleshooting"](#), on page 813.

5.2.7 Help System - Help Key

The HELP key opens a browser window containing a context-sensitive description of the highlighted parameter.

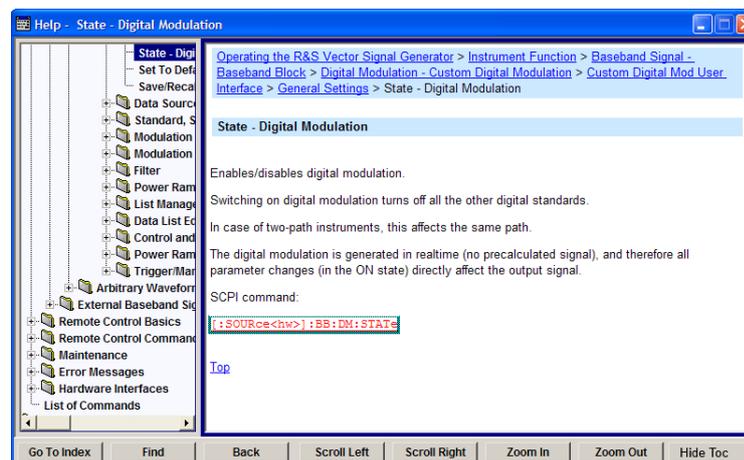

The context-sensitive page which is opened with the HELP key is part of a comprehensive help system. It is possible to move from this context-sensitive page to any page of the help system. The following navigation aids are available:

- Internal links in the text
They open pages which are directly linked to the described function. In this way it is possible, for example, to call up the description of the GPIB command for any particular function.
- Back
The "Back" button calls up the page last viewed.
- Contents in the navigation panel
The contents list is used to open the individual help pages. It has a hierarchical structure. The highlighted line indicates where the currently displayed page is within the contents list.
- Index in the navigation panel
The index is used to call up all pages which contain the selected entry. The index has an alphabetical structure and also contains all GPIB commands.

- Find
The find function allows you to look for freely selectable terms in all help pages. A list of the pages containing the entered term is displayed as the search result. The search can be limited to words in the page title to increase the number of hits.
- To maximize the "Topics" window, you can hide the contents tree with the "Hide Contents" button, and vice versa.

The softkeys are used to determine the entry focus for front panel operation, to select the content of the navigation window and to change the font size. To determine the entry focus for front panel operation the Cursors UP/Down are used. The links are highlighted in blue, and can be selected and called up using the rotary knob.

5.2.8 Storing and Loading Instrument Data - File Key

The R&S SMJ allows complete instrument settings to be stored in files on the hard disk.

Defined and complex instrument settings can then be reproduced at any time by loading this data. If required, these settings can be loaded to various signal generators.

The corresponding menu is available under "Save/Recall" in the "Setup" menu or accessible by means of the FILE key. The instrument settings are saved in files which can be stored in data directories.

Additionally there are intermediate memories in which the current instrument setting can be stored and then called up again by just pressing a key. This provides fast switching between different instrument settings.

Only settings which differ from the preset values and configuration data for the operating elements (e.g. window positions) are stored. As a result the files remain relatively small. Furthermore, instrument settings can easily be transferred between different equipped signal generators since the files contain only relevant information. When loaded, the referenced settings are implemented and all non-referenced parameters are set to the associated preset values.

If list data is part of the instrument settings, e.g. a list of user correction data, a reference to this list is stored, not the list itself. The list is reactivated when the associated settings are loaded, but the list may have been modified or deleted in the meantime or may not be available on a different instrument. If the list has been modified, the new entries will be used. An error message appears if an attempt is made to access a non-existing list or to activate settings which are not supported by the instrument.



- Network settings and remote settings are not saved and restored.
 - Lists are stored and loaded in the appropriate menus. For example, the user correction data list is created and stored in the "User Correction" menu.
-

When loading an instrument setting, it is possible to select whether the current frequency and level setting is to be retained or whether the stored settings are to be activated. It is possible to delete stored instrument settings. A file can be copied by loading it with "Recall" and then storing it under a new name.

Settings can be transferred easily between instruments with different equipment options and/or firmware versions because only the settings which differ from the preset values are affected. When settings are loaded, only those which are possible on the instrument are implemented. Error messages indicate the settings which cannot be implemented.

The stored file is transferred from one instrument to another using the memory stick or by means of a network drive.

General file management functions such as copying and moving data are available in the "File Manager" dialog.

5.2.8.1 Save/Recall Menu

The settings available in the File menu "Save/Recall" depend on the operation selected under "Select Operation".



For more information, see [Chapter 4.7.1, "File Select Dialog"](#), on page 116.

Select Operation

Selects the file function.


Accesses the settings for storing ("Save") and loading ("Recall") of the instrument settings.

"Save..." Calls the menu for storing the current instrument setting (see [Chapter 5.2.8.2, "Storing Instrument Settings"](#), on page 159).

"Recall..." Calls the menu for calling up a stored instrument setting (see [Chapter 5.2.8.3, "Loading Instrument Settings"](#), on page 161).

5.2.8.2 Storing Instrument Settings

If "Save" is selected under "Select Operation", the File menu provides options for storing the current instrument setting in a file.

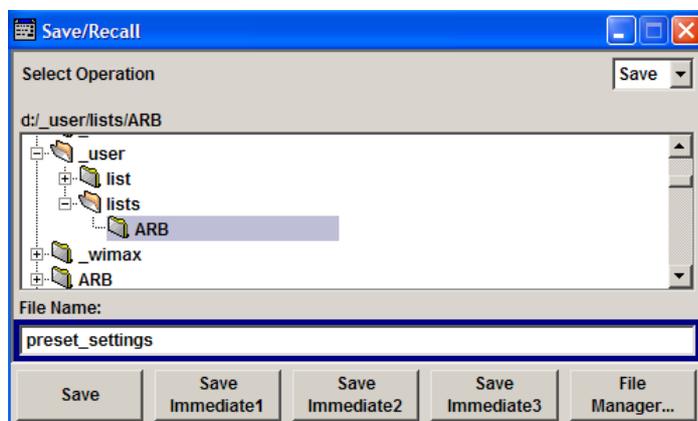

Recent files

Displays the files last used.

Directory, File List and File Name**Note:**

You access this generic standard function each time you perform one of the following:

- store or load (settings) files
- define a folder these files are to be stored in or
- navigate through the file system.

The name of the dialog is context sensitive but the provided functions are self-explanatory and very similar.

With the provided settings, you can perform the following:

- to navigate through the file system, use the directory tree
- to create a new file, load and store files, use the dedicated functions "New", "Select", "Save" and [Recent files](#).
- to perform standard file management functions, like create new directories, move, copy, delete files and/or directories, use the standard "File Manager" function (see ["File Manager"](#) on page 161).

Remote command:

to list all files in a directory:

[:MMEMory:CDIRectory](#) on page 549

[:MMEMory:CATalog?](#) on page 548

refer to the description of firmware options for the syntax of the corresponding SCPI command:

[\[:SOURce<hw>\]:BB:<Digital Standard>:SETTing:CATalog](#)

[\[:SOURce\]:CORRection:CSET:CATalog?](#) on page 699

to list files with user data:

[\[:SOURce<hw>\]:BB:DM:DLISt:CATalog?](#) on page 655

[\[:SOURce<hw>\]:BB:DM:CLISt:CATalog?](#) on page 655

Save

Stores the current instrument settings under the specified path.

Remote command:

[*SAV](#) on page 487

[:MMEMory:STORe:STATe](#) on page 553

Refer to the descriptions of the firmware options for the correct syntax of the corresponding SCPI commands:

[\[:SOURce<hw>\]:BB:<Digital Standard>:SETTing:STORe](#)

[\[:SOURce<hw>\]:BB:<Digital Standard>:SETTing:DELeTe](#)

Fast Save

Determines whether the instrument performs an absolute or a differential storing of the settings.

Enable this function to accelerate the saving process by saving only the settings with values different to the default ones.

Note: This function is not affected by the "Preset" function.

Remote command:

[:SOURce<hw>] :BB:DM:SETTing:STORe:FAST on page 665

[:SOURce<hw>] :BB:ARBitrary:MCARrier:SETTing:STORe:FAST on page 610

refer to the description of firmware options for the syntax of the corresponding SCPI commands

Save Immediate x

Stores the current instrument setting in one of the three intermediate memories.

These instrument settings are retained until a different instrument setting is stored in the intermediate memory. When the instrument is switched off, the contents of the intermediate memories are retained.

Remote command:

*SAV on page 487

File Manager


Accesses the "File Manager" dialog, see [Chapter 5.2.8.5, "File Manager"](#), on page 165.

Remote command:

n.a.

5.2.8.3 Loading Instrument Settings

If "Recall" is selected under "Select Operation", the "File" menu provides options for loading complete instrument settings. Here it is possible to select whether the current or stored frequency and level settings are to be used.

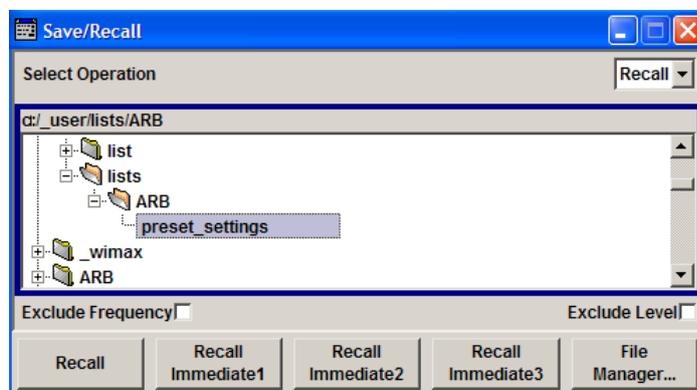

Recent files

Displays the files last used.

Directory, File List and File Name

Note:

You access this generic standard function each time you perform one of the following:

- store or load (settings) files
- define a folder these files are to be stored in or
- navigate through the file system.

The name of the dialog is context sensitive but the provided functions are self-explanatory and very similar.

With the provided settings, you can perform the following:

- to navigate through the file system, use the directory tree
- to create a new file, load and store files, use the dedicated functions "New", "Select", "Save" and [Recent files](#).
- to perform standard file management functions, like create new directories, move, copy, delete files and/or directories, use the standard "File Manager" function (see ["File Manager"](#) on page 161).

Remote command:

to list all files in a directory:

[:MMEMory:CDIRectory](#) on page 549

[:MMEMory:CATalog?](#) on page 548

refer to the description of firmware options for the syntax of the corresponding SCPI command:

[\[:SOURce<hw>\]:BB:<Digital Standard>:SETTing:CATalog](#)

[\[:SOURce\]:CORRection:CSET:CATalog?](#) on page 699

to list files with user data:

[\[:SOURce<hw>\]:BB:DM:DLISt:CATalog?](#) on page 655

[\[:SOURce<hw>\]:BB:DM:CLISt:CATalog?](#) on page 655

Exclude Frequency

The current frequency is retained when a stored instrument setting is loaded.

Remote command:

[\[:SOURce<hw>\]:FREQuency\[:CW|FIXed\]:RCL](#) on page 715

Exclude Level

The current level is retained when a stored instrument setting is loaded.

Remote command:

[\[:SOURce<hw>\]:POWer\[:LEVel\]\[:IMMediate\]:RCL](#) on page 766

Recall

Load the selected configuration.

If an instrument setting in which a sweep was activated is stored, the sweep is started when the recall command is called.

If an instrument setting which accesses lists is stored, this list is also loaded.

If the list has been deleted in the meantime, an error message appears when the instrument setting is loaded. If the list has been overwritten in the meantime, the new entries will be used.

Remote command:

[:MMEMory:LOAD:STATe](#) on page 552

[*RCL](#) on page 486

Refer to the descriptions of the firmware options for the correct syntax of the corresponding SCPI command:

[\[:SOURce<hw>\]:BB:<Digital Standard>:SETTing:LOAD](#)

Recall Immediate x

Loads the selected configuration from one of the three intermediate memories.

If an instrument setting in which a sweep was activated is stored, the sweep is started when the recall command is called.

If an instrument setting which accesses lists is stored, this list is also loaded.

If the list has been deleted in the meantime, an error message appears when the instrument setting is loaded. If the list has been overwritten in the meantime, the new entries will be used.

A message appears if no instrument configuration is stored in this memory.

Remote command:

*RCL on page 486

File Manager

Accesses the "File Manager" dialog, see [Chapter 5.2.8.5, "File Manager"](#), on page 165.

Remote command:

n.a.


5.2.8.4 File Select Dialog

The "File Select" dialog opens automatically each time you select a data list file as data source or you select a control list.

To access a loadable data list file

1. Select the "Data List Name" in the individual dialog, e.g. for "Baseband > 3GPP FDD > Basestations > BS1 > Channel Table > P-CCPCH > Data = Data List" select "DList = None".

A "File Select" dialog for loading, creating and modifying a file is displayed.

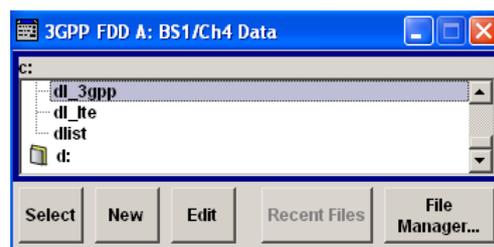

Tip: The name of the dialog is context sensitive and differs depending on the particular function this dialog is from. However, the provided functions are very similar.

2. To load an existing file, navigate through the file system, select the file and confirm with "Select".
3. To create a new file, for example if there is no data list file specified, navigate through the file system to the desired folder, select "New" and specify the file name.

A new empty file is created and stored in the selected folder.

- To edit an existing or newly created file, navigate through the file system, select the file and select "Edit".

The standard "Data List Editor" dialog opens, see ["Data List Editor"](#) on page 352.

- Edit the file content and confirm with "Save".

Directory, File List and File Name

Note:

You access this generic standard function each time you perform one of the following:

- store or load (settings) files
- define a folder these files are to be stored in or
- navigate through the file system.

The name of the dialog is context sensitive but the provided functions are self-explanatory and very similar.

With the provided settings, you can perform the following:

- to navigate through the file system, use the directory tree
- to create a new file, load and store files, use the dedicated functions "New", "Select", "Save" and [Recent files](#).
- to perform standard file management functions, like create new directories, move, copy, delete files and/or directories, use the standard "File Manager" function (see ["File Manager"](#) on page 161).

Remote command:

to list all files in a directory:

[:MMEMory:CDIRectory](#) on page 549

[:MMEMory:CATalog?](#) on page 548

refer to the description of firmware options for the syntax of the corresponding SCPI command:

[\[:SOURce<hw>\]:BB:<Digital Standard>:SETTing:CATalog](#)

[\[:SOURce\]:CORRection:CSET:CATalog?](#) on page 699

to list files with user data:

[\[:SOURce<hw>\]:BB:DM:DLISt:CATalog?](#) on page 655

[\[:SOURce<hw>\]:BB:DM:CLISt:CATalog?](#) on page 655

Functions for handling of data lists

Provided are the following standard functions for file handling:

"Select" Select and load the file.

Remote command:

[\[:SOURce<hw>\]:BB:DM:DLISt:SElect](#) on page 661

Refer to the descriptions of the firmware options for the correct syntax of the corresponding SCPI command:

[\[:SOURce<hw>\]:BB:<Digital Standard>:...:DATA DLISt](#)

[\[:SOURce<hw>\]:BB:<Digital Standard>:...:DSElect](#)

"New" Creates new file with the specified "File Name".
To confirm, select "OK"; use "Cancel" to undo the operation.
To edit the file content, select "File Select > Edit".

"Edit" Accesses the "Data List Editor" and loads the selected file for editing, see ["Data List Editor"](#) on page 352.

Functions for handling of control lists

Provided are the following standard functions for file handling:

"Select" Select and load the file.

Remote command:

[:SOURce<hw>] :BB:DM:CLISt:SElect on page 658

"New" Creates new file with the specified name. To edit the file content, select "File Select > Edit".

"Edit" Access the "Control List Editor" and loads the selected file for editing, see "[Control and Marker List Editor](#)" on page 354.

Recent files

Displays the files last used.

File Manager

Accesses the "File Manager" dialog, see [Chapter 5.2.8.5, "File Manager"](#), on page 165.

Remote command:

n.a.


5.2.8.5 File Manager

The "File Manager" is a tool very similar to a standard Windows Explorer and helps you manage mass storage media and files stored on the R&S SMJ.

You can perform the following tasks:

- Copying multiple files from disk to other media and vice versa, see [Chapter 5.2.8.6, "Accessing the File System of the Instrument and Transferring Files from and to the Instrument"](#), on page 167
- Copying files into another directory, see [Copy](#) and [Paste](#)
- Renaming and deleting files, see [Rename](#) and [Delete](#)
- Creating new directories on the following drives:
 - hard disk
 - memory stick
 - network drives

See [Create New Directory](#)

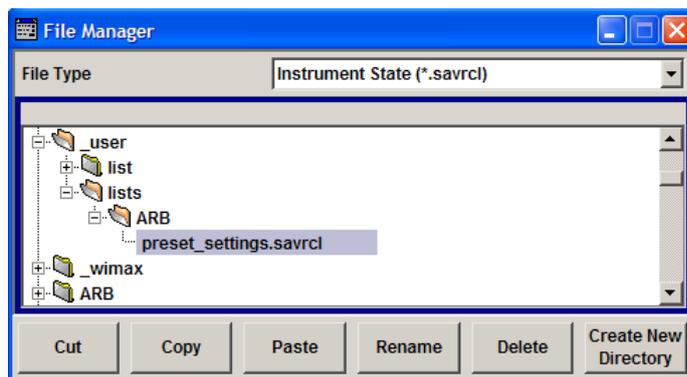

For more information, see [Chapter 4.7.2, "File Manager"](#), on page 117.

File Type

Selects the file type to be listed. If you select a file type with a specific file extension, only files with this extension are listed in the directory.

Remote command:

n.a.

Directory and File Name

Selects the directory in which the file to be deleted or copied is located. The dialog lists all files in this directory. Selected files are highlighted. The path is indicated above the directory window.

Unlike the "Save/Recall" and "File Select" dialogs, the "File Manager" displays the full file names including extensions.

Remote command:

[:MMEMory:CDIRectory](#) on page 549

Cut

Cuts the selected file. It can be pasted into a different directory using the "Paste" button.

Remote command:

[:MMEMory:DELeTe](#) on page 551

Copy

Copies the selected file. It can be pasted into a different or the same directory using the "Paste" button. When pasting the file into the same directory file name `Copy of <file name>` is given automatically. When pasting the file into a different directory, the original file name is kept.

Remote command:

[:MMEMory:COpy](#) on page 549

Paste

Pastes the file that has been copied or cut before.

Remote command:

n.a.

Rename

Renames the selected file or directory. The new name can be entered in the "New File-name" dialog.

Remote command:

[:MMEMory:MOVE](#) on page 552

Delete

Deletes the selected file. Before the file is deleted, a message appears prompting the user to confirm deletion of the file.

Remote command:

[:MMEMory:DELeTe](#) on page 551

Create New Directory

Creates a new directory. The name of the new directory can be entered in the "New Directory" dialog.

Note: When the subdirectory is entered, it is possible to enter an absolute path name (e.g. `D:\user\MEAS`) or the path relative to the current directory (e.g. `../MEAS`).

The directory is created as a subdirectory in the selected level.

Remote command:

[:MMEMory:MDIRectory](#) on page 552

5.2.8.6 Accessing the File System of the Instrument and Transferring Files from and to the Instrument

To access files and the file system of the instrument or to use the general file management functions such as copying and moving data, use the standard "File Manager" dialog.

To transfer files from and to the instruments or to exchange files, use one of the following alternatives:

- Connect a memory stick to one of the USB interfaces.
The instrument recognizes automatically a connected memory stick.
- Connect the instrument to a LAN.
For information on how to set up a LAN connection, refer to [Chapter 2.6, "Setting Up a Network \(LAN\) Connection"](#), on page 43

An instrument connected to a LAN supports the standard file transfer methods from a remote client:

- File sharing according to the SAMBA/SMB (server message block) protocol
see ["To access the file system of the R&S SMJ via SMB \(Samba\)"](#)
on page 168

This section provides an introduction to this topic. For comprehensive information, refer to the Application Note 1GP72 "Connectivity of Rohde&Schwarz Signal Generators".

To access the file system of the R&S SMJ via SMB (Samba)

The SMB (Samba) protocol is an alternative way to access the file system of the instrument from a remote PC, if both the instrument and the PC are connected to a LAN.

1. Connect the instrument and the remote PC to a LAN.
2. Share the top instrument's folder you will access from the connected PC:
 - a) Connect a mouse to the instrument.
 - b) On the instruments, select the Windows Icon, open the context menu and select "Open Windows Explorer".
 - c) Select the folder to be shared, open the context menu and select "Share with > Advanced Sharing > Share this Folder".
 - d) Write down the shared folder name, e.g. *Data*.
3. Find out the "IP Address" of the instrument:
 - a) Select "Setup > Environment > Network Settings".
 - b) Write down the "IP Address" of the instrument, e.g. *10.113.10.105*.
4. On the remote PC, start the Windows Explorer and open the "Map Network Drive" dialog.
 - a) Select a valid "Drive", e.g. *W*.
 - b) In the "Folder" field, enter:

```
//<"IP Address" of the Instrument>/share or  
//<"Hostname" of the Instrument>/share, e.g. //10.113.10.105/share
```
 - c) Select "Finish".

A log on dialog opens and requests an user name and a password.

5. Enter the user name and the password of your instrument.
The default user name and password is *instrument*.

Tip: Default password. The SAMBA/SMB file access use the user *instrument* with default password *instrument*.

It is highly recommended that you change the user password in the "Security" dialog before connecting the instrument to the network!

See [Chapter 5.2.3.16, "Security"](#), on page 149.

The *Data* directory of the instrument is mapped to and displayed as a network drive of the remote PC.

You can access the files in this directory, perform standard function like creating directory, storing files, etc.

5.3 Graphical Display - Graphics

The R&S SMJ can be used to graphically display the generated baseband signal. A selection of different signal displays assists the user in assessing and checking the increasingly complex modulation signals.



The Graphics function block is available for instruments with the option:

- R&S SMJ-B13 (Baseband Main Module) and one of the options R&S SMJ-B9/B10/B11 (UniCod + ARB)
- R&S SMJ-B62 (Noise Generator)

It is the baseband signal actually generated that is recorded and displayed, and not a signal calculated on the basis of the set parameters.


This graphical display allows the user to quickly view and check the current signal characteristics and also gives an overview of the changes in the signal over time. The signal quality can be permanently monitored. The results of parameter changes on the signal, such as a change in modulation mode, or the effects of certain configurations, e.g. the activation of several base stations in the case of (W)CDMA signals, can be analyzed directly in the display. Freezing the signal and then zooming permit a detailed evaluation of any signal segment. The definition and display of one or more reference curves makes it possible to compare various signals (i.e. by comparing the CCDF (Complementary Cumulative Distribution Function) with different channelization codes, or the spectra if different filter parameters are selected).

The displayed signal segment can be influenced by selecting the trigger that defines the time for recording to start. With automatic triggering, the signal is tapped at the point in the signal path that is best for the respective display. The displayed signal segment is selected internally depending on the signal such that the signal characteristics of interest (e.g. the useful signal) are displayed. This selection is appropriate for a representative display of the complete signal.

In addition, a user-definable trigger is available with which the displayed signal segment can be limited.

The time resolution can be set either automatically or manually, whereby for manual setting the bandwidth for which the trace is to be displayed is selected. The transient recorders used for signal recording have a variable recording depth which is specified under the respective display.

In addition to the large graphics window, the display can also be shown in a small window ("smart graphics"). This window is fitted into the block diagram as a block, and can be used for basic checking purposes (e.g. whether the signal is still being generated).

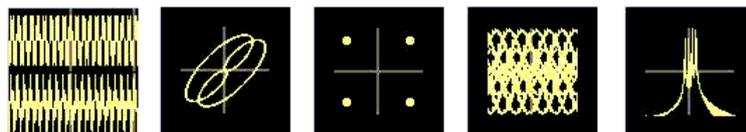


5.3.1 Graphics Settings Menu

The "Graphics Settings" menu for selecting the graphical display of the output signal is opened either in the "Graphics" function block or in the menu with the same name which is opened using the MENU key.

The signal display can be selected and activated in the menu.

With two-path instruments, the settings for the two paths can be entered separately. The signals can be displayed simultaneously in two separate windows.

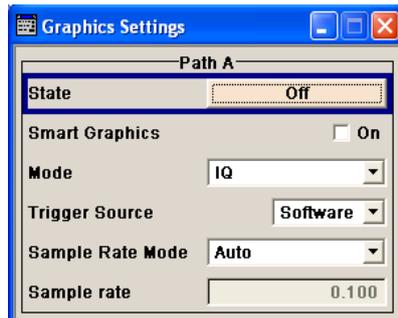

State

Activates the selected graphical display.

After activation, the diagram selected with "Mode" is displayed in the block diagram.

At the bottom of each graphics window there are several buttons for freezing and zooming the display and for activating a reference curve.

For more information, see [Chapter 5.3.2, "Bar of Graphics Window"](#), on page 172.


Remote command:

[\[:SOURce<hw>\]:BB:GRAPhics:STATe](#) on page 668

Smart Graphics

Activates the "smart graphics".

The graphic is displayed in a small window which is roughly the size of a block. These windows are displayed permanently in the block diagram until they are deactivated, and allow basic checking of the signal. They do not contain any buttons.

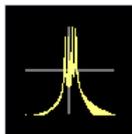

Remote command:

[\[:SOURce<hw>\]:BB:GRAPhics:SMARt:STATe](#) on page 667

Mode

Selects the graphical signal display. The display is not shown until it has been activated with "Status On".

The individual signal displays are described in the [Chapter 5.3.3, "Signal Displays"](#), on page 174.

Remote command:

`[:SOURce<hw>] :BB:GRAPhics:MODE` on page 666

Trigger Source

Defines the trigger for the starting time of the graphic recording.

"Software"	Recording of signals is started automatically in specified intervals. This asynchronous method is appropriate when a representative display of the complete signal is desired, as recording starts in a random time reference to the signal.
"Marker 1"	The starting point for recording signals is determined by marker 1 in the menu of the active standard. This synchronous method is appropriate when specific signal segments are to be shown in greater detail. With periodic signals, a static image is obtained by selecting a period length of marker 1 that is equal to the signal period. The displayed signal segment can be shifted as needed by entering a marker delay in the Trigger/Marker menu of the active standard.

Remote command:

`[:SOURce<hw>] :BB:GRAPhics:TRIGger:SOURce` on page 668

Scrambling Code

(only if Code Domain (3GPP FDD DL) is selected)

Sets the scrambling code if the "Code Domain" display is selected. Since it is possible to select a different scrambling code in the menu for each of the 4 base stations and it is also possible to display an external signal, the scrambling code for which the display is to be generated must be explicitly specified here.

Remote command:

n.a.

Sample Rate Mode

Sets how the time resolution of the signal is determined. Maximum resolution corresponds to a display covering the entire signal bandwidth. The higher the resolution is, the shorter the length of the displayed signal segment will be for the specified recording depth.

"Auto"	The resolution is set to an optimum value on the basis of the signal and display type.
"Full Bandwidth"	The resolution is set such that the display covers the entire signal bandwidth.
"User"	Under "Graphics Sample Rate", the user can determine the resolution by setting the signal bandwidth for which the display is to be generated.

Remote command:

`[:SOURce<hw>] :BB:GRAPhics:SRATe:MODE` on page 667

Graphics Sample Rate

With "Auto" and "Full Bandwidth":

Displays the signal bandwidth for which the display is to be generated.

With "User":

Selects the signal bandwidth for which the display is to be generated. The setting range moves between the minimum and maximum bandwidth which is possible for the selected display. The selection is made graphically by moving the pointer.

Remote command:

`[:SOURce<hw>] :BB:GRAPhics:SRATe:USER` on page 668

5.3.2 Bar of Graphics Window

At the bottom of each graphics window there are buttons for freezing and zooming the display and for defining and activating a reference curve.



Run

Freezes the current display.

Clicking the button again reactivates the normal, permanently updated display.


Freezing the display allows it to be analyzed more easily. Zooming the display at the same time permits detailed evaluation of any signal segment.

Remote command:

n.a.

Zoom In (only possible with mouse)

The mouse can be used to freely select any section to be zoomed. This section is selected by pressing the left-hand mouse key and dragging a rectangular marquee. In this way a display can be zoomed in several steps. The zoom is cancelled by clicking the "Zoom Out" button.

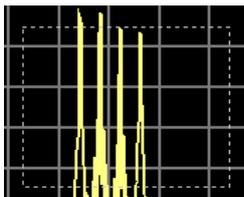

Remote command:

n.a.

Zoom out

Cancels the zoom.

Remote command:

n.a.

Time

(I/Q mode only)


Switches to seconds for time representation on the X axis of the I/Q diagram.

Remote command:
n.a.

Show ref

Displays the reference curve(s). All defined reference curves are displayed simultaneously (see the description of the "Copy to ref" button).

The reference curves are displayed together with the current signal. They allow visual comparison of two or more signals with different settings, e.g. with different filters.

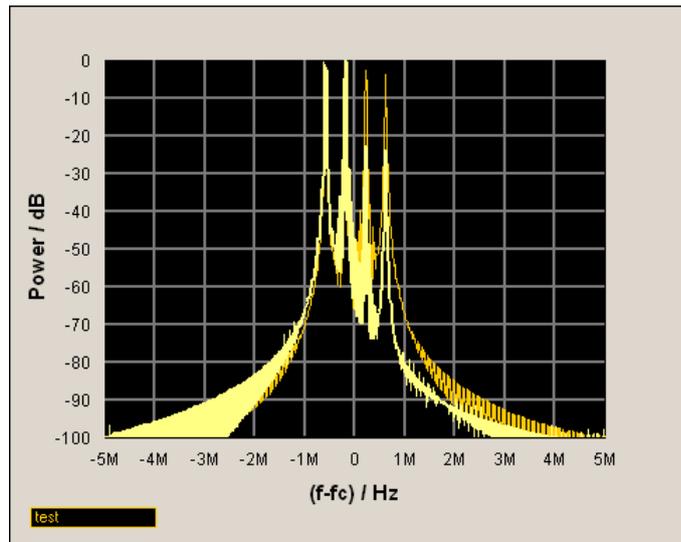

Clicking the button again hides the reference curves.

The reference curves must be defined beforehand using the "Copy to Ref" button.

Remote command:
n.a.


Copy to ref

Defines the current curve as the reference curve.

A window opens in which the curve can be given a comment and a color.

First of all the desired color is highlighted in the top window. If this color has already been assigned to a reference curve, this curve is overwritten. The command is entered in the bottom "Comment" section. This comment then appears next to the highlighted color.

Up to 5 reference curves can be defined and displayed simultaneously in different colors together with the current signal.

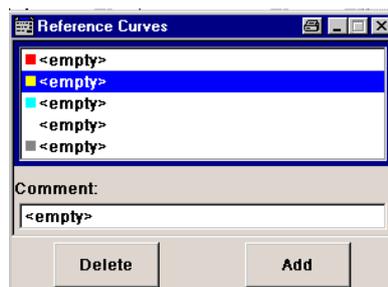

Each reference curve is available until it is deleted.

"Display area"	The comments entered for the defined reference curve are shown in the display area next the assigned color. A maximum of five colors (and reference curves) are available. If no reference curve is assigned to a particular color, the comment <empty> is displayed.
"Comment"	Enters a comment for the current curve which is to be defined as the reference curve. This comment then appears next to the highlighted color in the display area.
"Delete"	Deletes the curve highlighted in the display area. Curves which are no longer required can be deleted to reduce the number of reference curves displayed simultaneously.
"Assign"	Defines the current curve as the reference curve. The new reference curve is shown together with the entered comment next to the selected color in the display area.

Remote command:

n.a.

5.3.3 Signal Displays

All signal displays which are used for analyzing a baseband signal can be selected. A number of signal displays are only available if the corresponding signal is generated, e.g. Code Domain only available for (W)CDMA signals.


5.3.3.1 I/Q Diagram

The I/Q diagram displays the inphase component ($i[t]$) and quadrature component ($q[t]$) of the I/Q signal over time.

The diagram is displayed in a window with two separate coordinate systems. The coordinate systems have identical X and Y axes. The time (in number of symbols, chips or samples depending on the signal) is plotted on the X axes, and the amplitude scaled to the peak envelope power (PEP) is plotted on the Y axes (minimum scaled amplitude = -1; maximum scaled amplitude = +1). The recording depth is 1 kSamples.

This signal is picked off at the output of the baseband main module ("Impairment" function block), i.e. contained in the displayed signal is:

- impairment of the signal as defined by the user and the addition of noise.

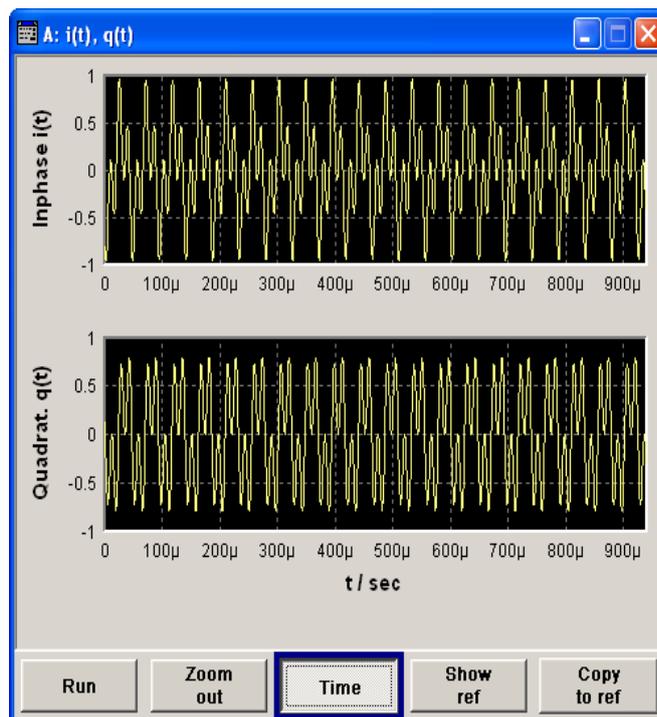


5.3.3.2 Vector Diagram

The Q component is displayed over the I component in the vector diagram. Each point is determined by a vector. The amplitudes of the signal components scaled to the peak envelope power (PEP) are plotted on the X and Y axis (minimum scaled amplitude = -1; maximum scaled amplitude = +1).

This display shows the curves between the various states of modulation mapping. The recording depth is 1 kSamples.

This signal is picked off at the output of the baseband main module ("Impairment" function block), i.e. contained in the displayed signal is:

- impairment of the signal as defined by the user and the addition of noise.

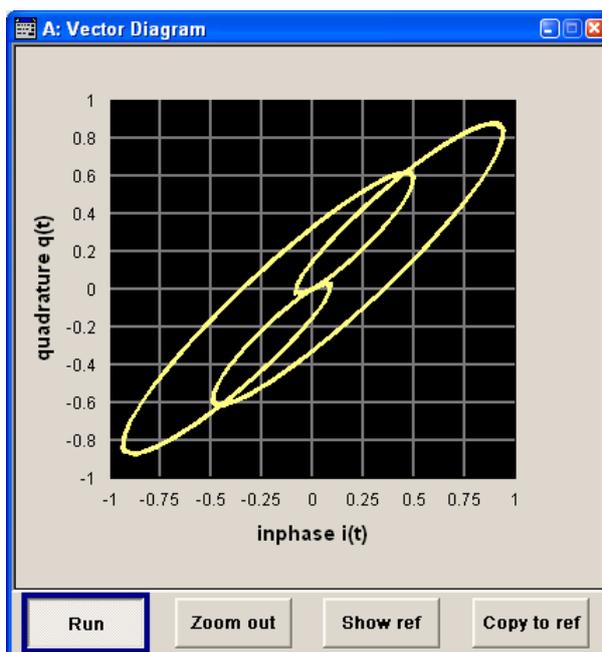

5.3.3.3 Constellation Diagram


In the constellation diagram, the Q component is also displayed over the I component. However, only the values at the constellation points (signal value at the ideal scanning instant of the symbol) are displayed, i.e. for each symbol only 1 value in the form of a circle is shown for the I and Q component.

The amplitudes of the signal components scaled to the peak envelope power (PEP) are plotted on the X and Y axis (minimum scaled amplitude = -1; maximum scaled amplitude = +1). The recording depth is 2kSamples.

This signal is picked off at the output of the baseband main module ("Impairment" function block), i.e. contained in the displayed signal is:

- impairment of the signal as defined by the user and the addition of noise.

This display shows the various states of modulation mapping which occur in the signal. The example shows the constellation diagram of a QPSK modulation signal.

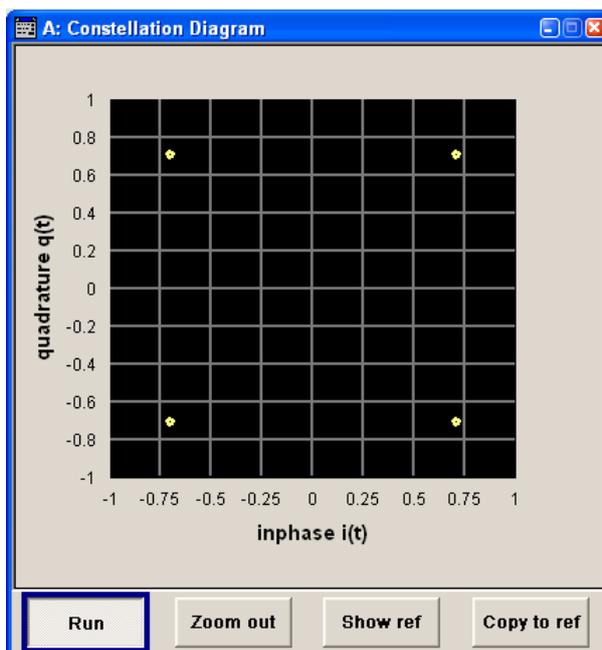


5.3.3.4 Eye Diagram

The eye diagram displays synchronized and superimposed sections of either the inphase or quadrature components of the signal.

The display width (eye length) is set at 2 symbols; several hundred curve segments are superimposed. The time (in the range ± 1 symbol) is plotted on the X axis, and the amplitude scaled to the peak envelope power (PEP) is plotted on the Y axis (minimum scaled amplitude = -1; maximum scaled amplitude = +1). The beginning of recording is synchronous to the symbol and chip clock pulse. The recording depth is 2kSamples.

This signal is picked off at the output of the baseband main module ("Impairment" function block), i.e. contained in the displayed signal is:

- impairment of the signal as defined by the user and the addition of noise.

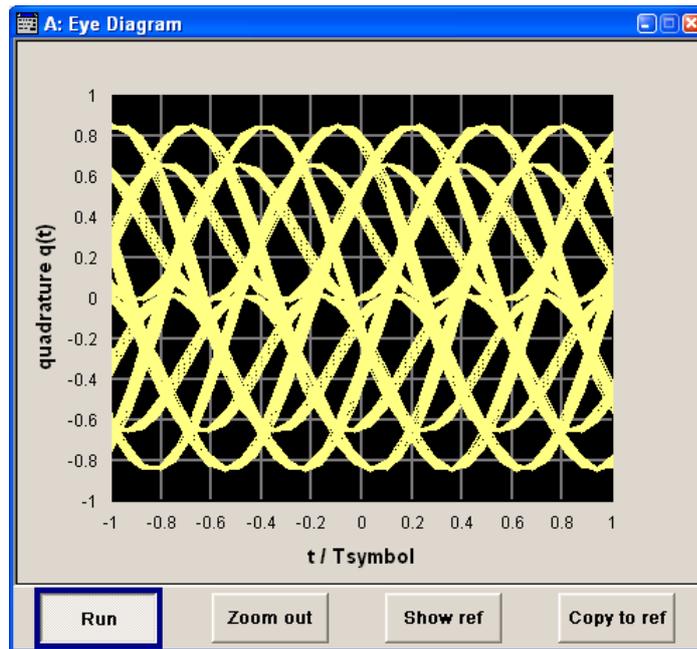


5.3.3.5 CCDF Display

The **Complementary Cumulative Distribution Function** shows the probability with which the output signal will exceed the average power.

The level over the average power is plotted from 0 to 20 dB on the X axis; the average power (RMS) corresponds to the origin. The probability of exceeding the average power is plotted between 0.0001% and 100% on the Y axis. The recording depth is 8kSamples.

This signal is picked off at the output of the baseband main module ("Impairment" function block), i.e. contained in the displayed signal is:

- impairment of the signal as defined by the user and the addition of noise.

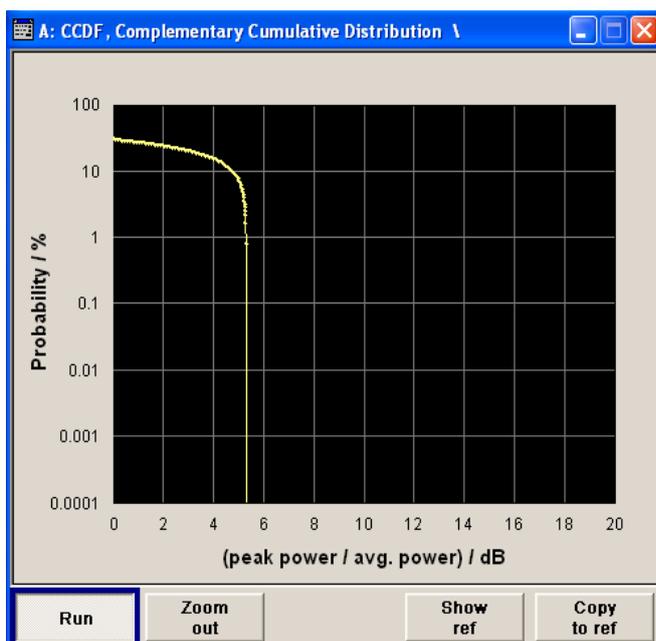

5.3.3.6 Power Spectrum


With the spectrum display, the signal spectrum is calculated from the I/Q signal by means of Fast Fourier Transform (FFT).

The power density over frequency is displayed. The power density is plotted on the Y axis, and the frequency is plotted symmetrically on the X axis (-sampling rate/2 to +sampling rate/2). FFT Points indicates the number of I/Q value pairs which are used for calculating a (part-)FFT. AVG indicates the number of subspectra used for averaging. The recording depth is 8kSamples.

This signal is picked off at the output of the baseband main module ("Impairment" function block), i.e. contained in the displayed signal is:

- impairment of the signal as defined by the user and the addition of noise.

The spectrum display of the output signal is particularly suitable for checking multi carrier signals.

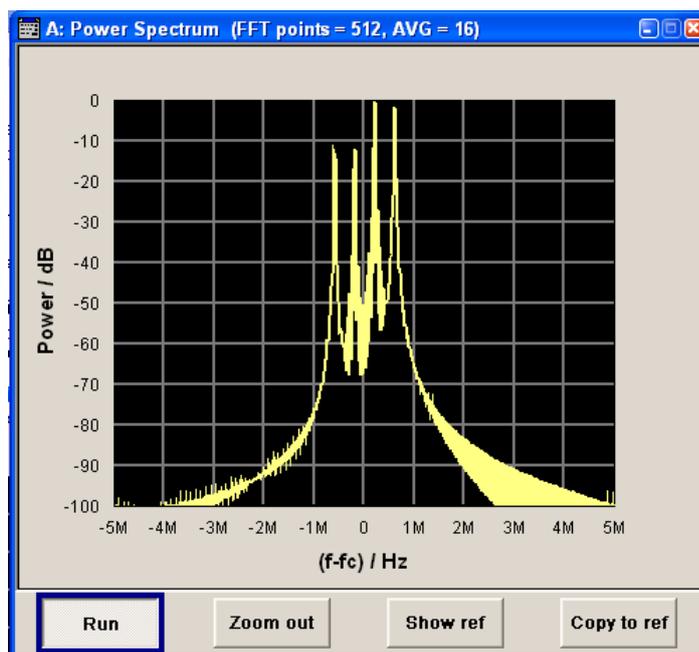

5.4 Bit and Block Error Rate Measurements - BERT Block

The R&S SMJ contains an integrated bit error rate tester which makes it possible to evaluate a signal demodulated and decoded by a DUT by measuring the bit error rate. A known PRBS-modulated data sequence (PRBS = **p**seudo **r**andom **b**inary **s**equence) is sent to the DUT. The PRBS data sequence is decoded by the DUT and sent to the R&S SMJ in the form of clock and data signals. The bit error rate tester of the R&S SMJ synchronizes to the known PRBS sequence and counts the bit errors. The quotient obtained by dividing the number of error bits by the total number of bits is the BER.

In addition, a block error rate measurement can be used to verify CRC checksums. The ratio of errored blocks to total blocks yields the block error rate.

The settings are shown in the block diagram in the "BERT" function block and in the menu of the same name that is accessed via the MENU button.

The equipment layout for the basic unit (R&S SMJ with B10x frequency option) includes the option R&S SMJ-K80 (Bit Error Rate Tester).



The "BERT" interface is located on the rear panel. Besides the data and clock input, it provides further inputs for masking data containing the PRBS sequence. The interface description can be found in [Chapter A.4, "BERT Connector"](#), on page 826.

5.4.1 Test setup

The following figure shows the test setup for the bit/block error rate measurement. The data used to drive the DUT can be generated by the R&S SMJ or an user-defined external source. The R&S SMJ can generate any externally computed modulation signals that were created using e.g. R&S WinIQSIM2 software (see [Chapter 5.8.3.2, "ARB User Interface"](#), on page 372).

A known PRBS sequence must be used for the bit error rate measurement.

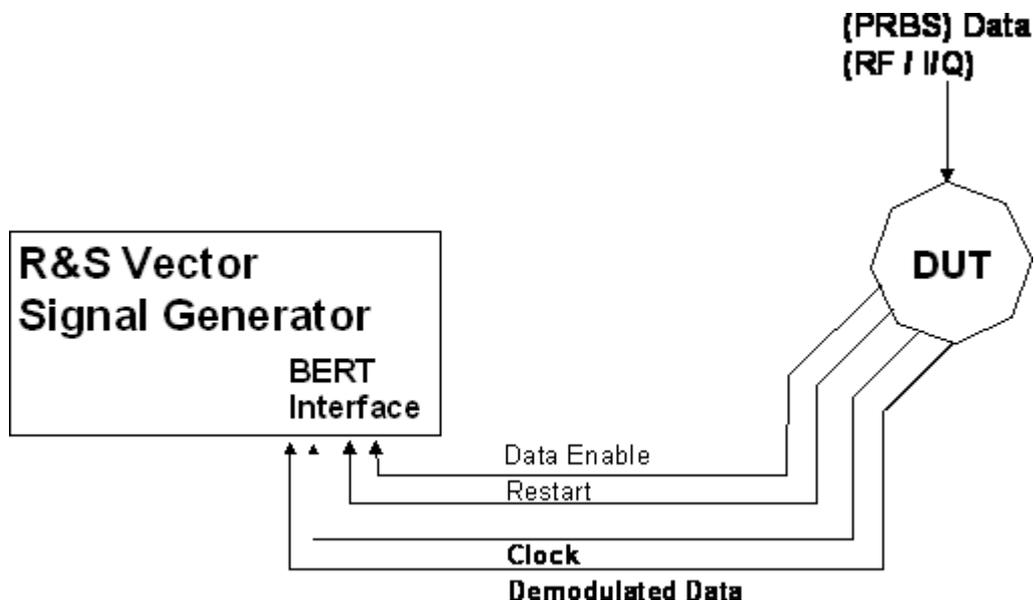


Figure 5-1: Test setup for bit or block error rate measurement.

The DUT is driven using a known data sequence. It demodulates the data and sends it together with a clock signal to the R&S SMJ. The Data Enable signal marks the user

data of the signal. The restart signal for restarting the PRBS calculation is only important for the bit error rate measurement.

5.4.2 PRBS data

To be able to detect faulty bits by a BER measurement, the data generation polynomial must be known. PRBS sequences are therefore used as the method for computing the data (see [Chapter 5.8.1.1, "Internal PRBS Data and Data Patterns"](#), on page 314). These quasi-random bit sequences are repeated periodically, depending on the polynomial selected. A randomly selected initial status yields exactly one subsequent status. The initial status and therefore the subsequent status occur only once in the whole sequence.

Hence an advantage of the PRBS data is that the bit error detector must know only the polynomial but not the entire sequence. At the start of a measurement, the feedback shift register is filled once with the applied data sequence (which corresponds to the synchronization time) and is subsequently switched from "fill" to "feedback". This creates a defined initial status and generates exactly the same data that the applied data stream should have. Faulty bits can thus be identified and counted by comparing the received data with the results obtained from the shift register.

Creating a defined initial status makes it possible to start the analysis anywhere in the bit stream, i.e. the bit-stream source and the analyzer need not be synchronized. Delays of the DUT and transmission over long air paths, where the transmitter and the receiver are located at separate sites, therefore do not present a problem.

5.4.3 CRC polynomial

In the block error rate measurement, the checksum (CRC) that contains the data signal fed to the DUT is compared with the checksum that the block error rate tester calculates from the feedback data. If the two checksums differ, a block error is counted. The quotient obtained by dividing the number of faulty blocks by the total number of blocks is the block error rate.

At the beginning of the data, the shift register is initialized with 0. All user data bits are then shifted through the shift register. The CRC component is then read into a second register and compared bit by bit with the result of the calculation.

CCITT CRC 16 : $G(x) = x^{16} + x^{12} + x^5 + x^1$ is the CRC polynomial supported.

The user data is marked by a signal that comes from the DUT and is fed to the "Data Enable" input of the BERT interface.

5.4.4 Clock signal

Usually the clock signal is provided by the DUT. If not, the bit clock can be extracted from the CLOCK output connector (only with "Custom Dig Mod" signals in realtime). If signals complying with other digital standards are generated or if ARB waveforms are used, a marker signal can be used as a clock. As the DUT causes a delay, the ratio of

clock-to-data travel times must always be taken into account and checked with an oscilloscope if necessary. The R&S SMJ indicates the status of the clock and data lines and of the synchronization in the menus.

5.4.5 Ending the measurement

The measurement results usually lie in the range of 10^{-2} to 10^{-9} for the bit error rate, and in the range of 10^{-2} to 10^{-4} for the block error rate. This means that a very large number of bits or blocks may have to be tested before a faulty bit or block occurs. Because of the large number of bits/blocks involved, the measurement time is usually very long. Since 32-bit-wide counters are used for the total number of bits/blocks and the number of error bits, the maximum measurement time is 4.29×10^9 bits.

To keep the measurement times short for both small and large bit/block error rates, the R&S SMJ provides a number of ways to end the measurement. In addition to manually interrupting the count, two termination criteria can be selected:

1. reaching a user-defined number of checked data bits/blocks;
2. a maximum number of detected errors.

The measurement stops as soon as one of the two criteria has been met. The display shows which of the two criteria caused the measurement to stop.



The BER/BLER measurement measures statistical bit/block errors, i.e. errors which do not occur at regular intervals but at random. Although a single measurement determines the exact number of errors in the measured interval, a statistically reliable BER/BLER can only be obtained when a sufficient number of errors occur in the observed interval. This is the only way to ensure that the single BER/BLER measurement result approaches the true error rate with high probability.

Bit error rates of approximately 50 % indicate a faulty measurement.

5.4.6 Interrupt-free measurement

In the case of continuously generated signals that contain whole-number multiples of the PRBS sequence, the measurement occurs without interruption. Only the data and clock lines of the BERT interface are used for the measurement. The length of the random sequence is 2 to the power of the degree of the polynomial minus 1. For example, PRBS9 length of 511 (2^9 equals 512 minus 1).

5.4.7 Restart function

The "Restart" function makes it possible to perform BER measurements with short signals or with signals that are not continuously generated (and therefore do not contain any whole-number multiples of PRBS sequences). An external signal at the BERT

input halts the measurement and restarts it when the data sequence begins, and the BER results of the relevant (sub)sequences are integrated.

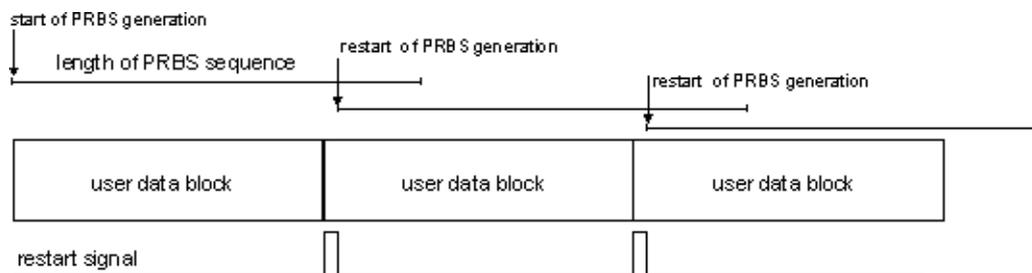


Figure 5-2: The length of the signal is too short for a complete PRBS sequence; PRBS generation is restarted by the Restart signal when the signal begins anew.

Frames generated by the R&S SMJ or the R&S WinIQSIM2 software contain continuous PRBS data, i.e. the PRBS sequence is continuously written to the user data fields. Consequently, if the R&S SMJ is used as a data source, a restart is only necessary if (e.g. when using a waveform) the total length of the signal does not equal a whole-number multiple of a PRBS sequence.

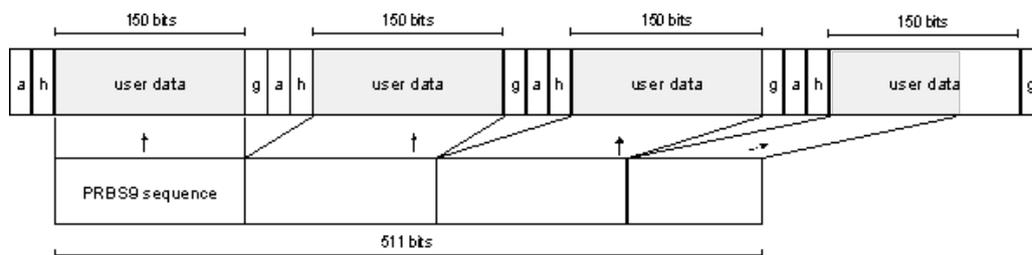


Figure 5-3: TDMA signal generated by the R&S SMJ with user data that contains the PRBS data sequence. The PRBS sequence is continuously written to the user data fields.

5.4.8 Data Enable

In the case of the bit error rate measurement, the data signals usually contain not only PRBS data but also other data (e.g. sync and preambles, see figure) that would result in bit errors. The BER measurement for this data can then be interrupted using the "Data Enable" signal. The "Data Enable" signal is fed in at the BERT input.

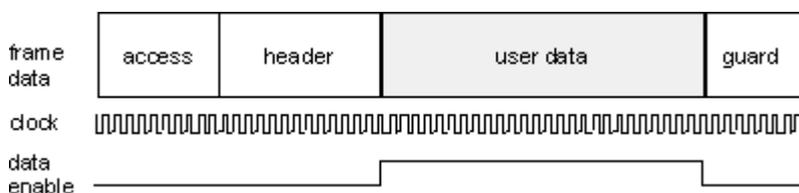


Figure 5-4: TDMA signal with user data that contains the PRBS data sequence and various check fields which should be ignored for the bit error rate measurement. Below that are the associated clock and Data Enable signals.

In the case of the block error rate measurement, the "Data Enable" signal masks the user data (see following figure).

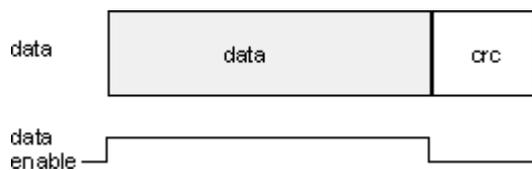


Figure 5-5: Data Enable signal with block error rate measurement.

5.4.9 Pattern Ignore

Bit sequences of 32 bits or more with only "1" or "0", which some mobile radio standards provide instead of frame data when faulty frames are detected, can also be excluded from the measurement using the "Pattern Ignore" function (see figure).


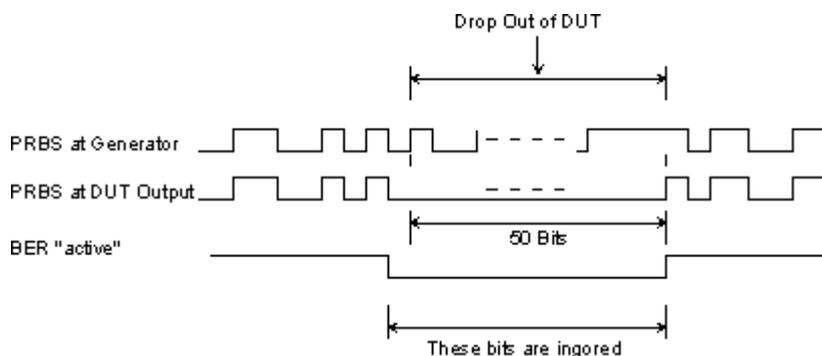



Figure 5-6: Example of functionality of Pattern Ignore: 50 bits were set to "0" by the DUT. These 50 bits plus the preceding "0" are ignored in the bit error rate measurement.

 5.4.10 Bit Error Rate Menu



The "Bit Error Rate" menu for configuring the bit error rate measurement is called either in the "BERT" function block or via the MENU button under "BERT"

The top section of the "Bit Error Rate" menu is used to switch on the bit error rate measurement and display the results and current status of the measurement.

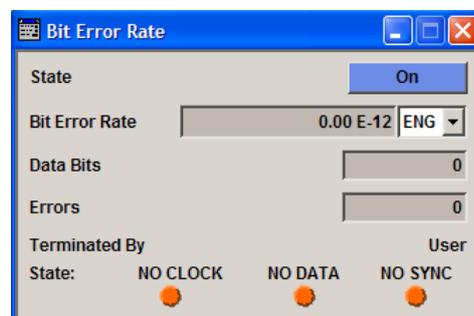

The "Configuration" section is used to select the type of measurement the data source and the termination criteria.

If the data is not cyclically continued, the measurement can be selectively interrupted and restarted. Certain data sections and frames that have been marked as faulty can be excluded from the measurement.

Configuration

Mode: Single Execute Single

Max. Data Bits: 10 000 000

Max. Errors: 100

PRBS: PRBS 9

Data Polarity: Norm

Clock Slope: Pos

External Restart: On

Data Enable: Not Used

Pattern Ignore: Off

Threshold (BER): 1.00 V

Impedance (BER): 1 kΩ / GND

5.4.10.1 General Settings

State

Switches the bit error rate measurement on/off. Depending on the selection in the "Mode" box, either a continuous measurement ("Auto") or a single measurement ("Single") is carried out. A single measurement must be started by clicking the "Execute Single" button.

Remote command:

`:BERT:STATE` on page 519

Bit Error Rate

Displays the measured bit error rate.

The bit error rate is the ratio of occurred errors to transmitted data bits.

The display unit can be selected in the box to the right of the value.

"ENG"	The bit error rate is output in exponential notation with the exponent – 3 or –6.
"SCI"	The bit error rate is output in scientific notation, i.e. standardized to one place to the left of the decimal.
"%"	The bit error rate is output in percent.
"ppm"	The bit error rate is output in parts per million.

Remote command:

`:BLER:RESult?` on page 512

`:BERT:UNIT` on page 520

Data Bits

Displays the current number of data bits checked.

Remote command:

`:BERT:RESult?` on page 512

Errors

Displays the current number of occurred errors.

Remote command:

`:BERT:RESult?` on page 512

Terminated By

Displays the termination criterion for the measurement.

These criteria can be entered to keep the duration of the measurement short for low as well as high bit error rates.

The last measurement result is displayed after the measurement has been terminated.

"User"	The measurement was manually terminated by the user switching the state to off.
"Number of Data Bits"	The measurement was terminated because the specified number of data bits was reached
"Number of Errors"	The measurement was terminated because the specified number of errors was reached.

Remote command:

`:BERT:STATe` on page 519

`:BERT:STOP` on page 519

State

Displays the status of the measurement.

This enables the user to check whether the measurement functions. The status of the data and clock lines and of synchronization is checked and displayed.

If a faulty status is displayed, the signals can be checked at the BERT interface using an oscilloscope.

"Clock"	The applied clock signal was detected.
"No Clock"	<p>The applied clock signal was not detected. Possible causes are:</p> <ul style="list-style-type: none"> • Clock recovery is not available (e.g. with tests of RF components). If the signal is generated using the R&S SMJ, the bit clock can be extracted from the CLOCK output connector (only with "Custom Dig Mod" signals in realtime). If signals complying with other digital standards are generated or if ARB waveforms are used, a marker signal can be used as a clock. As the DUT causes a delay, the ratio of clock-to-data travel times must always be taken into account and checked with an oscilloscope if necessary. • The wrong impedance for the applied clock rate was selected (see "Impedance" parameter). • The wrong threshold for the applied clock signal was selected (see "Threshold").

"Data"	The applied data signal was detected.
"No Data"	<p>The applied data signal was not detected. Only clocked-in signals are detected; if the clock signal is missing, then data changes will also not be detected.</p> <p>If the data is not detected despite the detected clock signal, this may be caused by the following:</p> <ul style="list-style-type: none"> • The signal from the DUT is missing. • The wrong impedance for the applied clock rate was selected (see "Impedance" parameter). • The wrong threshold for the applied data signal was selected (see Threshold parameter).
"Sync"	The measurement is synchronized.
"No Sync"	<p>The measurement is not synchronized.</p> <p>Generally, a measurement cannot be synchronized until a clock and a data signal have been detected. If synchronization still does not occur, this may be caused by the following:</p> <ul style="list-style-type: none"> • The selected PRBS is not correct. For the bit error rate measurement, the PRBS sequence on which the data is based must be set on the bit error rate tester. If the PRBS is not correct, the BER measurement cannot synchronize to the data (due to the incorrect polynomial). • A wrong clock slope is used, which violates setup or hold times (see "Clock Slope" parameter). • The travel times of clock and data are unfavorable (e.g. clock slope at data change). Check the relationship of clock to data using an oscilloscope and optimize the travel times (e.g. clock slope when the data signal applied is stable). • Reflections on the clock line occur, clocking the data signal into the BER measurement twice, e.g. on lines without termination. The R&S SMJ input is not terminated. • Incorrect polarity of data signal (or "Data Enable" signal). In this case the PRBS cannot synchronize. Note that an inversion of the output signal specified for some cases by the PRBS standard is performed automatically upon PRBS selection. Manual inversion of the data signal is therefore not required. <p>No Sync status and an error rate of approx. 50%:</p> <ul style="list-style-type: none"> • A bit error occurs during synchronization (e.g. nine data bits with PRBS9). The BER measurement is set up incorrectly. This fault is internally detected and automatically corrected. • If data that is not cyclically continued (i.e. when a break in the sequence occurs at the memory wrap-around), the measurement will not be started at the right time. The signal on the "Restart" line enables the measurement to be started optimally at the beginning of the sequence.

Remote command:

:BERT:RESult? on page 512

5.4.10.2 Configuration

The "Configuration" section is used to select the type of measurement, the data source and the termination criteria. If the data is not cyclically continued, the measurement can be selectively interrupted and restarted. Certain data areas and frames that have been marked as faulty can be excluded from the measurement.

Mode

Selects the type of measurement: single or continuous measurement.

- | | |
|----------|---|
| "Auto" | <p>Continuous measurement of bit error rate.</p> <p>If either or both of the termination criteria are met, the measurement in progress is terminated and immediately a new one is started automatically. Depending on the settings made, a measurement may take considerable time. During the first measurement, intermediate results are displayed. For the measurements that follow, only the final results are shown. The parameters "Data Bits" and "Errors" are continuously updated and indicate the relative values for the measurement in progress.</p> <p>To start a continuous measurement, use the command <code>:BERT:START</code> on page 518. To stop a measurement, use the command <code>:BERT:STOP</code> on page 519.</p> |
| "Single" | <p>Single measurement of bit error rate. The measurement is started by clicking the "Execute Single" button.</p> <p>If a measurement is in progress, the current values for "Bit Error Rate", "Errors" and "Data Bits" are cyclically displayed. The measurement is terminated when either or both of the termination criteria have been reached.</p> <p>To start a new measurement, the "Execute Single" button must be clicked again.</p> |

Remote command:

`:BERT:SEquence` on page 514

Max Data Bits

Enter the number of transmitted data bits to be checked before the measurement is terminated.

This criterion terminates the BER measurement after the specified number of data bits, even if very few errors or none at all have been detected. With a low number of bit errors, the measurement result may be statistically unreliable.

If the measurement is terminated because the number of data bits entered here was checked, "Number of Data Bits" appears to the right of "Terminated By".

Data excluded from the measurement by "Data Enable" or "Pattern Ignore" is not counted.

Remote command:

`:BERT:SETup:MCOUNT` on page 517

Max Errors

Enter the number of bit errors to occur before the measurement is terminated.

This criterion terminates the measurement relatively quickly if the error rate is high. The measurement result is statistically reliable, since many errors were already counted.

If the measurement is terminated because the number of bit errors entered here was reached, Number of Errors appears to the right of Terminated By.

Remote command:

`:BERT:SETup:MERRor` on page 517

PRBS

Selects the PRBS sequence. The data generated by the PRBS generator is used as a reference for the measurement.

Note: Standard-compliant data inversion for PRBS15 and PRBS23 is performed automatically when the PRBS is selected. "Data Polarity" remains unaffected.

Remote command:

`:BERT:SETup:TYPE` on page 518

Data Polarity

Sets the polarity of the feedback data bits.

Note: Standard-compliant data inversion for PRBS15 and PRBS23 is performed automatically when the PRBS is selected. "Data Polarity" remains unaffected.

"Norm" High level stands for logic 1, low level for logic 0.

"Inv" Low level stands for logic 1, high level for logic 0.

Remote command:

`:BERT:SETup:DATA[:POLarity]` on page 515

Clock Slope

Sets the polarity of the active slope of the feedback clock.

"Pos" The positive slope of the clock signal is active.

"Neg" The negative slope of the clock signal is active.

Remote command:

`:BERT:SETup:CLOCK[:POLarity]` on page 514

Impedance

Sets the input impedance of the BERT inputs "Clock", "Data", "Data Enable" and "Restart".

For high clock rates, 50 Ohms should be selected.

Remote command:

`[:SOURce]:INPut:BERT:IMPedance` on page 520

Threshold

Sets high/low threshold in volts for the BERT inputs "Clock", "Data", "Data Enable" and "Restart".


The variable threshold makes it possible to align the BERT interface with the level of different input signals. In addition, reflections and other interference can be suppressed by selecting the appropriate threshold.

Remote command:

[\[:SOURce\]:INPut:BERT:THReshold](#) on page 520

External Restart

Activates/deactivates an external restart of the BER measurement.

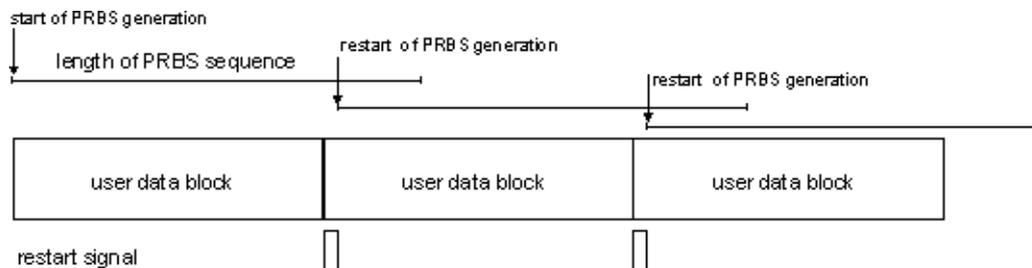

The length of the signal is too short for a complete PRBS sequence; PRBS generation is restarted by the "Restart" signal when the signal begins anew.

"Exeternal"

The reset signal for the BER measurement is fed via the "Restart" input of the BERT interface.

If the PRBS cannot be continued uninterruptedly, the BER measurement must be stopped at the end of the data sequence and subsequently restarted at the beginning of the new data sequence. The measurement is stopped and started via a 0-1-0 slope of the restart signal. A transition from logic 0 to 1 causes a partial result to be generated and the measurement to be stopped. A transition from 1 to 0 starts the measurement for the next subinterval. This measurement is synchronized anew.

If the R&S SMJ is used as a data source, a signal in which a single 1 was coded at the end of the data sequence can be used as a restart signal at the R&S SMJ marker output. This causes the BER measurement to stop briefly at the end of the data sequence and start again. Partial results (number of data and error bits) are added up until the predefined total number of data or error bits is reached or exceeded. The measurement is reset by "Pattern Ignore" or "Data Enable", regardless of its status.

"Inernal"

The reset signal for the BER measurement is generated internally. This setting is suitable for PRBS sequences that run continuously and thus ensure uninterrupted repetition.

Remote command:

[:BERT:SETup:REStart\[:STATe\]](#) on page 517


Data Enable

Activates/deactivates the use of the "Data Enable" signal and sets the polarity of this signal if it is used.

The "Data Enable" signal marks the data that is actually to be evaluated for the BER measurement. Any data in addition to the PRBS sequence is masked and thus not evaluated (e.g. sync, preambles, other channels, etc that are present in the data bits supplied by the DUT).

The signal is fed in at the "Data Enable" input of the BERT interface. It is generated by the DUT but can also be provided by the R&S SMJ in the form of a marker signal.

Note: If the data is not enabled, the BER measurement is stopped completely. The identification circuit for "Pattern Ignore" as well as the PRBS generator of the BER measurement wait as long as data is not enabled. If the data is enabled, the measurement is continued.

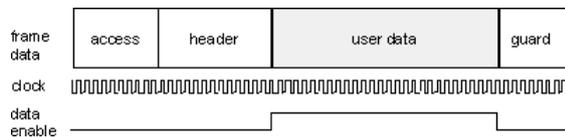

The figure shows a TDMA signal with user data that contains the PRBS data sequence and various check fields which should be ignored for the bit error rate measurement. Below that are the associated clock and "Data Enable" signals.

- "Not Used" Any signal at the "Data Enable" input is ignored; all data at the BERT data input is used for the measurement.
- "High" The "Data Enable" signal is used. The only data measured is the data at the BERT data input during a high level of the "Data Enable" signal. The measurement is interrupted during a low level of the "Data Enable" signal.
- "Low" The "Data Enable" signal is used. The only data measured is the data at the BERT data input during a low level of the "Data Enable" signal. The measurement is interrupted during a high level of the "Data Enable" signal.

Remote command:

[:BERT:SETup:DENable](#) on page 515

Pattern Ignore

Activates/deactivates ignoring of pure "0" or "1" bit sequences at least 32 bits long. Activating "Pattern Ignore" excludes faulty frames from the measurement.

In the case of some mobile radio standards, pure "0" or "1" bit sequences are generated when errors (e.g. an incorrect checksum) are detected within a frame. These sequences, instead of the frame data, are provided for the BER measurement and signal that the frame in question should not be used for the measurement.

The R&S SMJ ignores sequences of 32 bits or longer.

Note: While ignoring the bits, the PRBS generator for the BER measurement keeps running. Following the "0" or "1" sequence, the BER measurement is continued as if the ignored sequence had contained PRBS data.


If "Pattern Ignore" is switched on, synchronization time is 32 bits longer.

If "Pattern Ignore" and "External Restart" are active at the same time, the measurement terminates immediately when the restart signal is applied. None of the 32 bits within the "Pattern Ignore" detector is evaluated.

If "Data Enable" and "Pattern Ignore" are active at the same time, "Data Enable" is given priority, i.e. bits that are not enabled are not examined for "0" or "1" sequences.

Example:

50 bits were set to "0" by the DUT. These 50 bits plus the preceding "0" are ignored in the bit error rate measurement.

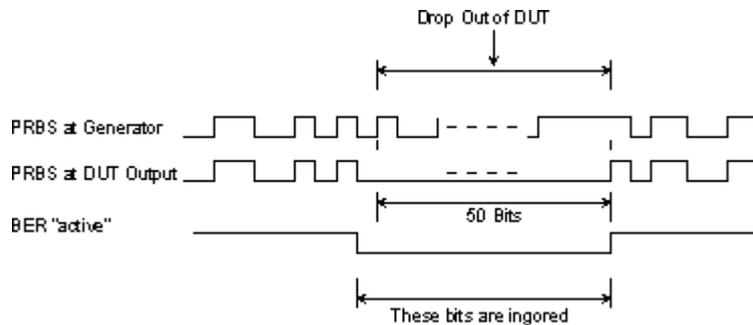


- "Off" Pattern Ignore is not active.
- "All 1" Bit sequences consisting of 32 or more consecutive "1" data are not used (i.e. ignored) for the BER measurement.
- "All 0" Bit sequences consisting of 32 or more consecutive "0" data are not used (i.e. ignored) for the BER measurement.

Remote command:


[:BERT:SETup:IGNore](#) on page 516 [:BERT:SETup:DENable](#) on page 515

 5.4.11 Block Error Rate Menu



The "Block Error Rate" menu for configuring the block error rate measurement is called either in the "BERT" function block or via the MENU button under "BERT."

The top section of the "Block Error Rate" menu is used to switch on the block error rate measurement and display the results and current status of the measurement.

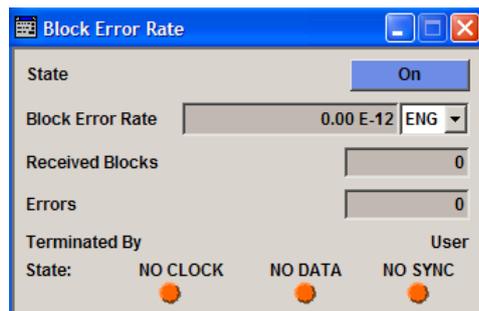

The "Configuration" section is used to select the type of measurement and the termination criteria and to set the polarity of the input signals.

Configuration	
Mode	Single
Max. Received Blocks	100 000
Max. Errors	100
BLER Type	CRC 16
CRC Order	LSB first
Data Polarity	Norm
Clock Slope	Pos
Data Enable	Low
Threshold (BER)	1.00 V
Impedance (BER)	1 kΩ / GND

5.4.11.1 General Settings

State

Switches the block error rate measurement on/off.

Depending on the setting in the "Mode" box, either a continuous measurement ("Auto") or a single measurement ("Single") is carried out. A single measurement must be started by clicking the "Execute Single" button.

Remote command:

[:BLER:STATe](#) on page 519

Block Error Rate

Displays the measured block error rate.

The block error rate is the ratio of faulty blocks to total blocks.

The display unit can be selected in the box to the right of the value.

"ENG" The block error rate is output in exponential notation with the exponent -3 or -6 .

"SCI" The block error rate is output in scientific notation, i.e. standardized to one place to the left of the decimal.

"%" The block error rate is output in percent.

"ppm" The block error rate is output in parts per million.

Remote command:

[:BLER:UNIT](#) on page 520

Received Blocks

Displays the current number of data blocks checked.

Remote command:

[:BLER:RESult?](#) on page 512

Errors

Displays the current number of occurred errors.

Remote command:

:BLER:RESult? on page 512

Terminated By

Displays the termination criterion for the measurement.

These criteria can be entered to keep the duration of the measurement short for low as well as high block error rates.

The last measurement result is displayed after the measurement has been terminated.

"User" The measurement was manually terminated by the user switching the state to off.

Remote command:

:BLER:STATe on page 519

:BLER:STOP on page 519

"Number of Data Blocks" The measurement was terminated because the specified number of data blocks was reached.

"Number of Errors" The measurement was terminated because the specified number of errors was reached.

Remote command:

:BLER:RESult? on page 512

State

Displays the status of the measurement.

A green LED indicates a correct status, a red LED a critical status.

This allows the user to check whether the measurement functions. The status of the data and clock lines and of synchronization is checked and displayed.

If a faulty status is displayed, the signals can be checked at the BERT interface using an oscilloscope.

"Clock" The applied clock signal was detected.

"No Clock" The applied clock signal was not detected.

Possible causes are:

- Clock recovery is not available (e.g. with tests of RF components).

If the signal is generated using the instrument family, the bit clock can be extracted from the CLOCK output connector (only with "Custom Dig Mod" signals in realtime). If signals complying with other digital standards are generated or if ARB waveforms are used, a marker signal can be used as a clock. As the DUT causes a delay, the ratio of clock-to-data travel times must always be taken into account and checked with an oscilloscope if necessary.

- The wrong impedance for the applied clock rate was selected (see "Impedance" parameter).
- The wrong threshold for the applied clock signal was selected (see "Threshold" parameter).

"Data" The applied data signal was detected.

"No Data"	The applied data signal was not detected. Possible causes are: <ul style="list-style-type: none"> • The signal from the DUT is missing. • The wrong impedance for the applied clock rate was selected (see "Impedance" parameter). • The wrong threshold for the applied data signal was selected (see "Threshold" parameter)
"Sync"	The measurement is synchronized.
"No Sync"	The measurement is not synchronized. Generally, a measurement cannot be synchronized until a clock and a data signal have been detected. If synchronization still does not occur, this may be caused by the following: <ul style="list-style-type: none"> • A wrong clock slope is used, which violates setup or hold times (see "Clock Slope" parameter). • Reflections on the clock line occur and clock the data signal into the BER measurement twice, e.g. on lines without termination. The R&S SMJ input is not terminated. • The travel times of clock and data are unfavorable (e.g. clock slope with data change). Check the relationship of clock to data using an oscilloscope and optimize the travel times (e.g. clock slope when the data signal applied is stable).

Remote command:

[:BLER:RESult?](#) on page 512

5.4.11.2 Configuration

The "Configuration" section is used to select the type of measurement and the termination criteria and to set the polarity of the input signals.

Mode

Selects the type of measurement: single or continuous measurement.

"Auto"	Continuous measurement of block error rate. If either or both of the termination criteria are met, the current measurement is terminated and immediately a new one is started automatically. Depending on the settings made, a measurement may take considerable time. During the first measurement, intermediate results are displayed. For the measurements that follow, only the final results are shown. The parameters "Received Blocks" and "Errors" are continuously updated and indicate the relative values for the measurement in progress. To start a continuous measurement, use the command :BLER:START on page 518. To stop a measurement, use the command :BLER:STOP on page 519.
--------	--

"Single" Single measurement of bit error rate. The measurement is started by clicking the "Execute Single" button.
If a measurement is in progress, the current values for "Block Error Rate", "Errors" and "Received Blocks" are cyclically displayed. The measurement is terminated when either or both of the termination criteria have been reached. To start a new measurement, the "Execute Single" button must be clicked again.

Remote command:

:BLER:SEQuence on page 514

:TRIGger:BLER[:IMMediate] on page 521

Max Received Blocks

Enter the number of transmitted data blocks to be checked before the measurement is terminated.

This criterion will terminate the BLER measurement after the specified number of data blocks, even if very few errors or none at all have been detected. With a low number of block errors, the measurement result may be statistically unreliable.

If the measurement is terminated because the number of data blocks entered here was checked, "Number of Data Blocks" appears to the right of "Terminated By".

Remote command:

:BLER:SETup:MCOUNT on page 517

Max Errors

Enter the number of block errors to occur before the measurement is terminated.

This criterion terminates the measurement relatively quickly if the error rate is high. The measurement result is statistically reliable, since many errors were already counted.

If the measurement is terminated because the number of block errors entered here was reached, "Number of Errors" appears to the right of "Terminated By".

Remote command:

:BLER:SETup:MERRor on page 517

CRC Order

Selects the byte order of the checksum (CRC).

"LSB" The checksum starts with the least significant byte.

"MSB" The checksum starts with the most significant byte.

Remote command:

:BLER:SETup:CORDer on page 515

BLER Type

Displays the CRC polynomial used. CCITT CRC 16 : $G(x) = x^{16} + x^{12} + x^5 + x^1$ is the CRC polynomial supported.

Remote command:

:BLER:SETup:TYPE on page 518

Data Polarity

Sets the polarity of the feedback data blocks.

Remote command:

`:BLER:SETup:DATA[:POLarity]` on page 515

Clock Slope

Sets the polarity of the active slope of the feedback clock.

Remote command:

`:BLER:SETup:CLOCK[:POLarity]` on page 514

Impedance

Sets the input impedance of the BERT inputs "Clock", "Data", "Data Enable" and "Restart".

For high clock rates, 50 Ohms should be selected.

Remote command:

`[:SOURce]:INPut:BERT:IMPedance` on page 520

Threshold

Sets high/low threshold in volts for the BERT inputs "Clock", "Data", "Data Enable" and "Restart".

The variable threshold makes it possible to align the BERT interface with the level of different signals. In addition, reflections and other interference can be suppressed by selecting the appropriate threshold.

Remote command:

`[:SOURce]:INPut:BERT:THReshold` on page 520

Data Enable

Sets the polarity of the "Data Enable" signal.

The "Data Enable" signal marks the user data of the signal.

The signal is generated by the DUT and fed in at the "Data Enable" input of the BERT interface.

"High" If the "Data Enable" signal is at a high level, the data bits at the BERT data input are interpreted as user data. During a low level of the "Data Enable" signal, they are interpreted as checksum bits.

"Low" If the "Data Enable" signal is at a low level, the data bits at the BERT data input are interpreted as user data. During a high level of the "Data Enable" signal, they are interpreted as checksum bits.


Remote command:

`:BLER:SETup:DEnable` on page 515

5.5 RF Signal and Analog Modulations - RF Block

5.5.1 Overview of RF Signal

Settings for the RF output signal and analog modulation are made under "RF Signal" and "Analog Modulations". These settings can be accessed in the block diagram by way of the "RF/A MOD" function block, or by means of the menu with the same name which is opened using the MENU key.

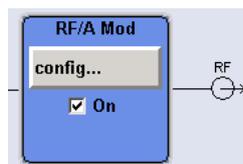

The function block is available for the basic unit (R&S SMJ-B10x) without additional equipment options.

5.5.1.1 RF Output

Basically, the RF output signal is deactivated. The previous state is restored, when the signal is reactivated.

Activating RF Signal Output

If the settings for the RF signal are done, you can activate RF signal output via:

- the TOGGLE ON/OFF key (the RF/A Mod function block must first be selected)
- the RF ON/OFF key (the current entry focus is irrelevant)
- the checkbox in the "RF/A Mod" block (see "RF On" on page 200)
- the "RF Frequency > RF ON" checkbox in the RF/A Mod block (see "RF Output State" on page 200).

To open the menu, select the "Configure" button in the RF/A Mod block.

The current state of the RF output (activated and deactivated) is indicated in the block diagram by means of the different block color and the status of the "On" checkbox.

The disconnected connection to the output is additionally shown when the output is deactivated.

Active analog modulation is also indicated in the block.



To query the impedance of the RF outputs, use the command `:OUTPut<hw>:IMPedance?` on page 555.

RF On

Activates RF signal output.

This function corresponds to the RF ON /OFF key.

See also [Chapter 5.5.1.1, "RF Output"](#), on page 199.

Remote command:

`:OUTPut<hw>[:STATe]` on page 557

RF Output State

Activates the RF output signal by selecting the RF checkbox in the "Configure" dialog of the "RF/A Mod" block.



Remote command:

`:OUTPut<hw>[:STATe]` on page 557

5.5.1.2 RF Signal Modes and Characteristics

The CW, Sweep and List modes are available for generating the RF signal.

- **CW**
The RF signal is generated with the set frequency and level. This is the default mode.
- **Sweep**
The RF signal is generated as a sweep with the set parameters. It is not possible to activate frequency, level and LF sweep simultaneously.
- **List Mode**
The RF signal is generated on the basis of a list of predefined frequency and level values. The duration of the individual steps can be predefined.

Instruments connected downstream can be taken into consideration when setting the frequency and level by entering a frequency and/or level offset.

Automatic level control ("ALC") ensures maximum level accuracy, even with I/Q modulation.

User-specific lists which contain level correction values for any frequency range ("User Correction") can be created to, for example, compensate the cable attenuation in a test assembly setup.

The R&S SMJ generates the RF signal in unmodulated or analog form. The signal generator is equipped therefore with the following sources for analog modulations:

- an internal LF generator
- the external modulation input EXT MOD at the rear of the instrument

An external trigger signal for the sweeps and the LIST mode can be provided at the INST TRIG input.

The input REF IN is used to input an external instrument reference, and the output REF OUT serves as the output of the reference frequency (internal or external).

5.5.2 RF Frequency

The value of the RF frequency is displayed in the header of the display ("Freq"). This field provides the direct input of the RF frequency. Alternatively, you can enter the RF frequency in the "Frequency/Phase" dialog.



Note that the displayed RF frequency in the header, and the RF output frequency, entered in the "Frequency/Phase" dialog can be different, as explained in the following section.

5.5.2.1 RF Frequency vs. RF Output Frequency


The signal generator offers the possibility, to take additional frequency modifications of a downstream instrument into consideration, such as an offset set by a mixer, or a multiple of the frequency by a frequency multiplier. The R&S SMJ indicates the resulting frequency, including offset and multiplication factor in the header of the screen. that means the indicated frequency corresponds to the frequency at the output of the downstream instrument. However, the frequency at the RF output of your signal generator always corresponds to the frequency set in the "Frequency/Phase" dialog.

In this dialog, you can also enter the values of the downstream instrument.

A set frequency offset is indicated by the "FREQ OFFSET" status message.

The correlation between the RF frequency, the RF output frequency and the frequency offset is as follows:

"Freq" (in header) = "RF output frequency" (Frequency in dialog) * "Multiplier" factor (Multiplier in dialog) + "Freq offset" (Offset in dialog)

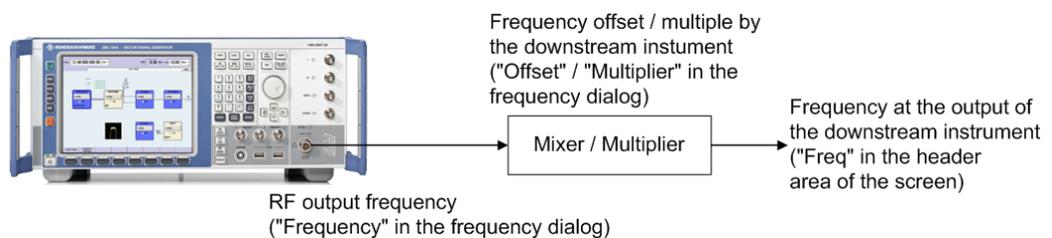

5.5.2.2 Setting the RF Frequency

To change the RF frequency, press the FREQ key and enter the desired frequency. Changes to the RF frequency have an immediate effect (without confirmation with the ENTER key) on the output signal.

RF Freq

Enters the RF frequency, considering the frequency offset.


Note: The SCPI command sets the level of the "Freq" display, that means an entered frequency offset and multiplier factor are taken into consideration in the frequency value.

Remote command:

[:SOURce<hw>] :FREQuency [:CW|FIXed] on page 714

5.5.2.3 RF Frequency Dialog

 
The combined "RF Frequency / Phase..." dialog contains the parameters required for configuring the frequency and settings like a frequency offset, or a multiplier factor of an externally connected multiplier, see [Chapter 5.5.2.4, "Frequency Settings"](#), on page 202.



Furthermore, the dialog provides additional settings parameters which are described in:


- [Chapter 5.5.3.2, "Phase Continuous Frequency"](#), on page 205
- [Chapter 5.5.3, "Phase"](#), on page 204
- [Chapter 5.5.4, "Reference Oscillator"](#), on page 209
- [Chapter 5.5.5, "Local Oscillator - LO Coupling"](#), on page 212

 5.5.2.4 Frequency Settings



► To access the dialog for configuring the frequency settings, perform one of the following:

 - Select "RF/A Mod > config... > RF Frequency > Frequency/Phase".
- Press the MENU key and select "RF/A Mod > RF Frequency > Frequency/Phase".



In the upper section of the combined "RF Frequency / Phase ..." settings dialog you can configure the frequency of the RF signal.

 
The remote commands required to define the settings are described in [Chapter 7.16.6, "SOURce:FREQuency Subsystem"](#), on page 712.

Frequency


Sets the RF frequency of the RF output connector. The frequency entered and displayed here corresponds to the frequency at the RF output, that means any offset entry is not taken into consideration.

Note: Status bar values blanked?

For security concerns or certain operating modes, the instrument blanks the frequency and level display in the status bar.

- 

 The display has been disabled for security reasons, see [Annotation Frequency](#) and [Annotation Amplitude](#).

- 

The display is disabled when list mode is running, see "[State - List Mode](#)" on page 274.

Remote command:

[\[:SOURce<hw>\]:FREQuency\[:CW|FIXed\]](#) on page 714

Note: This command sets the frequency of the "FREQ" display, that is the frequency containing offset.

Offset

Sets the frequency offset relative to the RF frequency. The frequency offset of a downstream instrument (for example a mixer) is entered.

The entry does not change the value of the RF frequency at the RF output. It only changes the RF frequency displayed in the display header. The value of the RF frequency in the header corresponds to the frequency at the output of the downstream instrument.

Remote command:

[\[:SOURce<hw>\]:FREQuency:OFFSet](#) on page 717

Multiplier

Sets the multiplication factor for the RF frequency.

In the frequency field of the status bar, the instrument adjusts its frequency display according to the set multiplication factor. This frequency value shows the frequency at the output of the downstream multiplier. The entry does not change the RF frequency at the RF output of the R&S SMJ, see also [Chapter 5.5.2.1, "RF Frequency vs. RF Output Frequency"](#), on page 201.


Remote command:

[\[:SOURce<hw>\]:FREQuency:MULTiplier](#) on page 717

5.5.2.5 User Variation Settings

- ▶ To access the dialog for configuring the user variation setting, perform one of the following:
 - Select "RF/A Mod > config... > RF Frequency > Frequency/Phase".

- Press the MENU key and select "RF/A Mod > RF Frequency > Frequency/Phase".

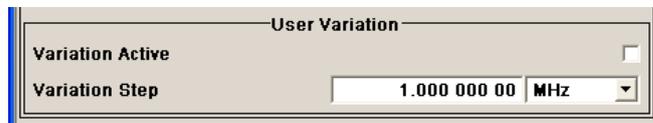

The combined "RF Frequency / Phase ..." settings dialog contains the parameters determine the step size for adjusting the frequency with the rotary knob.

Variation Active

Activates the user-defined step width used when varying the frequency value with the rotary knob.

- "ON" The frequency value set with the rotary knob is varied using the user-defined step width which is entered under "Variation Step".
- "OFF" The frequency value set with the rotary knob is varied in steps of one unit at the cursor position (standard operating mode).

Remote command:

[:SOURce<hw>] :FREQuency:STEP:MODE on page 720

Variation Step

Sets the user-defined step width. This step width is used when entering the RF frequency using the rotary knob. Frequency variation with this step width must also be activated with "Variation Active".

Remote command:

[:SOURce<hw>] :FREQuency:STEP [:INCRe ment] on page 719

 
5.5.2.6 Phase Continuous Frequency Settings

A phase continuous mode can be enabled in the "Phase Continuous Frequency Settings" section (see [Chapter 5.5.3.2, "Phase Continuous Frequency"](#), on page 205).

5.5.3 Phase


The phase of the RF output signal can be changed in the "Phase Settings" section of the "RF Frequency/Phase" dialog.

5.5.3.1 Phase Settings



- ▶ To access the dialog for configuring the phase settings, perform one of the following:
 - Select "RF/A Mod > config... > RF Frequency > Frequency/Phase".

- Press the MENU key and select "RF/A Mod > RF Frequency > Frequency/Phase".

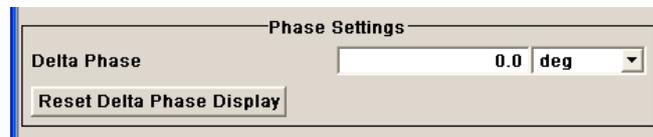

The combined "RF Frequency / Phase ..." settings dialog contains the parameters to configure the phase settings of the RF signal.

The remote commands required to define the settings are described in [Chapter 7.16.13, "SOURce:PHASe Subsystem"](#), on page 759.

Delta Phase

Sets the phase of the RF signal. The current phase of the signal is used as the reference. This function allows, for example, the phase of the output signal to be synchronized with the phase of a signal from a second signal generator.

Remote command:

[:SOURce<hw>] :PHASe on page 759

Reset Delta Phase Display

Resets delta phase value. The set phase is adopted as the new current phase, i.e. the delta phase value is reset to 0.

Remote command:

[:SOURce<hw>] :PHASe:REFerence on page 759

5.5.3.2 Phase Continuous Frequency

The phase continuous mode can be enabled in the "Phase Continuous Frequency Settings" section of the "Frequency" dialog. In this mode, the output sinewave is phase continuous, that means there is no phase discontinuity or glitch when changing the frequency.

At the transition from one frequency to another an intermediate frequency (switching transient) occurs, which causes spurs (see figure below). The transient is due to changes of the synthesizer settings (e.g. dividers, filters, phase detectors).

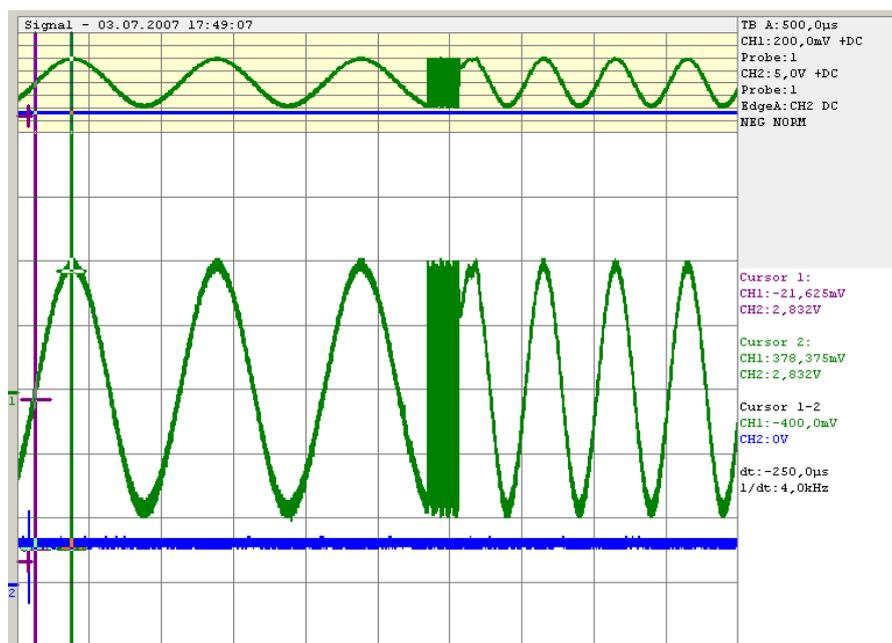


Figure 5-7: Transition for a 1 kHz step at 1 GHz without phase continuous mode active. For the graphical display the signal is down converted into the kHz range.

The phase continuous mode freezes the settings of the synthesizer (for example dividers, filters, phase detectors) which could generate phase discontinuities when changed. The frequency change is effectively performed by changing the fine resolution synthesizer. This allows a phase continuous change from one frequency to another without any transients (see figure below).

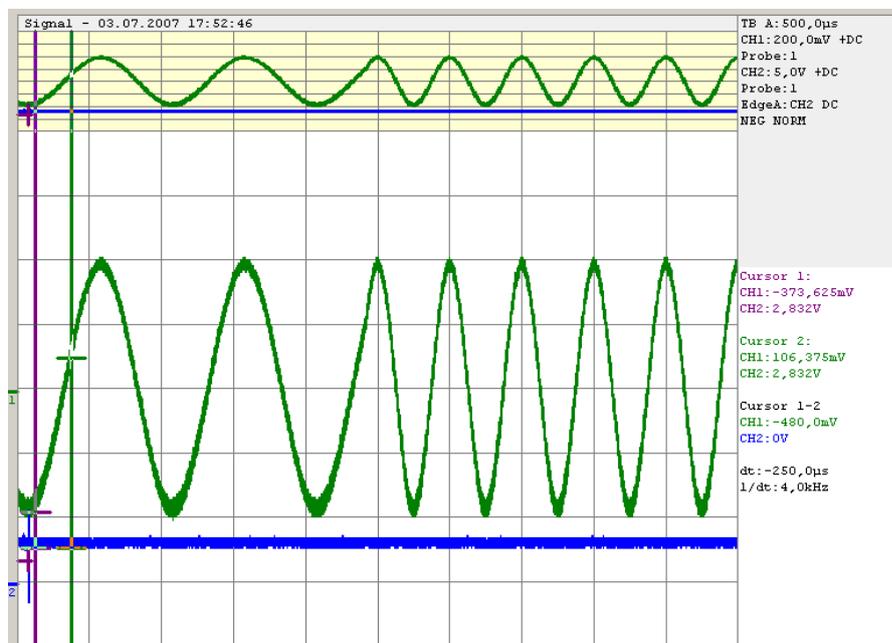


Figure 5-8: Transition for a 1 kHz step at 1 GHz with phase continuous mode active. For the graphical display the signal is down converted into the kHz range.

The available frequency range for phase continuous settings is limited by the fine resolution synthesizer used and varies with the RF frequency setting at the point of activating the phase continuous mode.

Depending on the instrument equipment - with or without option R&S SMJ-B22 - the fine resolution synthesizer used is a DDS (Direct Digital Synthesizer, with option R&S SMJ-B22) or a Fractional N-Synthesizer (without option R&S SMJ-B22). The DDS provides generally a wider frequency range for phase continuous settings. In addition, two modes (narrow and wide) allow a selection either in favor of higher signal quality or in favor of an especially wide frequency range.



When phase continuous frequency setting is active, data sheet values no longer apply. Activating frequency or phase modulation deactivates phase continuous settings and vice versa.

Setting a Phase Continuous Frequency Sweep

1. In the "RF Frequency Sweep" Menu, if the sweep is active, switch it off.
2. In the "RF Frequency" Menu under the "Phase Continuous Frequency Settings" dialog
 - a) If the "Phase Continuous Frequency Mode" is Active, switch it off
 - b) Set "Frequency Range" to "Narrow"
 - c) Select the RF frequency
 - d) Check displayed Frequency Range
 - e) If the "Frequency Range" corresponds to the selected frequency range, check the "Phase Continuous Active" box
 - f) If "Frequency Range" in Narrow Mode does not, select "Wide" for the Frequency Range and check the Phase Continuous Active box
3. In the "RF Frequency Sweep" dialog
 - a) Modify the "Start Freq" and "Stop Freq" or "Center Frequency" and "Span" as needed.
 - b) Set the RF frequency sweep State to "ON".

Optimum user settings for the phase continuous frequency sweep

In the "RF Frequency Sweep" dialog there are some settings that will improve the phase continuous sweep results for both "Narrow" and "Wide" mode choices.

1. "Step Lin": low step size
In order to get the best spur performance during frequency change, it is recommended to reduce the step size and (if necessary) increase the sweep speed by decreasing the Dwell Time. Effectively, the sweep will be performed in the same amount of time, but with smaller step sizes.
2. "Shape": Triangle sweep

The triangle sweep offers a uniform forward sweep and return to the beginning frequency. The saw tooth sweep produces a uniform forward sweep with an abrupt reset to the starting frequency. The abrupt reset can generate spurs.

Phase Continuous Frequency Settings

To access the settings for configuring the phase continuous mode, perform one of the following:

1. Select "RF/A Mod > config... > RF Frequency > Frequency/Phase".
2. Press the MENU key and select "RF/A Mod > RF Frequency > Frequency/Phase".



The "Phase Continuous Frequency Settings" section in the combined "RF Frequency / Phase..." contains the parameters required for configuring the phase settings.

The remote commands required to define the phase settings are described in [Chapter 7.16.6, "SOURce:FREQUENCY Subsystem"](#), on page 712.

Phase Continuous Active

Activates phase continuous frequency settings. For a given RF frequency setting, phase continuous frequency changes are possible in a limited frequency range.

The range is typically +/-0.5 MHz in the main synthesizer octave of 750 MHz to 1.5 GHz.

For the tuning range of other frequencies see the table below.

RF frequency [MHZ]	Typ . range
$f \leq 6.6$	125 kHz
$6.6 < f \leq 11.71875$	7.813 kHz
$11.71875 < f \leq 23.4375$	15.625 kHz
$23.4375 < f \leq 46.875$	31.25 kHz
$46.875 < f \leq 93.75$	62.5 kHz
$93.75 < f \leq 187.5$	125 kHz
$187.5 < f \leq 375$	250 kHz
$375 < f \leq 750$	500 kHz
$750 < f \leq 1500$	1 MHz
$1500 < f \leq 3000$	2 MHz
$3000 < f \leq 6000$	4 MHz

Note: If "Phase Continuous" is "Active" a setting of the "RF Frequency" outside the available "Frequency Range" causes an error. A settings conflict is displayed.

Remote command:

[:SOURce<hw>] :FREQuency:PHASe:CONTInuous:STATe on page 717

5.5.4 Reference Oscillator

The R&S SMJ is equipped with an internal reference oscillator that generates a reference frequency of 10 MHz. It is used as internal reference source for the synthesizer and the local oscillator. Alternatively, you can apply an external reference signal.

Regardless of the used reference source (internal or external), the R&S SMJ always provides the configured reference frequency at the output. You can use it, for example to synchronize several interconnected instruments.



The settings of the reference oscillator are not affected by an instrument preset ("PRE-SET" key).

The following examples briefly explain the possible test setups and the settings to be considered.

- Internal $f_{\text{ref}} = 10 \text{ MHz}$ (10 MHz REF OUT)

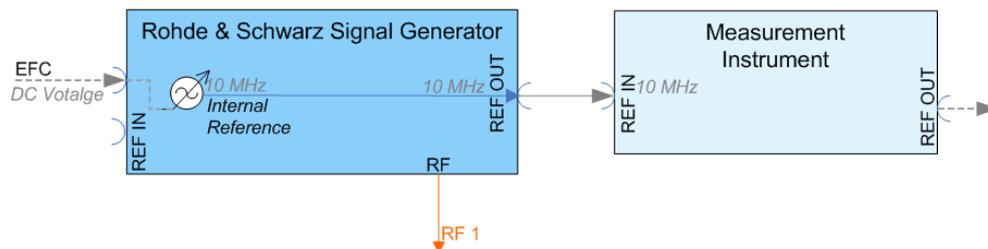


Figure 5-9: Synchronizing a subsequent instrument using the internal 10 MHz reference signal of the R&S SMJ

The internal reference oscillator supplies the reference frequency.

In addition, you can shift the frequency by an external tuning voltage within a certain range, **EFC** (External Frequency Control). This function is used, for example, in phase noise measurement systems.

The frequency shift resulting from a tuning voltage value depends on the technical equipment of the instrument. See the data sheet for the associated technical data like sensitivity, input voltage range and impedance. The maximum bandwidth for external tuning signal input is approximately 50 Hz.

Note: The bandwidth of an external PLL (Phase Locked Loop) used in a phase noise measurement system, must be less than the bandwidth of the external tuning signal input. If the measurement requires a higher bandwidth for the PLL, it is recommended that you use the external FM modulation (DC coupling) in low noise mode. The FM-DC mode yields a fixed tuning sensitivity that is independent of the RF output frequency and corresponds to the set FM deviation.

Settings:

- **Source:** "Internal"
- External $f_{\text{ref}} = 10 \text{ MHz}$ (10 MHz REF OUT)

If you have a clean external reference signal with 10 MHz frequency, you can directly pass it to the output. The signal quality remains the same.

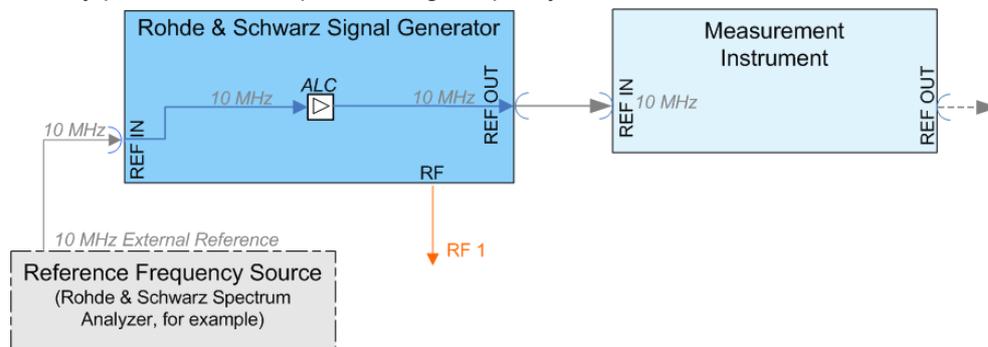


Figure 5-10: Synchronizing instruments by means of an externally applied reference signal having 10 MHz

Settings:

- Source: "External"
- External Reference Frequency: "10 MHz"

Set the additionally provided parameters, as for example the synchronization bandwidth according to the requirements of the application.

- External $f_{\text{ref}} = 5/10/13$ MHz (5/10/13 MHz REF OUT)

If you have an external reference signal with 5, 10 or 13 MHz, you can directly pass it to the output. The signal quality remains the same.

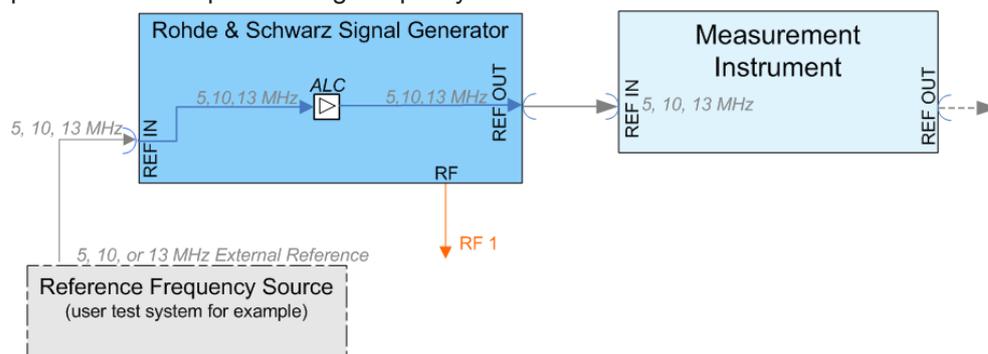


Figure 5-11: Synchronizing a subsequent instrument an externally applied reference frequency of 5, 10, or 13 MHz

Settings:

 
- Source: "External"
- External Reference Frequency: "5, 10 or 13 MHz"

Input and output connectors of the reference frequency

The appropriate connectors are located at the rear panel, see "REF IN" on page 29 and "REF OUT" on page 28.


To use the EFC feature, assign this signal at the EXT TUNE input of the AUX I/O connector at the rear of the instrument, see "AUX I/O" on page 29.

5.5.4.1 Reference Oscillator Settings



To access the settings dialog for configuring the reference signal, perform one of the following:

- In the block diagram, select "RF/A Mod > config... > RF Frequency > Reference Oscillator"
- Press the MENU key and select "RF/A Mod > RF Frequency > Reference Oscillator"
- Press the SETUP key and select "Setup > System > Reference Oscillator"

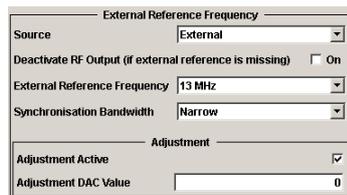

In the "External Reference Frequency" section of the combined "RF Frequency / Phase / Ref Osc / LO Coupling" dialog, you can select the signal source and frequency to be used as the reference frequency, and determine a user-defined adjustment value. The parameters in the upper sections of the dialog are described in [Chapter 5.5.2.3, "RF Frequency Dialog"](#), on page 202 and [Chapter 5.5.3, "Phase"](#), on page 204.

The remote commands required to define the reference oscillator settings are described in [Chapter 7.16.17, "SOURCE:ROSCillator Subsystem"](#), on page 774.

Source

Selects the source of the reference frequency.

See [Chapter 5.5.4, "Reference Oscillator"](#), on page 209, which provides an overview of the different test scenarios for configuring the reference frequency.

"Internal" Uses the internal 10 MHz reference signal, either with the calibrated or a user-defined adjustment value.

"External" Uses an external reference signal.
The frequency of the external reference signal must be selected under ["External Reference Frequency"](#) on page 212.

Remote command:

`[:SOURCE] :ROSCillator :SOURCE` on page 776

Deactivate RF Output (if external reference is missing)

Turns the RF output off when the external reference signal is selected, but no signal is supplied.

This function prevents that no improper RF signal due to the missing external reference signal is used for measurements. A message indicates that the external signal is missing and the RF output is deactivated.

This setting is not affected by a reset.

Remote command:

`[:SOURCE] :ROSCillator :EXTernal :RFOff [:STATe]` on page 775

External Reference Frequency

Determines the frequency of the external reference signal.

You can use an external reference signal having a frequency of 5 MHz, 10 MHz or 13 MHz.

Remote command:

`[:SOURce] :ROSCillator :EXTernal :FREQuency` on page 775

Synchronization Bandwidth

Selects the synchronization bandwidth for an external reference signal.

"Narrow" The synchronization bandwidth is approximately 1 Hz.

"Wide" The synchronization bandwidth is approximately 750 Hz.
This mode is useful for very precise reference sources of high spectral purity.

Remote command:

`[:SOURce] :ROSCillator :EXTernal :SBANDwidth` on page 775

Adjustment Active

Selects the adjustment mode.

"OFF" Uses the calibrated internal reference frequency.

"ON" Allows you to apply a deviation to the internal reference frequency, according to your requirements. To enter the value, use [Adjustment DAC Value](#).

Remote command:

`[:SOURce] :ROSCillator [:INTernal] :ADJust [:STATe]` on page 776

Adjustment DAC Value

Sets a user-defined deviation for the internal reference frequency. This value takes effect when it is activated with [Adjustment Active](#). "0" represents the calibrated state. The setting range depends on the reference oscillator type and its factory calibration value.

Note: A factory preset resets this setting to the calibration value of the instrument.

Remote command:

`[:SOURce] :ROSCillator [:INTernal] :ADJust :VALue` on page 776

5.5.5 Local Oscillator - LO Coupling


The LO Coupling function allows a distribution of the local oscillator signal in way that multiple RF signals can be driven by the same LO signal. This is mandatory for minimizing the phase drift between these RF signals.

The LO Coupling function is available only for instruments equipped with the option R&S SMJ-B90 (Phase Coherence).

The R&S SMJ outputs its local oscillator signal at the LO OUT connector (rear of instrument). In the external local oscillator mode, an external signal must be supplied at the LO IN connector.

5.5.5.1 Phase Coherence

Phase coherence of two RF signals means that there is a defined and stable phase relationship between two (or more) RF carriers, i.e. there is a fixed delta phase $\Delta\Phi$ between the carriers. Strictly speaking, phase coherence is only defined for CW carriers with the same frequency (or for CW carriers at frequencies that are multiples of each other).

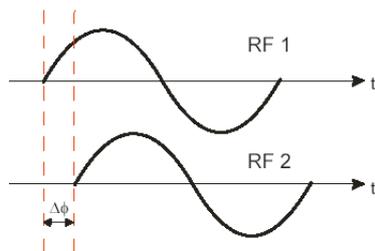

If two signal generators are coupled via their 10 MHz reference, they are generating exactly the same frequency but only from the long term perspective. Having a closer look into the instantaneous differential phase (“delta phase”) of these two RF signals, this is quite instable due to:


- phase noise of the two synthesizers
- “weak” coupling at 10 MHz and a long synthesis chain up to the RF domain
- temperature differences which cause a change of the effective electrical length of some synthesizer components

Most critical for a stable delta phase is the thermal RF phase drift between multiple RF synthesizers. This drift can be minimized down to 0.1° by use of a common synthesizer, i.e. a common local oscillator (LO) signal, for all RF carriers. Only if this LO signal (which is internally used for upconverting the baseband signal to the RF) is the same for all carriers, a stable phase between the RF signals can be achieved.


5.5.5.2 Typical Applications

The LO Coupling function can be used to generate a beamformed signal.

- Generation of a beamformed signal with two instruments, working in External mode.

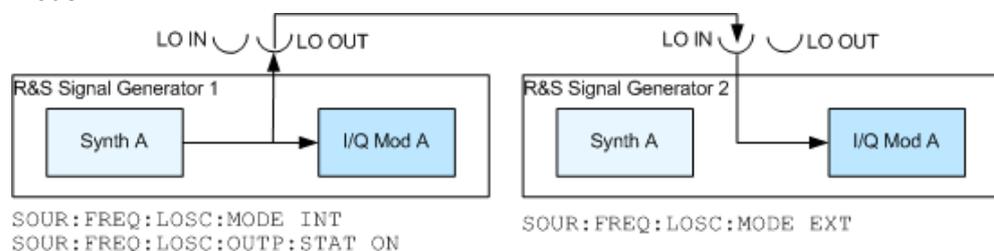

 5.5.5.3 LO Coupling Settings




To open the "LO Coupling" dialog, select "RF/A Mod > Configure > LO Coupling" or use the MENU key under "RF/A Mod".

The menu is available only for instruments equipped with the option R&S SMJ-B90. This option enables phase coherent RF outputs of two or more RF paths.

The local oscillator coupling is set in the lower area of the group menu "Frequency/Phase". The menu is used to select the mode of the LO coupling and the state of the local oscillator output.

For more information about the upper areas, see:


- [Chapter 5.5.2.3, "RF Frequency Dialog"](#), on page 202
- [Chapter 5.5.3.1, "Phase Settings"](#), on page 204
- [Chapter 5.5.4.1, "Reference Oscillator Settings"](#), on page 211

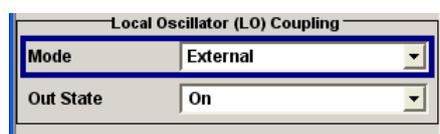

Mode - LO Coupling

Selects the mode of the local oscillator coupling.

- "Internal" This mode corresponds to a normal operation. The internal local oscillator is used.
- "External" An external signal is used.

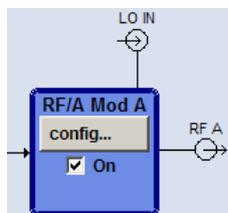

Note: Selection of LO Coupling "External" mode, disables all parameters in the "Frequency/Phase/Ref Osc" menu.

Remote command:

`[:SOURce<hw>] :FREQuency:LOSCillator:MODE` on page 714

Out State - LO Coupling

Switches on/off the LO output.

- "On" The internal local oscillator signal is also available on the LO OUT connector (in order to couple two instruments).
- "Off" The LO OUT signal is switched off.

Remote command:

`[:SOURce<hw>] :FREQuency:LOSCillator:OUTPut:STATe` on page 714

5.5.6 RF Level

5.5.6.1 Overview of RF Level



Message "Level overrange/underrange"

If this message appears in the status line, the following parameter is in the overrange (see data sheet):

- the set level ("Level")
- the displayed peak envelope power ("PEP") for Digital Modulation or Digital Standard

In this case, the signal level at the output can deviate from the set value.

The value of the RF level is displayed in the level field in the header of the instrument's display and the easiest way to set the RF level is to set it directly in this field.



The center line ("Level") and, to the left of this, the peak envelope power ("PEP") of the modulated RF output signal is displayed in the case of digital modulation or digital standard.

Be aware, that there is a difference between the RF level displayed in the header and the RF output level set in the "Level/EMF" dialog of the "RF" block.

RF level vs. RF output level

The level entered and displayed in the "Level" field takes the offset of any downstream attenuators/amplifiers into consideration by way of calculation. This means that with a level offset the level displayed in the header does not correspond to the level at the RF output, but rather to the level at the output of the downstream instrument.


This allows the desired level at the output of downstream instruments to be entered. The R&S SMJ changes the RF output level according to the set offset.

However, the level entered and displayed in the "Level" menu of the "RF" function block always corresponds to the RF output level. Any level offset is not taken into consideration.

The level offset is entered in the "Level" menu. Here it is also possible to set the level without taking the offset into consideration, and to make other settings, such as level offset, attenuator mode, power-on state.

The correlation is as follows:

"Level" (in header) = "RF output level" (Level in menu) + "Level offset" (Offset in menu)

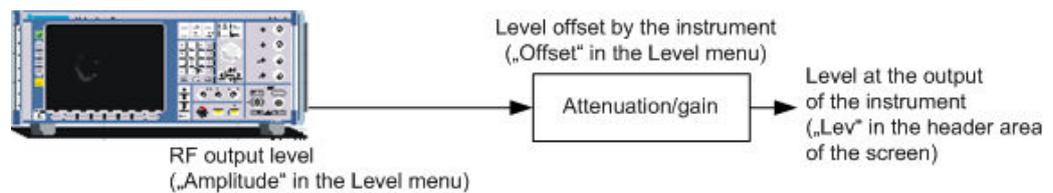

The RF output is protected against overloading by an external signal applied to the RF output (see [Chapter 5.5.9, "Reverse Power Protection"](#), on page 232).

Setting the RF level

To change the RF level, press the LEVEL key and enter the desired level. Changes to the RF level have an immediate effect (without confirmation with the Enter key) on the output signal.

RF Level

Enters the RF level, considering the level offset (see ["RF level vs. RF output level"](#) on page 215).

Note: Some SW options have specific requirements about the calculation of the level of the output signal, e.g. the displayed value corresponds to the level at the start simulation time, there are correction coefficients to be applied, etc. In cases like this, the displayed value in the header of the instrument does not always correspond to the level at the RF output!

When working with a SW option, always refer to the corresponding documentation for related specific information.


dBm, dBuV, mV and uV can be used as the level units. The 4 unit keys are labeled with these units.

Note: The SCPI command sets the level of the "Level" display, i.e. an entered level offset is taken into consideration in the level value.

Remote command:

`[:SOURce<hw>] :POWER [:LEVel] [:IMMediate] [:AMPLitude]` on page 765


5.5.6.2 RF Level Dialog

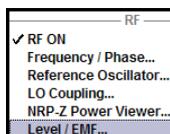

► To access the dialog for configuring the RF signal level, perform one of the following:

- Select "RF/A Mod > config... > RF Level > Level/Attenuator".
- Press the MENU key and select "RF/A Mod > RF Level > Level/Attenuator".

The combined dialog is divided into several sections.

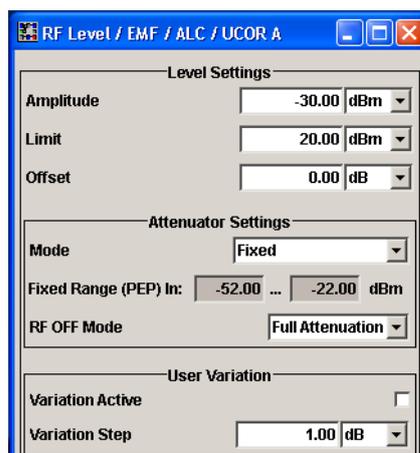

The offset-free level, level offset and level limit are set in the top section of the menu. The attenuator mode is set in the "Attenuator Settings" section.

In section "User Variation", you can determine the step size for adjusting the level with the rotary knob (with "Variation Active On").

The power-on behavior of the instrument and the level display in the display header are set in the "Power-On / EMF Settings" section (see [Chapter 5.5.6.3, "Power-On/EMF Settings"](#), on page 220).

The lower sections provide access to the "Automatic Level Control" settings and to "User Correction" settings. For more information about these functions, see [Chapter 5.5.7, "Automatic Level Control - ALC"](#), on page 220 and [Chapter 5.5.8, "User Correction"](#), on page 222.

The remote commands required to define the settings are described in [Chapter 7.16.15, "SOURce:POWer Subsystem"](#), on page 762.

Level Settings

The offset-free level, attenuation mode, level offset and level limit are set in the top section of the menu.

Amplitude

Sets the RF level of the RF output connector.

The level entered and displayed here corresponds to the level at the RF output, that means any offset entry is not taken into consideration.

Note: Status bar values blanked?

For security concerns or certain operating modes, the instrument blanks the frequency and level display in the status bar.

-

The display has been disabled for security reasons, see [Annotation Frequency](#) and [Annotation Amplitude](#).

-

The display is disabled when list mode is running, see ["State - List Mode"](#) on page 274.

Remote command:

`[:SOURce<hw>] :POWer:POWer` on page 768

Note: The SCPI command `[:SOURce<hw>] :POWer [:LEVel] [:IMMediate] [:AMPLitude]` sets the level of the "Level" display, that is the level containing offset.

Limit - RF Level

Sets an upper limit for the RF output power.

You can use it to protect your DUT from damage due to high input power. If you enter an RF level above this value, the instrument limits the output power to this specified value, and generates a warning message.

However, the level indication in the status bar is not affected.

Note: The value is not affected by an instrument preset (PRESET key), *RST and the "Save/Recall" function. It is influenced only by the [Factory Preset](#) and the factory value is equal to maximum level.

Remote command:

`[:SOURce<hw>] :POWer:LIMit [:AMPLitude]` on page 766

Offset (Level)

Sets the level offset relative to the RF level.

The level offset of a downstream instrument (for example an attenuator or amplifier) is entered.

The entry does not change the value of the RF level at the RF output. It only changes the RF level displayed in the display header. The value of the RF level in the header corresponds to the level at the output of the downstream instrument.

Remote command:

`[:SOURce<hw>] :POWer [:LEVel] [:IMMediate] :OFFSet` on page 765

Attenuator Settings

The attenuator mode is set in the Attenuator Settings section.

Attenuator Mode

Sets the attenuator mode at the RF output.

"Auto"	Standard mode. The electronically switching attenuator switches with a 5 dB step width at fixed switching points.
"Fixed"	The level settings are made without switching the attenuator. When this operating mode is switched on, the attenuator and the relays are fixed in their current positions to provide level settings without interruption. The resulting variation range is defined and displayed under "Attenuator Fixed Range". Note: The function is effective when automatic level control is activated ("ALC State = On"). If the normal variation range is overranged or underranged, level errors increase considerably and the warning "Level under/over-range" appears in the info line. The spectral purity of the output signal decreases with high attenuation.

Remote command:

`:OUTPut<hw>:AMODE` on page 555

Fixed Range (PEP) In

Displays the level range in which the level is set without interruption for the "Attenuator Mode fixed" setting.

Remote command:

`:OUTPut<hw>:AFIXed:RANGe:UPPer?` on page 554

`:OUTPut<hw>:AFIXed:RANGe:LOWer?` on page 554

RF OFF Mode

Selects the attenuator mode, when the RF signal is switched off.

The setting of the RF OFF mode is not affected by an instrument preset (PRESET key), *RST and the "Save/Recall" function. This parameter is influenced only by the [Factory Preset](#).

"Unchanged" Freezes the setting of the attenuator when RF is switched off. The attenuator is only activated when RF is switched on. This setting is recommended if a constant VSWR (**V**oltage **S**tanding **W**ave **R**atio) is required.

"Full Attenuation" Sets attenuation to maximum when the RF signal is switched off. This setting is recommended for applications that require a high level of noise suppression.

Remote command:

`[:SOURce<hw>] :POWer:ATTenuation:RFOff:MODE` on page 764

User Variation

If the level is set using the rotary knob, the step width is defined in the "User Variation" section.

Variation Active

Activates the user-defined step width used when varying the level value with the rotary knob.

"ON" The level value set with the rotary knob is varied using the user-defined step width which is entered under "Variation Step".

"OFF" The level value set with the rotary knob is varied in steps of one unit at the cursor position (standard operating mode).

Remote command:

`[:SOURce<hw>] :POWer:STEP:MODE` on page 770


Variation Step

Sets the user-defined step width for entering the RF level using the rotary knob. Level variation with this step width must also be activated with "Variation Active".

Remote command:


`[:SOURce<hw>] :POWer:STEP [:INCRement]` on page 769

5.5.6.3 Power-On/EMF Settings

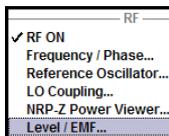

The power-on behavior of the R&S SMJ and the level display in the display header are set in the "Power-On / EMF Settings" section of the "RF Level/EMF/ALC/UCOR" dialog.

To open the "RF Level/EMF" dialog, select "RF/A Mod > Configure > Level/EMF" or use the MENU key under "RF/A Mod".

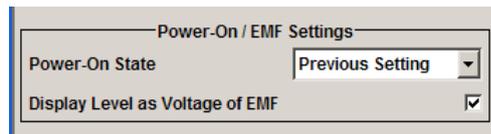

Power-On State - RF Signal

Selects the state which the RF output is to assume after the instrument is switched on.

"RF Off" The output is deactivated when the instrument is switched on.

"Previous Setting" When the instrument is switched on, the output assumes the same state as it had when the instrument was switched off.

Remote command:

`:OUTPut<hw>[:STATe]:PON` on page 557

Display Level as Voltage of EMF - RF Level

Activates display of the signal level as voltage of the EMF (no-load voltage). If this setting is deactivated, the level is displayed as a voltage over a 50 Ohm load.

Note: This setting is not affected by an instrument preset (PRESET key), *RST or the "Save/Recall" function. Only the [Chapter 5.2.3.18, "Factory Preset"](#), on page 152 resets the setting.

Remote command:

`[:SOURce<hw>]:POWER:EMF:STATe` on page 764

5.5.7 Automatic Level Control - ALC

Your signal generator is equipped with an automatic level control unit to obtain best RF level accuracy.

Automatic Level Control (ALC) is an adaptive control system to stabilize the RF output level. It continuously monitors the current level and adjusts it to keep a steady state over temperature and time.



ALC is active in almost all applications by default. However, the **Pulse Modulation** mode excludes ALC, as the control loop would detect incorrect values and result in level deviations.

Also note that ALC may detect incorrect values in **multi-transmitter** test setups. If multiple generators are coupled, reverse power may affect the ALC readings. Based on incorrect values, ALC would have an impact on the signal to intermodulation ratio.

ALC States

The following description basically explains the ALC states and their principle of operation. In particular **ALC OFF (Sample & Hold)** gives an overview on the function in terms of the equipment of the generator.

The R&S SMJ offers the ALC states:

- **AUTO**
automatically adjusts the output level to the operating conditions.
- **On**
enables ALC permanently, regardless of the currently selected mode.
- **Off**
deactivates ALC.
The instrument switches to **Sample & Hold (S&H)** state, which still allows to maintain a constant output level.

The following section explains the functionality of "Sample & Hold", to provide an overview and to indicate what is to be considered. "On" and "Auto" require no additional explanation. Furthermore, find the ALC state settings described in detail in [State - ALC](#).

ALC OFF (Sample & Hold)

In "S&H" mode, the signal generator switches for a short period of time into CW mode and activates ALC. ALC adjusts the level to the set value and the generator holds the value (freeze). Then, the generator switches ALC off again and back to the operating mode.

RF output behavior during Sample & Hold depends on the configuration of your instrument. Instruments equipped with...:

- an **electronic step attenuator**
The level is decreased by 30 dB.
- a **mechanical step attenuator**

The level control status is permanently displayed as a status message in the info line.




5.5.7.1 Automatic Level Control Settings



To open the "Automatic Level Control" dialog, select "RF/A Mod" > "Configure" > "Automatic Level Control" or use the MENU key under "RF/A Mod".

The combined dialog "ALC / UCOR" is divided into the several sections and provides access to the "Automatic Level Control" settings and to function "User Correction", see [Chapter 5.5.8, "User Correction"](#), on page 222).

The top sections of the dialog provide access to the level and attenuator settings (see [Chapter 5.5.6.3, "Power-On/EMF Settings"](#), on page 220 and [Chapter 5.5.6.2, "RF Level Dialog"](#), on page 216).

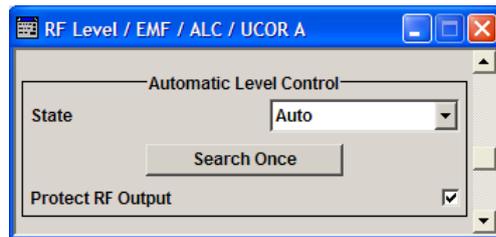

State - ALC

Activates/deactivates internal level control.

- "Auto" The instrument selects the most appropriate ALC mode automatically.
ALC is on in most operating conditions. Default state.
- "On" Activates ALC, regardless of the operating conditions.
- "Off (Sample & Hold)"
Deactivates internal level control.
Sample & hold closes the level control loop at every frequency and level change for a short period of time. The level control voltage is sampled and then clamped.

Remote command:

`[:SOURce<hw>] :POWer:ALC [:STATe]` on page 763

Search Once - ALC

Forces the generator to execute level adjustment once, although the "Sample & Hold" mode is active.

Remote command:

`[:SOURce<hw>] :POWer:ALC:SONCe` on page 763

Protect RF Output - ALC

The signal is attenuated for about 40 dB to protect external devices against internal signals, if the following prerequisites are fulfilled

- ALC state is On or AUTO
- High-Power Mode is Off
- I/Q Modulator is On
- Baseband is armed

Remote command:

`:OUTPut<hw>:PROTection:STATe` on page 556

5.5.8 User Correction

The "User Correction" function is used to create and activate lists in which level correction values predefined by the user are freely assigned to RF frequencies. Correction is performed by the user-defined table values being added to the output level for the respective RF frequency.

With frequencies which are not contained in the list, the level correction is determined by interpolation of the closest correction values.

The lists are created in the "List Editor". Each list is stored in its own file with the predefined file extension *.uco. The name of the User Correction file can be freely selected. The files are loaded from the "Lists..." file manager. Externally created tables with pairs of frequency and level values can be converted into User Correction files using the import function. The external files must have the file extension *.txt or *.csv. These file formats are provided e.g. by the Microsoft Excel program. The separators for table columns and for decimal floating-point numerals can be set. In addition, internally created User Correction data can be exported into ASCII files using the export function.

The amplitude can also be linearized automatically by means of an R&S NRP power sensor connected to one of the generator output signals. With the aid of the "Fill with Sensor" function, a table with correction values for external test assemblies can be automatically determined, e.g. for compensating the frequency response of cables. The User Correction list with the correction values acquired by the sensor is generated in the "Edit User Correction List" menu. The correction values can be acquired any time irrespective of the modulation settings of the generator.

Multi level measurements allow to take into account the changing VSWR for the different attenuator settings.

If user correction is activated, the "UCOR" display (User Correction) is shown in the header together with the "Level" display. The RF output level is the sum of both values.

"Level" + "UCOR" = Output level

If activated, user correction is effective in all operating modes.

5.5.8.1 User Correction Menu

Automatic Level Control...
User Correction...


To open the "User Correction" menu, select "RF/A Mod > Configure User Correction" or use the MENU key under "RF/A Mod".

The combined menu "ALC/UCOR" is divided into the several sections.

The top sections provide access to the level and attenuator settings, see [Chapter 5.5.6.2, "RF Level Dialog"](#), on page 216, and to the automatic level control settings, see [Chapter 5.5.7, "Automatic Level Control - ALC"](#), on page 220.

User Correction Settings

The "User Correction" settings are set in the most lower section of the combined dialog; this section is used to activate/deactivate user correction, and to create, select and activate the lists.

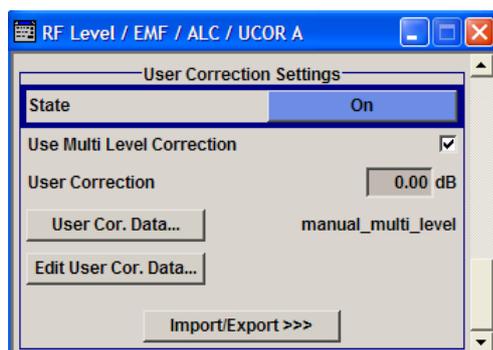

State - User Correction

Activates/deactivates user correction.

The "UCOR" status message appears in the frequency and level display.

Remote command:

`[:SOURce<hw>] :CORRection[:STATe]` on page 708

Use Multi Level Correction - User Correction

Activates the use of the multi level correction data (see [Chapter 5.5.8.3, "Filling the Correction List with Power Sensor Measurement Data"](#), on page 229) if checked. Otherwise the Single Level Correction measurement data is used.

Remote command:

`[:SOURce<hw>] :CORRection:MLEvel:STATe` on page 708

User Correction Value - User Correction

Indicates the current value for level correction.

Remote command:

`[:SOURce<hw>] :CORRection:VALue?` on page 708

User Cor. Data - User Correction

Calls the "File Select" menu for selecting and creating a list or the "File Manager".



Remote command:

`[:SOURce] :CORRection:CSET:CATalog?` on page 699

`[:SOURce<hw>] :CORRection:CSET[:SElect]` on page 707

`[:SOURce] :CORRection:CSET:DElete` on page 703

Edit User Cor. Data - User Correction

Calls the editor for editing the selected user correction list.

A list consists of any number of frequency/level value pairs. The currently selected list is displayed.

Each list is saved as a separate file with extension *.uco. The file name and the directory to which the file is saved are user-selectable.

Multi level lists which are filled automatically using the Fill with sensor function consist of nine level columns, one for each attenuator stage (see Chapter 5.5.8.3, "Filling the Correction List with Power Sensor Measurement Data", on page 229).

Note: Save list only after filling both columns (frequency and level), otherwise the entries are lost.

	Frequency / Hz	Power / dB	Power [1] @ HP/ dB	Power [2] @ 0 dB/ dB	Power [3] @ 5 dB/ dB
1	10 000 000.00	3.00	3.56	3.51	3.52
2	20 000 000.00	3.96	3.52	3.90	3.96
3	30 000 000.00	4.07	3.79	4.07	4.06
4	40 000 000.00	3.70	3.84	3.73	3.70
5	50 000 000.00	3.38	3.56	3.35	3.38
6	60 000 000.00	3.59	3.68	3.58	3.59
7	70 000 000.00	4.04	4.02	4.06	4.04
8	80 000 000.00	4.06	3.90	4.12	4.15
9	90 000 000.00	3.88	3.58	3.82	3.88
10	100 000 000.00	3.64	3.84	3.68	3.63
11	110 000 000.00	3.79	4.26	3.85	3.79
12	120 000 000.00	4.17	4.03	4.07	4.16
13	130 000 000.00	4.36	3.58	4.27	4.35
14	140 000 000.00	4.18	3.94	4.27	4.18
15	150 000 000.00	3.85	4.48	3.96	3.84
16	160 000 000.00	3.91	4.25	3.80	3.90
17	170 000 000.00	4.29	3.71	4.15	4.28

"Frequency / Hz" Enters the frequency to which the level correction value applies.

 
Note: The "Fill..." function allows to automatically enter any number of frequencies with freely selectable range and increment. Using the "Fill With Sensor" function of the "Edit" sub menu requires only the entry of the frequency values. The level values are automatically acquired by the connected power sensor.

"Power / Power[1..9] @ HP.. 35 dB" Enters the level correction value to which the specified frequency applies. The values can be entered manually or automatically with the "Fill With Sensor" function (available in the "Edit" sub menu).


"Goto" Selects row for editing.



If Goto row is selected, a window opens for entering the requested row.



"Edit" Calls a selection of possible actions described below.

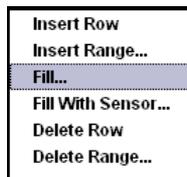

"Insert Row" Insert a new row before the marked row.

"Insert Range" Insert new rows before the marked row. The number of rows to be inserted can be defined in an entry window.



"Fill...." Opens a sub menu for defining a set of list values to be automatically entered in the ucor list (see [Chapter 5.5.8.2, "Filling the Correction List automatically"](#), on page 228).

"Fill With Sensor" Calls the menu to activate the filling of the user correction list with level values acquired by the selected power sensor (see [Chapter 5.5.8.3, "Filling the Correction List with Power Sensor Measurement Data"](#), on page 229).

"Delete Row" Deletes the marked row.

"Delete Range..." Allows to delete any number of rows starting with the marked row. The number of rows to be deleted can be defined in an entry window.



"Save as" Open the file menu to save the list under a new name.

Note: Save list only after filling both columns (frequency and level), otherwise the entries are lost.

Each list is saved to the R&S SMJ hard disk as a separate file with the file prefix *.ucor. The file name and the directory to which the file is saved are user-selectable.

"Save" The list is saved under its current name.

Remote command:

[\[:SOURce<hw>\]:CORRection:CSET\[:SElect\]](#) on page 707

[\[:SOURce<hw>\]:CORRection:CSET:DATA:FREQuency](#) on page 699

[\[:SOURce<hw>\]:CORRection:CSET:DATA:POWer](#) on page 700

Import/Export

User correction list can be imported from externally created files or exported into text or CSV-files. The import/export settings are available after clicking the "Import/Export" button.

Import/Export >>>

Expands the menu with the area for import and export of user correction files.

Externally edited Excel tables with any number of frequency/level value pairs can be imported as text or CSV-files and used for user correction.

Multi level lists which are filled automatically using the "Fill with sensor" function consist of nine level columns, one for each attenuator stage (see [Chapter 5.5.8.3, "Filling the Correction List with Power Sensor Measurement Data"](#), on page 229).

Conversely, you can also export internally created user correction lists as text or CSV-files.

Mode - User Correction

Selects if user correction lists should be imported or exported. The settings offered depend on the selected mode.

Remote command:

[\[:SOURce<hw>\]:CORRection:DEXChange:MODE](#) on page 706

Extension - User Correction

Selects the file extension of the ASCII file to be imported or exported. Selection "TXT" (text file) or "CSV" (Excel file) is available.

Remote command:

[\[:SOURce<hw>\]:CORRection:DEXChange:AFILe:EXTension](#) on page 704

Decimal Point - User Correction

Selects the decimal separator used in the ASCII data between '.' (decimal point) and ',' (comma) with floating-point numerals.

Remote command:

[\[:SOURce<hw>\]:CORRection:DEXChange:AFILe:SEParator:DECimal](#) on page 706

Column Separator- User Correction

Selects the separator between the frequency and level column of the ASCII table the user correction list is exported to or imported from.

Remote command:

`[:SOURce<hw>] :CORRection:DEXChange:AFILe:SEParator:COLumn`
on page 705

Select ASCII Source / Destination - User Correction

Calls the "File Manager" for selecting the ASCII file to be imported into a user correction list (source) or the ASCII file the user correction list is exported (destination) in.

Remote command:

`[:SOURce<hw>] :CORRection:DEXChange:AFILe:SElect` on page 705

Destination / Source - User Correction

Calls the "File Manager" for selecting the user correction list to be exported (source) into an ASCII file or the destination for the ASCII file to be imported (destination) in.

Remote command:

`[:SOURce<hw>] :CORRection:DEXChange:SElect` on page 707

Import / Export - User Correction

Starts the export or import of the selected file.

When import is selected, the ASCII file is imported as user correction list.


When export is selected, the user correction list is exported into the selected ASCII file.

Remote command:

`[:SOURce<hw>] :CORRection:DEXChange:EXECute` on page 706

5.5.8.2 Filling the Correction List automatically

The "Fill Table" menu enables you to automatically set the level correction values.

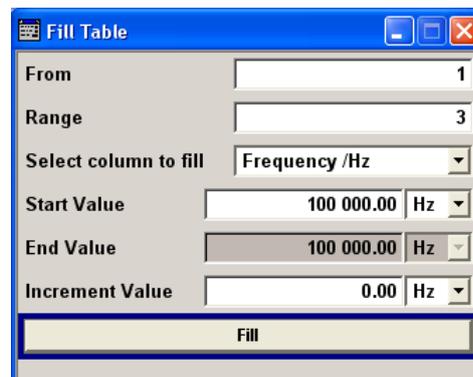

The start line and the number of rows to be filled are defined under "From" and "Range."

The column to be filled is selected under "Select column to fill". Depending on the selection here, the default for start, end, and increment value are set. As the settings are interdependent, a change of one parameter may result in the automatic change of one or more of the other parameters. The filling of the column with the selected value settings is started with button "Fill".



The correction list entries are only computed when the "Fill" button is pressed.

From

Sets the start value of the index range.

Remote command:

n.a.

Range

Sets the range for filling the table.

Remote command:

n.a.

Select column to fill

Selects either the frequency or the level column to be filled with the value defined below.

Remote command:

n.a.

Start value

Sets the start value for the frequency or the level entries.

Remote command:

n.a.

End value

Displays the end value for the frequency or the level entries.

Remote command:

n.a.

Increment value

Sets the increment for the frequency or the level entries.

Remote command:

n.a.

Fill

Fills the selected column in the set range with values, starting with the start value and using the set increment.

Remote command:

n.a.

5.5.8.3 Filling the Correction List with Power Sensor Measurement Data

The level correction values for the user correction list can be acquired by means of R&S NRP power sensors. The R&S NRP sensors are connected to either the SENSOR connector or to one of the USB interfaces. Configuration of the connection is performed in the "Power Sensor" menu (see [Chapter 5.5.10.1, "NRP-Z Power Viewer"](#),

on page 233). The filling of the user correction list with measurement data is performed in the ucor list editor (see ["Edit User Cor. Data - User Correction"](#) on page 224).

In the editor, the frequencies for which the correction values are to be acquired are entered in the frequency column (either manually or by means of the "Fill..." menu).



Do not save the list at this point, because the frequency entries are lost as long as there are no entries for the level column also. In the following these entries are automatically acquired by the connected power sensor.

All level correction values for the given frequency values are measured using the Power Sensor and automatically filled in the selected list after the "Execute" button is pressed. The list is automatically stored and recalled again after filling.

Fill User Correction Data with Sensor Settings

The "Fill with Sensor" button of the "Edit User Correction Data" menu opens the associated menu.

This dialog describes all parameters for filling a table automatically with sensor readings.



To select the sensor and determine its parameters, refer to [Chapter 5.5.10.1, "NRP-Z Power Viewer"](#), on page 233.

To fill the table, press the "Execute" button.

Fill User Correction Data with Sensor

Enables you to fill the table with correction data acquired by a connected power sensor from Rohde & Schwarz.

"Sensor" Displays connected sensors for selection.

"List To Fill" Indicates the used list file.

- "Include Zeroing"
Performs a zeroing procedure before acquiring the user correction data to improve precision. Since during zeroing no signal may be applied to the sensor, RF is temporarily switched off at the generator. When unchecked, the zeroing procedure is skipped. The RF signal level might be blanked shortly. This setting is recommended if blanking of RF is undesirable or the absence of power at the sensor can not be guaranteed.
- "Execute"
Performs automatic filling of the list, provided a sensor is detected and the user correction list contains at least one frequency value.

Remote command:

[\[:SOURce<hw>\]:CORRection:ZERoing:STATe](#) on page 709

[\[:SOURce<hw>\]:CORRection:CSET:DATA\[:SENSor<ch>\]\[:POWer\]:SONCe](#) on page 703

Used SMJ Settings for Measurement

Displays the settings relevant for the measurement.

- "RF Source"
Shows the path for which the correction menu settings are made.
- "Modulation"
Indicates the modulation state
- "Amplitude"
Shows the currently set level.
- "Use SParameter"
Indicates whether SParameter correction is used.
- "Multi Level Measurement"
Enables you to activate multi level measurement.
- "Attenuator Mode"
Displays the selected mode of the attenuator.
- "Fixed Range (PEP) In:"
Shows the level range.

Remote command:

n.a.

Multi Level Correction

The single level correction function described in [Fill User Correction Data with Sensor Settings](#) is a function, that acquires correction values for the output level within the frequency range of one particular attenuator step. The acquired correction values are stored in a table with at least one pair of frequency and level values.

The multi level correction function extends the single level correction measurement. It performs several measurements within the entire level range, i.e. at varying attenuator steps:

- one (first) measurement at the current output level, as in the single level measurement case
- eight measurements per each of the 5dB attenuator's steps up to 35 dB
- one measurement for the high power setting, provided the instrument is equipped with a high power option

To increase the level accuracy and provide precise measurement results, the instrument considers the changes in VSWR for the different attenuator settings. It automatically selects the corresponding reference level for each of the attenuator steps. For ranges from 40 dB on, the changes in VSWR are negligible; it is thus sufficient to apply the same correction value as for 35 dB attenuation.

The acquired measurement data is stored in a multi level correction table, containing one row per each frequency and ten additional power columns.

Frequency / Hz	Power [1] dB	Power [2] @ 0 dB/dB	Power [3] @ 5 dB/dB	Power [4] @ 10 dB/dB	Power [5] @ 15 dB/dB	Power [6] @ 20 dB/dB	Power [7] @ 25 dB/dB	Power [8] @ 30 dB/dB	Power [9] @ 35 dB/dB	
1 1 000 000 000.00	77.11	77.11	80.99	77.05	66.01	62.80	54.05	50.00	44.57	41.90
2 1 500 000 000.00	73.21	73.21	78.51	77.26	67.28	63.99	62.54	53.28	50.01	40.37
3 2 000 000 000.00	76.64	76.64	85.35	74.91	63.62	59.01	56.03	55.75	44.59	42.74
4										

1 = single level measurement power correction at the output level

2 = "Power [1]" power correction at high power attenuator settings

3a .. 3h = "Power [2] .. Power [9]" power corrections at the different attenuator steps

The R&S SMJ performs the multi level correction measurements in addition to a single level correction measurement. This enables you, with one single user correction list, to switch between the single and the multi level correction results.

Multi Level Values

The measurement values for the different attenuator settings are retrieved separately. The numeric suffix at MLEV correlates to the index of the column, e.g. suffix 3 denotes the column with the values for attenuator setting 5 dB.

Remote command:

[\[:SOURce<hw>\]:CORRection:CSET:DATA:POWer:MLEVel:STATe](#) on page 701

[\[:SOURce<hw>\]:CORRection:CSET:DATA:POWer:MLEVel<ch>?](#) on page 700

5.5.9 Reverse Power Protection

Starting from serial number 101001, the R&S SMJ (all frequency options) is equipped against overloading by an external signal applied to the RF output.

The reverse power protection is tripped when the power of the external signal becomes too high. A relay opens and interrupts the internal connection to the RF output. This condition is indicated in the display header by the "OVERLOAD" status message.

Overload

If an "Overload" status message is indicated in the display header, reset the overload protection by pressing the RF ON/OFF key.

The RF input is activated when the overload protection is reset.

Remote command:

[:OUTPut<hw>:PROTection:TRIPped?](#) on page 556

[:OUTPut<hw>:PROTection:CLEAr](#) on page 556

[:OUTPut<hw>\[:STATe\]](#) on page 557

5.5.10 RF Measurement

5.5.10.1 NRP-Z Power Viewer

The R&S SMJ features the power viewer function for measuring or monitoring either the RF output power, or a freely selectable signal source with R&S NRP-Z power sensors.

The instrument can perform up to 4 power measurements simultaneously.

To connect the sensors you have the following options:

- connect the sensor directly at the SENSOR connector.
A sensor connected there is always assigned as "Sensor 1".
- connect the sensor directly at a USB connector
To connect a sensor directly via USB, use one of the appropriate adapter cables R&S NRP-Z3 or R&S NRP-Z4.
- connect the sensor indirectly via USB using the R&S NRP-Z5 USB Sensor Hub.

For the assignment to the available connectors, see [Chapter 2, "Preparing for Use"](#), on page 19.



Using the R&S NRP-Z5 Sensor Hub

The R&S NRP-Z5 USB Sensor Hub (high-speed USB 2.0) can host up to 4 R&S NRP-Z sensors and provides simultaneous internal and external triggering of all connected sensors. You can directly connect the R&S NRP-Z Sensors to the standard NRP sensor connectors of the hub.

The hub is connected to the R&S SMJ either with the R&S NRP-Z2 extension cable, or via USB with the adapter cable R&S NRP-Z4.

See also the R&S website <http://www.rohde-schwarz.com> in section "Power Meters & Voltmeters > R&S NRP-Z Sensors" for information on the sensor hub and the available accessories.

The instrument automatically detects a connected R&S NRP-Z power sensor and indicates it in the "NRP-Z Power Viewer" dialog. Each connected sensor is assigned to one of the four channels, according to the sequence of connection.

For device specific information on the connected sensor see the [Chapter 5.2.3.5, "NRP-Z Info/Update"](#), on page 136 dialog. For information on the scope of your power sensor refer to the manual of your R&S NRP-Zxx power sensor.

A sensor continuously measures the average signal power of the selected source, such as an external signal, or the output signal of the signal generator with the RF level used as reference value. The signal generator shows the result in the [NRP-Z Power Viewer Settings](#) settings dialog, but you can also permanently display the readings in the block diagram.




Further functions of the R&S SMJ related to R&S NRP-Z power sensors are:

- Acquisition of level correction data, see [Chapter 5.5.8, "User Correction"](#), on page 222.
The acquired level correction data is used to create and activate lists in which level correction values predefined by the user are freely assigned to RF frequencies. Correction is performed by the user-defined table values being added to the output level for the respective RF frequency.
- The software version of the connected power sensor can be retrieved by means of the remote control command `SENSe<ch>[:POWer]:TYPE?` on page 567.
Use the [Chapter 5.2.3.5, "NRP-Z Info/Update"](#), on page 136 dialog to update the sensor software.

NRP-Z Power Viewer Settings



- ▶ To access the dialog for configuring the RF signal level, perform one of the following:
 - Select "RF/A Mod > config... > RF Measurement > NRP-Z Power Viewer".
 - Press the MENU key and select "RF/A Mod > RF Measurement > NRP-Z Power Viewer".

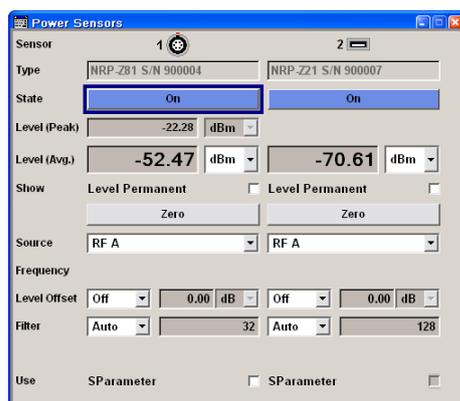

The dialog is structured like a table showing the values for sensor 1 in the left "column" and the values of the second/third sensor in the middle/right "column". The instrument detects connected sensors automatically and indicates them in the dialog.

"Sensor 1" is firmly assigned to the sensor on the circled SENSOR socket. If no sensor is connected to this socket, channel 1 remains not assigned. Sensors 2...4 are assigned to the sensors at the USB connectors, according to their sequence of connection.

The remote commands required to define the settings are described in [Chapter 7.15, "SENSe, READ and INITiate Subsystems"](#), on page 558.

Sensor

Indicates the connector used for the detected sensors.

In remote control, the sensors are set up using the `SENSe` commands. The remote measurement is triggered by the `READ` query which also provides the measurement results.

The sensor is selected by suffix 1, 2, 3 or 4 in key word `SENSe` or `READ` of the command header.

Suffix 1 denotes the sensor connected to `SENSOR`, suffix 2 the one at the first USB interface, and suffix 3 and 4 are assigned to the sensors at the following USB interfaces. The suffix is identical to the index which is assigned automatically to each sensor upon connection.

Note: The software version of the connected power sensor can be retrieved by means of the remote control command `:SENS:POW:TYPE?`.

Use the "Setup >" [Chapter 5.2.3.5, "NRP-Z Info/Update"](#), on page 136 dialog to update the sensor software.

Remote command:

`SENSe<ch>[:POWer]:STATus[:DEVIce]?` on page 566

Type

Indicates the type and the serial number of the connected R&S NRP-Z power sensor. The sensor type is automatically detected.

Remote command:

`SENSe<ch>[:POWer]:TYPE?` on page 567

`SENSe<ch>[:POWer]:SNUMber?` on page 565

State

Activates/deactivates level measurement by the power sensor.

The local state is set with the `INIT` command. Switching the local state off enhances the measurement performance.

In remote control, the sensors are set up using the `SENSe` commands. The remote measurement is triggered by the `READ` query which also provides the measurement results. The state is not influenced by these commands, measurements results can be retrieved with local State on or off.

The sensor is selected by suffix 1, 2, 3 or 4 in key word `SENSe` or `READ` of the command header.

Suffix 1 denotes the sensor connected to `SENSOR`, suffix 2 the one at the first USB interface, and suffix 3 and 4 are assigned to the sensors at the following USB interfaces. The suffix is identical to the index which is assigned automatically to each sensor upon connection.

To query the availability of a sensor at a given connector, use the command `SENSe<ch>[:POWer]:STATus[:DEVIce]?` on page 566.

Remote command:

`:INITiate<ch>[:POWer]:CONTinuous` on page 559

Level (Peak)

With certain power sensors only, for example R&S NRP-Z81.

Indicates the measured peak level value with the selected unit.

Remote command:

`:READ<ch>[:POWER]?` on page 560

Level (Avg.)

Indicates the measured level value with the selected unit.

Remote command:

`:READ<ch>[:POWER]?` on page 560

Unit

Selects the unit used for result display.

The power sensor provides the measured value in Watt.

In which unit the measured value is indicated is selected here and might be Watt, dBm or dBuV.

Remote command:

`:SENSe<ch>:UNIT[:POWER]` on page 567

Permanent Display State

Activates the permanent indication of the power measurement result in the upper right corner of the block diagram. The instrument shows the type of sensor, the corresponding connector, the measurement source and - if set - the offset.

2	NRP-Z11Offs	-83.10dBm	RF
3	NRP-Z81	-59.39dBm	User

It is possible to switch the permanent display active for several sensors. The instrument indicates the values of a maximum of two sensors simultaneously, in ascending order of connected channels. If you activate the display of a third sensor, the instrument fades out the values of the last highest channel number automatically.

Remote command:

`:SENSe<ch>[:POWER]:DISPlay:PERManent:STATe` on page 561

Display Priority

Determines whether the instrument displays the measured average or the peak power permanently on the screen.

To select the peak power display, it is required that the R&S NRP-Zxx sensor supports this feature. On power-on or connecting a sensor the average power value is set by default.

To enable the permanent display in the block diagram, select [Permanent Display State](#).

Remote command:

`:SENSe<ch>[:POWER]:DISPlay:PERManent:PRIority` on page 561

Zero - Power Sensors

Activates the auto zero function.

Zeroing calibrates the external power sensor by adjusting its reading at zero signal power. For this purpose, the RF power source must be switched off or disconnected from the sensor (see tips below). R&S power sensors automatically detect the presence of any significant input power. This aborts zeroing and generates an error message. Zeroing can take a few seconds, depending on the sensor model; refer to the documentation of your external power sensor for more information.

Tips for zeroing

Zeroing should be performed:

- During warm-up after switching on or connecting the instrument
- After a substantial change of the ambient temperature
- After fastening the power sensor module to an RF connector at high temperature
- After several hours of operation
- When very low-power signals are to be measured, e.g. less than 10 dB above the lower measurement limit.
- Switch off the RF power source for zeroing; do not disconnect it from the power sensor. In this way you will maintain the thermal equilibrium, and zeroing will also compensate for the noise superimposed on the measured signal (e.g. from a broadband amplifier).

Remote command:

`:SENSe<ch>[:POWer]:ZERO` on page 567

Source

Selects the source for measurement.

"RF"	Measurement source is the RF signal of the generator. The RF frequency is used as the measurement frequency of the sensor and the corresponding correction factor is used. In this mode the RF frequency of the generator is send to the sensor automatically if changed.
"User"	Measurements source is any freely selectable source. The frequency is entered manually under frequency (e.g. for measurement of amplifier gain with 2 sensors).

Remote command:

`:SENSe<ch>[:POWer]:SOURce` on page 566

Frequency

Source User only

Enters the frequency for measurement source "User".

Remote command:

`:SENSe<ch>[:POWer]:FREQuency` on page 564

Level Offset

Activates and defines a level offset which is added to the measured value. This allows e.g. an attenuator in the signal path to be considered. The offset is always entered in dB, irrespective of the selected unit for result display.

Remote command:

`:SENSe<ch>[:POWer]:OFFSet:STATe` on page 565

`:SENSe<ch>[:POWer]:OFFSet` on page 565

Filter

Determines the length of the filter used for the measurement. The filter length affects the measurement time directly.

The averaging filter is used to reduce fluctuations in the measured result to the extent desired. Such fluctuations can be caused by inherent noise of the measuring instrument, modulation of the measurement signal or beats from the superposition of adjacent carriers. A more stable display has to be traded off against longer measurements. The measurement result is obtained from a two-stage averaging process.

Note: Longer measurements do not mean that it takes longer to display a new result, but rather that it takes longer for the result to settle when the power changes.

Measurements are continuously repeated in a predefined time window. The measurement result is obtained by averaging the measured values for the last 2N time windows. The number N is the filter length, the factor of 2 arises because the output signals from the microwave detector to suppress low-frequency noise are chopped at the same rate as the time windows, which means that an independent measured value can only be obtained from two consecutive values. As the filter length is the multiplier for the time window it directly influences the measurement time.

The filter length can be selected automatically or can be manually set to a fixed value. As a preliminary, you should always check if the auto mode is giving satisfactory results because you will always have to adjust an optimal, manual filter-length setting if the power is not constant.

Selection "Fixed Noise" is offered for achieving defined measurement accuracy.

"Auto" The filter length is automatically selected and adapted to the currently measured value. With very high signals the filter length and therefore the measurement time can be short. With very low signal levels the filter length and therefore the measurement time is increased in order to reduce noise. The used filter length is indicated in the field to the right, see [Filter Length](#).

"User" The filter length is set manually.
The filter length is entered in the entry window to the right. As the filter length works as a multiplier for the time window, this results in a constant measurement time.
Note: The time window varies depending on the used sensor. For most sensors it is fixed to 20 ms. For the R&S NRP-Z81 sensor it is 10 us. Therefore, the user filter length for the R&S NRP-Z81 has to be about 1000 times larger than the filter length for other sensors in order to achieve the same filtering result.
The [Auto Once](#) button can be used to search for the optimum filter length for the current measurement conditions. The found filter length is indicated in the field to the right, see [Filter Length](#).

"Fixed Noise" The averaging factor is selected so that the sensors intrinsic noise (2 standard deviations) does not exceed the specified noise content. The desired noise content is entered in the entry field to the right, see [Noise Content](#).
To avoid very long settling times when the power is low, the averaging factor can be limited with the [Timeout](#) parameter.

Remote command:

`:SENSe<ch>[:POWER]:FILTer:TYPE` on page 563

Filter Length ← Filter

Indicates the used filter length for filter type "Auto" or "User".

Remote command:

`:SENSe<ch>[:POWER]:FILTer:LENGTh:AUTO?` on page 561

`:SENSe<ch>[:POWER]:FILTer:LENGTh[:USER]` on page 562

Noise Content ← Filter

Sets the noise content for filter type "Fixed Noise".

Remote command:

`:SENSe<ch>[:POWER]:FILTer:NSRatio` on page 562

Timeout ← Filter

Sets a time limit for the averaging process.

Remote command:

`:SENSe<ch>[:POWER]:FILTer:NSRatio:MTIME` on page 563

Auto Once ← Filter

Calculates the optimum filter length for the current measurement conditions and indicates the value in the [Filter Length](#).

Remote command:

`:SENSe<ch>[:POWER]:FILTer:SONCe` on page 563

Use Default Aperture Time

Enables you to specify a user-defined aperture time for the respective sensor.

The sensor default setting is usually sufficient. If however, the readings vary, it is recommended that you adjust the aperture time exactly to one modulation period, in order to obtain stable readings. To specify the aperture time, see [Aperture Time](#).

Remote command:

`:SENSe<ch>[:POWER]:APERTure:DEFault:STATe` on page 559

Aperture Time

Defines the acquisition time for the respective sensor, provided the entry field is enabled, see [Use Default Aperture Time](#).

For example you can adjust the aperture time exactly to one signal period, in order to obtain a sufficient low average value.

Remote command:

`:SENSe<ch>[:POWER]:APERTure:TIME` on page 559

Use SParameter - Power Sensors

Activates the use of the S-Parameter correction data of the connected power sensor. For sensors with attenuator this checkbox is automatically checked.

Refer to the manual of the connected R&S NRP-Zxx power sensor for a description on how to use the SParameter table.

Remote command:

`:SENSe<ch>[:POWer]:CORRection:SPDevice:STATe` on page 560

Enable Logging

Activates recording of R&S NRP-Z power sensor readings.

If enabled, every value measured by a connected power sensor and indicated in the user interface, is written to a log file. Per measurement the function logs the measured value (2 readings when you work with peak sensors), the sensor type and the measurement time (time stamp).

The function automatically creates the file name `SensLog<n>.txt` and stores the file in `*txt` format under `D:\user\SensorLogging` on the hard disk. You can enable logging for each connected sensor separately. If enabled, one file per sensor is written.

Note: This specific function is intended for measurements with long time intervals, or if there is a risk that the connection to the sensor can be interrupted and you need the data for reconstruction.

The simplified recording function continuously writes the values in the file of the corresponding sensor number, like `Sens1Log.txt`. When you start a new measurement, the existing data will not be overwritten, but added to the file.

If you use this function, it is recommended that you regularly remove the files from the hard disk, since they require storage capacity.

Remote command:

`:SENSe<ch>[:POWer]:LOGGing:STATe` on page 564

5.5.11 Analog Modulation

5.5.11.1 Overview

The R&S SMJ provides the analog modulations amplitude modulation (AM), broad-band amplitude modulation (BB-AM) and pulse modulation (Pulse) for the basic unit (R&S SMJ+ frequency option R&S SMJ-B10x) without additional equipment options.

However, the analog modulations frequency modulation (FM) and phase modulation (PhiM) require option R&S SMJ-B20 (FM/PhiM Modulator).

Settings for the modulation are made in separate modulation menus. These menus can be accessed in the block diagram by way of the "RF/A Mod" function block, or by means of the menu with the same name which is opened using the MENU key.

Enabling/Disabling Analog Modulations using the MOD On/Off Key

The MOD ON/OFF key switches the modulations on and off.

MOD ON/OFF

Press the MOD ON/OFF key to enable/disable analog modulations.

Pressing the key again restores the status that was active before the last switch-off. "MOD OFF" is displayed in the info line of the header next to the "Level" field.

Remote command:

[\[:SOURCE<hw>\]:MODulation\[:ALL\] \[:STATe\]](#) on page 758

Modulation Sources

The following modulations use internal and external modulation sources:

- Amplitude modulation
- Pulse modulation
- Frequency modulation
- Phase modulation

Only external modulation sources can be used for a BB-AM.

Internal Modulation Sources

The LF generator is available as internal modulation source. The generator supplies sinusoidal signals in the frequency range 0.1 Hz to 1 MHz. With pulse modulation, the sinusoidal signal from the LF generator is formed internally into a rectangular signal used to actuate the pulse modulator.

The noise generator supplies white noise with selectable bandwidth and level distribution.

See also [Chapter 5.5.12.1, "Overview of LF Generator"](#), on page 253.

External Modulation Sources

The EXT MOD input at the rear of the instrument is provided as the external modulation source for amplitude, pulse, frequency and phase modulation. The external signal for broadband amplitude modulation is fed in via the I-input.

The external modulation signal for AM, FM and PM at the input must have a voltage of $U_S = 1 \text{ V}$ ($U_{EFF} = 0.707 \text{ V}$) in order to achieve the displayed modulation depth and range. The input voltage should not exceed 1 V, otherwise modulation distortions might occur.

The input shows some hysteresis with threshold levels of 1.1 V/1.7 V. The voltage must not exceed 10 V

Simultaneous Operation of Several Modulations or Other Operating Modes

The table shows the modulations and operating modes which can be activated simultaneously (+) or which deactivate each other (-).

	AM	FM	PhiM	Pulse	BB-AM	I/Q	DM	ARB
Amplitude modulation (AM)	/	+	+	+	-	-	-	-
Frequency modulation (FM)	+	/	-	+	+	+	+	+
Phase modulation (PhiM)	+	-	/	+	+	+	+	+
Pulse modulation	+	+	+	/	+	+	+	+
Broadband AM (BB-AM)	-	+	+	+	/	-	-	-

	AM	FM	PhiM	Pulse	BB-AM	I/Q	DM	ARB
Vector modulation (I/Q)	-	+	+	+	-	/	-	-
Digital modulation (DM)	-	+	+	+	-	-	/	-
ARB	-	+	+	+	-	-	-	/

5.5.11.2 Amplitude Modulation (AM)

An internal or external source can be selected for amplitude modulation. The LF GEN modulation generator is available as the internal source. The I/Q modulator is used for amplitude modulation. Two-tone AM is possible by simultaneously switching on the external and internal source.

The EXT MOD input connector for external feed of analog modulation signals is at the rear of the instrument. The coupling mode of the input (AC or DC) can be selected.

It is not possible to use AM simultaneously with:

- broadband AM,
- I/Q modulation,
- arbitrary waveform generation,
- digital modulation and
- digital standards.

The AM modulation depth is limited by the maximum peak envelope power (PEP).

Amplitude Modulation Settings

To open the "Amplitude Modulation" dialog, select "RF/A Mod > Configure > Amplitude Modulation" or use the MENU key under RF/A Mod.



The middle section of the combined dialog "Pulse/Amplitude Modulation/Broadband AM" provides access to the amplitude modulation settings.

The top section provides access to the pulse modulation settings, see [Chapter 5.5.11.6, "Pulse Modulation \(PM\)"](#), on page 251.

The lower section provides access to the broadband amplitude modulation settings, see [Chapter 5.5.11.3, "Broadband Amplitude Modulation \(BB-AM\)"](#), on page 244.

Amplitude Modulation	
State	<input type="button" value="On"/>
AM Source	Internal + External
AM Depth	30.0 %
AM Sensitivity	30.0 % per Volt
AM External Coupling	AC
Input Connector	EXT MOD
External Input Impedance	50 Ω
LFGen Frequency	13.000 0 kHz

State

Activates amplitude modulation.

Activation of AM deactivates:

- BB AM
- I/Q modulation
- arbitrary waveform generation
- digital modulation
- digital standards

Remote command:

[\[:SOURce<hw>\]:AM:STATe](#) on page 571

AM Source

Selects the source for the AM modulation signal.

"Internal" Uses the internal LF generator as modulation signal source for AM.

"External" Uses an externally applied modulation signal.
The external signal is input via the EXT MOD connector.

"Intern + Extern"
Uses both, the internal and externally applied modulation signal, for example to perform two-tone AM.

Remote command:

[\[:SOURce<hw>\]:AM:SOURce](#) on page 571

AM Depth

Sets the modulation depth in percent.

Remote command:

[\[:SOURce<hw>\]:AM\[:DEPTH\]](#) on page 569

LF Gen Frequency

Sets the frequency of the LF generator.

This setting affects all analog modulations which use the LF generator as the internal modulation source.

Remote command:

[\[:SOURce\]:LFOutput:FREQuency](#) on page 738

AM Sensitivity

Displays the input sensitivity of the externally applied modulation signal at the EXT MOD input in %/V.

The modulation depth entered under [AM Depth](#) is achieved with 1 Volt modulation of the input.

Remote command:

[\[:SOURce<hw>\]:AM:SENSitivity?](#) on page 570

AM External Coupling

Selects the coupling mode (AC or DC) for external feed.

Note: Coupling for external feed via input EXT MOD can be set independently for all modulations using the external modulation signal.

"AC" Disconnects the DC voltage component and uses only the AC component of the modulation signal.

"DC" Uses the modulation signal with both components, AC and DC.

Remote command:

[\[:SOURce<hw>\]:AM:EXTernal:COUpling](#) on page 569

AM Input Connector

Displays the modulation input. The display only appears in the case of external modulation.

Remote command:

n.a.

External Input Impedance

(Source External only)

Sets the impedance for the external modulation signal, applied at the EXT MOD connector.

You can select 50 Ohm or high (>100 kOhm).

Note: The selection of 50 Ohm to ground requires that your instrument is equipped with the extended synthesis assembly (SynEx).

This setting affects all analog modulations which use the external modulation signal.

Remote command:

[\[:SOURce<hw>\]:INPut:MODext:IMPedance](#) on page 721

5.5.11.3 Broadband Amplitude Modulation (BB-AM)

Broadband amplitude modulation uses the I/Q modulator for amplitude modulation.

An external source is always used. The modulation signal input is the I-input of the I/Q modulator. The sensitivity for broadband amplitude modulation is 0.25V / 100% modulation depth. It is not possible to set a modulation depth for BB-AM.

It is not possible to use BB-AM simultaneously with:


- AM,
- I/Q modulation,

- arbitrary waveform generation (ARB),
- digital modulation and
- digital standards.

The upper level limit for BB-AM is the same as that for I/Q modulation. PEP is up to 6 dB above the display value, depending on the modulation depth.

Broadband Amplitude Modulation Menu


To open the "Broadband Amplitude Modulation" menu, select "RF/A Mod > Configure > Broadband Amplitude Modulation" or use the MENU key under "RF/A Mod".

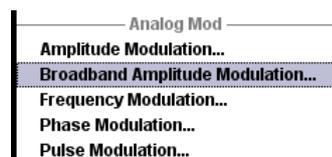

The combined "Pulse Modulation/Amplitude Modulation /Broadband AM" dialog provides access to the Broadband AM configuration in the bottom section.

The top section provides access to the pulse modulation settings; see [Chapter 5.5.11.6, "Pulse Modulation \(PM\)"](#), on page 251.

The middle section provides access to the amplitude modulation settings; see [Chapter 5.5.11.2, "Amplitude Modulation \(AM\)"](#), on page 242.

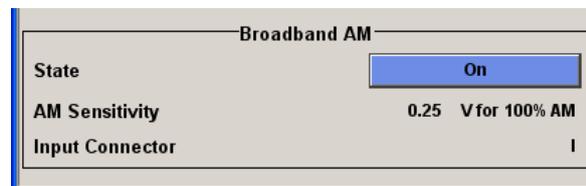

State

Activates broadband AM modulation.

Note: Activation of broadband AM deactivates AM, I/Q modulation, digital modulation and digital standards.

Remote command:

`[:SOURce<hw>] :AM:BBANd [:STATe]` on page 569

AM Sensitivity

Displays the input sensitivity of the I IN input in V/100% modulation depth. The input sensitivity cannot be modified in the case of broadband AM since it is not possible to set the range.

Remote command:

`[:SOURce<hw>] :AM:BBANd:SENSitivity?` on page 568

Input Connector

Displays the modulation input (I-input connector of the I/Q modulator).

Remote command:

n.a.

5.5.11.4 Frequency Modulation (FM)

Frequency modulation (FM) requires option R&S SMJ-B20 (FM/PhiM Modulator).

An internal and/or external source can be selected for frequency modulation. The LF GEN modulation generator is available as the internal source. Two-tone FM is possible by simultaneously switching on the external and internal source.


The EXT MOD input connector for external feed is at the rear of the instrument. The coupling mode of the input (AC or DC) and 50 Ohm or high (> 10 kOhm) impedance can be selected.




It is not possible to use frequency modulation simultaneously with phase modulation. See ["Simultaneous Operation of Several Modulations or Other Operating Modes"](#) on page 241 for an overview in detail.

Frequency Modulation Settings

To access the "Frequency Modulation" dialog, select "RF/A Mod > Configure > Frequency Modulation" or use the MENU key under "RF/A Mod".

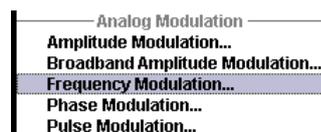

You can configure frequency modulation settings in the top section of the combined "Frequency/Phase Modulation" dialog. In the lower section, you can find the settings for phase modulation, [Chapter 5.5.11.5, "Phase Modulation \(PhiM\)"](#), on page 248.

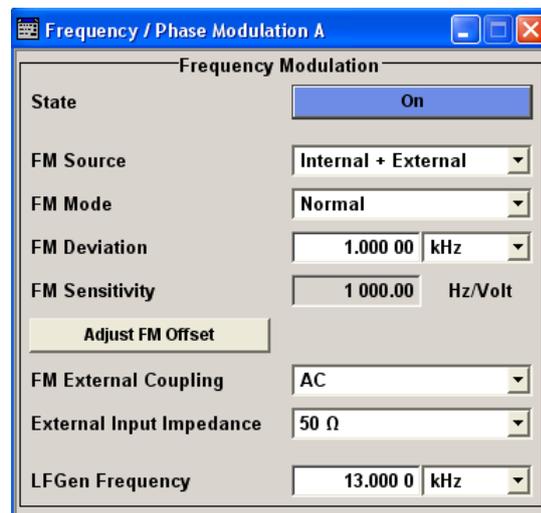

State

Activates frequency modulation.

Activation of FM deactivates phase modulation.

Remote command:

[:SOURce<hw>] :FM:STATe on page 712

FM Source

Selects the source for the FM signal.

"Internal" Uses the internal LF generator as modulation signal source for FM.

"External" Uses an externally applied modulation signal.
The external signal is input via the EXT MOD connector.

"Internal + External"
Uses both, the internal and externally applied modulation signal, for example to perform two-tone FM.

Remote command:

[:SOURce<hw>] :FM:SOURce on page 711

FM Mode

Selects the mode for the frequency modulation.

"Normal" The maximum range for modulation bandwidth and FM deviation is available.

Remote command:

[:SOURce<hw>] :FM:MODE on page 710

FM Deviation

Sets the modulation deviation in Hz.

The deviation is given as the absolute deviation in relation to the set center frequency, for example a deviation 5 MHz at a center frequency of 1 GHz leads to a frequency modulation between 995 MHz and 1005 MHz.

The maximum deviation depends on the RF frequency set and the selected modulation mode (see data sheet). It is possible to enter a deviation that is too high for a certain RF frequency or to vary the RF frequency to a range in which the deviation can no longer be set. In this case the maximum possible deviation is set and an error message is displayed.

The deviation of the internal source must not exceed the deviation of the external source in case of modulation source "Int+Ext".

Remote command:

[:SOURce<hw>] :FM[:DEViation] on page 709

LF Gen Frequency

Sets the frequency of the LF generator.

This setting affects all analog modulations which use the LF generator as the internal modulation source.

Remote command:

[:SOURce] :LFOutput:FREQuency on page 738

FM Sensitivity

Displays the input sensitivity of the externally applied modulation signal at the EXT MOD input in Hz/V.

The modulation deviation entered with **FM Deviation** is achieved with 1 Volt (= U_{peak}) of the input signal.

Note: The input voltage should not exceed 1.1 V_p otherwise modulation distortions might occur.

Remote command:

`[:SOURce<hw>] :FM:SENSitivity?` on page 711

Adjust FM Offset

Starts the adjustment for the FM/PhiM modulator. The option is adjusted with respect to DC-offset.

Remote command:

`:CALibration<hw>:FMOffset [:MEASure] ?` on page 522

FM External Coupling

(Source External only)

Selects the coupling mode (AC or DC) for the externally applied frequency modulation signal.

Note: Coupling for external feed via input EXT MOD can be set independently for all modulations using the external modulation signal.

"AC" Disconnects the DC voltage component and uses only the AC component of the modulation signal.

"DC" Uses the modulation signal with both components, AC and DC.

Remote command:

`[:SOURce<hw>] :FM:EXTernal:COUpling` on page 710

External Input Impedance

(Source External only)

Sets the impedance for the external modulation signal, applied at the EXT MOD connector.

You can select 50 Ohm or high (>100 kOhm).

Note: The selection of 50 Ohm to ground requires that your instrument is equipped with the extended synthesis assembly (SynEx).

This setting affects all analog modulations which use the external modulation signal.

Remote command:

`[:SOURce<hw>] :INPut:MODext:IMPedance` on page 721

5.5.11.5 Phase Modulation (PhiM)

Phase modulation (ϕ M) requires option R&S SMJ-B20 (FM/ ϕ M Modulator).



It is not possible to use phase modulation simultaneously with frequency modulation. See "[Simultaneous Operation of Several Modulations or Other Operating Modes](#)" on page 241 for an overview in detail.

An internal and/or external source can be selected for phase modulation. The LF GEN modulation generator is available as the internal source.


The EXT MOD input connector for external feed of analog modulation signals is at the rear of the instrument. The coupling mode of the input (AC or DC) and the impedance can be selected.

Selection between the following modulation modes is possible:

- "High Bandwidth" mode with full setting range for modulation bandwidth and limited ϕ M deviation.
- "High Deviation" mode with full setting range for ϕ M deviation and a reduced setting range for modulation bandwidth. Phase noise is reduced in the lower modulation frequency range compared to the default mode.


Phase Modulation Dialog

To open the "Phase Modulation" dialog, select "RF/A Mod > Configure > Phase Modulation" or use the MENU key under "RF/A Mod".

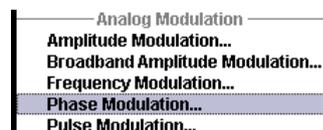

The lower section of the combined dialog Frequency/Phase Modulation provides access to the phase modulation settings.

The upper section provides access to the frequency modulation, see [Chapter 5.5.11.4, "Frequency Modulation \(FM\)"](#), on page 246

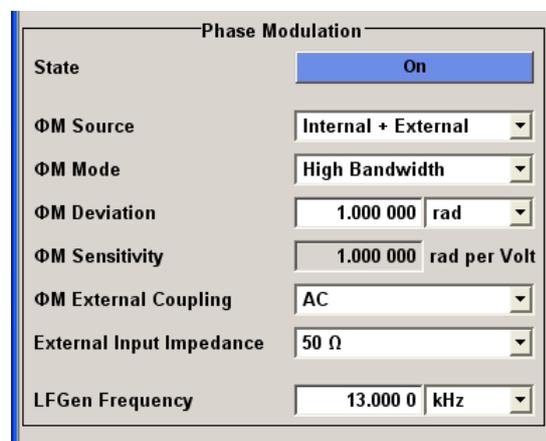

State

Activates ϕ M modulation.

Activation of ϕ M deactivates frequency modulation.

Remote command:

[:SOURce<hw>] :PM:STATe on page 762

ϕ M Source

Selects the source for the ϕ M signal.

- "Internal" Uses the internal LF generator as the modulation signal source for ϕ M.
- "External" Uses an externally applied modulation signal.
The external signal is input via the EXT MOD connector.
- "Internal + External"
Uses both, the internal and externally applied modulation signal.

Remote command:

[\[:SOURce<hw>\]:PM:SOURce](#) on page 761

ϕ M Mode

Selects the mode for the phase modulation.

"High Bandwidth"

The maximum range for modulation bandwidth is available. However, phase noise is increased for low modulation frequencies. The range for ϕ M deviation is limited.

This mode is recommended for high modulation frequencies.

"High Deviation"

The maximum range for ϕ M deviation is available. Phase noise is improved for low frequencies compared to the default mode. The range of modulation frequency is limited (see data sheet).

This mode is recommended for low modulation frequencies and/or high ϕ M deviation.

Remote command:

[\[:SOURce<hw>\]:PM:MODE](#) on page 760

ϕ M Deviation

Sets the modulation deviation in RAD.

The maximum deviation depends on the RF frequency set and the selected modulation mode (see data sheet). It is possible to enter a deviation that is too high for a certain RF frequency or to vary the RF frequency to a range in which the deviation can no longer be set. In this case the maximum possible deviation is set and an error message is displayed.

The deviation of the internal source must not exceed the deviation of the external source in case of modulation source "Int+Ext".

Remote command:

[\[:SOURce<hw>\]:PM\[:DEViation\]](#) on page 760

LF Gen Frequency

Sets the frequency of the LF generator.

This setting affects all analog modulations which use the LF generator as the internal modulation source.

Remote command:

[\[:SOURce\]:LFOutput:FREQuency](#) on page 738

ϕM Sensitivity

Displays the input sensitivity of the externally applied modulation signal at the EXT MOD input in RAD/V.

The modulation deviation entered with **ϕM Deviation** "ϕM Deviation" is achieved with 1 Volt ($=U_{\text{peak}}$) of the input signal.

Note: The input voltage should not exceed $1.1 V_p$ otherwise modulation distortions might occur.

Remote command:

`[:SOURce<hw>] :PM:SENSitivity?` on page 761

Mod External Coupling

Selects the coupling mode ("AC" or "DC") for the external modulation signal.

Note: Coupling for external feed via input EXT MOD can be set independently for all modulations using the external modulation signal.

"AC" Disconnects the DC voltage component and uses only the AC component of the modulation signal.

"DC" Uses the modulation signal with both components, AC and DC.

Remote command:

`[:SOURce<hw>] :PM:EXTernal:COUpling` on page 760

External Input Impedance

(Source External only)

Sets the impedance for the external modulation signal, applied at the EXT MOD connector.

You can select 50 Ohm or high (>100 kOhm).

Note: The selection of 50 Ohm to ground requires that your instrument is equipped with the extended synthesis assembly (SynEx).

This setting affects all analog modulations which use the external modulation signal.

Remote command:

`[:SOURce<hw>] :INPut:MODext:IMPedance` on page 721

5.5.11.6 Pulse Modulation (PM)

Pulse modulation is available for the basic unit (R&S SMJ + frequency option R&S SMJ-B10x) without additional equipment options.

An internal or external source can be selected for pulse modulation. A simple rectangular signal with selectable repetition frequency is available as the internal signal. This signal is formed from the sinusoidal signal supplied by the LF generator.

The external signal is input via the EXT MOD connector at the rear of the instrument. The polarity of the external pulse modulation can be selected. If Polarity is set to Normal, the RF level is ON if the level is HIGH at the modulation input.




Automatic Level Control is deactivated with pulse modulation!

When pulse modulation is activated, the ALC state of the R&S SMJ is automatically changed to "ALC OFF" ("Sample & Hold"). In this state, the ALC loop is opened and the output level is not regulated but the level modulator is set directly. In order to set the correct output level, a sample & hold measurement is executed after each frequency or level setting.

The level is decreased by 30 dB during "Sample&Hold" measurement.


Pulse Modulation Settings

To open the "Pulse Modulation" menu, select "RF/A Mod > Configure > Pulse Modulation" or use the MENU key under "RF/A Mod".

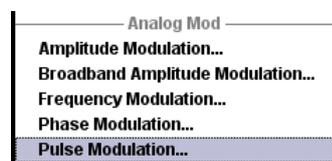

In the upper section of the menu, the modulation source is selected and the modulation switched on. The configuration of the selected external and/or internal modulation source is performed in the lower section of the menu.

The menu varies according to the selected modulation source.

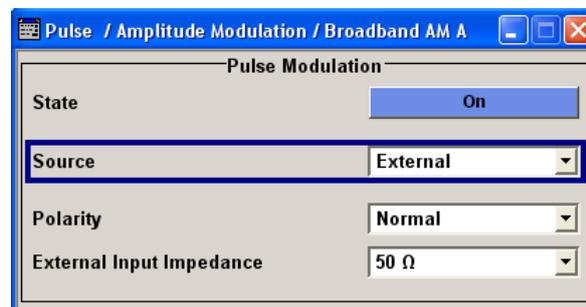

State

Activates pulse modulation.

Activation of pulse modulation deactivates ALC and power ramping.

Remote command:

[:SOURce<hw>] :PULM:STATe on page 774

Source

Selects the modulation signal source for pulse modulation.

"Internal" Uses the internal modulation signal source. The LF generator generates a rectangular pulse with the set frequency.

"External" Uses an externally applied modulation signal. The external modulation signal is input via the PULSE EXT connector.

Remote command:

[\[:SOURce<hw>\]:PULM:SOURce](#) on page 773

LFGen Frequency - Pulse Modulation

Sets the repetition frequency of the internal signal.

This setting affects all analog modulations which use the LF generator as the internal modulation source.

Remote command:

[\[:SOURce\]:LFOutput:FREQuency](#) on page 738

External Input Impedance

(Source External only)

Sets the impedance for the external modulation signal, applied at the EXT MOD connector.

You can select 50 Ohm or high (>100 kOhm).

Note: The selection of 50 Ohm to ground requires that your instrument is equipped with the extended synthesis assembly (SynEx).

This setting affects all analog modulations which use the external modulation signal.

Remote command:

[\[:SOURce<hw>\]:INPut:MODext:IMPedance](#) on page 721

Polarity

(External Source only)

Selects the polarity of the modulation signal.

"Normal" The RF signal is **On** while the level is high at the modulation input.

"Inverted" The RF signal is **Off** while the level is high at the modulation input.

Remote command:

[\[:SOURce<hw>\]:PULM:POLarity](#) on page 773

5.5.12 Modulation Generator and LF Output

5.5.12.1 Overview of LF Generator

The internal modulation generator of the instrument provides a sinusoidal LF modulation signal without additional equipment options. The corresponding key data, as for example the frequency range, is specified under "Modulation sources" in the data sheet.

You can use the internal LF signal as modulation signal source for the analog modulations, as for example the amplitude modulation. The signal applies to all modulations which are using the internal modulation signal. Therefore, any modification of the LF signal impacts all currently active modulations immediately.


To configure the LF generator signal, see "[LF Output Dialog](#)" on page 254. However, you can also configure the LF signal directly in the settings dialogs of the analog modulations.

The R&S SMJ also provides the configured LF signal at the corresponding output connector, for example as modulation signal source for interconnected instruments.

5.5.12.2 LF Output



- ▶ To open the combined "LF Frequency Sweep / LF Output" dialog, select "RF/A Mod > Configure > LF Generator / Output" or use the MENU key under RF/A Mod.

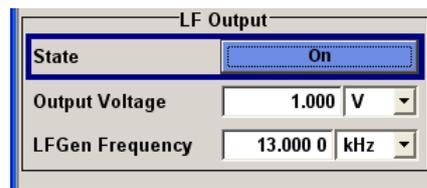

The combined menu "LF Output / LF Frequency Sweep" provides access to the LF output configuration in the bottom section. The top sections provide access to the LF Sweep mode settings, see [Chapter 5.5.13, "LF Frequency Sweep"](#), on page 255.

The remote commands required to define these settings are described in [Chapter 7.16.10, "SOURce:LFOutput Subsystem"](#), on page 737.

LF Output Dialog

State - LF Output

Activates the LF output. This setting has no effect on the modulations.

The modulation signal is output at the LF OUTPUT connector of the instrument.

Remote command:

`[:SOURce] :LFOutput [:STATe]` on page 740

Output Voltage - LF Output

Sets the voltage (peak) of the LF output signal.

Remote command:

`[:SOURce] :LFOutput :VOLTagE` on page 746

LF Gen Frequency

 
Sets the frequency of the LF generator.

This setting affects all analog modulations which use the LF generator as the internal modulation source.

Remote command:

`[:SOURce] :LFOutput :FREQuency` on page 738

5.5.13 LF Frequency Sweep




The "LF Frequency Sweep" dialog is used to configure and activate an LF frequency sweep signal.

To open the "LF Frequency Sweep" dialog, select "RF/A Mod > Configure > LF Frequency Sweep" or use the MENU key under "RF/A Mod".

The top sections of the combined dialog "LF Frequency Sweep / LF Output" provide access to the "LF Frequency Sweep" mode settings.

The LF sweep mode is activated and the sweep mode is selected. The buttons are used to reset the LF sweep (all sweep modes) or to execute the LF sweep ("Single" mode).

The sweep range, sweep spacing and dwell time are set in the bottom of the section.

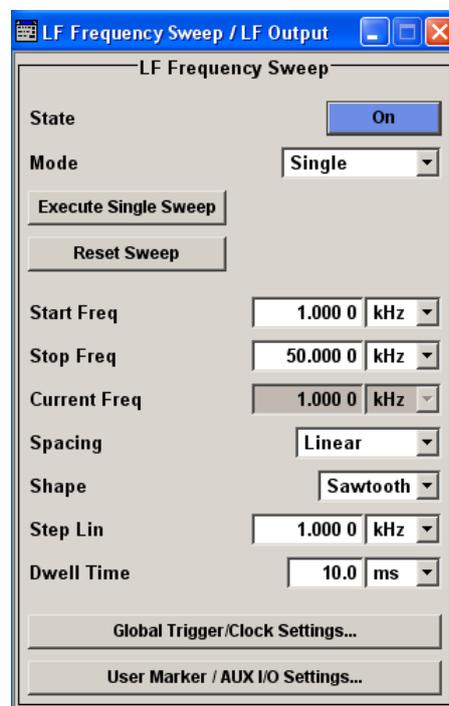

The lower section provides access to the "LF Output" settings, see [Chapter 5.5.12.2, "LF Output"](#), on page 254.

State

Activates the LF frequency sweep signal generation.

Note:

Activating a sweep mode automatically deactivates other sweeps and the list mode.

Remote command:

`[:SOURce<hw>] :LFOutput:FREQuency:MODE` on page 739

Mode

Selects the LF frequency sweep mode.

If you change the sweep mode during the execution, the signal generator stops the sweep and starts with the next trigger event at the initial value.

The "Reset Sweep" button sets the sweep to the start value.

"Auto" Generates a continuously repeating sweep signal immediately after activating the sweep mode.
The sweep steps are performed automatically, controlled by the dwell time, see "[Dwell Time - LF Sweep](#)" on page 259.

Example:

```
SOUR:LFO:SWE:FREQ:MODE AUTO
TRIG0:SWE:SOUR AUTO
SOUR:LFO:FREQ:MODE SWE
```

"Single" Generates a single sweep cycle after a trigger event.
The sweep steps within the cycle are performed automatically, controlled by the dwell time. If one cycle is completed, the instrument waits for the next trigger event.
To trigger the sweep, use "Execute Single Sweep" button, or the corresponding remote control commands, for example *TRG.

Example:

```
SOUR:LFO:SWE:FREQ:MODE AUTO
TRIG0:SWE:SOUR SING
SOUR:LFO:FREQ:MODE SWE
SOUR:LFO:SWE:FREQ:EXEC
```

"Step" Generates the sweep signal step-by-step, manually triggered.
To perform the sweep steps, enter the frequency value under [Current Freq.](#)

Example:

```
SOUR:LFO:SWE:FREQ:MODE MAN
SOUR:LFO:FREQ:MODE SWE
SOUR:LFO:SWE:FREQ:SPAC LIN
SOUR:LFO:SWE:FREQ:STEP:LIN 1E34
SOUR:LFO:FREQ:MAN 12 kHz
```

The value entered with command

`SOUR:LFO:SWE:FREQ:STEP:LIN|LOG` sets the step width.

The value entered with command `SOUR:LFO:FREQ:MAN` has no effect, the command only sets the next sweep step. In remote control only a step-by-step sweep from start to stop frequency is possible.

"Extern Single"

Generates a single sweep cycle when an external trigger event occurs.

The sweep steps within the cycle are performed automatically, controlled by the dwell time. If one cycle is completed, the instrument waits for the next trigger event.

To trigger the sweep, apply an external trigger signal.

Refer to the description of the rear panel for information on the connectors for external trigger signal input (see [Chapter 2.2, "Rear Panel Tour"](#), on page 27).

Example:

```
SOUR:LFO:SWE:FREQ:MODE AUTO
```

```
TRIG0:SWE:SOUR EXT
```

```
SOUR:LFO:FREQ:MODE SWE (External trigger)
```

"Extern Step"

Generates the sweep signal step-by-step, manually triggered.

To trigger a sweep step, apply an external trigger signal. The step width corresponds to the step width set for the rotary knob.

Example:

```
SOUR:LFO:SWE:FREQ:MODE AUTO
```

```
TRIG0:SWE:SOUR EXT
```

```
SOUR:LFO:FREQ:MODE SWE (External trigger)
```

"Extern Start/Stop"

Generates a continuously repeating sweep signal that is started, stopped and restarted by subsequent external trigger events. The sweep steps are performed automatically, controlled by the dwell time.

Refer to the description of the rear panel for information on the connectors for the external trigger signal input (see [Chapter 2.2, "Rear Panel Tour"](#), on page 27).

Example:

```
SOUR:LFO:SWE:FREQ:MODE AUTO
```

```
TRIG0:SWE:SOUR EAUT
```

```
SOUR:LFO:FREQ:MODE SWE (External trigger)
```

Remote command:

[\[:SOURce<hw>\]:LFOutput:SWEep\[:FREQuency\]:MODE](#) on page 741

[:TRIGger<hw>\[:SWEep\]:SOURce](#) on page 807

[\[:SOURce<hw>\]:LFOutput:FREQuency:MODE](#) on page 739

Execute Single Sweep

Starts a sweep manually. This trigger button is displayed in "Single" mode.

Example:

```
SOUR:LFO:SWE:FREQ:MODE AUTO
TRIG:LFFS:SWE:SOUR SING
TRIG:LFFS
```

Remote command:

```
[ :SOURce<hw> ] :LFOOutput:SWEep [ :FREQuency ] :EXECute on page 741
:TRIGger<hw>:LFFSweep:IMMediate on page 806
:TRIGger<hw>:LFFSweep on page 805
:TRIGger<hw> [ :IMMediate ] on page 809
```

Reset Sweep

Resets a sweep.

With the next trigger event, the sweep starts with at the initial value.

Remote command:

```
[ :SOURce<hw> ] :SWEep:RESet [ :ALL ] on page 787
```

Start Freq

Sets the start frequency.

Remote command:

```
[ :SOURce<hw> ] :LFOOutput:FREQuency:STARt on page 739
```

Stop Freq

Sets the stop frequency.

Remote command:

```
[ :SOURce<hw> ] :LFOOutput:FREQuency:STOP on page 740
```

Current Freq

Displays the current frequency.

In sweep "Step" mode, the parameter is editable and you can enter frequency for the next step.

Remote command:

```
[ :SOURce<hw> ] :LFOOutput:FREQuency:MANual on page 738
```

Spacing

Selects the mode for the calculation of the frequency sweep intervals.

"Linear" Takes the frequency value entered as an absolute value in Hz


"Logarithmic" Takes the value entered as a logarithmic value, that means as a constant fraction of the current frequency in %.

Remote command:

```
[ :SOURce<hw> ] :LFOOutput:SWEep [ :FREQuency ] :SPACing on page 744
```

Shape

Selects the waveform shape of the sweep signal.

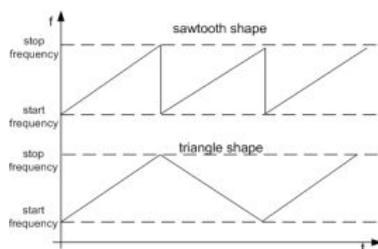

"Sawtooth" The sweep runs from the start to the stop frequency. Each subsequent sweep starts at the start frequency, that means the shape of the sweep sequence resembles a sawtooth.

"Triangle" The sweep runs from start to stop frequency and back, that means the shape of the sweep resembles a triangle. A subsequent sweep starts at the start frequency.

Remote command:

`[:SOURce<hw>] :LFOutput :SWEep [:FREQuency] :SHAPE` on page 743

Step Lin/Log - LF Sweep

Sets the step width for the individual frequency sweep steps.

At each step this value is added to the current frequency.

Depending on the [Spacing](#) mode you have set, the corresponding parameter is displayed.

"Step Lin" The step width is a constant value in Hz.

Remote command:

`[:SOURce<hw>] :LFOutput :SWEep [:FREQuency] :STEP [:LINear]` on page 744


"Step Log" The step width is determined logarithmically in %, that means as a constant fraction of the current frequency.

Remote command:

`[:SOURce<hw>] :LFOutput :SWEep [:FREQuency] :STEP :LOGarithmic` on page 745

Dwell Time - LF Sweep

Defines the duration of the individual sweep steps.

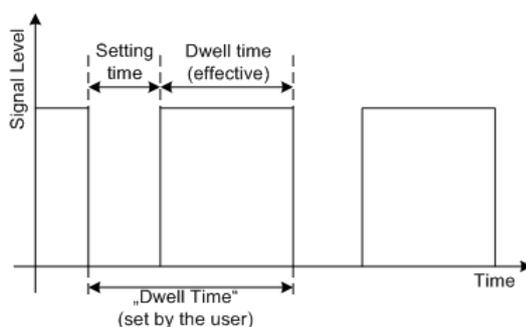

The "Dwell Time" set by the user is used as the step time of the sweep. The effective net dwell time is shorter, reduced by the setting time. This setting time may be greater than the time specified in the data sheet.

Note:

It is recommended to switch off the display update for optimum sweep performance especially with short dwell times (see [Chapter 5.2.3.7, "Display Update"](#), on page 138).

Remote command:

`[:SOURce<hw>] :LFOutput :SWEEP [:FREQuency] :DWEll` on page 741

Global Trigger/Clock Settings

Calls the "Global Trigger/Clock Settings" dialog. This dialog is used among other things for setting the polarity of the active slope of an applied instrument trigger.

See [Chapter 5.2.3.10, "Global Trigger/Clock/External Input Settings"](#), on page 141.

User Marker / AUX I/O

Calls the menu for configuring the AUX I/O and user interfaces (see [Chapter 5.2.3.12, "User Marker / AUX I/O Settings"](#), on page 144).

The pin assignment of the AUX I/O interface is shown in the "User Marker / AUX I/O Configuration" menu; the assignment of the USER pins 2...4 and USER 1 BNC connector can be changed.

5.5.14 RF Sweep and List Mode

5.5.14.1 Overview

The R&S SMJ offers three different sweep types (frequency sweep, level sweep and LF sweep) to be activated alternatively. Each type has 6 modes which differ with respect to the sweep cycle mode (continuous, individual and step-by-step) and triggering mode (automatic, internal and external).



- Sweeps and list mode can not be activated simultaneously, they deactivate each other.
- If you want to remain at a specific frequency or level value during a sweep, enter the value directly in the status bar. The sweep stops immediately.
- A phase continuous frequency sweep can be generated after activating the phase continuous mode, see ["Setting a Phase Continuous Frequency Sweep"](#) on page 207.

Setting a sweep

A sweep is set in five basic steps which are shown below taking a frequency sweep as an example.

1. Set the sweep range ("Start Freq" and "Stop Freq" or "Center Freq" and "Span").
2. Select linear or logarithmic sweep spacing ("Spacing").
3. Set the step width ("Step Lin/Log") and dwell time ("Dwell Time").
4. Activate the sweep ("Mode" to Auto, Single, Step or Extern Single, Extern Step).

 
5. Trigger the sweep, except for Auto mode ("Execute Single Sweep", Current Frequency or External Trigger Signal).



It is recommended to switch off the display update for optimum sweep performance especially with short dwell times (see [Chapter 5.2.3.7, "Display Update"](#), on page 138).

5.5.14.2 RF Frequency Sweep

The dialog enables you to activate and configure a sweep for the RF frequency.



To open the "RF Frequency Sweep" dialog, select "RF/A Mod > Configure > RF Frequency Sweep" or use the MENU key under "RF/A Mod".

In the top section of the dialog, the RF sweep is activated and the sweep mode is selected.


The buttons are used to reset the RF sweep (all sweep modes) or to execute the RF sweep ("Single" mode).

The sweep range, sweep spacing and dwell time are set in the bottom section.

You can configure the sweep range of the RF sweep in two ways, either by entering the "Start" and "Stop" values or by entering the "Center" frequency and the "Span".

The two sets of parameters correlate as follows:

- "Start Freq" = "Center Freq" - "Span"/2
- "Stop Freq" = "Center Freq" + "Span"/2
- "Center Freq" = ("Start Freq" + STOP FREQ)/2
- "Span" = "Stop Freq" - "Start Freq"

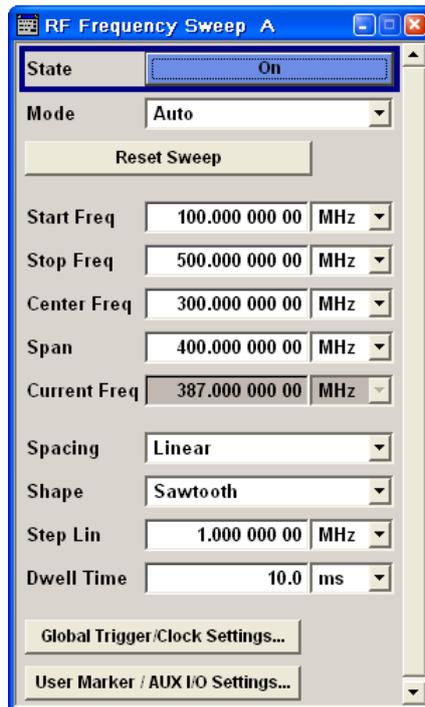

RF Frequency Sweep Settings

- ▶ To access the sweep dialog, select "RF/A Mod > configure > Sweep/List > RF Frequency Sweep".

In these dialogs you can configure the corresponding sweep signal.

State - Frequency Sweep

Activates RF sweep mode.

Note:

Activating a sweep mode automatically deactivates other sweeps and the list mode.

Remote command:

[\[:SOURce<hw>\]:FREQuency:MODE](#) on page 716

Mode - RF Frequency Sweep

Selects the RF frequency sweep mode.

If you change the sweep mode during the execution, the signal generator stops the sweep and starts with the next trigger event at the initial value.

The "Reset Sweep" button sets the sweep to the start value.

"Auto" Generates a continuously repeating sweep signal immediately after activating the sweep mode. The sweep steps are performed automatically, controlled by the dwell time, see "[Dwell Time - Frequency Sweep](#)" on page 267.

Example:

```
SOUR:SWE:FREQ:MODE AUTO
TRIG:FSW:SOUR AUTO
SOUR:FREQ:MODE SWE
```

"Single" Generates a single sweep cycle after a trigger event. The sweep steps within the cycle are performed automatically, controlled by the dwell time. If one cycle is completed, the instrument waits for the next trigger event. To trigger the sweep, use "Execute Single Sweep" button, or the corresponding remote control commands, for example *TRG.

Example:

```
SOUR:SWE:FREQ:MODE AUTO
TRIG:FSW:SOUR SING
SOUR:FREQ:MODE SWE
SOUR:SWE:FREQ:EXEC
```

"Step" Generates the sweep signal step-by-step, manually triggered. To perform the sweep steps, enter the frequency value under [Current Freq - Frequency Sweep](#). You can directly enter the value, but also use the UP and DOWN navigation keys or the ROTARY KNOB. You can determine the step width below in the entry field "Step Lin" or "Step Log", see [Step Lin/Log - Frequency Sweep](#). If a step is out of the sweep range ("Start Freq" or "Stop Freq"), it is ignored.

Note: To step through the sweep frequencies in remote control mode, use the `FREQ:MAN` command with the `UP` or `DOWN` parameter.

Example:

```
SOUR:FREQ:CENT 300MHz
SOUR:FREQ:SPAN 400MHz
SOUR:SWE:FREQ:SPAC LIN
SOUR:SWE:FREQ:STEP:LIN 100MHz
SOUR:FREQ:MODE MAN
```

set sweep mode "Step".

```
SOUR:FREQ:MODE SWE
```

activate sweep mode, the frequency is set to "Start Freq".

```
SOUR:FREQ:MAN UP
```

set the frequency to the next higher sweep frequency.

```
SOUR:FREQ:MAN DOWN
```

set the frequency to the next lower sweep frequency.

"Extern Single" Generates a single sweep cycle when an external trigger event occurs.

The sweep steps within the cycle are performed automatically, controlled by the dwell time. If one cycle is completed, the instrument waits for the next trigger event.

To trigger the sweep, apply an external trigger signal.

Refer to the description of the rear panel for information on the connectors for external trigger signal input (see [Chapter 2.2, "Rear Panel Tour"](#), on page 27).

Example:

```
SOUR:SWE:FREQ:MODE AUTO
TRIG:FSW:SOUR EXT
SOUR:FREQ:MODE SWE (External trigger)
```

"Extern Step" Generates the sweep signal step-by-step, manually triggered. To trigger a sweep step, apply an external trigger signal. The step width corresponds to the step width set for the rotary knob.

Example:

```
SOUR:SWE:FREQ:MODE STEP
SOUR:SWE:FREQ:SPAC LIN
SOUR:SWE:FREQ:STEP:LIN 1MHz
TRIG:FSW:SOUR EXT
SOUR:FREQ:MODE SWE (External trigger)
```

"Extern Start/Stop"

Generates a continuously repeating sweep signal that is started, stopped and restarted by subsequent external trigger events. The sweep steps are performed automatically, controlled by the dwell time.

Refer to the description of the rear panel for information on the connectors for external trigger signal input (see [Chapter 2.2, "Rear Panel Tour"](#), on page 27).

Example:

```
SOUR:SWE:FREQ:MODE AUTO
TRIG:FSW:SOUR EAUT
SOUR:FREQ:MODE SWE (External trigger)
```

Remote command:

```
[ :SOURce<hw> ] :SWEep [ :FREQuency ] :MODE on page 779
:TRIGger<hw> :FSWEEP :SOURce on page 804
[ :SOURce<hw> ] :FREQuency:MODE on page 716
```

Execute Single Sweep - Frequency Sweep

Starts a sweep manually. This trigger button is displayed in "Single" mode.

Remote command:

```
[ :SOURce<hw> ] :SWEep [ :FREQuency ] :EXECute on page 779
:TRIGger<hw> :FSWEEP [ :IMMediate ] on page 804
:TRIGger<hw> [ :SWEep ] [ :IMMediate ] on page 808
```

Reset Sweep - Frequency Sweep

Resets the sweep.

With the next trigger event, the sweep starts with at the initial value.

Remote command:

```
[ :SOURce<hw> ] :SWEep:RESet [ :ALL ] on page 787
```

Start Freq - Frequency Sweep

Sets the start frequency.

Remote command:

```
[ :SOURce<hw> ] :FREQuency:STARt on page 718
```

Stop Freq - Frequency Sweep

Sets the stop frequency.

Remote command:

[\[:SOURce<hw>\]:FREQuency:STOP](#) on page 719

Center Freq - Frequency Sweep

Sets the center frequency.

Remote command:

[\[:SOURce<hw>\]:FREQuency:CENTer](#) on page 713

Span - Frequency Sweep

Sets the span.

Remote command:

[\[:SOURce<hw>\]:FREQuency:SPAN](#) on page 718

Current Freq - Frequency Sweep

Displays the current frequency.

In sweep "Step" mode, the parameter is editable and you can enter frequency for the next step.

Remote command:

[\[:SOURce<hw>\]:FREQuency:MANual](#) on page 715

Spacing - Frequency Sweep

Selects the mode for the calculation of the frequency sweep intervals.

"Linear" Takes the frequency value entered as an absolute value in Hz.


"Logarithmic" Takes the value entered as a logarithmic value, that means as a constant fraction of the current frequency in %.

Remote command:

[\[:SOURce<hw>\]:SWEep\[:FREQuency\]:SPACing](#) on page 781

Shape - RF Frequency Sweep

Selects the waveform shape of the sweep signal.

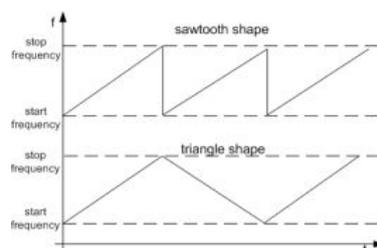

"Sawtooth" One sweep runs from start to stop frequency. Each subsequent sweep starts at the start frequency, that means the shape of the sweep sequence resembles a sawtooth.

"Triangle" The sweep runs from the start to the stop frequency and back, that means the shape of the sweep resembles a triangle. Each subsequent sweep starts at the start frequency.

Remote command:

[:SOURce<hw>] :SWEep [:FREQuency] :SHAPE on page 781

Step Lin/Log - Frequency Sweep

Sets the step width for the individual frequency sweep steps.

At each step this value is added to the current frequency.

Depending on the [Spacing - Frequency Sweep](#) mode you have set, the corresponding parameter is displayed.

"Step Lin" The step width is a constant value in Hz.

Remote command:

[:SOURce<hw>] :SWEep [:FREQuency] :STEP [:LINear] on page 782

"Step Log" The step width is determined logarithmically in %, that means as a constant fraction of the current frequency. Successive frequencies are calculated as follows:

- **start_f < stop_f**
 $f_2 = f_1 * (1 + \text{step_log} / 100)$
 If $f_2 > \text{stop_f}$: f_2 is set to stop_f .
- **start_f > stop_f**
 $f_2 = f_1 / (1 + \text{step_log} / 100)$
 If $f_2 < \text{stop_f}$: f_2 is set to stop_f .


When the shape "Triangle" is set, the frequency values on the slope from **stop_f back to start_f** are the same as on the slope from **start_f to stop_f**.

Remote command:

[:SOURce<hw>] :SWEep [:FREQuency] :STEP:LOGarithmic on page 783

Dwell Time - Frequency Sweep

Sets the dwell time. The dwell time determines the duration of the individual sweep steps.

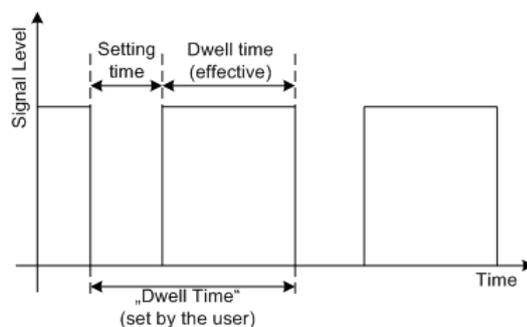

The "Dwell Time" set by the user is used as the step time of the sweep. The effective net dwell time is shorter, reduced by the setting time. This setting time may be greater than the time specified in the data sheet.

Note:

It is recommended to switch off the display update for optimum sweep performance especially with short dwell times (see [Chapter 5.2.3.7, "Display Update"](#), on page 138).

Remote command:

[:SOURce<hw>] :SWEep [:FREQuency] :DWELl on page 778

Global Trigger/Clock Settings

Calls the "Global Trigger/Clock Settings" dialog. This dialog is used among other things for setting the polarity of the active slope of an applied instrument trigger.

 
See [Chapter 5.2.3.10, "Global Trigger/Clock/External Input Settings"](#), on page 141.

User Marker / AUX I/O

Calls the menu for configuring the AUX I/O and user interfaces (see [Chapter 5.2.3.12, "User Marker / AUX I/O Settings"](#), on page 144).

The pin assignment of the AUX I/O interface is shown in the "User Marker / AUX I/O Configuration" menu; the assignment of the USER pins 2...4 and USER 1 BNC connector can be changed.

5.5.14.3 RF Level Sweep




To open the "Level Sweep" menu, select "RF/A Mod > Configure > Level Sweep" or use the MENU key under "RF/A Mod".

RF Level Sweep Settings

The "RF Level Sweep" dialog is used to activate and configure a sweep for the RF level.

In the top section, the RF level sweep is activated and the sweep mode is selected. The buttons are used to reset the level sweep (all sweep modes) or to execute the level sweep ("Single" mode).

The sweep range, sweep spacing and dwell time are set in the bottom section.

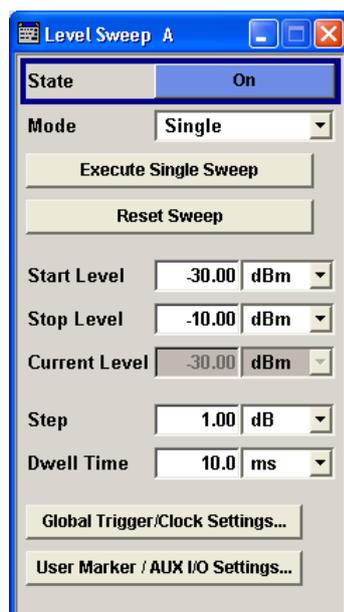

State - Level Sweep

Activates Level Sweep mode.

Note:

Activating a sweep mode automatically deactivates other sweeps and the list mode.

Remote command:

[:SOURce<hw>] :POWer:MODE on page 768

Mode - Level Sweep

Selects the level sweep instrument operating mode and the sweep mode.

If you change the sweep mode during the execution, the signal generator stops the sweep and starts with the next trigger event at the initial value.

The "Reset Sweep" button sets the sweep to the start value.

"Auto" Sets an automatically repeated sweep cycle.

Example:

```
SOUR:SWE:POW:MODE AUTO
TRIG:PSW:SOUR AUTO
SOUR:POW:MODE SWE
```

"Single" Sets a single sweep cycle. The sweep is triggered by the "Execute Single Sweep" button, or by means remote trigger commands, e.g. *TRG.

Example:

```
SOUR:SWE:POW:MODE AUTO
TRIG:PSW:SOUR SING
SOUR:POW:MODE SWE
SOUR:SWE:POW:EXEC
```

"Step" Sets a step-by-step sweep cycle. If this mode is activated, the cursor moves to the value displayed for "Current Level". Each sweep step is triggered by a variation of the value in the "Current Level" entry window. The step width is set below at entry field "Step".
If this mode is activated, the cursor moves to the value displayed for "Current Level". If a different sweep mode was activated prior to the "Step" mode, the current sweep is stopped. The step sweep starts at the current level value.

Example:

```
SOUR:SWE:POW:MODE MAN
SOUR:SWE:POW:STEP 0.5
SOUR:POW:MODE SWE
SOUR:POW:MAN -16
```

The value entered with command `SOUR:SWE:POW:STEP` sets the step width.

The value entered with command `SOUR:POW:MAN` has no effect, the command only triggers the next sweep step. However, the value has to be in the currently set sweep range (start to stop). In remote control only a step-by-step sweep from start to stop frequency is possible.

"Extern Single" Sets a single sweep cycle. The sweep is triggered by an external trigger signal. Refer to the description of the rear panel for information about the connectors for external trigger signal input (see [Chapter 2.2, "Rear Panel Tour"](#), on page 27).

Example:

```
SOUR:SWE:POW:MODE AUTO
TRIG:PSW:SOUR EXT
SOUR:POW:MODE SWE (External trigger)
```

"Extern Step" Sets a step-by-step sweep cycle. Each sweep step is triggered by an external trigger signal (trigger source as described under "Extern Single"). The step width corresponds to the step width of the rotary knob.

Example:

```
SOUR:SWE:POW:MODE STEP
SOUR:SWE:POW:STEP 0.5
TRIG:PSW:SOUR EXT
SOUR:POW:MODE SWE (External trigger)
```

"Extern Start/Stop"

Sets an automatically repeated sweep cycle that is started, stopped and restarted by subsequent external trigger events.

The first external trigger signal starts the sweep (Start).

The next external trigger signal stops the sweep at the current frequency (Stop).

The third external trigger signal starts the sweep at the start frequency (Start).

Refer to the description of the rear panel for information about the connectors for external trigger signal input (see [Chapter 2.2, "Rear Panel Tour"](#), on page 27).

Example:

```
SOUR:SWE:POW:MODE AUTO
TRIG:PSW:SOUR EAUT
SOUR:POW:MODE SWE (External trigger)
```

Remote command:

[\[:SOURce<hw>\]:SWEep:POWer:MODE](#) on page 784

[:TRIGger<hw>:PSWeep:SOURce](#) on page 806.

[\[:SOURce<hw>\]:POWer:MODE](#) on page 768

Reset Sweep - Level Sweep

Resets the sweep. The start level is set and the next sweep starts from there.

Remote command:

[\[:SOURce<hw>\]:SWEep:RESet \[:ALL\]](#) on page 787

Execute Single Sweep - Level Sweep

Triggers the sweep manually. A manual sweep can only be triggered if "Mode Single" is selected.

Example:

```
SOUR:SWE:POW:MODE AUTO
TRIG:PSW:SOUR SING
SOUR:POW:MODE SWE
SOUR:SWE:EXEC
```

Remote command:

[\[:SOURce<hw>\]:SWEep:POWer:EXECute](#) on page 784

[:TRIGger<hw>:PSWeep\[:IMMediate\]](#) on page 807

[:TRIGger<hw>\[:SWEep\]\[:IMMediate\]](#) on page 808

Start Level - Level Sweep

Sets the start level.

Remote command:

[\[:SOURce<hw>\]:POWer:START](#) on page 769

Stop Level - Level Sweep

Sets the stop level.

Remote command:

[\[:SOURce<hw>\]:POWer:STOP](#) on page 770

Current Level - Level Sweep

Displays the current level.

If "Step" is set, the level for the next level step of the sweep is entered here.

Remote command:

[\[:SOURce<hw>\]:POWer:MANual](#) on page 767

Shape - RF Level Sweep

Selects the cycle mode for a sweep sequence (shape).

"Sawtooth" One sweep runs from the start level to the stop level. The subsequent sweep starts at the start level again, i.e. the shape of sweep sequence resembles a sawtooth.

"Triangle" One sweep runs from start to stop level and back, i.e. the shape of the sweep resembles a triangle. Each subsequent sweep starts at the start level again.

Remote command:

[\[:SOURce<hw>\]:SWEep:POWer:SHAPE](#) on page 786

Step - Level Sweep

Sets the step width for the individual sweep steps. This entry is effective for all sweep modes.


With the level sweep, the logarithmic step width is a constant fraction of the current level. This fraction is added to the current level. The logarithmic step width is entered in dB.

Remote command:

[\[:SOURce<hw>\]:SWEep:POWer:STEP\[:LOGarithmic\]](#) on page 787

Dwell Time - Level Sweep

Enters the dwell time and determines the duration of the individual sweep steps.

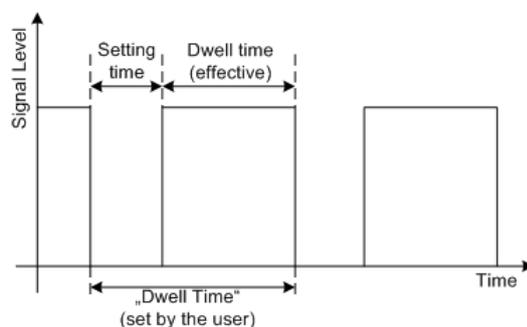

The "Dwell Time" set by the user is used as the step time of the sweep. The effective net dwell time is shorter, reduced by the setting time. This setting time may be greater than the time specified in the data sheet.

Note:

It is recommended to switch off the display update for optimum sweep performance especially with short dwell times (see [Chapter 5.2.3.7, "Display Update"](#), on page 138).

Remote command:

`[:SOURce<hw>] :SWEep:POWer:DWELl` on page 784

Global Trigger/Clock Settings

Calls the "Global Trigger/Clock Settings" dialog. This dialog is used among other things for setting the polarity of the active slope of an applied instrument trigger.

See [Chapter 5.2.3.10, "Global Trigger/Clock/External Input Settings"](#), on page 141.

User Marker / AUX I/O

Calls the menu for configuring the AUX I/O and user interfaces (see [Chapter 5.2.3.12, "User Marker / AUX I/O Settings"](#), on page 144).

The pin assignment of the AUX I/O interface is shown in the "User Marker / AUX I/O Configuration" menu; the assignment of the USER pins 2...4 and USER 1 BNC connector can be changed.

5.5.15 List Mode

Similar to a sweep, a series of previously defined frequency and level points is processed in List mode. In contrast to a sweep, however, a list with freely selectable value pairs (frequency and level) can be created. The value range for frequency and level covers the entire configurable value range of the instrument.



 
List mode and sweeps can not be activated simultaneously, they deactivate each other.

The lists can be created in the "List Editor". Each list is stored in its own file with the predefined file extension `*.lsw`. The name of the list file can be freely selected. The files are loaded from the "Lists..." file manager. Externally created tables with pairs of frequency and level values can be converted into List files using the import function. The external files must have the file extension `*.txt` or `*.csv`. These file formats are provided e.g. by the Microsoft®Excel program. The separators for table columns and for decimal floating-point numerals can be set. In addition, internally created List data can be exported into ASCII files using the export function.

The necessary hardware settings are calculated the first time a list is processed. With long dwell times, this calculation can be performed while the list is being processed; the entered dwell times are observed. With very short dwell times, calculation of the hardware settings increases the dwell time for the initial processing cycle; the entered value is only observed from the second processing cycle onwards. In this case a message appears to inform the user that there is a deviation between the current and set dwell times. No further calculations are required after the first run through a list. The current dwell times will definitely no longer deviate from the set dwell times.


The list is processed from the beginning to the end of the list (modes "Auto", ("External") "Single", ("External") "Step").

5.5.15.1 List Mode Dialog



To open the "List Mode" menu, select "RF/A Mod > Configure > List Mode" or use the MENU key under "RF/A Mod".

The menu is used to activate/deactivate the operating mode List, to create, select and activate the lists, and to select the trigger mode and the dwell time.

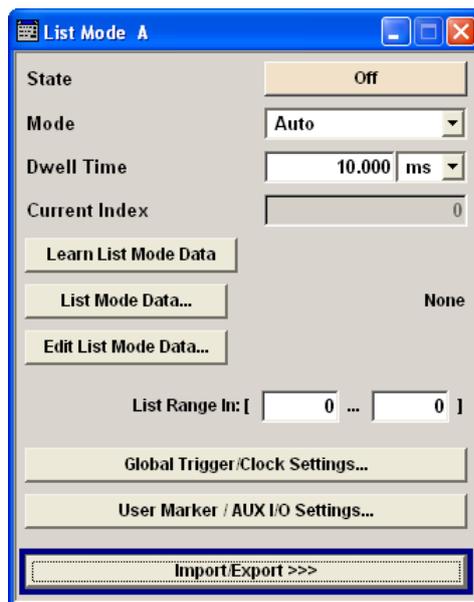

General Settings

State - List Mode

Activates/deactivates the List mode. The currently selected list is processed.

In case of a new or modified list, the necessary hardware settings are automatically determined on activation of the list mode. The data determined in this way is stored along with the list and is available whenever the list is used again.

This means that when activating the list mode, the system checks whether any hardware settings are present. If so, the list is started immediately, but if not they are automatically determined (the list is learnt).

A "Learn List Mode Data" button is available for deliberately activating list learning.

Note: Activating the list mode automatically deactivates all sweeps. During list mode the frequency and level indications do not display the currently set values.

Remote command:

[: SOURce<hw>] : FREQuency : MODE on page 716

Mode - List Mode

Selects the cycle mode of the List mode.

"Auto" Cycle from the beginning to the end of the list with automatic restart at the beginning. If a different mode was activated prior to the Auto mode, the cycle continues from the beginning of the list. The duration of a list step is determined by the set dwell time. Button "Reset" restarts the list at the starting point.

"Single" Single cycle from the beginning to the end of the list. If "Single" is selected, the cycle is not started immediately. The "Execute Single" button appears under the "Mode" line. The cycle is started with this button. The duration of a list step is determined by the set dwell time. Button "Reset" restarts the list at the starting point.



"Step" Manual, step-by-step processing of the list. Activating "Step" stops the current list and the cursor moves to the value displayed for "Current Index". It is now possible to scroll up and down in the list in discrete steps by varying the index. The duration of a list step is determined by the time between two index entries. Button "Reset" restarts the list at the starting point.



"Extern Single" Single cycle from the beginning to the end of the list as with "Single", but started by an external trigger. The external trigger signal is input at the BNC connector INST TRIG. Button "Reset" restarts the list at the starting point.

"Extern Step" Step-by-step cycle using the external trigger signal. Each trigger event starts a single step. The duration of a list step is determined by the time between two trigger events. The external trigger signal is input at the BNC connector INST TRIG. Button "Reset" restarts the list at the starting point.

Remote command:

[\[:SOURce<hw>\]:LIST:MODE](#) on page 755

[\[:SOURce<hw>\]:LIST:TRIGger:SOURce](#) on page 758

Execute Single - List Mode

Triggers the list manually. This button is available only if mode "Single" is selected.

Remote command:

[\[:SOURce<hw>\]:LIST:TRIGger:EXECute](#) on page 757

Reset - List Mode

Resets the list to the starting point.


Remote command:

[\[:SOURce<hw>\]:LIST:RESet](#) on page 757

Dwell Time - List Mode

Enters the dwell time. The dwell time determines the duration of a list step in list operating modes "Auto", "Single" and "Extern Single". In these modes a complete list is processed either once or continuously.

In list operating modes "Step" and "Extern Step", the set dwell time does not affect signal generation. In this case, the duration of a list step is determined by the time between two (internal or external) trigger events.

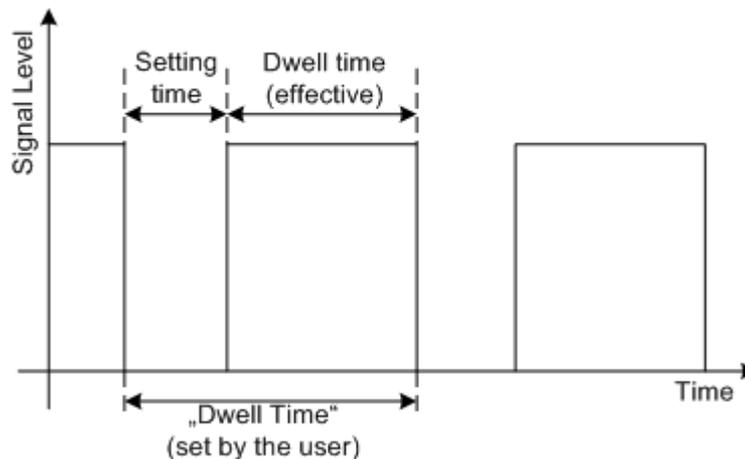

The "Dwell Time" set by the user is used as the step time of the list mode. The effective net dwell time is shorter, reduced by the setting time. This setting time may be greater than the time specified in the data sheet.

Remote command:

`[:SOURce<hw>] :LIST:DWELL1` on page 752

Current Index - List Mode

Sets the list index in "Step" mode.

Remote command:

`[:SOURce<hw>] :LIST:INDEX` on page 754

Blank RF Output (Default ON) - List Mode

Activates/deactivates RF output blanking. If activated, blanking occurs on all frequency changes. If deactivates, blanking is always disabled.

Remote command:

`:OUTPut<hw>:BLANK:LIST:STATe` on page 555

Learn List Mode Data... - List Mode

Starts the determination of the hardware setting for the selected list. The data determined in this way is stored along with the list.

It may be necessary to deliberately activate list learning in the event of greatly altered environmental conditions that require new hardware settings.

If this is not done, a previously learned hardware setting will continue to be used when list mode is switched on ("State = On"). If no setting is available, e.g. when the list is used for the first time, learning is automatically activated.

Remote command:

[:SOURce<hw>] :LIST:LEARn on page 755

List Mode Data... - List Mode

Calls the "File Select" menu for selecting and creating a list or the "File Manager".



Remote command:


[:SOURce<hw>] :LIST:SElect on page 757

[:SOURce<hw>] :LIST:DElete on page 748

[:SOURce<hw>] :LIST:DElete:ALL on page 748

Edit List Mode Data... - List Mode

Calls the editor for editing the selected list. A list consists of any number of frequency/level value pairs. The currently selected list is displayed.

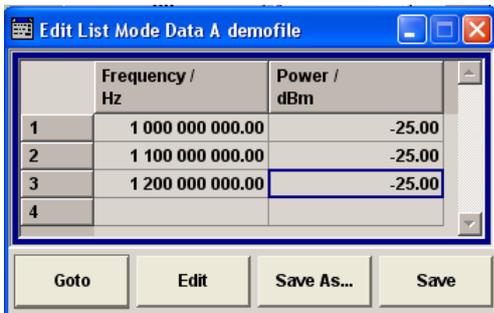

"Frequency / Hz" Enter the frequency of the frequency/power value pair.

Remote command:

[:SOURce<hw>] :LIST:FREQuency on page 753

"Power /dBm" Enter the level of the frequency/power value pair.

 
Remote command:

[:SOURce<hw>] :LIST:POWer on page 756

"Goto" Selects row for editing.



If "Goto row" is selected, a window opens for entering the requested row.



"Edit" Calls a selection of possible actions described below.



"Insert Row" Inserts a new row before the marked row.

"Insert Range" Inserts new rows before the marked row. The number of rows to be inserted can be defined in an entry window.



"Fill...." Opens a sub menu for defining a set of list values to be automatically entered in the List Mode table (see [Chapter 5.5.15.2, "Filling the List Mode Data automatically"](#), on page 280).

"Delete Row" Deletes the marked row.

"Delete Range..." Allows to delete any number of rows starting with the marked row. The number of rows to be deleted can be defined in an entry window.



"Save as" Open the file menu to save the list under a new name. Each list is saved to the instrument's hard disk as a separate file with the file prefix *.lsw. The file name and the directory to which the file is saved are user-selectable.

"Save" The list is saved under its current name.

List Range In - List Mode

Defines an index range in the current list by setting the start and stop index. Only the values in the selected index range are processed in List mode, all other list entries are ignored.

Remote command:

[:SOURce<hw>] :LIST:INDEX:START on page 754

[:SOURce<hw>] :LIST:INDEX:STOP on page 755

Global Trigger/Clock Settings

Calls the "Global Trigger/Clock Settings" dialog. This dialog is used among other things for setting the polarity of the active slope of an applied instrument trigger.

See [Chapter 5.2.3.10, "Global Trigger/Clock/External Input Settings"](#), on page 141.

User Marker / AUX I/O

Calls the menu for configuring the AUX I/O and user interfaces (see [Chapter 5.2.3.12, "User Marker / AUX I/O Settings"](#), on page 144).

The pin assignment of the AUX I/O interface is shown in the "User Marker / AUX I/O Configuration" menu; the assignment of the USER pins 2...4 and USER 1 BNC connector can be changed.

Import/Export

Lists can be imported from externally created files or exported into text or CSV-files. The import/export settings are available after clicking the "Import/Export" button.

Import/Export - List Mode

Expands the menu with the area for import and export of list mode files.

Externally edited Excel tables with frequency/level pairs can be imported as text or CSV-files and used for list mode.

On the other hand, internally created list mode lists can be exported as text or CSV-files.

Mode - List Mode

Selects if list mode lists should be imported or exported. The settings offered below depend on the selected mode.

Remote command:

[\[:SOURce<hw>\]:LIST:DEXChange:MODE](#) on page 752

Extension - List Mode

Selects the file extension of the ASCII file to be imported or exported. Selection TXT (text file) or CSV (Excel file) is available.

Remote command:

[\[:SOURce<hw>\]:LIST:DEXChange:AFILe:EXTension](#) on page 749

Decimal Point - List Mode

Selects the decimal separator used in the ASCII data between '.' (decimal point) and ',' (comma) with floating-point numerals.

Remote command:

[\[:SOURce<hw>\]:LIST:DEXChange:AFILe:SEParator:DECimal](#) on page 751

Column Separator- List Mode

Selects the separator between the frequency and level column of the ASCII table.

Remote command:

`[:SOURce<hw>] :LIST:DEXChange:AFILe:SEParator:COLumn` on page 750

Select ASCII Source / Destination - List Mode

Calls the "File Manager" for selecting the ASCII file to be imported into a list mode list (source) or the ASCII file the list mode list is exported (destination) in.

Remote command:

`[:SOURce<hw>] :LIST:DEXChange:AFILe:SElect` on page 750

Select Destination / Source - List Mode

Calls the "File Manager" for selecting the list mode list to be exported (source) into an ASCII file or the destination for the ASCII file to be imported (destination) in.

Remote command:

`[:SOURce<hw>] :LIST:DEXChange:SElect` on page 752

Import / Export - List Mode

Starts the export or import of the selected file.

When import is selected, the ASCII file is imported as list mode list.


When export is selected, the list mode list is exported into the selected ASCII file.

Remote command:

`[:SOURce<hw>] :LIST:DEXChange:EXECute` on page 751

5.5.15.2 Filling the List Mode Data automatically

The "Fill List Mode Data" menu enables you to automatically set the values in the List Mode table.

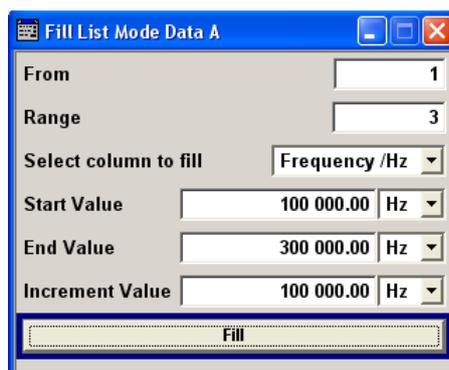

The start line and the number of rows to be filled are defined under "From" and "Range".

The column to be filled is selected under "Select column to fill". Depending on the selection here, the default for start, end, and increment value are set. As the settings are interdependent, a change of one parameter may result in the automatic change of one or more of the other parameters.

The filling of the column with the selected value settings is started with button "Fill".



The list entries are only computed when the "Fill" button is pressed.

From

Sets the start value of the index range.

Remote command:

n.a.

Range

Sets the range for filling the table.

Remote command:

n.a.

Select column to fill

Selects either the frequency or the level column to be filled with the value defined below.

Remote command:

n.a.

Start value

Sets the start value for the frequency or the level entries.

Remote command:

n.a.

End value

Sets the end value for the frequency or the level entries.

Remote command:

n.a.

Increment value

Sets the increment for the frequency or the level entries.

Remote command:

n.a.

Fill

Fills the selected column in the set range with values, starting with the start value and using the set increment.


Remote command:

n.a.

5.6 I/Q Modulation - I/Q Mod Block

The R&S SMJ offers I/Q modulation with:

- external analog I/Q signals,
- internal digital signals.

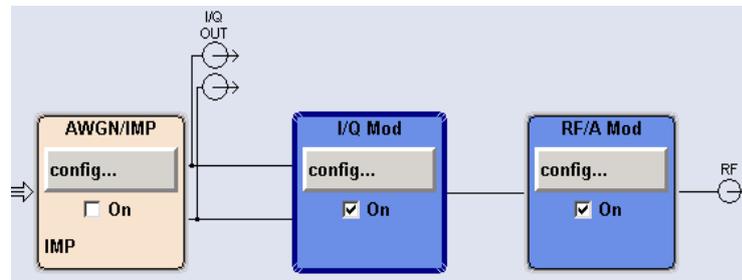

I/Q modulation with an external analog I/Q signal is possible for the basic unit (R&S SMJ with frequency option R&S SMJ-B10x) without additional equipment options.

The basic equipment configuration for generating an internal baseband signal includes the options R&S SMJ-B13 (Baseband Main Module) and R&S SMJ-B9/B10/B11 (Unicod and ARB).

The internally generated baseband signal is configured in the Baseband function block (see [Chapter 5.8, "Baseband Signal - Baseband Block"](#), on page 313). Before the signal is fed into the I/Q modulator, noise can be added and/or the signal can be impaired. Impairment at this point along the signal flow is offered to allow a signal to be output at the I/Q-OUT outputs (a signal which, for example, compensates signal distortion in a connected test object (DUT)).

Impairment is integrated in the basic unit. The generation of noise requires the option R&S SMJ-K62 (AWGN).

Impairments can also be set in the I/Q Mod menu to allow an externally applied analog I/Q signal to be impaired. An internal baseband signal can thus be impaired both digital (in the Impairment block in the Impairment menu) and analog in the I/Q modulator. If impairments are set in both menus, they superimpose each other in the signal.

5.6.1 I/Q Modulator

To select the input signal of the I/Q modulator and to open the "I/Q Settings" menu, select "I/Q Mod > Configure".

The "I/Q Settings" menu containing the modulation settings is opened in the top section (see [Chapter 5.6, "I/Q Modulation - I/Q Mod Block"](#), on page 282).

Use the "I/Q Mod In" section to select the input signal:


- select "Analog Wideband I/Q In", if the external analog signal is fed into the I/Q modulator.

The maximum available RF bandwidth is described in the instruments specifications (see data sheet).

- select "Internal Baseband I/Q In", if the internally generated baseband signal is used.
The RF bandwidth is reduced (see data sheet).

Alternatively, the input signal can be selected in the "I/Q Settings" menu (see [Chapter 5.6, "I/Q Modulation - I/Q Mod Block"](#), on page 282).

5.6.2 I/Q Settings

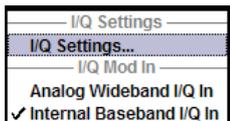

To open the menu for setting the I/Q modulation parameters, select "I/Q Mod > Configure > I/Q Settings" or use the MENU key.




System error correction of the I/Q modulator permits precise and repeatable measurements. The correction routine should be called in the case of temperature fluctuations of several degrees. To call the routine, press the SETUP key and select "System > Internal Adjustment " and execute the desired adjustment procedure.


It is not possible to activate an I/Q modulation with an external analog signal ("Analog Wideband I/Q In") simultaneously with:

- AM,
- digital modulation,
- digital standards,
- noise,
- arbitrary waveform generation and
- multi carrier CW

I/Q modulation is activated and the source entered in the top section of the menu.

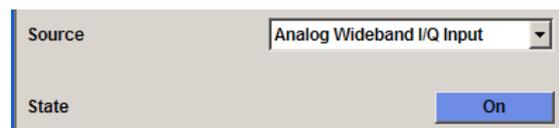

I/Q impairment for specific impairment of the I/Q modulation is set in the "Impairments" section.

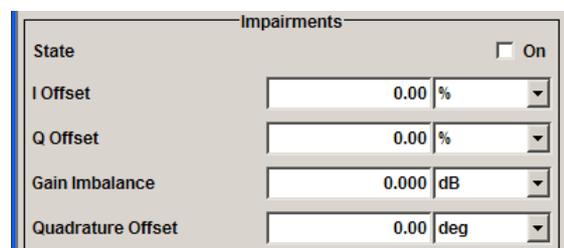


I/Q control can be swapped in the lower section of the menu and the optimized settings for wideband modulation signals can be activated.



The bottom section of the menu differs depending on the selected input signal ("Analog Wideband I/Q Input" or "Internal Baseband").

The crest factor is input for the external signal.

The gain is selected for the internal and external signal.

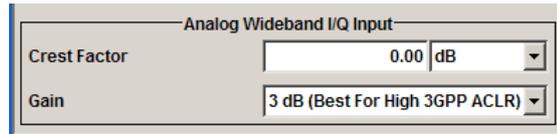

5.6.2.1 General I/Q Mod Settings

IQ Source - I/Q Mod

Selects the input signal for the I/Q modulator.

"Analog Wideband I/Q In" Selects an external analog signal as the input signal. The signal must be applied at the inputs I and Q.

"Internal Baseband I/Q In" Selects the internal baseband signal as the input signal. This setting requires the additional equipment options for generating the various baseband signals.

Remote command:

[\[:SOURce<hw>\]:IQ:SOURce](#) on page 726

State - I/Q Mod

Activates/deactivates I/Q modulation.

If "Analog Wideband I/Q In" is selected, the I/Q modulator is also deactivated and activated.

If "Internal Baseband I/Q In" is selected, the I/Q modulator is always activated automatically as soon as signal generation is activated in the "Baseband" block. It can, however, be deactivated later, e.g. if only the baseband signal which is output at the I/Q outputs is relevant.

Remote command:

[\[:SOURce<hw>\]:IQ:STATe](#) on page 726

5.6.2.2 Impairments

I/Q impairment for specific impairment of the I/Q modulation is set in the "Impairments" section.

State - Impairments I/Q Mod

Activates/deactivates I/Q impairment.

If activated, the settings for leakage, I/Q imbalance and quadrature offset become effective.

Whether or not I/Q impairment is activated is indicated in the function block.

Note: It is advisable to switch automatic level control to the Sample&Hold mode, as otherwise level errors may occur (see [Chapter 5.5.7, "Automatic Level Control - ALC"](#), on page 220).

Remote command:

`[:SOURce<hw>] :IQ:IMPairment [:STATe]` on page 726

Offset - I/Q Mod

Sets the carrier offset (in percent) of the amplitudes (scaled to the peak envelope power (PEP) for the I and/or Q signal component. An ideal I/Q modulator suppresses the carrier offset completely (offset = 0 percent).

For more information, see [Chapter 5.7.1.2, "I and Q Offset"](#), on page 290.

Remote command:

`[:SOURce<hw>] :IQ:IMPairment:LEAKage:I` on page 725

`[:SOURce<hw>] :IQ:IMPairment:LEAKage:Q` on page 725

Gain Imbalance - I/Q Mod

Sets the imbalance of the I and Q vector (see [Chapter 5.7.1.1, "Gain and Gain Imbalance"](#), on page 289).

The entry is made in dB (default) or %, where 1 dB offset is roughly 12 % according to the following:

$$\text{Imbalance [dB]} = 20 \log (| \text{GainQ} | / | \text{GainI} |)$$

Positive values mean that the Q vector is amplified more than the I vector by the corresponding percentage. Negative values have the opposite effect.

Remote command:

`[:SOURce<hw>] :IQ:IMPairment:IQRatio[:MAGNitude]` on page 725

Quadrature Offset - I/Q Mod

Sets the quadrature offset (see [Chapter 5.7.1.3, "Quadrature Offset"](#), on page 290).

Remote command:

`[:SOURce<hw>] :IQ:IMPairment:QUADrature[:ANGLE]` on page 726

5.6.2.3 I/Q Swap and I/Q Wideband

The I/Q control can be swapped and the optimized setting for wideband signals can be selected in the middle section of the menu.

I/Q-Swap - I/Q Mod

Selects normal or swapped I/Q control for an external analog signal. The modulation sidebands are inverted by swapping the I and Q signals.

This parameter enables I/Q modulation to be performed on signals according to IS2000 (cdma2000 standard) and the majority of all other standards. As a result, an I/Q demodulator defined according to IS2000 can also be used for demodulating the generated signals.

The I/Q modulator defined in the IS2000 standard differs from the definition in the R&S SMJ. The definition on which the R&S SMJ is based is used by virtually all digital communication standards (except IS95 and IS2000).

In the final step, the filtered I/Q signal is modulated to the desired RF in a different way in the I/Q modulator:

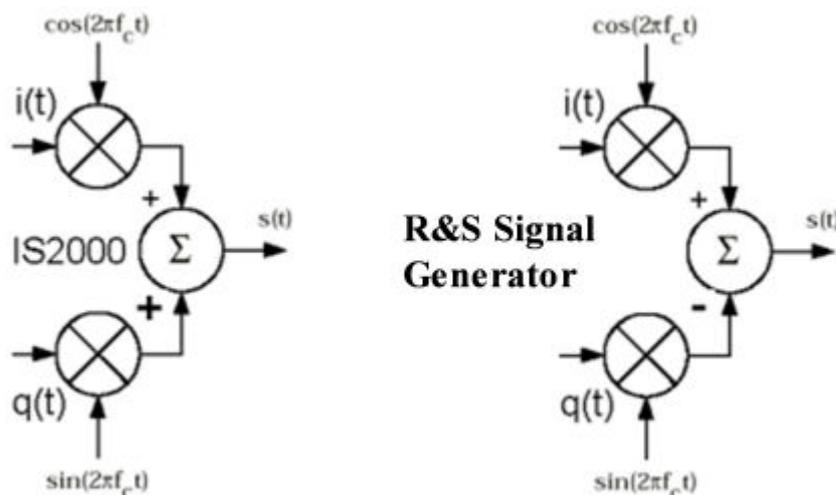


Figure 5-12: Definition of I/Q modulator in IS2000 and R&S SMJ

According to IS2000, the RF signal $s(t)$ is derived from the baseband I/Q signal as follows:

$$s(t) = i(t)\cos(2\pi f_c t) + q(t)\sin(2\pi f_c t)$$

The instrument family is based on the following definition:

$$s(t) = i(t)\cos(2\pi f_c t) - q(t)\sin(2\pi f_c t)$$

"I/Q Swap" must now be set to "On" so that an I/Q modulator defined according to IS2000 can cope with the RF signal generated by the R&S SMJ.

"Off" I/Q control is normal.

"On" The I and Q signals are swapped.

Remote command:

`[:SOURce<hw>] :IQ:SWAP [:STATe]` on page 727

I/Q-Wideband - I/Q Mod

Optimized setting for wideband modulation signals (>5 MHz). Optimized setting for wideband modulation signals (>5 MHz).

The modulation frequency response is decreased at the expense of poorer harmonic suppression. This is achieved by shifting the switching frequencies of the lowpass filters in the output section.

Remote command:

`[:SOURce<hw>] :IQ:WBState` on page 727

5.6.2.4 Analog Wideband I/Q Input

In the bottom section of the menu the crest factor is input for the external signal and the gain is selected for the internal and external signal ("Analog Wideband I/Q Input" or "Internal Baseband").

Crest Factor - I/Q Mod

(Analog Wideband I/Q Input only)

Sets the crest factor of the external analog signal.

The crest factor gives the difference in level between the peak envelope power (PEP) and average power value (RMS) in dB.

This value is necessary to allow the correct output power to be generated at the RF output. When the set output power is generated, the R&S SMJ uses this value to compensate the average power which is lower compared to the peak power.

The maximum input voltage at the I/Q input is equated to the peak power and is used as the "reference" for setting the level of the output signal. Since the signal does not usually supply the peak power at a constant level and instead supplies a lower average power, the crest factor specifies how many dB have to be added internally so that the correct output power is achieved.

Remote command:

`[:SOURce<hw>] :IQ:CREStfactor` on page 724

Baseband Gain-Gain - I/Q Mod

Optimizes the modulation of the I/Q modulator for any measurement requirement.

The modulation is determined by selecting the gain.

Note:

The remote-control commands to be used depend on the selected I/Q input signal (`SOURce:IQ:SOURce ANALog | BASEband`).

- For the Analog Wideband I/Q input signal, the commands of system `SOURce:IQ:GAIN` are valid.
- For the internal or external Baseband I/Q input signal (`SOURce:IQ:SOURce BASEband`), the commands of system `SOURce:BB:IQGain` are valid.

"Auto"	(digital baseband signal only) With this setting, the modulation is automatically optimized for the internally set baseband signal.
"- 3dB (Low Distortion)"	Activates -3 dB gain. With this setting, signal distortions are minimized.
"0 dB (Standard)"	Activates 0 dB gain
"3 dB (High 3GPP ACLR)"	Activates 3 dB gain. This setting is recommended for 3GPP signals with very high adjacent channel power ratio (ACPR).
"6dB (Low Noise)"	Activates 6 dB gain. With this setting, signal noise is minimized.

Remote command:


[:SOURce<hw>] :IQ:GAIN on page 724 (for analog I/Q signal)

[:SOURce<hw>] :BB:IQGain on page 727 (for digital I/Q signal)


5.7 Impairment of Digital I/Q Signal and Noise Generator - AWGN/IMP Block

The R&S SMJ allows the digital I/Q signal to be impaired before it is passed on to the I/Q modulator, and also noise to be added to the signal. The noise generator can also be used to generate a pure noise signal.

These settings are available in the block diagram in the "AWGN/IMP" function block as well as in the menu with the same name which is opened using the MENU key.

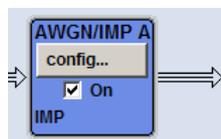

The equipment options for the basic unit (R&S SMJ with frequency option R&S SMJ-B10x) include the option R&S SMJ-B13 (Baseband Main Module) for Impairments and the option R&S SMJ-K62 (Noise Generator) for "AWGN".

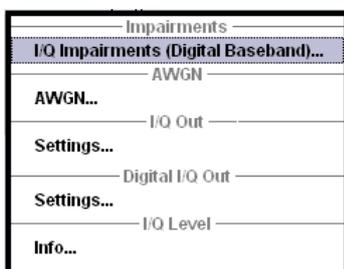

Selecting the menu item "I/Q Impairments (Digital Baseband)..." opens the I/Q impairment settings dialog. This dialog covers the settings for I/Q impairment, like carrier leakage, imbalance and quadrature offset.

To access the AWGN settings, select "AWGN...". This dialog contains the settings of the AWGN generator, noise level configuration and CW interfering parameters.

Selecting the menu item "I/Q Out Settings" opens a dialog with the parameters for the I/Q output signal.

The "I/Q Out Settings" dialog is available for analog and digital I/Q output signals. These dialogs are accessible under the menu sections with the corresponding names.

"Info..." opens a dialog, displaying information on the baseband power.

The single ended or differential output is configured in the "I/Q Out Settings" dialog.

The single ended or differential output requires option R&S SMJ-B16, Differential Output.

5.7.1 Impairments

Signal impairments (**I/Q Impairments**) are well-defined arithmetic modifications of the data. Every data sample is modified in the same way.

Impairment of the digital I/Q signal can be used to:

- compensate the distortion of a test object
- check the effect of a disturbed signal on a test object
- if the internal compensation of signal distortion is deactivated by the I/Q modulator, also to test its own baseband components.



In addition to impairment of the digital I/Q signal, the R&S SMJ also allows impairment of the analog signal to be set in the I/Q modulator. The relevant settings are made in the I/Q Mod function block (see [Chapter 5.6, "I/Q Modulation - I/Q Mod Block"](#), on page 282).

5.7.1.1 Gain and Gain Imbalance

An I/Q gain is a multiplication of all I/Q amplitudes by a common factor. The effect is equivalent to two identical I and Q gain factors. The effect of an increased gain factor in the I/Q constellation diagram is shown on [Figure 5-13](#).

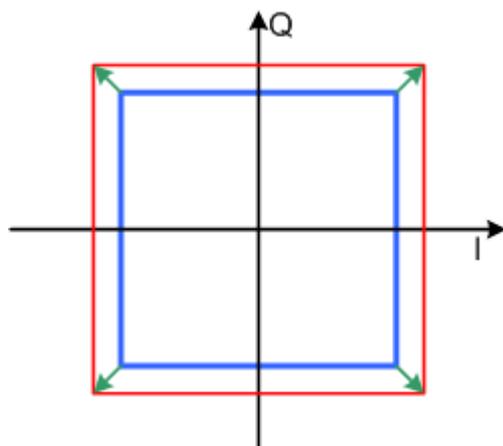


Figure 5-13: Effect of an increased amplitude in the I/Q constellation diagram

An I gain multiplies the I amplitudes by a factor, leaving the Q amplitudes unchanged. A Q gain has the opposite effect. Different I and Q gain factors result in an I/Q imbalance, which is due to different gains of the amplifiers in the I and Q channels of the I/Q modulator. The effect of a positive and negative gain imbalance is shown on [Figure 5-14](#).

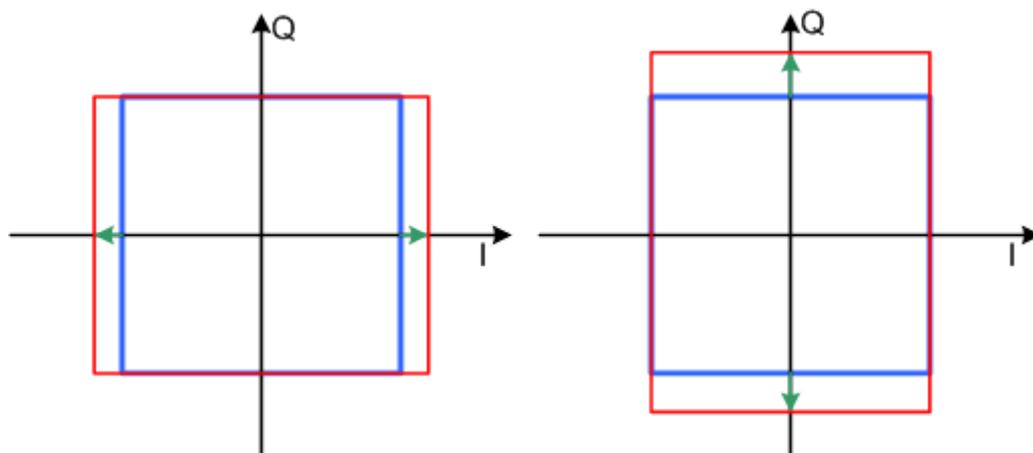


Figure 5-14: Negative gain imbalance (left) and positive gain imbalance (right) in the I/Q constellation diagram

5.7.1.2 I and Q Offset

An I offset adds a constant value to all I amplitudes, leaving the Q amplitudes unchanged. A Q offset has the opposite effect. A combination of I and Q values results in an I/Q offset, which is due to carrier feedthrough in the I/Q modulator. Possible reasons are interfering signals at the RF carrier frequency, e.g. an unsuppressed RF carrier subchannel. The effect of a positive I and Q offset in the I/Q constellation diagram is shown on [Figure 5-15](#).

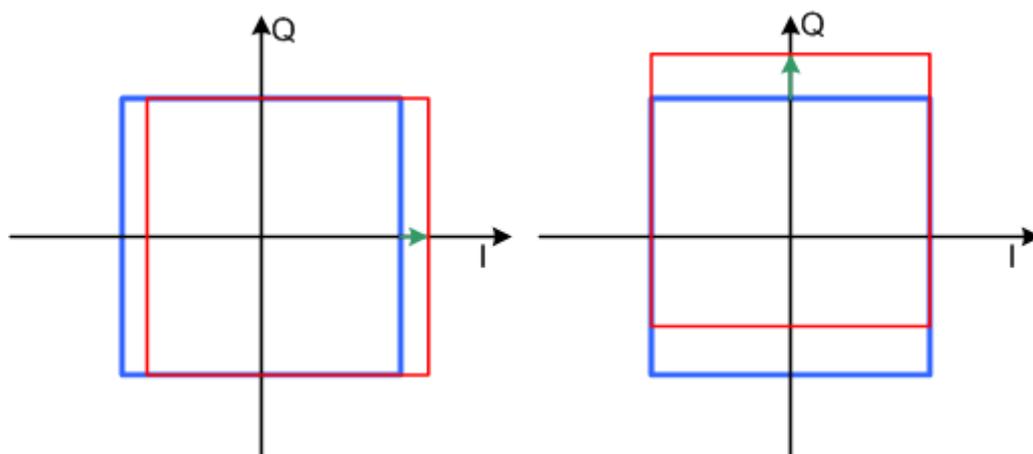


Figure 5-15: I offset (left) and Q offset (right) in the I/Q constellation diagram

5.7.1.3 Quadrature Offset

Changes the phase angle between the I and the Q vectors from the ideal 90 degrees, while the amplitudes are maintained. A positive quadrature offset results in a phase angle greater than 90 degrees. The effect of a positive quadrature offset in the I/Q constellation diagram is shown on [Figure 5-16](#).


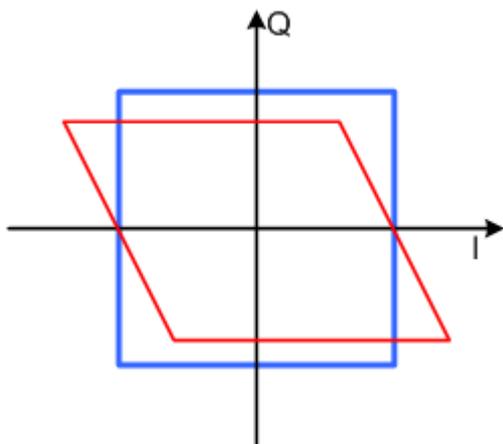



Figure 5-16: Positive quadrature offset in the I/Q constellation diagram

5.7.1.4 Impairment Settings Menu


To access the "Impairment Settings" menu for setting the digital I/Q impairments, select "AWGN/IMP > Configure > I/Q Impairments" or use the MENU key under "AWGN/IMP".

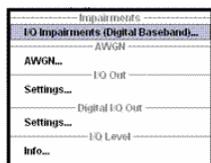

I/Q impairment is activated and set in the "I/Q Impairments" section.

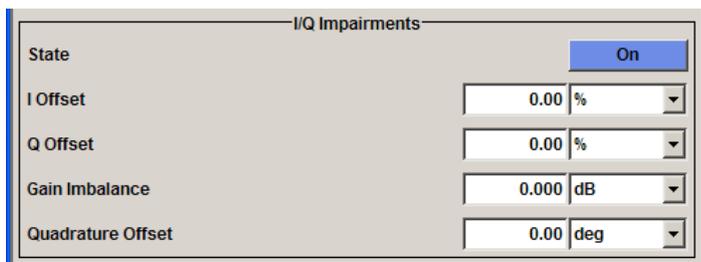

"Internal compensation" of signal distortions of the RF output can be activated / deactivated.

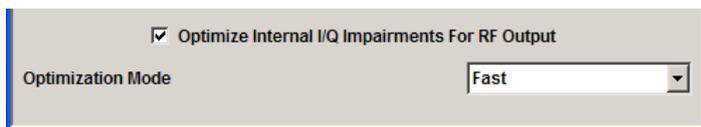

I/Q Impairments

In the "I/Q Impairments" section the parameters for carrier leakage, imbalance and quadrature offset can be set and I/Q impairment is activated.

State - Digital Impairments

Activates/deactivates digital I/Q impairment.

When activated, the settings for carrier leakage, I/Q imbalance and quadrature offset become effective.

Internal predistortion for compensating the I/Q modulator is not influenced by this setting.

Remote command:

`[:SOURce<hw>] :BB:IMPairment:STATe` on page 671

I/Q Offset - Digital Impairments

Sets the carrier leakage (in percent) of the amplitudes (scaled to the peak envelope power (PEP)) for the I and/or Q signal component. An ideal I/Q modulator suppresses the carrier leakage completely (offset = 0 percent).

For more information, see [Chapter 5.7.1.2, "I and Q Offset"](#), on page 290.

Remote command:

`[:SOURce<hw>] :BB:IMPairment:LEAKage:I` on page 670

`[:SOURce<hw>] :BB:IMPairment:LEAKage:Q` on page 670

Gain Imbalance - Digital Impairments

Sets the imbalance of the I and Q vector (see [Chapter 5.7.1.1, "Gain and Gain Imbalance"](#), on page 289).

The entry is made in dB (default) or %, where 1 dB offset is roughly 12 % according to the following:

$$\text{Imbalance [dB]} = 20 \log (| \text{GainQ} | / | \text{GainI} |)$$

Positive values mean that the Q vector is amplified more than the I vector by the corresponding percentage. Negative values have the opposite effect.

Remote command:

`[:SOURce<hw>] :BB:IMPairment:IQRatio[:MAGNitude]` on page 669

Quadrature Offset - Digital Impairments

Sets the quadrature offset (see [Chapter 5.7.1.3, "Quadrature Offset"](#), on page 290).

Remote command:

`[:SOURce<hw>] :BB:IMPairment:QUADrature[:ANGLE]` on page 670

Internal Compensation

Internal compensation of signal distortions of the RF output can be activated / deactivated.

Optimize internal IQ-Impairments for RF Output - Digital Impairments

Activates or deactivates internal compensation of signal distortions of the RF output. Signal distortions can be either optimized for the RF output (active) or for the differential I/Q output (not active).

Remote command:

`[:SOURce<hw>] :BB:IMPairment:OPTimization:STATe` on page 671

Optimization Mode - Digital Impairments

Selects the optimization mode. The optimization uses a set of factory determined calibration values.

Use the parameter [Optimize internal IQ-Impairments for RF Output - Digital Impairments](#) to determine whether the optimization is performed for the RF signal or for the signal at the differential I/Q output.

"Fast"	Optimization is reached by compensation for I/Q skew.
"High Quality"	Optimization is reached by compensation for I/Q skew and frequency response correction. For information on the I/Q modulation performance, see the data sheet.

Remote command:

`[:SOURce<hw>] :BB:IMPairment:OPTimization:MODE` on page 671

5.7.2 AWGN - Noise Generator

The noise generator generates an AWGN signal (Additive White Gaussian Noise) in the digital baseband, i.e. the noise power density has a Gaussian distribution and is distributed evenly across the frequency. This noise signal superimposes the (interference-free) useful signal ("Additive Noise" mode). Typical applications for the noise generator are bit-error or block-error measurements, depending on the set S/N or C/N ratio.

The Gaussian noise is generated by means of feedback shift registers with subsequent probability transformation. The switching configuration is such that virtually ideal statistical characteristics are achieved:

- I and Q paths are decorrelated from each other.
- The crest factor of 18 dB allows very small probabilities to be realized.
- The period of the noise signal depends on the selected system bandwidth. The relationship of period P to system bandwidth B_{sys} is approximated:

$$P \approx 1 \cdot 10^{13} / B_{\text{sys}}$$

This results in periods between 317 years with minimum bandwidth and approximately 2 days with maximum bandwidth.


This results in a period of approximately one month for 3GPP FDD with a bandwidth of 3.84 Mcps, and a period of 427 days for GSM with 270.833 ksps.

Scalable low-pass filters are used to produce a noise power with both a broad dynamic range and a broad bandwidth range (from 1 kHz to 60 MHz).

Apart from the "Additive Noise" mode, there are also the "Noise Only" and the "CW Interferer" mode. In the "Noise Only" mode a pure noise signal is generated and modulated to the carrier. In the "CW Interferer mode", a sinusoidal signal with an adjustable frequency offset to the baseband signal is generated and added to the baseband signal by means of a counter instead of a shift register.


5.7.2.1 AWGN Settings Dialog

To open the "AWGN Settings" menu for setting the noise generator, select "AWGN/IMP > Configure > AWGN" or use the MENU key under "AWGN/IMP".

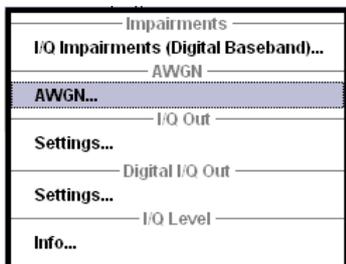

The "AWGN Settings" menu is divided into the following sections.


The RFI signal generator is activated, the mode selected and the interfering signal is configured in the top section of the menu.

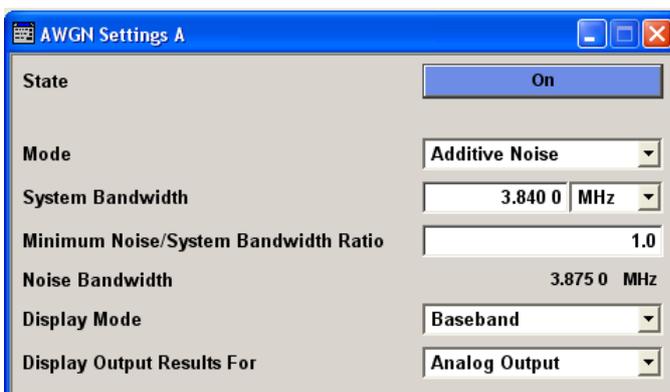

The power of the interfering signal is configured in the "Noise power Configuration And Output Results" section.

In "Additive Noise" and "CW interferer" mode, the interfering power can be defined and the resulting total power displayed here.

In "Noise Only" mode, only the noise power can be set here.

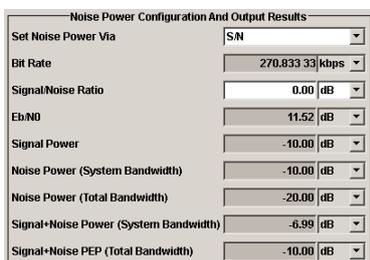

AWGN Settings

The RFI signal generator is activated, the mode selected and the interfering signal is configured in the top section of the menu.

State - AWGN

Activates/deactivates the RFI signal generator. The interferer (AWGN or CW interferer, depending on the selected mode) is generated as after the generator is activated.

Remote command:

[:SOURce<hw>] :AWGN:STATe on page 579

Mode - AWGN

Selects the mode for generating the interfering signal.

"Additive Noise"

The AWGN noise signal with selectable system bandwidth is added to the baseband signal.

"Noise Only"

The pure AWGN noise signal with selectable system bandwidth is modulated to the carrier. The connection to the baseband is interrupted.

"CW Interferer"

A sine with a defined frequency offset is added to the baseband signal. The calculation of E_b/N_0 ratio is omitted.

Remote command:

[:SOURce<hw>] :AWGN:MODE on page 576

System Bandwidth - AWGN

(Additive Noise and Noise Only)

Sets the RF bandwidth to which the set carrier/noise ratio relates.

Within this frequency range, the signal is superimposed with a noise signal whose power corresponds exactly to the set C/N or S/N ratio.

Note: The noise signal is not generated arbitrarily for a particular bandwidth, but instead it is generated in steps. Noise therefore also occurs outside the set system bandwidth.

Remote command:

[:SOURce<hw>] :AWGN:BWIDth on page 572

Minimum Noise/System Bandwidth Ratio - AWGN

(Additive Noise and Noise Only)

Sets the ratio of minimum noise bandwidth to system bandwidth.

Note: The noise signal is not generated arbitrarily for a particular bandwidth, but instead it is generated in steps. Noise therefore also occurs outside the set system bandwidth.

With this parameter the minimum real noise bandwidth can be set as required by some standards. It does not influence the calculation of power from the set C/N or S/N ratio in relation to system bandwidth.

The overall bandwidth is calculated as follow and may not exceed 80 MHz.

Overall Bandwidth = System BW x Minimum Noise/System BW Ratio

Remote command:

[:SOURce<hw>] :AWGN:BWIDth:RATIo on page 573

Noise Bandwidth - AWGN

(Additive Noise and Noise Only)

Indicates the real noise bandwidth. The value is indicated when AWGN state is "On".

Note: The noise signal is not generated arbitrarily for a particular bandwidth, but instead it is generated in steps. Noise therefore also occurs outside the set system bandwidth.

Remote command:

[\[:SOURce<hw>\]:AWGN:BWIDth:NOISe?](#) on page 573

Display Mode - AWGN

Switches between Baseband and RF representation.

This setting influences the way the interfering parameters are displayed, as for example the SNR value defined as C/N, or as S/N.

Remote command:

[\[:SOURce<hw>\]:AWGN:DISP:MODE](#) on page 574

Display Output Results For - AWGN

(Additive Noise and Noise Only)

Selects the display of output results for the analog (DACIF) or the digital (BBOUT) signal path.

Note: This selection field is only available with the option R&S SMJ-B18, Baseband Digital I/Q Out. If the instrument is not equipped with this option the parameters of the analog signal path are displayed.

"Analog Output" The parameters of the analog signal path are displayed.

"Digital Output" The parameters of the digital signal path are displayed.

Remote command:

[\[:SOURce<hw>\]:AWGN:DISP:ORESults](#) on page 574

Target CW Frequency - AWGN

(CW Interferer mode only)

Sets the desired frequency of the sine in "CW Interferer" mode.

Remote command:

[\[:SOURce<hw>\]:AWGN:FREQuency:TARGet](#) on page 575

Resulting CW Frequency - AWGN

(CW Interferer mode only)

Indication of the actual CW frequency of the sinusoidal signal in "CW Interferer" mode.

The actual frequency may differ from the desired frequency, since the resolution is limited to 0.7 Hz.

Tip: The desired frequency constellation can be precisely set with an accuracy of up to 0.01 Hz by selecting a suitable frequency offset of the baseband source (e.g. Custom Dig Mod) and by correcting the RF frequency by the difference between Resulting and Target CW Frequency.

Remote command:

[:SOURce<hw>] :AWGN:FREQuency:RESult? on page 575

Noise Power Configuration And Output Results

The interfering signal is configured in the "Noise/Interferer Power Configuration and Output Results" section.

Set Power via - AWGN

(Additive Noise only)

Selects the mode for setting the noise power.

"C/N ""S/N" The noise power is set on the basis of the value entered for the carrier/noise or signal/noise ratio. Whether a selection of C/N or S/N is enabled, depends on the selected "Display Mode". With digital modulation, the associated E_b/N_0 value is determined and displayed.

" E_b/N_0 " The noise power is set on the basis of the value entered for the ratio of bit energy to noise power density. The associated C/N or S/N value is displayed. The correlation between the two values is as follows:
 C/N or $S/N = (E_b/N_0) \cdot (f_{bit}/B_{sys})$, where
 f_{bit} is the Bit rate (Symbol rate x Modulation value)
 B_{sys} is the System bandwidth
 With "Custom Dig Mod" signals, the bit rate used for calculation is defined by the selected standard in the "Custom Digital Mod" dialog. With "Digital Standard" signals, the bit rate to be used for calculating the E_b/N_0 can be entered at "Bit Rate".
 Some test cases with the 3GPP base station tests (TS 25.141) specify, for example, E/N settings that apply to channel-coded data or block segments.

Remote command:

[:SOURce<hw>] :AWGN:POWer:MODE on page 577

Reference Mode - AWGN

(Additive Noise and CW Interferer, Display Mode set to RF)

Select reference mode if the C/N or E_b/N_0 ratio is changed.

"Carrier" If the C/N value or E_b/N_0 value changes, the carrier power is kept constant and the noise power is adjusted. This is the standard procedure for measuring the bit error rate versus the noise power.

"Noise" If the C/N value or E_b/N_0 value changes, the noise power is kept constant and the carrier power is adjusted. Some test cases of 3GPP Base Station Tests (TS 25.141) specify, for example, that the noise power be permanently set as a function of the base station power class, whereas the carrier power is variable.

Remote command:

[:SOURce<hw>] :AWGN:POWer:RMODE on page 578

Bit Rate - AWGN

(Additive Noise)

Sets or indicates the bit rate used for converting C/N or S/N to E_b/N_0 .

With "Custom Digital Mod" signals, the bit rate used is indicated here. It is defined by the choice of the standard in the "Custom Digital Mod" menu.

With "Digital Standard" signals, the bit rate used for converting C/N or S/N to E_b/N_0 is set here.

When generating a "Digital Standard", it is thus possible to select which bit rate is to be used for calculating the ratio of bit energy to noise power density, e.g. the bit rate before or after channel coding.

Remote command:

[:SOURce<hw>] :AWGN:BRATe on page 572

Carrier/Noise Ratio / Signal/Noise Ratio

(Additive Noise and CW Interferer only)

Sets the carrier/noise, signal/noise or signal/interferer ratio.

Whether a configuration of C/N or S/N is enabled, depends on the selected "Display Mode".

- In "Carrier Reference Mode", this entry determines the RFI power and thus the power of the output signal. It does not affect the power of the useful signal, i.e. the carrier power remains constant.
- In "Noise Reference Mode", this entry determines the power of the useful signal, i.e. the carrier power. The RFI power remains constant.
- The power of the noise signal which is derived from the entered C/N or S/N value is displayed under "Noise Power". The value is displayed automatically in the units of the useful signal.
- The power of the useful signal is displayed in the menu under "Carrier Power" and can also be changed there. The displayed value corresponds to the value in the "Level" display field.
- The power of the output signal is displayed under "Carrier + Noise Power".

If "Set Noise Power via E_b/N_0 " is selected, the associated C/N or S/N value is displayed here.

Remote command:

[:SOURce<hw>] :AWGN:CNRatio on page 573

 E_b/N_0 - AWGN

(Additive Noise)

Sets the ratio of bit energy to noise power density in "Additive Noise" mode.

- In "Carrier Reference Mode", this entry determines the noise power and hence the power of the output signal, that means the carrier + noise signal. It does not affect the power of the useful signal. The carrier power is kept constant.
- In "Noise Reference Mode", this entry determines the power of the useful signal, i.e. the carrier power. The noise power is kept constant.
- The power of the noise signal which is derived from the entered E_b/N_0 value is displayed under "Noise Power (System Bandwidth)". The value is displayed automatically in the units of the useful signal.

- The power of the useful signal is displayed in the menu under "Carrier Power". The displayed value corresponds to the value in the "Level" display field.
- The power of the output signal is displayed under "Carrier + Noise Power".

If "Set Noise Power via C/N or S/N" is selected, the associated E_b/N_0 value is displayed here.

Remote command:

[\[:SOURce<hw>\]:AWGN:ENRatio](#) on page 574

Carrier Power

(Additive Noise and CW Interferer)

The name of this parameter depends on the selected "Display Mode".

- In "Carrier Reference Mode", this parameter sets the carrier power. This entry corresponds to "Level" value in the header of the instrument.
The power of the noise signal which is derived from the entered C/N or S/N value is displayed under "Noise Power (System Bandwidth)". The value is displayed automatically in the units of the useful signal.
- In "Noise Reference Mode", this parameter indicates the carrier power which is derived from the entered C/N or S/N value. This value corresponds to the "Level" value indicated in the header.
The noise power is set under "Noise Power (System Bandwidth)".

Note: The peak envelope power (PEP) specified in the header corresponds to the PEP value of the carrier. The PEP value of the overall signal is displayed in the menu under "Carrier+Noise PEP".

Remote command:


[\[:SOURce<hw>\]:AWGN:POWer:CARRier](#) on page 576

Noise Power (System Bandwidth) / Interferer Power

(Additive Noise, Noise Only, CW Interferer)

- "Noise Only" mode
Sets the power of the noise signal. This value corresponds to the "Level" value in the header of the instrument.
- "Additive Noise" mode
 - "Noise Reference Mode"
Sets the power of the noise signal. The power of the carrier is derived from the entered C/N or S/N or E_b/N_0 value.
 - "Carrier Reference Mode"
Displays the power of the noise signal in the system bandwidth. The power of the noise signal is derived from the entered C/N or S/N or E_b/N_0 value. The carrier power is entered under "Carrier Power"; respectively the power is displayed under "Carrier Power".
- "CW Interferer" mode
 - "Noise Reference Mode"
Sets the power of the interfering signal. The power of the carrier is derived from the entered C/N or S/N value.
 - "Carrier Reference Mode"
Displays the power of the interfering signal. The power of the interfering signal is derived from the entered C/N or S/N value. The carrier power is entered under "Carrier Power".

Note: The noise signal is not generated arbitrarily for a particular bandwidth, but instead it is generated in steps. Noise therefore also occurs outside the set system bandwidth. This means that the total measurable noise power (see below) usually exceeds the value displayed here. Correct measurement of the noise power within the system bandwidth is possible by means of channel power measurement using a signal analyzer.

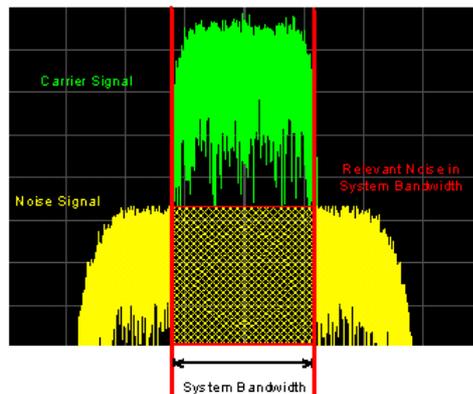

Remote command:

`[:SOURce<hw>] :AWGN:POWer:NOISe` on page 577

Noise Power (Total Bandwidth) - AWGN

Displays the power of the noise signal in the total bandwidth in "Noise Only" and "Additive Noise" mode.

Remote command:

`[:SOURce<hw>] :AWGN:POWer:NOISe:TOTal?` on page 578

Carrier + Noise Power / Signal + Noise Power (System Bandwidth) / Carrier + Interferer Power / Signal + Interferer Power

In "Additive Noise" and "CW Interferer" modes, displays the overall power of the noise/interferer signal plus useful signal.

Note: This parameter differs depending on the selected interfering and display mode, see [Mode - AWGN](#) and [Display Mode - AWGN](#). Consequently, the overall power of the measured signals is composed of different signals, and is also represented in different units, dBm or dB full scale.

Tip: In the "Additive Noise" mode, select the "Display Output Results For" (analog or digital) before.

Remote command:

`[:SOURce<hw>] :AWGN:POWer:SUM?` on page 579

Carrier + Noise PEP / Signal + Noise PEP (Total Bandwidth) / Carrier + Interferer PEP / Signal + Interferer PEP

(Additive Noise and CW Interferer)

Displays the peak envelope power of the overall signal composed of noise signal plus useful signal.

The name of this parameter depends on the selected "Display Mode".

Note: The peak envelope power (PEP) specified in the header corresponds to the PEP value of the carrier.

In the mode "Additive Noise" the "Display Output Results For" (analog or digital) has to be set before.

Remote command:

[:SOURce<hw>] :AWGN:POWer:SUM:PEP? on page 579

5.7.3 Output of the Baseband Signal - I/Q Out


The R&S SMJ provides various outputs of the baseband signal.

The digitally modulated signal can either be output directly or converted to an analog I/Q baseband output signal. The **analog baseband signal** can be output single-ended or differential (non-inverted).

The single ended or differential output requires option R&S SMJ-B16, Differential Output.


The analog signal is output at the I/Q output connectors I OUT/I OUT BAR and Q OUT/Q OUT BAR on the rear panel of the instrument.

The output of the **digital baseband signal** requires the option R&S SMJ-B18, Digital I/Q Out. The signal is output at the standardized (LVDS) digital I/Q interface on the rear panel.

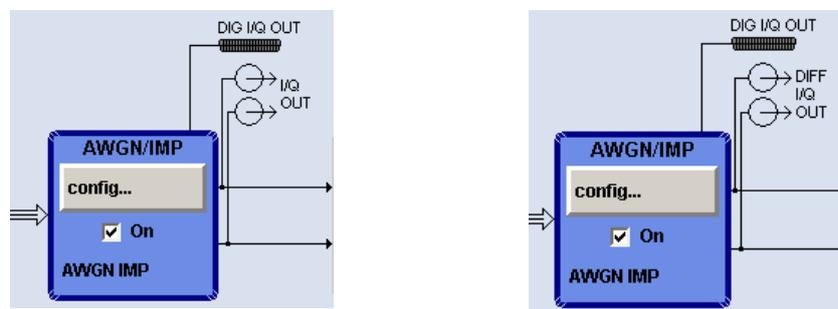

5.7.3.1 I/Q Out Settings Menu

The settings dialogs for the analog and digital signal output are available in the block diagram in the "AWGN/IMP" function block as well as in the menu with the same name which is opened using the MENU key.

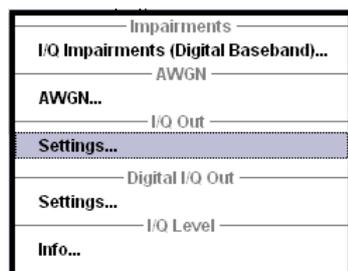

Selecting the menu item "I/Q Out Settings" opens a dialog with the parameters for the I/Q output signal.

The "I/Q Out" Settings dialog is available for analog and digital I/Q output signals. These dialogs are accessible under the menu sections with the corresponding names.

5.7.3.2 Analog I/Q Output

The differential output of the R&S SMJ provides symmetrical signals for differential inputs of DUTs without the need of additional external electric network.

The operating point of the inputs can be set by a definable DC-voltage (bias). In addition an offset between inverting and non-inverting output can be set to balance a difference of the best operating points.

The equipment options for the basic unit (R&S SMJ with frequency option R&S SMJ-B10x) include the option R&S SMJ-B13 (Baseband Main Module) and the option R&S SMJ-B16 (Differential Output) for "I/Q Out...".



Option R&S SMJ-B16 (Differential Outputs) cannot be fitted together with options R&S SMJ-B81 (Rear Panel Connectors), because they use the same connectors.

Optimize I/Q Signals for RF Output

Activates/deactivates optimization of level accuracy and imbalance for RF Output.

Level accuracy and imbalance can be either optimized for RF output (active) or for differential outputs (not active).


Remote command:

```
[ :SOURCE<hw> ] :IQ:OUTPut [ :ANALog ] :BIAS:OPTimization [ :RF ] :STATe  
on page 730
```

I/Q Output Type

Selects the type of output. The analog outputs can be operated in "Single Ended" mode or "Differential" (non-inverted) mode. The menu changes depending on the selected output mode

- "Differential" Differential output at I OUT and I OUT BAR or Q OUT and Q OUT BAR.
The analog I/Q signal components are output at I/Q OUT and I/Q OUT BAR. A bias to set the operating point of DUT can be defined. In addition an offset between inverting and non-inverting output can be set to balance a difference of the best operating points.

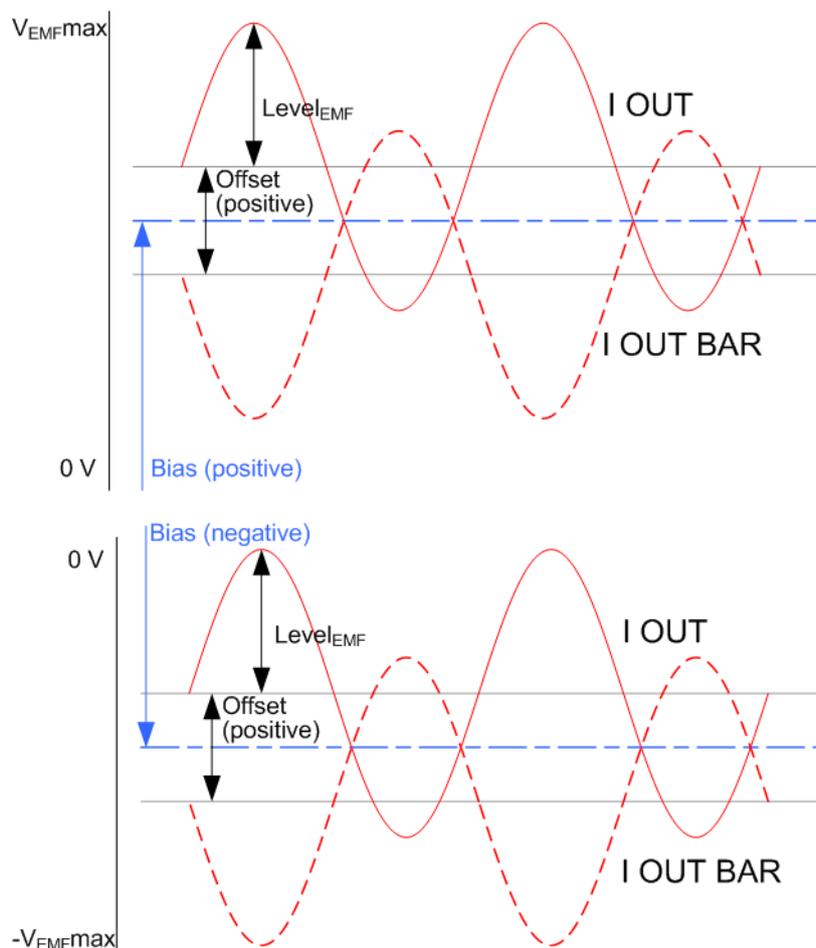

- "Single Ended" Single-ended output at I OUT and Q OUT.
A bias between I/Q OUT and ground can be defined (requires the option R&S SMJ-B16, Differential I/Q Output).

Remote command:

`[:SOURce<hw>] :IQ:OUTPut [:ANALog] :TYPE` on page 731

Mode

Selects the mode for setting the outputs - independent or together. The menu changes depending on the selection here.

"Fixed"	The settings for the I/Q signal components are fixed and cannot be changed. <ul style="list-style-type: none"> • "Level Vp (EMF)" (Single ended) = 1.0 V • "Level Vp (EMF)" (Differential) = 2.0 V • "Bias" = 0 V • "Offset" = 0 V
"Variable"	(R&S SMJ-B16) The settings for the I/Q signal components are not fixed and can be modified.

Remote command:

`[:SOURce<hw>] :IQ:OUTPut [:ANALog] :MODE` on page 731

I/Q Level Vp (EMF)

Sets the output voltage for both signal components. Small differences at the inputs can be taken into account via impairment settings (see [Chapter 5.7.1.4, "Impairment Settings Menu"](#), on page 291).

Single ended Output:

- Value range: 20 mV ... 2 V EMF.
- The maximum overall output voltage ("Level_{EMF}" + |"Bias_{EMF}"|) is 3.7 V.

Differential Output:

- Value range: 40 mV ... 4 V EMF.
- The maximum overall output voltage ("0.5" * "Level_{EMF}" + |"Bias_{EMF}"| + "0.5" * "Offset") is 3.7 V.

Remote command:

`[:SOURce<hw>] :IQ:OUTPut:LEVel` on page 730

Resulting I/Q Level Vp (EMF)

Displays the resulting output off-load voltage of both signal components at the rear panel.

Remote command:

`[:SOURce<hw>] :IQ:OUTPut [:ANALog] :POWer:PEP:RESult?` on page 730

Couple IQ Bias

(Variable output mode only)

Activates/deactivates coupling of bias setting of the I-signal and Q-signal component. For activated coupling, the setting can be made for the I-signal component, it automatically applies to the Q-signal component as well. The fields for setting the Q-signal component are shaded.

Remote command:

`[:SOURce<hw>] :IQ:OUTPut [:ANALog] :BIAS:COUPling [:STATe]` on page 729

Bias (EMF)

Sets the bias. A DC voltage is superimposed upon the I or Q signal. The maximum overall voltage ("Level_{EMF}" + "Bias_{EMF}" + "Offset_{EMF}") is 3.7 volts.

This way, the operating point of a DUT can be set.

Remote command:

[:SOURce<hw>] :IQ:OUTPut [:ANALog] :BIAS:I on page 729

[:SOURce<hw>] :IQ:OUTPut [:ANALog] :BIAS:Q on page 729

Offset (EMF)

(available only for output type "Differential" only)


Sets an offset between the inverting and the non-inverting output.

The value range is dynamically adjusted in order to respect the following constrains:


The maximum overall voltage (" $\text{Level}_{\text{EMF}}$ " + " Bias_{EMF} " + "Offset") is 3.7 V.

The set value is set half in the positive and half in the negative direction:

- A **positive offset** is set with half of the value in positive direction at the non-inverting outputs, in negative direction at the inverting outputs, respectively. For example, if a 100.0 mV offset value is set for the I signal component, the output signal at "I OUT" will have a 50.0 mV offset and the output signal at "I OUT Bar" will have a -50.0mV offset.

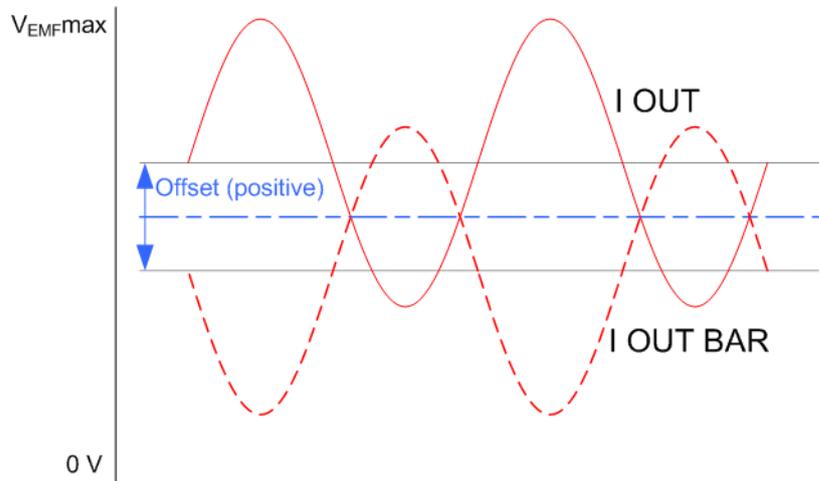

- A **negative offset** is set with half of the value in negative direction at the non-inverting outputs, in positive direction at the inverting outputs, respectively.

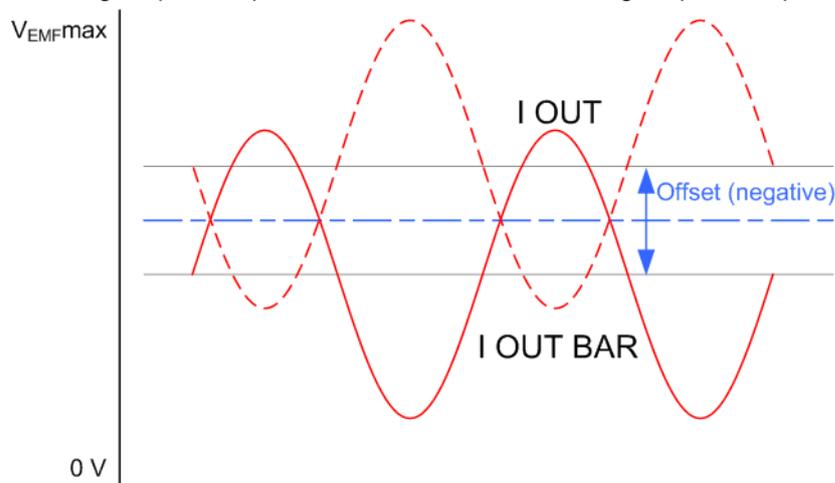

Remote command:

`[:SOURce<hw>] :IQ:OUTPut [:ANALog] :OFFSet:I` on page 729

`[:SOURce<hw>] :IQ:OUTPut [:ANALog] :OFFSet:Q` on page 729


5.7.3.3 Digital I/Q Output Settings

The digital baseband signal is output at a standardized (LVDS) digital I/Q interface.

To access the settings for the digital I/Q output:

1. select "Block Diagram > AWGN/IMP > Config... > Digital I/Q Out > Settings" or
2. press the MENU key and select "AWGN/IMP > Digital I/Q Output > Settings".

The output of the digital baseband signal is available with the option R&S SMJ-B18, Digital I/Q Out. Two-path instruments require a second option R&S SMJ-B18, Digital I/Q Out for digital output.

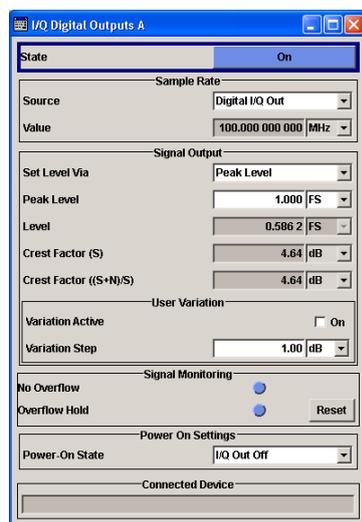

If an "R&S EX-IQ-BOX" is connected the R&S SMJ recognizes this module automatically. Then, the button "EX-I/Q-Box Settings..." is displayed in the "Digital I/Q Output Settings" dialog for configuring the parameters of the R&S EX-IQ-BOX (see "R&S EX-IQ-BOX" Manual). Additionally the components of the recognized R&S EX-IQ-BOX are listed in the Hardware Config, section Baseband Assembly.

Digital I/Q Output General Settings

State - Digital I/Q Output

Switches On/Off the digital I/Q output signal.

Remote command:

`[:SOURce<hw>] :IQ:OUTPut:DIGital:STATe` on page 737

EX-I/Q-Box Settings... - Digital I/Q Output

(With a connected R&S EX-IQ-BOX only)

Opens the main settings dialog of the R&S EX-IQ-BOX.

Remote command:

n.a.

Sample Rate

In the "Sample Rate" section the sample rate for the digital I/Q output signal can be set and the state of signal transmission is indicated by the FIFO Status.

Sample Rate Source - Digital I/Q Output

Selects the source for the sample rate of the digital I/Q output signal.

Note: With a connected **R&S EX-IQ-BOX** either the internal clock source (User defined) or an external clock (Digital I/Q In) can be selected in the settings dialog of the R&S EX-IQ-BOX. Therefore, the sample rate source is only indicated in this field.

"User Defined" The internally generated clock reference signal is used. The sample rate is calculated and displayed in the field "Value".

"Digital I/Q Out" An external clock reference signal is used. The clock signal is directly fed in via pin CLK2 of the digital output interface (option R&S SMJ-B18, Digital I/Q Out). The sample rate is estimated and displayed in the field "Value".

Remote command:

[\[:SOURce<hw>\]:IQ:OUTPut:DIGital:SRATe:SOURce](#) on page 736

Sample Rate Value - Digital I/Q Output

Sets or displays the sample rate of the digital I/Q output signal, depending on the selected sample rate "Source".

Remote command:

[\[:SOURce<hw>\]:IQ:OUTPut:DIGital:SRATe](#) on page 735

FIFO Status - Digital I/Q Output

Indicates the state of the signal transmission.

"OK" Resampling is working properly.

"OFL = Overflow" The external sample rate frequency is too high which causes an overflow in signal transmission.

"URUN = Underrun" The external sample rate is too low which causes an underrun in signal transmission.

Remote command:

[\[:SOURce<hw>\]:IQ:OUTPut:DIGital:SRATe:FIFO\[:STATus\]?](#) on page 736

Signal Output

The level of the output signal is set in the "Signal Output" section. For entering the value, level type "Peak Level" or "Level" can be selected.

Set Level Via

Selects the level type (peak level/level) that is used to set the signal level. The entry field is activated in the status bar and the value can be edited directly. Either the "Peak Level" or the "Level" entry field can be edited in a path.

The level entry fields and the corresponding units are displayed in the status bar.

"Peak Level" The signal level is expressed in terms of a peak envelope power value (PEP).

"Level" The signal level is expressed in terms of a rms value. The level always refers to the RMS value of the output signal without noise, even if the AWGN generator is activated.

Remote command:

`[:SOURce<hw>] :IQ:OUTPut:POWer:VIA` on page 735

Peak Level - Digital I/Q Out

The signal level is expressed in terms of a peak envelope power value (peak level).

The level entry fields and the corresponding units are displayed in the status bar. The level display always refers to both signal components ($\text{SQR}(I^2+Q^2)$).

Remote command:

`[:SOURce<hw>] :IQ:OUTPut:DIGital:POWer:PEP` on page 734

Level - Digital I/Q Out

The signal level is expressed in terms of an rms level value.

The level entry fields and the corresponding unit are displayed in the status bar. The level display always refers to both signal components ($\text{SQR}(I^2+Q^2)$).

Remote command:

`[:SOURce<hw>] :IQ:OUTPut:DIGital:POWer:LEVel` on page 733

User Variation

If the level is set using the rotary knob, the step width is defined in the User Variation section.

Variation Active - Digital I/Q Out

Activates the user-defined step width that is used by varying the level value with the rotary knob.

"On" The level value set with the rotary knob is varied using the user-defined step width which is entered under "Variation Step".

"Off" The level value set with the rotary knob is varied in steps of one unit at the cursor position (standard operating mode).

Remote command:

`[:SOURce<hw>] :IQ:OUTPut:DIGital:POWer:STEP:MODE` on page 735

Variation Step - Digital I/Q Out

Sets the user defined step width for entering the level value using the rotary knob. Level variation with this step width must be activated with "Variation Active ON".

Remote command:

`[:SOURce<hw>] :IQ:OUTPut:DIGital:POWer:STEP[:INCRement]` on page 734

Signal Monitoring

The section "Signal Monitoring" indicates digital signal clipping.

Overflow - Digital I/Q Out

Indicates that the I/Q output signal is currently clipped. This indication also appears in the block diagram close to the digital I/Q Out connector.

Overload may occur, e.g. if the level of the output signal, or the noise level (AWGN) are too high.

Remote command:

`[:SOURce] :IQ:OUTPut:DIGital:OFLow:STATe?` on page 733

Overflow Hold - Digital I/Q Out

Indicates an overflow since last reset.

The overflow hold state can be reset via the "Reset" button next to the LED, or is reset automatically by starting a new signal generation or by setting new values to the output level.

Remote command:

`[:SOURce] :IQ:OUTPut:DIGital:OFLow:HOLD:STATe?` on page 732

Reset - Digital I/Q Out

Executes a reset of the overflow hold state and LED.

Remote command:

`[:SOURce] :IQ:OUTPut:DIGital:OFLow:HOLD:RESet` on page 732

Power On Settings

The power on behaviour of the R&S SMJ is set in the "Power On Settings" section.

Power-On State - Digital I/Q Out

Selects the state which the digital I/Q Output is to resume after the instrument is switched on.

"I/Q Out Off" The output is deactivated when the instrument is switched on.

"Previous Set-
ting" When the instrument is switched on the digital I/Q output resumes to the status that was active before the last switch off.

Remote command:

`[:SOURce<hw>] :IQ:OUTPut:DIGital:PON` on page 733

Connected Device - Digital I/Q Out

if the connection is properly established and signal transmission is active, this parameter indicates the ID of an externally connected Rohde&Schwarz instrument.

Remote command:

`[:SOURce<hw>] :IQ:OUTPut:DIGital:CDEvice?` on page 732

5.7.4 I/Q Level - Info...

The signal power and the crest factor of the baseband signal at the I/Q output connectors are indicated in the dialog box "Baseband Info". This information is needed, for example, to use the I/Q signal externally and to adjust the power correctly there, or to see how the signal is modulated.




The information provided in this dialog box depends on the baseboard version your instrument is equipped with:

- Up to baseboard version *DacBoard 1141.8090.xx* the calculated values of the signal power are displayed only, as described in [Chapter 5.7.4.1, "Baseband Signal Level"](#), on page 310.
- From baseboard version *DacBoard 1141.8190.02* or higher, monitoring the measurement with or without interfering is possible. See [Chapter 5.7.4.2, "Baseband Signal Power Measurement"](#), on page 311.

To check the baseboard version of the instrument, select "Setup > System > Hardware Config, section Baseband Assembly" (see [Chapter 5.2.3.2, "Hardware Config"](#), on page 132).

To open the "Baseband Info..." dialog for information on the baseband I/Q signal during measurement, select "AWGN/IMP > Configure > I/Q Level > Info" or use the MENU key under "AWGN/IMP".

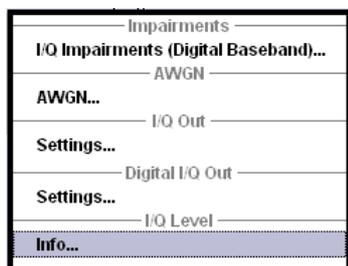


5.7.4.1 Baseband Signal Level



This section applies to instruments equipped with a baseboard up to version *DacBoard 1141.8090.xx*.

The signal power values and the crest factor of the baseband signal at the I/Q output connectors are displayed in the dialog.

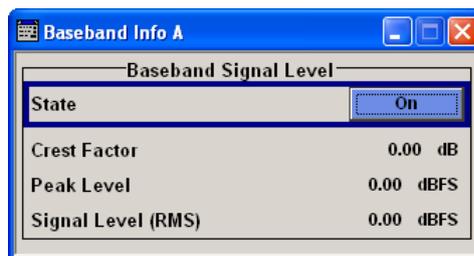

Crest Factor - Digital Impairments

Indicates the crest factor of the baseband signal.

The crest factor is calculated from the two level parameters as follows:

$$\text{Crest[dB]} = \text{Peak_Power[dBFs]} / \text{Signal_Power[dBFs]}$$

Remote command:

`[:SOURce<hw>] :BB:CFACTOR?` on page 695

Peak Power - Digital Impairments

Indicates the peak power of the baseband signal relative to full scale of 0.5 V (in terms of dB full scale).

Remote command:

`[:SOURce<hw>] :BB:POWer:PEAK?` on page 695

Power - Digital Impairments

Indicates the power of the baseband signal relative to full scale of 0.5 V (in terms of dB full scale).

Remote command:


`[:SOURce<hw>] :BB:POWer:RMS?` on page 696

5.7.4.2 Baseband Signal Power Measurement



This section applies to instruments equipped with a baseboard version *DacBoard 1141.8090.xx* or higher.

The power measurement of the I/Q baseband signal is monitored and displayed in the dialog. The measurement can be performed either with or without interfering.

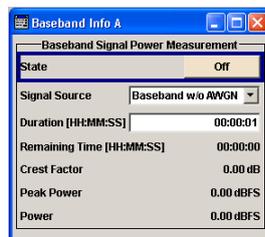

State - Digital Impairments - Measurement

Activates the measurement of the digital I/Q baseband signal.

Impairment of Digital I/Q Signal and Noise Generator - AWGN/IMP Block

When activated, information on the peak power, power and crest factor are indicated. Additionally the duration of the measurement can be set.

Remote command:

`[:SOURce<hw>] :BB:MEASurement [:STATe]` on page 695

Signal Source - Digital Impairments - Measurement

Selects the signal for the measurement. The power and crest factor can be retrieved either from the interference-free digital I/Q baseband signal or the signal superimposed by the noise generator AWGN.

"Baseband w/o AWGN" Activates the measurement of the interference-free baseband signal.

"Baseband with AWGN" Activates the measurement of the baseband signal after an AWGN noise signal is added.

Remote command:

`[:SOURce<hw>] :BB:MEASurement :SOURce` on page 694

Duration - Digital Impairments - Measurement

Enters the time for the measurement of the digital I/Q baseband signal in the range of 1 s ... 3 h. The time is to be entered in format "hh:mm:ss".

Remote command:

`[:SOURce<hw>] :BB:MEASurement :DURation` on page 693

Remaining Time - Digital Impairments - Measurement

Indicates the remaining time until the measurement of the digital I/Q baseband signal is completed. The time is displayed in format "hh:mm:ss".

Remote command:

`[:SOURce<hw>] :BB:MEASurement :RTIME?` on page 694

Crest Factor - Digital Impairments - Measurement

Indicates the crest factor of the baseband signal during measurement.

Remote command:

`[:SOURce<hw>] :BB:MEASurement :CFACtor?` on page 693

Peak Power - Digital Impairments - Measurement

Indicates the peak power of the baseband signal relative to full scale of 0.5 V (in terms of dB full scale) during measurement.

Remote command:

`[:SOURce<hw>] :BB:MEASurement :POWer :PEAK?` on page 693

Power - Digital Impairments - Measurement

Indicates the power of the baseband signal relative to full scale of 0.5 V (in terms of dB full scale) during measurement.

Remote command:


`[:SOURce<hw>] :BB:MEASurement :POWer :RMS?` on page 694

5.8 Baseband Signal - Baseband Block

The R&S SMJ provides you with the ability to generate digital modulation signals in accordance with the definitions in the digital standards or with user-definable characteristics. Signals are generated in realtime or from a data store with the aid of external and internal data. You can also load externally computed modulation signals into the R&S SMJ in the form of waveform files.

Several digital standards are provided, plus digital modulation with user-definable signal characteristics, generation of waveforms with the aid of the Arbitrary Waveform Generator and generation of multi carrier CW signals with the aid of Multi Carrier CW.

The settings for digital modulation can be accessed in the block diagram via the "Baseband" function block or with the aid of the MENU key.

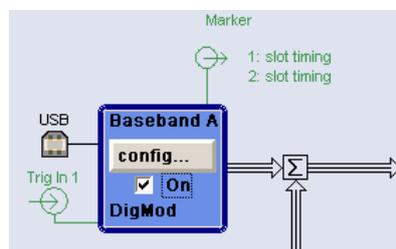

The equipment layout for generating the internal, digital modulation signals includes the options Baseband Main Module (B13) and one of the options Baseband Generator (B9/B10/B11). The three Baseband Generator options feature different ARB memory sizes (see data sheet). Apart from the memory size, however, the options offer the same functionality, either one can be installed.

In addition, the appropriate option is required for the digital standards. These options are specified in the description of the respective standard.

In the subsequent signal route the baseband signals can be frequency-shifted, detuned or loaded with noise (see [Chapter 5.7, "Impairment of Digital I/Q Signal and Noise Generator - AWGN/IMP Block"](#), on page 288).

5.8.1 Data and Signal Sources in Baseband

This section describes the common characteristics of the signals used for generating the baseband signal for all standards, including for example all listed data sources. The selection in the digital menus at any given time depends on the parameter and standard concerned and is clear from the selection list offered in the dialog. The external data sources may therefore not be available in certain cases.

Characteristics which are uniquely specific to particular standards are described in the corresponding manual.

The following input signals are used when digital modulation signals are being generated:

- Modulation data
- Clock signals

- Control signals

The input signals can be both internally generated and supplied from an external source. The internally generated data and clock signals are output not only on the DATA and CLOCK connectors but also on the corresponding pins of the AUX I/O interface.

Likewise control signals and also trigger signals for triggering signal generation in the R&S SMJ can be internally generated or supplied from an external source.

Up to four marker output signals for synchronizing external instruments can be user-defined.

Externally computed waveform files can be loaded in the instrument using computer interfaces or IEC bus.

Waveform files are processed with the aid of the Arbitrary Waveform Generator (ARB), see [Chapter 5.8.3, "Arbitrary Waveform Generator ARB"](#), on page 367.

Internally the "Multi Carrier CW" menu for defining multi carrier waveforms is available (see [Chapter 5.8.4, "Multi Carrier Continuous Wave"](#), on page 424).

5.8.1.1 Internal PRBS Data and Data Patterns

PRBS generators deliver pseudo-random binary sequences of differing length and duration. They are known as maximum length sequences, and are generated with the aid of ring shift registers with feedback points determined by the polynomial.

By way of example, the diagram below shows a 9-bit generator with feedback to registers 4 and 0 (output).


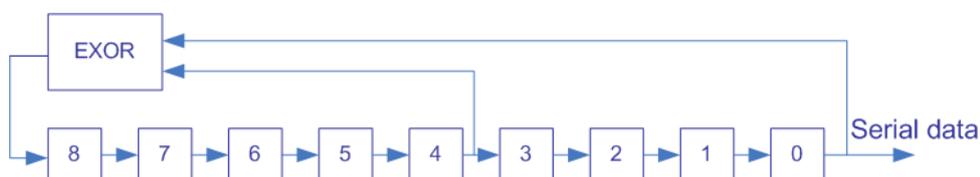


Figure 5-17: 9-bit PRBS generator



For PRBS15 and PRBS23, a CCITT V.52-compliant data inversion is performed in the feedback path automatically as shown below:

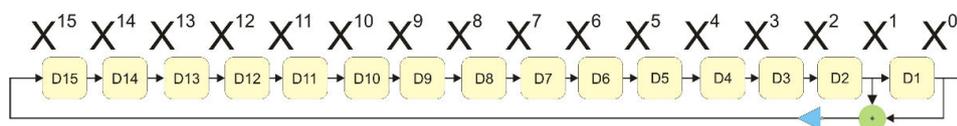

The pseudo-random sequence from a PRBS generator is uniquely defined by the register number and the feedback. The following table describes the available PRBS generators:

Table 5-2: PRBS generators

PRBS generator	Length in bits	Feedback to	GUI selection
9-bit	$2^9 - 1 = 511$	Registers 4, 0	PRBS 9
11-bit	$2^{11} - 1 = 2047$	Registers 2, 0	PRBS 11
16-bit	$2^{16} - 1 = 65535$	Registers 5, 3, 2, 0	PRBS 16
20-bit	$2^{20} - 1 = 1048575$	Registers 3, 0	PRBS 20
21-bit	$2^{21} - 1 = 2097151$	Registers 2, 0	PRBS 21

The "Data Source" selection for PRBS data from the dialog is "PN11, ...".


Simple data patterns such as binary 0 strings or 1 strings can also be used as internal modulation data. The "Data Source" selection from the menus is "ALL 0", "ALL 1". A variable bit string with a maximum length of 64 bits can be entered in an input field by selecting "Pattern."

5.8.1.2 Internal Modulation Data from Lists

Internal modulation data can be generated and stored in the form of binary lists. A separate file is created for each list and held on the instrument's hard disk.

The file name can be defined by the user.

The "Data Source" selection from the menus is "Data List". When this menu item is chosen the "Select Data List" button appears; this opens the file-selection window for data lists. A list can be created and edited in the "Data List Editor", which is accessed from the menu via the "List Management" or "Data List Management" button.

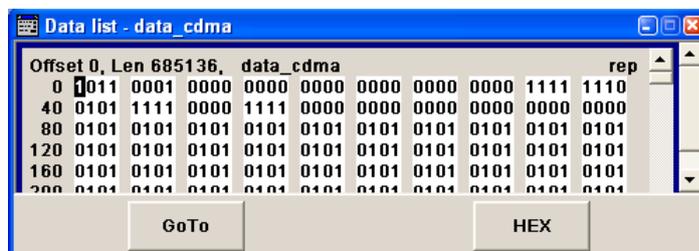

The maximum length of a data list is determined by the size of the data list memory (see data sheet). There is no restriction on the number of lists that can be stored.

5.8.1.3 External Synchronous Modulation Data

External Serial Modulation Data via the DATA Connector

For "Custom Digital Modulation", serial modulation data can be supplied bit-by-bit via the DATA connector. The "Data Source" selection from the menu is "Extern Serial".



In the case of modulation modes with more than 1bit/symbol, the most significant bit (MSB) must be fed in first (MSB first).

The clock reference (symbol clock) used to read in the data can be either internal or external.

External serial data is output on the PARDATA pins of the AUX I/O interface as parallel data LSB-justified.

The maximum data rate for serial data processing can be found in the data sheet.

External Parallel Modulation Data via the AUX I/O Interface

For "Custom Digital Modulation", parallel data can be supplied symbol-by-symbol via the AUX I/O interface (D0 – D9). The "Data Source" selection from the menu is "Extern Parallel".



In the case of modulation modes with fewer than 10bits/symbol, the data must be applied LSB-justified. In the case of 8-PSK modulation for example (3bits/symbol) only data lines D0, D1 and D2 are used.

The clock reference (symbol clock) used to read in the data can be either internal or external.

External parallel data is output on the DATA connector serially. However, there is a maximum data rate above which serial data processing becomes impossible and the DATA connector becomes high-impedance. The maximum data rate for parallel data processing is shown in the data sheet.

5.8.1.4 Clock Signals

The clock reference used for generating the timing pulse can be either internal or external ("Clock Source" selection from the menu: "Internal / External").

Internal clock reference



The table below gives an overview of the generated clock signals and the connectors they are output at for the case a internal clock reference is selected.

Connector	Location	Clock Mode
CLOCK	front panel	Symbol clock
CLOCK OUT	rear panel	Choice of bit clock or symbol clock
BITCLK	AUX I/O interface, rear panel	Bit clock
SYMBCLK	AUX I/O interface, rear panel	Symbol clock

The clock output signals are assigned in the menu sequence "Setup > Environment > Global Trigger/Clock/External Inputs > USER Marker /AUX I/O Settings".

External clock reference



An external clock is always supplied via the CLOCK connector. When the external clock reference is selected, the internal clock is synchronized to it. The table below gives an overview of the connectors the internal clocks are output at.

Connector	Location	Clock Mode
CLOCK OUT	rear panel	Choice of bit clock or symbol clock
BITCLK	AUX I/O interface, rear panel	Bit clock
SYMBCLK	AUX I/O interface, rear panel	Symbol clock

The active edge of the external clock signal on the CLOCK input is selectable (menu "Setup > System > Global Trigger/Clock/External Inputs"). Internally the rising edge is always taken as the active edge. The active rising edge of the internal clocks is therefore synchronized with either the rising or the falling edge of the external clock reference. A symbol clock can be supplied externally or, if internally generated or externally asynchronous data is being fed in, a multiple of a symbol clock can be supplied.

In order for the clock synthesizer on the R&S SMJ to be synchronized correctly, the external clock reference must first be applied and the correct symbol rate must then be set. Until this has been done the external clock source must not be selected ("Clock Source External").



The symbol rate set must not deviate from the symbol rate of the external signal by more than 2% (see also data sheet).

5.8.1.5 Synchronizing Data Signals and Clock Signals

When selecting data signals and clock signals, the following operating modes are possible:

- Internal clock and internal data
- Internal clock and external synchronous data
- External clock and external synchronous data
- External clock and either internal data or external asynchronous data

Internal Clock and Internal Data

When internal data is selected, this data is output in serial mode on the DATA connector or in parallel mode on the PARADATA pins of the AUX I/O interface ("Custom Digital Modulation").

In modulation modes with fewer than 10bits/symbol, the parallel data is output LSB-justified. In the case of 8-PSK modulation for example (3bits/symbol) only data lines D0, D1 and D2 are used.

In the following example, the diagram shows the output signals of an 8-PSK modulation (3 bits per symbol) on the serial DATA interface. The positive edge of the clock is always used when outputting data. The data source is a data list with 15 bits = 001 010 100 101 110 (5 symbols).

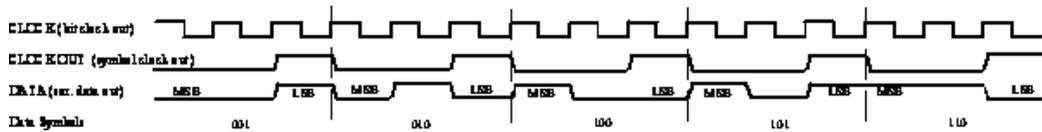


Figure 5-18: Output signal on the serial data interface and clock output signals on the AUX I/O interface

There is a maximum data rate above which serial data processing becomes impossible. This data rate can be found in the data sheet. If the rate is exceeded the DATA connector becomes high-impedance, and the output on the CLOCK connector is the symbol clock instead of the bit clock.

In the following example, the diagram shows the output signals of an 8-PSK modulation (3 bits per symbol) on the parallel interface. The data source is a data list with 15 bits = 001 010 100 101 110 (5 symbols).

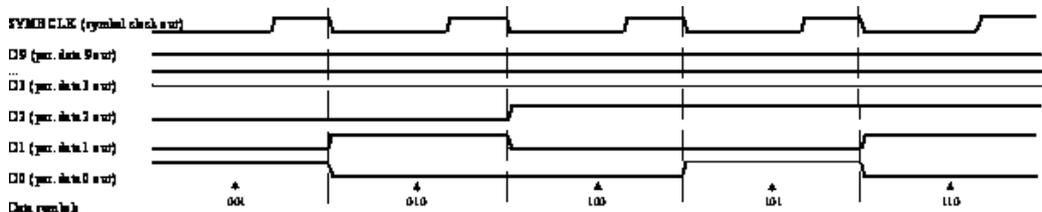


Figure 5-19: Data and clock output signals on the parallel AUX I/O interface

In order for parallel external data to be retrieved correctly the rising edge of the symbol clock must be used, since the timing between the falling edge of the symbol clock and the data switch on the parallel interface is undefined.

Internal Clock and External Synchronous Data

External serial data

When serial data for "Custom Digital Modulation" is being fed in via the DATA connector on the front panel, the symbol clock acts as a scanning pulse (strobe) so as to mark the least significant bit in a symbol.

The clock signals are output on the CLOCK and CLOCK OUT connectors (front panel and rear panel respectively, choice of bit clock or symbol clock on the latter) and on the BITCLK or SYMBCLK pins on the AUX I/O interface. Optimum timing is achieved from using the output signal on the CLOCK connector on the front panel. The setup and hold times (see following diagram, tsetup and thold) that must be maintained in the

R&S SMJ to ensure that the serial data is accepted correctly can be found in the data sheet.

The following diagram illustrates the timing ratios between data and clock when serial data is being supplied from an external source and the internal clock source is being used.

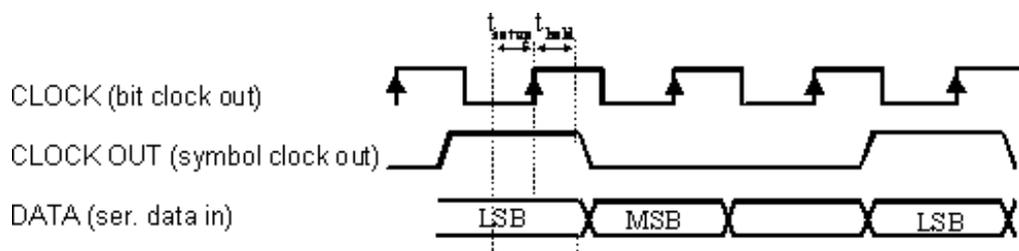


Figure 5-20: External serial data and the clock signals which are output (bit clock and symbol clock). The setup time (t_{setup}) and hold time (t_{hold}) can be found in the data sheet.

External parallel data

When parallel data for "Custom Digital Modulation" is being fed in via the AUX I/O interface (D0 – D9), the internal symbol clock is used.

The symbol clock is output on the CLOCK OUT connector (rear panel, choice of bit clock or symbol clock) and on the SYMBCLK pin on the AUX I/O interface. Optimum timing is achieved by using the symbol clock on the SYMBCLK pin on the AUX I/O interface. The setup and hold times (see following diagram, t_{setup} and t_{hold}) that must be maintained in the R&S SMJ to ensure that the serial data is accepted correctly can be found in the data sheet.

The following diagram illustrates the timing ratios between data and clock when parallel data is being supplied from an external source and the internal clock source is being used.

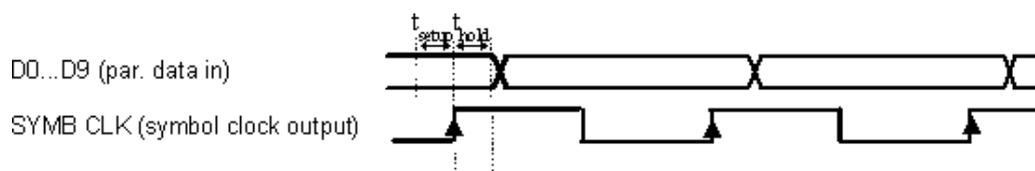


Figure 5-21: External parallel data, internal clock signal and the clock signal that is output on the AUX I/O interface. The setup time (t_{setup}) and hold time (t_{hold}) can be found in the data sheet.

External Clock and External Synchronous Data

When synchronous modulation data is being fed in from an external source for "Custom Digital Modulation", clock generation in the R&S SMJ can be synchronized on the rising or falling edge of an external symbol clock. The clock reference is supplied on the CLOCK connector (front panel).

The clock signals generated as a result are output on the CLOCK OUT connector (rear panel, choice of bit clock or symbol clock) and on the BITCLK or SYMBCLK pins on the AUX I/O interface.

External serial data

The following diagram illustrates the timing ratios between data and clock when serial data is being supplied from an external source and an external reference clock is being used.

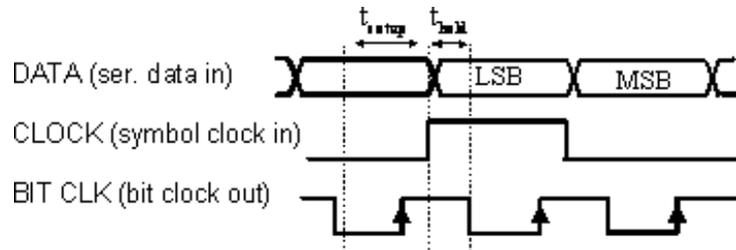


Figure 5-22: External serial data and external symbol clock - 3 bits/symbol with high and low active symbol clock for marking the LSB. The data and the symbol clock must change state simultaneously. The setup time (t_{setup}) and hold time (t_{hold}) can be found in the data sheet.

A bit clock is generated from the externally supplied symbol clock and is used for reading the serial data into the R&S SMJ. The active edge of this bit clock is located ahead of the symbol clock.

External parallel data

The following diagram illustrates the timing ratios between data and clock when parallel data is being supplied from an external source and an external reference clock is being used.

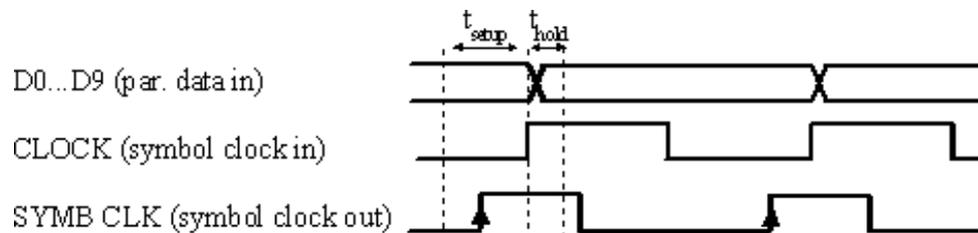


Figure 5-23: External parallel data with high and low active external symbol clock. The setup time (t_{setup}) and hold time (t_{hold}) can be found in the data sheet.

The R&S SMJ uses the externally supplied symbol clock to generate an internal symbol clock that defines the sampling points at which the parallel data is read into the R&S SMJ. These sampling points are also located a little ahead of the external symbol clock.

External Clock and Internal or External Asynchronous Data

If the modulation data is generated internally or supplied asynchronously from an external source, clock generation in the R&S SMJ can be synchronized on an external symbol clock, or a multiple thereof, which is fed in on the CLOCK connector (front panel). Synchronization can be based on the rising edge or falling edge according to choice. The maximum permissible multiple symbol clock can be found in the data sheet.

5.8.1.6 Control Signals

The following control signals are processed in the R&S SMJ:

- "Burst Gate" for power ramping
- "Level Attenuation" for power ramping
- "CW" for controlling the CW (continuous wave) mode

A dedicated internal "Control Data Editor" is provided for defining the control signals. Refer to "[Control and Marker List Editor](#)" on page 354 for a description on the provided settings.

A separate file with the file extension `*.dm_iqc` is created for each defined control signal and held on the instrument's hard disk.

Continuous Wave Mode

The "CW" signal turns off digital modulation. The signal is output in unmodulated form.

In case of standards in which it is possible to switch between different modulation modes, the signal is output only and cannot be supplied from an external source. In such cases it indicates the modulation mode internally (standard GSM: signal high (1) = modulation mode GMSK and signal low (0) = modulation mode 8PSK EDGE).

The CW control signal is generated internally and fed to the AUX I/O interface. The control signals for power ramping can be provided externally for Custom Digital Modulation only. When generated internally the signals are output on the AUX I/O interface.

Power Ramping and Level Attenuation

The R&S SMJ uses the two control signals "Burst Gate" and "Lev_Att" to trigger the power ramping and level attenuation functions.

The instrument internally generates control signals as configured in [Control and Marker List Editor](#).

If "Custom Digital Modulation" is used, you can also supply the control signals from an external source via the AUX I/O interface.

- *Burst gate control signal*
The "Burst Gate" signal is a rectangular pulse signal with variable low and high periods. Signal generation is restricted to the gate high periods. If the power ramping function is enabled, each transition between two gate periods of the "Burst Gate" signal triggers the generation of a ramp. Further settings define the form and the steepness of this ramp, see "[Impact of the Power Ramping Settings on the Generated Signal](#)" on page 322.
- *Level attenuation control signal*
The "Lev_Att" signal is a rectangular pulse signal with variable low and high periods. Level attenuation is applied, if the "Lev_Att" signal is high. If level attenuation is enabled, the modulation signal level is attenuated by a defined value.

Refer to "[Power Ramp Control](#)" on page 358 for a description of the provided settings for level attenuation and power ramping.



Possible applications

- Use the "Level Attenuation" function to simulate radio stations located at various distances.
- Use the "Power Ramp" function if it is necessary to control the RF output signal envelope synchronously, e.g. by the generation of TDMA signals.

Both the GSM/EDGE and the TD-SCDMA firmware options are equipped with embedded power ramping function. In the GSM/EDGE standard for example, a maximum of 7 different level attenuation values can be defined and allocated separately to the 8 slots independently of one another.

Impact of the Power Ramping Settings on the Generated Signal

The [Figure 5-24](#) explains the power ramping function in principle. The "Burst Gate" signal defines the start of the rising and falling edges of the envelope of the output signal, and the "Lev Att" signal defines the start and end of level attenuation. The signal level during the attenuation period is a configurable value.

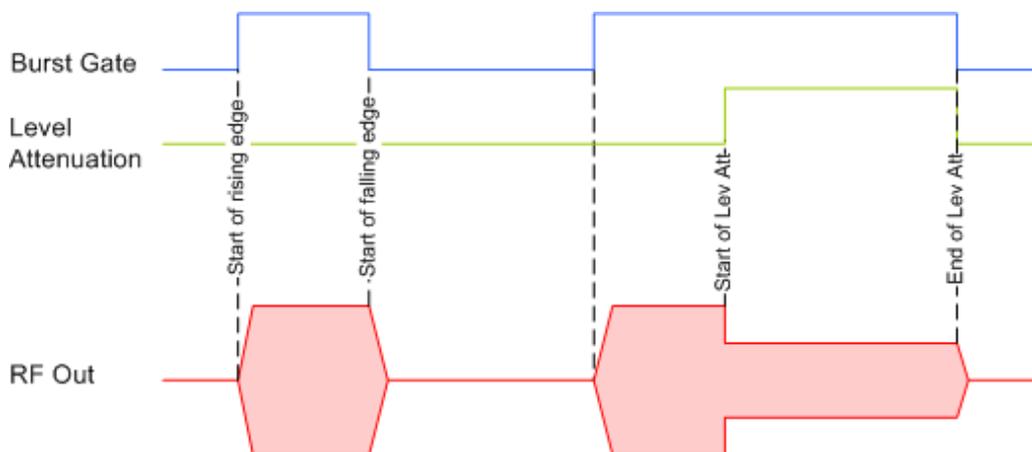


Figure 5-24: Signal behavior when power ramping and level attenuation are enabled

Several parameters are provided for precise definition of the form and the steepness of ramp. The [Figure 5-25](#) depicts the impact of the provided settings.

- Ramp function: defines the shape of the rising and falling edges
- Ramp time: defines the duration of the rising and the falling ramp
- Rise/fall delay: offsets the falling edge of the envelope at the beginning/end of a burst

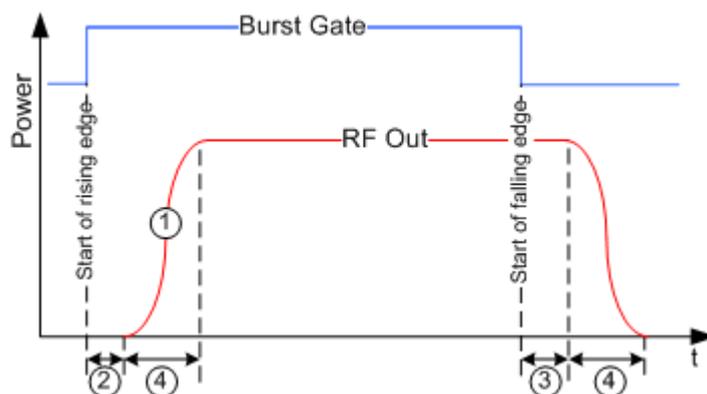


Figure 5-25: Impact of the ramp settings

- 1 = "Ramp Function"
- 2, 3 = "Rise Delay", "Fall Delay"
- 4 = "Ramp Time"

5.8.1.7 Trigger Signals

In the R&S SMJ, trigger signals are internally generated or externally supplied signals which start signal generation at a particular point in time.

Signal generation can also take place without triggering, in which case the signal is then generated in full after modulation is powered up. A trigger event either has no effect on signal generation (menu setting "Trigger Mode Auto") or triggers a signal restart (menu setting "Trigger Mode Retrigger").

If signal generation is triggered, the signal is continuously generated after the first trigger. In the "Armed_Auto" mode, a further trigger event has no effect. In the "Armed_Retrig" mode, every additional trigger event triggers a restart of the signal. In both cases, triggering can be reset to the initial state ("armed"), i.e. signal generation is stopped and the instrument waits for the next trigger to start signal generation anew.

The status of signal generation ("Running" or "Stopped") is displayed for all trigger modes in the corresponding trigger menu of the digital standard currently switched on. The signal generation status particularly with an external trigger can thus be checked.

Internal and external trigger sources are available for triggering.

- Internally, triggering is carried out manually by pressing the "Execute Trigger" button (menu selection "Internal").
- External trigger signals can be fed in via the TRIGGER connector (menu selection "External").

In the case of external triggering and internal triggering by the trigger signal on the second path, the start can be delayed by a definable number of symbols (menu setting "Trigger Delay External"). This makes it possible to purposely simulate the time delay between a base station signal and a user equipment signal, for example in the course of base station tests.

The effect of a restarted trigger signal in the "Retrigger" trigger mode can be suppressed for a definable number of symbols (menu setting "External Trigger Inhibit"). By this means the trigger can be suppressed for a definable number of

frames, for example in the course of base station tests, and yet the signal can still be generated synchronously. In each frame the base station generates a trigger which would cause a signal generation restart every time but for the suppression.

Example:

Entering 1000 samples means that after a trigger event, any subsequent trigger signal is ignored for the space of 1000 samples.

5.8.1.8 Marker Output Signals

The R&S SMJ generates user-definable marker output signals which can be used to synchronize external instruments. By this means a slot clock or frame clock can be set, for instance, or the start of a particular modulation symbol can be marked.

Four marker outputs are available. The outputs for markers 1 to 3 are defined, but marker 4 can be placed on one of the USER outputs according to choice.

Marker	Connector	Location
Markers 1/2	MARKER 1 / 2 BNC connectors	front panel
Marker 3	MARKER 3 pin of the AUX I/O connector	rear panel
Marker 4	USER1 BNC connector or USER2/3/4 pins of the AUX I/O connector	rear panel

Marker Modes

Marker Mode Restart

The generated marker signal is a single "On" pulse. The rising edge of this pulse is generated at the signal generation start as well as at each subsequent signal restart time. This marker can be used to monitor the effects of the selected trigger, e.g. trigger causing restarts of the signal generation.

Marker Mode Pulse

Periodic marker with consecutive On and Off periods of equal length. The first On period starts at the beginning of the first generated sample/symbol. The marker frequency is defined by a "Divider". The frequency is derived as follows:


<Frequency> = "Symbol/Sample Rate" / "Divider", respectively

<Frequency> = "Sampling Frequency" / "Divider".

Example:

Symbol Rate = 1 Msym/s, Divider = 2


The marker frequency is 500 kHz, corresponding to a marker period of 2 μ s. Each On and Off period has a length of 1 μ s, corresponding to one symbol period. With a divider of 4 (6, 8 ...), the length of each On and Off period is increased to 2 (3, 4, ...) symbol periods.

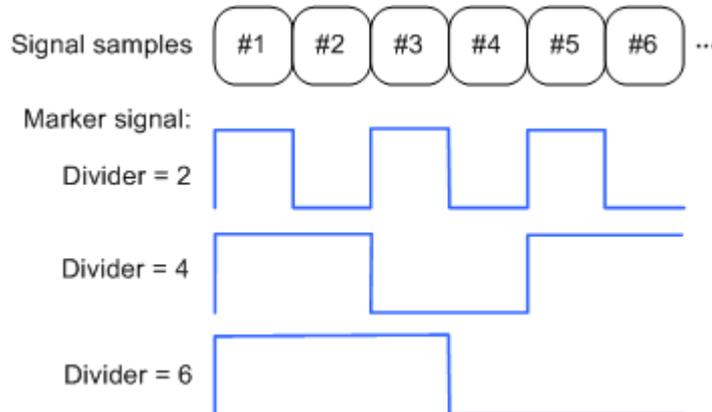**Marker Mode Pattern**

Periodic marker where each period is defined by a bit pattern with a maximum length of 64 bits. A "1" ("0") in the pattern denotes an On (Off) signal segment with a duration of one sample/symbol period.

Example:


In the following example, the marker signal is defined by a pattern *100100...*

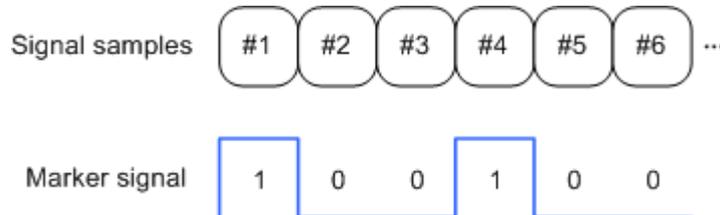**Marker Mode ON/OFF Ratio**

Similar to "Pulse" but with independent lengths of the On and Off periods. The length of the periods is entered as a number of symbols/sample periods.

Example:

In the following example, the marker signal is defined by an "On Time" = 1 and "Off Time" = 2.

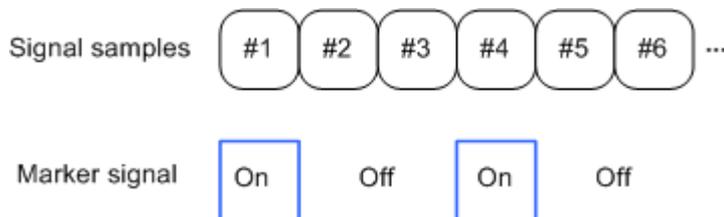

5.8.2 Digital Modulation - Custom Digital Modulation

The R&S SMJ can generate digital modulation signals with user-definable characteristics. Baseband filtering and the symbol rate can be set within wide limits.

5.8.2.1 Overview and Required Options

The equipment layout for generating the digital modulation signals includes the options Baseband Main Module (R&S SMJ-B13) and Baseband Generator (R&S SMJ-B9/B10/B11).

When modulation is ON, a two-part level indication is shown in the header section of the display. This displays both the average power (LEVEL) and the peak envelope power (PEP) of the modulated output signal.



The difference between PEP and LEVEL depends on the modulation type and the filtering: Both values are pre-measured internally so that the displayed values match the true values in the signal. When external signals are used, they are replaced by PRBS data during pre-measurement.

5.8.2.2 Modulation Types - Custom Digital Mod

The available predefined modulation types are ASK (amplitude shift keying), FSK (frequency shift keying), PSK (phase shift keying) and QAM (quadrature amplitude modulation). Additionally, a user defined modulation mapping can be applied (see ["User Mapping"](#) on page 330).

The actual modulation procedure is described by mapping, which assigns I and Q values (PSK and QAM) or frequency shifts (FSK) to every modulation symbol that occurs. This is represented graphically in the constellation diagrams.





The mapping for the selected modulation type is displayed in the "More..." submenu in the "Modulation" menu section (see ["More - Modulation Type"](#) on page 347).










The QAM procedures 16QAM, 32QAM, 64QAM have been produced in accordance with ETSI standard ETS 300429 for digital video broadcasting (DVB). The QAM proce-










dures 256QAM and 1024QAM are not specified in this standard, but have been produced according to the same basic principles.




In the case of all FSK procedures, the user can set the symbol rate fSYMB up to a maximum value (see data sheet). If MSK is selected, the frequency deviation (FSK deviation) cannot be set since it is permanently set to 1/4 of the symbol rate.

Table 5-3: Modulation type and associated mapping
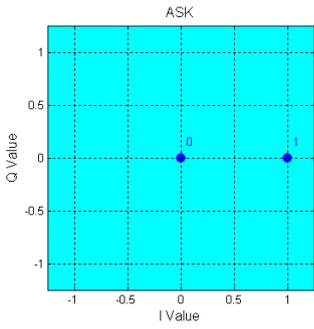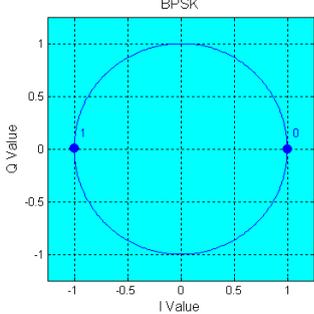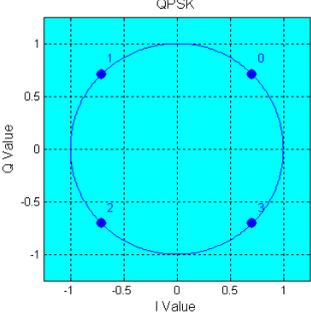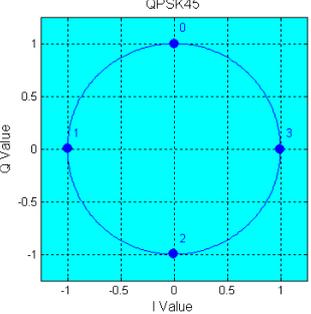
<p>ASK 1 bit per symbol SOUR:BB:DM:FORM ASK</p>		
		
<p>PSK</p>		
<p>BPSK 1 bit per symbol SOUR:BB:DM:FORM BPSK</p>	<p>QPSK 2 bits per symbol SOUR:BB:DM:FORM QPSK</p>	<p>QPSK 45° Offset 2 bits per symbol, 45° rotation SOUR:BB:DM:FORM QPSK45</p>
		
<p>QPSK EDGE 2 bits per symbol, 3pi/4 rotation SOUR:BB:DM:FORM QEDGE</p>	<p>AQPSK 2 bits per symbol, pi/2 rotation SOUR:BB:DM:FORM AQPSK</p>	<p>OQPSK 2 bits per symbol, Q offset SOUR:BB:DM:FORM OQPSK</p>

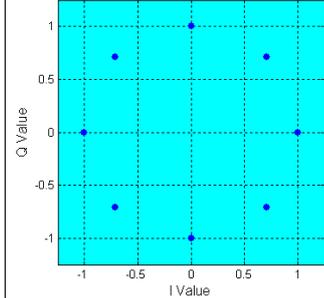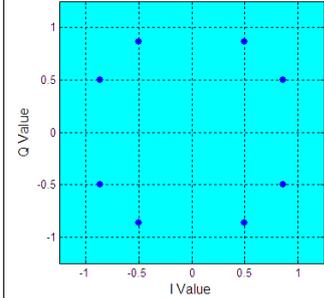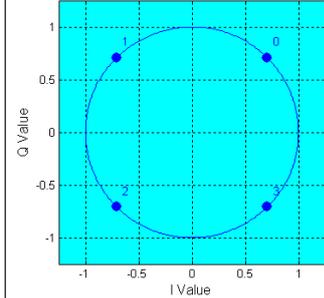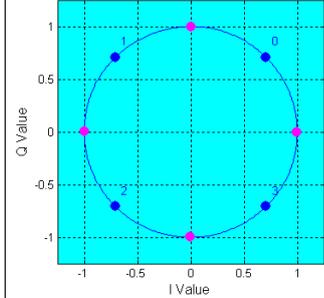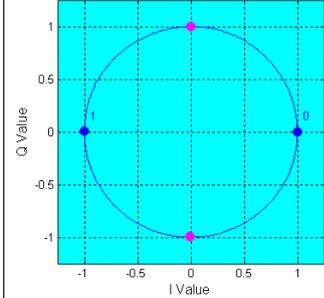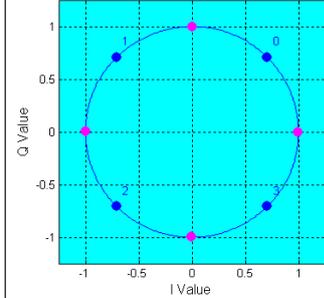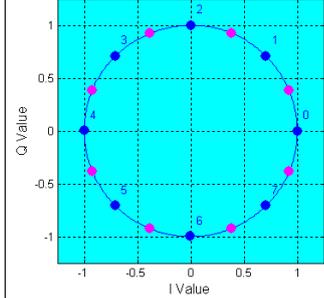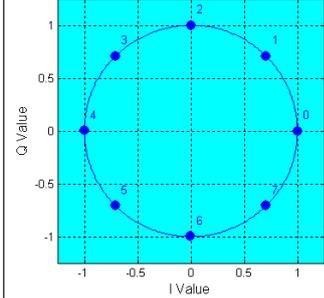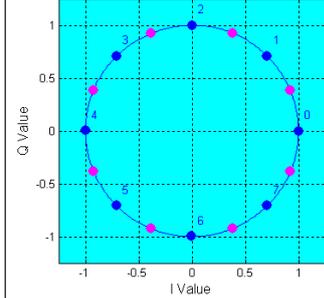 <p>EDGE QPSK (3π/4 rotation)</p>	 <p>AQPSK (π/2 rotation)</p>	 <p>OQPSK</p>
<p>π/4-QPSK 2 bits per symbol π/4 rotation SOUR:BB:DM:FORM P4QP</p>	<p>π/2-DBPSK 1 bit per symbol Differential coding, π/2 rotation SOUR:BB:DM:FORM P2DB</p>	<p>π/4-DQPSK 2 bits per symbol Differential coding, π/4 rotation SOUR:BB:DM:FORM P4DQ</p>
 <p>π/4 QPSK</p>	 <p>π/2 DBPSK</p>	 <p>π/4 DQPSK</p>
<p>π/8-D8PSK 3 bits per symbol Differential coding, π/8 rotation SOUR:BB:DM:FORM P8D8</p>	<p>8PSK 3 bits per symbol SOUR:BB:DM:FORM PSK8</p>	<p>8PSK EDGE (3π/8 8PSK) 3 bits per symbol Edge coding, 3π/8 rotation SOUR:BB:DM:FORM P8ED</p>
 <p>π/8 D8PSK</p>	 <p>8PSK</p>	 <p>3π/8 8PSK</p>
<p>QAM</p>		
<p>16QAM 4 bits per symbol SOUR:BB:DM:FORM QAM16</p>	<p>16QAM EDGE 4 bits per symbol, π/4 rotation SOUR:BB:DM:FORM QAM16EDge</p>	<p>32QAM 5 bits per symbol SOUR:BB:DM:FORM QAM32</p>
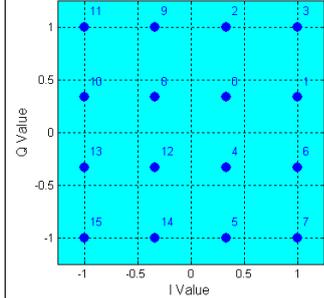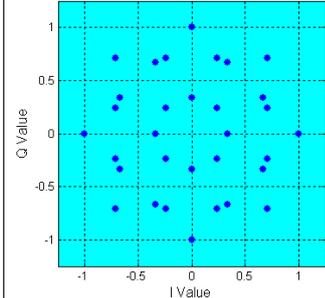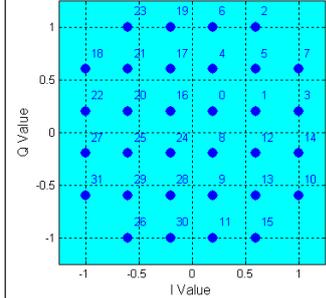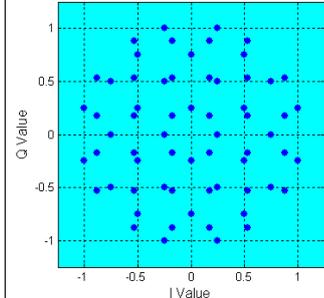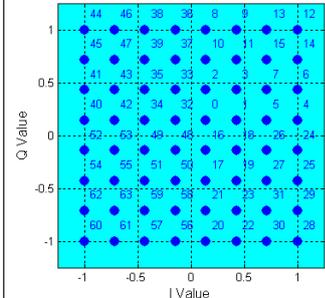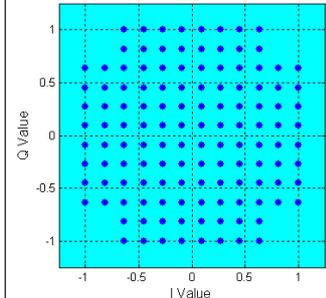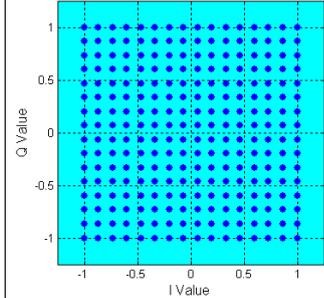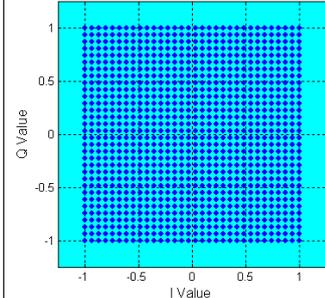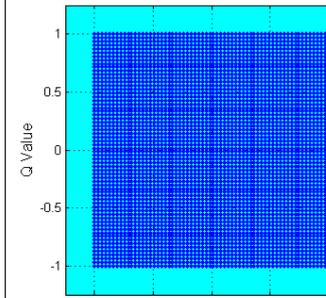
<p>16QAM</p> 	<p>EDGE 16QAM (Pi/4 rotation)</p> 	<p>32QAM</p> 
<p>32QAM EDGE 5 bits per symbol, -pi/4 rotation SOUR:BB:DM:FORM QAM32Edge</p>	<p>64QAM 6 bits per symbol SOUR:BB:DM:FORM QAM64</p>	<p>128QAM 7 bits per symbol SOUR:BB:DM:FORM QAM128</p>
<p>EDGE 32QAM (-Pi/4 rotation)</p> 	<p>64QAM</p> 	<p>128QAM</p> 
<p>256QAM 8 bits per symbol SOUR:BB:DM:FORM QAM256</p>	<p>1024QAM 10 bits per symbol SOUR:BB:DM:FORM QAM1024</p>	<p>4096QAM 12 bits per symbol SOUR:BB:DM:FORM QAM4096</p>
<p>256QAM</p> 	<p>1024QAM</p> 	<p>4096QAM</p> 
<p>FSK</p>		

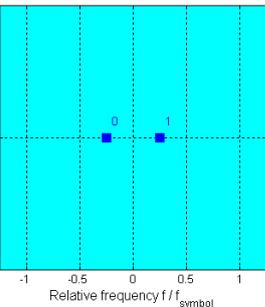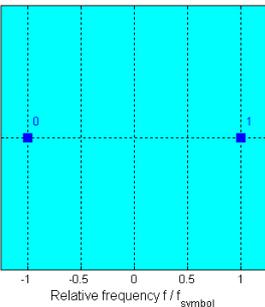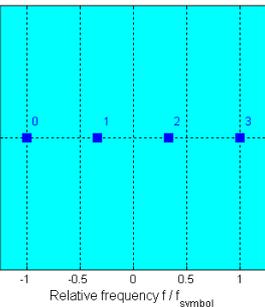MSK 1 bit per symbol, FSK deviation SOUR:BB:DM:FORM MSK SOUR:BB:DM:FSK:DEV 0.1 MHz	2FSK 1 bit per symbol SOUR:BB:DM:FORM FSK2	4FSK 2 bit per symbol SOUR:BB:DM:FORM FSK4
 <p>MSK</p> <p>Relative frequency f/f_{symbol}</p>	 <p>2FSK</p> <p>Relative frequency f/f_{symbol}</p>	 <p>4FSK</p> <p>Relative frequency f/f_{symbol}</p>

In addition to the FSK modulations, a variable FSK modulation with definable deviation per symbol is available.

[\[:SOURce<hw>\]:BB:DM:FORMat](#) on page 649

User Mapping

A user defined modulation mapping file can also be selected as modulation mapping source. The user modulation mapping file must have extension `*.vam` and can be created with the R&S mapping wizard. The mapping wizard (mapwiz) is a tool from Rohde & Schwarz designed for editing modulation schemes (e.g. QPSK, 32QAM). Its main purpose is the assignment of logical symbol numbers to constellation points and the selection of modulation specific parameters. Beyond this it supports the creation of nearly any arbitrarily chosen constellation diagram. The output of mapwiz is a mapping file (`*.vam`) that can be imported on a R&S SMJ. The program was developed on a 32-bit Microsoft Windows platform under MATLAB. For more information, refer to the description "Introduction to "mapwiz" Mapping Editor" on the Rohde&Schwarz Internet page.

5.8.2.3 Coding - Custom Digital Mod

Modulation symbols are coded directly before I and Q values or frequency shifts are assigned. Coding is thus directly related to modulation methods, which is the reason why codings are not freely combinable with modulation methods. The following table shows which of the coding combinations are available and defines the modulation types for which the various coding procedures can be used.

In the notation used below a_n denotes the n-th input symbol and b_n denotes the correspondingly coded output symbol. Individual bits in the symbols from the LSB (least significant bit) to the MSB (most significant bit) are denoted by a_{0n} , a_{1n} and so on. The same applies to the output symbols.

Table 5-4: Permissible coding combinations for modulation symbols and modulation type

	OFF	Differ- ential	Phase Diff.	Diff. +Gray	Gray	GSM	NADC, PDC, PHS, TETRA, APCO25 (PSK), PWT	TFTS/ TETRA	INMARSAT, ICO, WCDMA, cdma2000	VDL	APCO25 (FSK)	APCO25 (8PSK)
ASK	X	X		X	X							
BPSK	X	X		X	X							
pi/2 DBPSK	X				X							
QPSK	X	X		X	X				X			
QPSK EDGE	X											
QPSK45° Off- set	X	X		X	X							
Pi/4 QPSK	X	X			X							
Pi/4 DQPSK	X				X	X	X	X				
8PSK	X	X		X	X					X		
AQPSK	X	X		X	X							
OQPSK	X	X		X	X							
8PSK_EDGE	X											
Pi/8 D8PSK	X				X							X
MSK	X	X		X	X	X						
2FSK	X	X		X	X	X						
4FSK	X	X		X	X						X	
8FSK	X	X		X	X							
16FSK	X	X		X	X							
16QAM	X	X	X	X	X							
16QAM EDGE	X											
32QAM	X	X	X	X	X							
32QAM EDGE	X											
64QAM	X	X	X	X	X							
128QAM	X	X	X	X	X							
256QAM	X	X	X	X	X							
1024QAM	X	X	X	X	X							

Modulation type pi/4DQPSK

With differential coding switched on at the same time, a constellation diagram is obtained for pi/4DQPSK which is similar to that obtained for 8PSK. Phase shifts are

however assigned to the individual modulation symbols. The following tables show the assignment of modulation symbols to phase shifts of the I/Q vector in relation to the selected coding.

Table 5-5: Phase shifts for $\pi/4$ DQPSK

Modulation symbol a_n (binary indication: MSB, LSB)	00	01	10	11
Phase shifts without coding	+ 45°	+ 135°	- 135°	- 45°
Phase shifts with coding NADC, PDC, PHS, TETRA or APCO25 (PSK)	+ 45°	+ 135°	- 45°	- 135°
Phase shifts with coding TETS	- 135°	+ 135°	- 45°	+ 45°

Coding algorithms

Common coding types are listed in the following table.

Table 5-6: Coding algorithms

Coding	Coding algorithm	Applicable for K bit/symbol
NONE	$b_n = a_n$	$k = 1 \dots 8$
Differential	$b_n = (a_n + b_{n-1}) \text{ modulo } 2^k$	$k = 1 \dots 7$
Differential + Gray	Gray coding with additional differential coding	$k = 1 \dots 7$
GSM	$dc_n = \text{not}(d_n \text{ exor } d_{n-1})$	$k = 1$

Example: Differential coding for QPSK modulation with $K = 2$ bit/symbol

Decimal display; value range for modulation symbols

$$a_n \in \{0; 1; 2; 3\}$$

Recursive coding is defined as follows: $b_n = (a_n + b_{n-1}) \text{ modulo } 4$

Depending on the state of a preceding modulation symbol b_{n-1} the coded modulation symbol b_n is obtained for example from modulation symbol $a_n = 2$ as follows:

$a_n = 2$	b_{n-1}	b_n
	0	2
	1	3

	2	0
	3	1

By means of differential coding, the assignment between modulation symbols and phase differences shown in the following table is generated:

Modulation symbol a_n (binary, MSB, LSB)	00	01	10	11
Phase difference	0°	90°	180°	270°

Example: Gray and differential coding for 8PSK modulation


First, a gray coding is performed according to the gray code. Afterwards, a differential coding is performed according to the recursive coding algorithm quoted above. The assignment between modulation symbols and phase differences shown in the following table is generated:

"Differential coding according to VDL" can be used for modulation types with 3 bits/symbol, e.g. 8PSK.

Table 5-7: Differential coding according to VDL

Modulation symbol d_n	000	001	010	011	100	101	110	111
Phase difference	0°	45°	135°	90°	270°	315°	225°	180°

"Phase differential coding" INMARSAT and PHASE DIFF correspond to system standards Inmarsat-M and DVB according to ETS 300 429. The INMARSAT coding can generally be used for modulation types with 2 bits/symbol, such as QPSK. It uses the following algorithm.






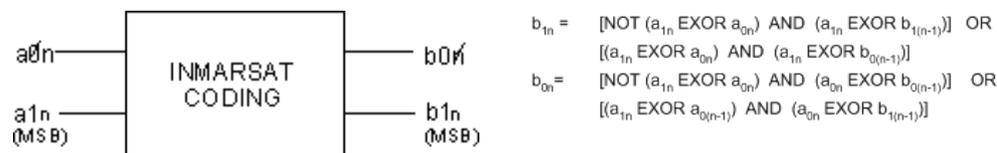


5.8.2.4 Baseband Filter - Custom Digital Mod







The R&S SMJ offers a wide selection of predefined baseband filters. The filter characteristic for the selected filter is displayed in the "More..." submenu in the "Filter" menu section (see "Filter" on page 349). Additionally, a user defined filter can be selected (see "User filter" on page 338).

The following table shows the filters that are available, together with the associated parameters and remote control commands. The filter characteristic is displayed in graphical form.

Table 5-8: Baseband filter
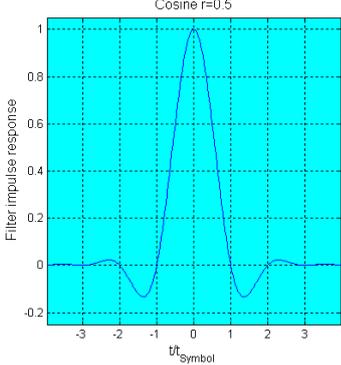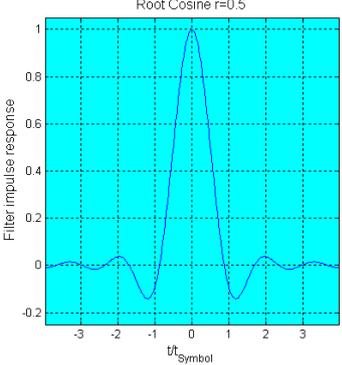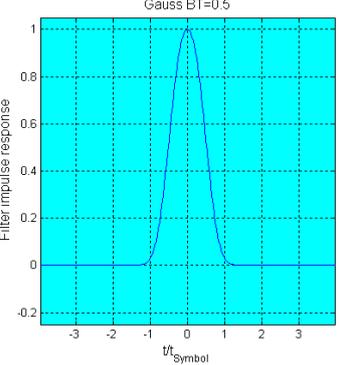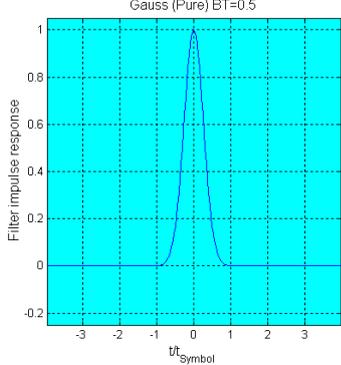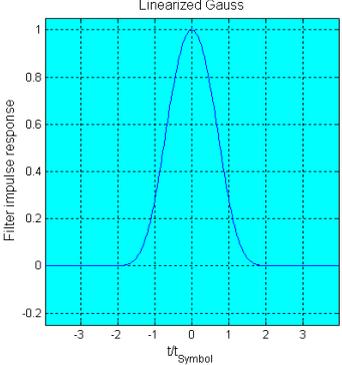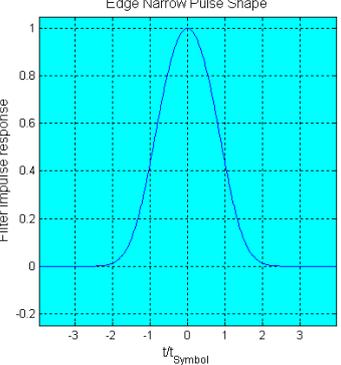
<p>Cosine Roll Off Factor SOUR:BB:DM:FILT:TYPE COS SOUR:BB:DM:FILT:PAR:COS 0.99 Bandwidth SOUR:BB:DM:FILT:PAR:COS:BAND 7200</p>	<p>Root Cosine Roll Off Factor SOUR:BB:DM:FILT:TYPE RCOS SOUR:BB:DM:FILT:PAR:RCOS 0.99</p>	<p>Gauss (FSK) B x T SOUR:BB:DM:FILT:TYPE GAUS SOUR:BB:DM:FILT:PAR:GAUS 2.5</p>
		
<p>Pure Gauss B x T SOUR:BB:DM:FILT:TYPE PGA SOUR:BB:DM:FILT:PAR:PGA 2.5</p>	<p>Gauss Linearized SOUR:BB:DM:FILT:TYPE LGA</p>	<p>Edge Narrow Pulse Shape SOUR:BB:DM:FILT:TYPE ENPShape</p>
		
<p>Edge Wide Pulse Shape SOUR:BB:DM:FILT:TYPE EWPSape</p>	<p>cdmaOne SOUR:BB:DM:FILT:TYPE CONE</p>	<p>cdmaOne 705 kHz SOUR:BB:DM:FILT:TYPE COF705</p>

<p>Edge Wide Pulse Shape</p> <p>Filter impulse response</p> <p>t/t_{Symbol}</p>	<p>CdmaOne</p> <p>Filter impulse response</p> <p>t/t_{Symbol}</p>	<p>CdmaOne 705kHz</p> <p>Filter impulse response</p> <p>t/t_{Symbol}</p>
<p>cdmaOne + Equalizer</p> <p>SOUR:BB:DM:FILT:TYPE COE</p>	<p>cdmaOne 705 kHz + Equalizer</p> <p>SOUR:BB:DM:FILT:TYPE COFE228</p>	<p>cdma2000 3X</p> <p>SOUR:BB:DM:FILT:TYPE DM3x</p>
<p>CdmaOne with equalizer</p> <p>Filter impulse response</p> <p>t/t_{Symbol}</p>	<p>CdmaOne 705 kHz with equalizer</p> <p>Filter impulse response</p> <p>t/t_{Symbol}</p>	<p>Cdma2000 3X</p> <p>Filter impulse response</p> <p>t/t_{Symbol}</p>
<p>APCO25</p> <p>Roll Off Factor</p> <p>SOUR:BB:DM:FILT:TYPE APCO25</p> <p>SOUR:BB:DM:FILT:PAR:APC 0.5</p>	<p>APCO25 (H-CPM)</p> <p>SOUR:BB:DM:FILT:TYPE APCO25Hcpm</p>	<p>APCO25 (LSM)</p> <p>SOUR:BB:DM:FILT:TYPE APCO25Lsm</p> <p>Gauss Cut Off Frequency</p> <p>SOUR:BB:DM:FILT:PAR:APCO25L:GAU S 25000</p> <p>Gauss Cut Off Frequency</p> <p>SOUR:BB:DM:FILT:PAR:APCO25:LOWP 75000</p>
<p>APCO25 r=0.5</p> <p>Filter impulse response</p> <p>t/t_{Symbol}</p>	<p>APCO H-CPM</p> <p>Filter impulse response</p> <p>t/t_{Symbol}</p>	<p>APCO LSM</p> <p>Filter impulse response</p> <p>t/t_{Symbol}</p>
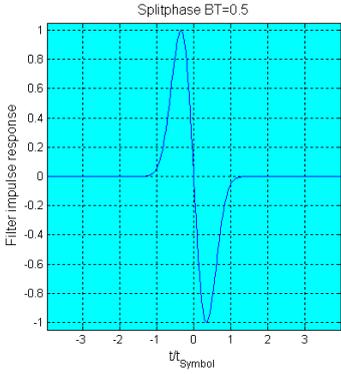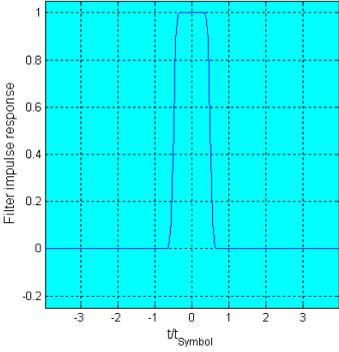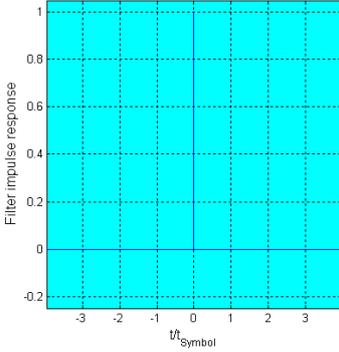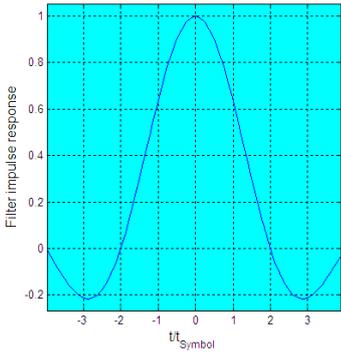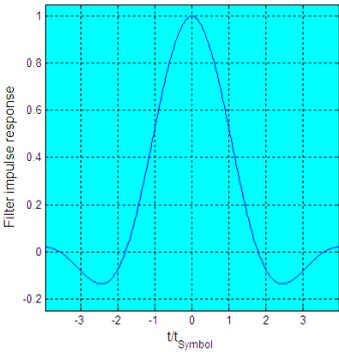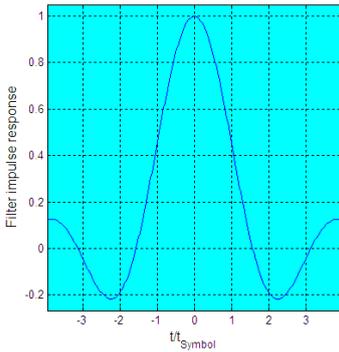
<p>Split Phase BxT SOUR:BB:DM:FILT:TYPE SPH SOUR:BB:DM:FILT:PAR:SPH 0.15</p>	<p>Rectangular SOUR:BB:DM:FILT:TYPE RECT</p>	<p>Dirac SOUR:BB:DM:FILT:TYPE DIRac</p>
		
<p>Lowpass ACP opt. SOUR:BB:DM:FILT:TYPE LPASs SOUR:BB:DM:FILT:PAR:LAPS 0.5</p>	<p>Lowpass EVM opt. BB:DM:FILT:TYPE LPASSEVM BB:DM:FILT:PAR:LAPSEVM 0.5</p>	<p>EUTRA/LTE SOUR:BB:DM:FILT:TYPE LTEFilter</p>
		

These predefined filters are designed for the special spectrum characteristics of the different communication standards. However, depending on the selected filter form one or more filter parameters are additionally provided for even precise adjustment of the filter characteristic, like more steeper edges or customization the transition bandwidth. For more information on the provided settings, refer to ["Impact of the Filter Parameters"](#) on page 336.

Impact of the Filter Parameters


The following is a simple description of the filter parameters and the way they affect the main filter characteristics. Changing filter parameters is an effective way to ensure that the entire bandwidth of the desired signal is allowed to pass and adjust the filter form to reach the spectrum mask requirements

Cut Off Frequency

The cut-off frequency or corner frequency is a filter characteristic that defines the frequency at the 3 dB down point. This frequency is bound to the transition band; here the filter characteristic changes from the passband to the stopband, where the signal is suppressed.

Rolloff Factor

The rolloff factor is a measure for the excess bandwidth compared to the ideal bandwidth of a "brick like" filter. The roll off factor affects the steepness of the filter flanks. A "Rolloff Factor" = 0 would result in the steepest theoretically possible flanks ; values near to 1 make the flanks more flat.

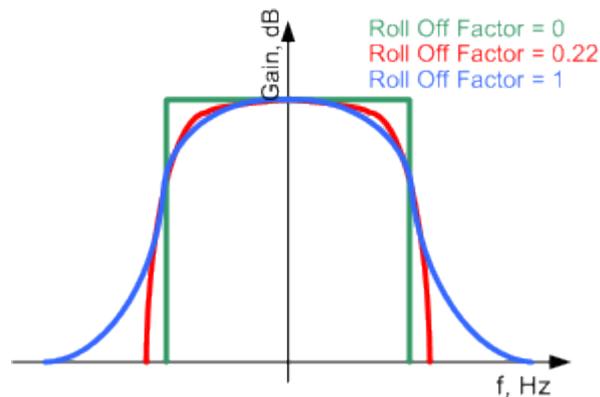

Passband


The passband describes the frequency span that the filter passes unchanged. The total passband of a filter is given as follows:

$$\text{Bandwidth} = (1 + \text{"Roll Off Factor"}) * \text{"Symbol Rate"}$$

Cut Off Frequency Shift

The "Cut Off Frequency Shift" affects the cut-off frequency in the way that the filter flanks are "moved" and the passband increases by "Cut Off Frequency Shift" * "Sample Rate":

$$\text{Cut Off Frequency} = (1 + \text{"Cut Off Frequency Shift"}) * \text{"Sample Rate"}$$

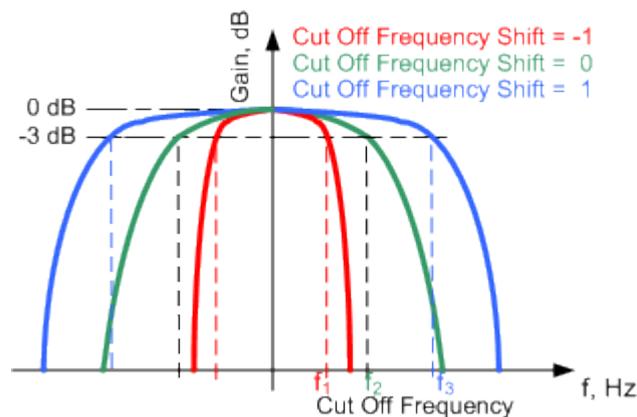

- A "Cut Off Frequency Shift" = -1 results in a very narrow-band filter
- Increasing the value up to 1 makes the filter more broad-band
- By "Cut Off Frequency Shift" = 0, the -3 dB point is at the frequency determined by the half of the selected "Sample Rate".

User filter

The user filter file must have extension `*.vaf` and can be created with the R&S filter wizard.

The filter wizard (filtwiz) is a tool from Rohde & Schwarz designed for creating filter files that can be imported on a R&S SMJ. Its main purpose is the conversion of user-defined finite impulse response (FIR) filters into the filter format (`*.vaf`). Beyond this filt wiz provides designs for standard filters, e.g. Root Raised Cosine, Gaussian.

The program was developed on a 32-bit Microsoft Windows platform under MATLAB.

For more information, refer to the description "Introduction to "filtwiz" Filter Editor" on the Rohde&Schwarz Internet page.

 
5.8.2.5 Conflicting Settings - Custom Digital Mod

Having selected a modulation procedure, not every combination is possible when selecting the settings for the modulation parameters "Symbol Rate" and "Coding". These restrictions inevitably give rise to conflicting settings if a parameter is changed and leads to a prohibited combination.

A conflicting setting is indicated by a message on the Info line in the display. The R&S SMJ displays the setting entered by the user, but the modulation signal actually generated does not correspond to this display. A conflict of settings can be triggered if the user changes a parameter inappropriately. The message disappears as soon as a conflict-free setting is entered.

A list of the possible settings conflicts and messages in digital modulation can be found in [Chapter 9, "Status Information, Error Messages and Troubleshooting"](#), on page 813.

5.8.2.6 Custom Digital Mod User Interface



The menu for setting digital modulation can be opened either in the "Baseband" block or in the menu tree under "Baseband".


The "Custom Digital Modulation" menu enables direct selection of the data source, standard, symbol rate, coding, modulation type and filter. All other settings are entered in submenus which are called via "More" buttons.

The upper part of the menu is used for powering up digital modulation as well as for calling the default settings and user-defined standards.



The data source is selected and set in the "Data Source" section.

The "List Management" button opens a submenu for calling the data editor and the file manager.

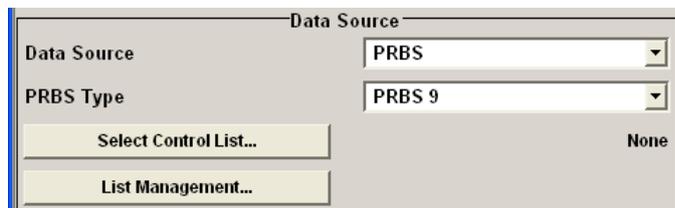


The middle part of the menu is used for selecting the standard, the symbol rate and the coding.



The modulation type is set in the "Modulation" section.

The "More" button opens a submenu that displays the mapping for the selected modulation.

 
This submenu can also be used to enable switching the signal between modulated and unmodulated.



The filter is set in the "Filter" section. The "More" button opens a submenu where the filter characteristic of the selected filter is displayed.



The buttons in the lower part of the menu open submenus for power ramping and for configuring triggers, markers and clocks.

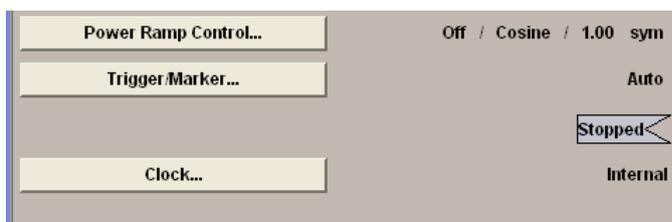

In each case the current setting is displayed next to the button.

General Settings

The upper part of the menu is used for powering up digital modulation as well as for calling the default settings and user-defined standards.

State

Enables/disables digital modulation.

Switching on digital modulation turns off all the other digital standards.

The digital modulation is generated in realtime (no precalculated signal), and therefore all parameter changes (in the ON state) directly affect the output signal.

Remote command:

[\[:SOURce<hw>\]:BB:DM:STATe](#) on page 632

Set To Default

Calls default settings. The values are shown in the following table.

Parameter	Value
State	Not affected by Set to Default
Data Source	PRBS 9
Standard	GSM
Symbol Rate	270.833 ksymb/s
Coding	GSM
Modulation Type	MSK
Filter	Gauss (FSK)
Filter Parameter BxT	0.3
Power Ramp Control	
Attenuation	15 dB

Parameter	Value
Ramp Time	1 sym
Ramp Function	Cosine
Fall Delay	0
Rise Delay	0
Source	Internal
State	Off
Trigger	Mode Auto, Source Internal
Clock	
Source	Internal
Mode	Symbol


Remote command:

[:SOURce<hw>] :BB:DM:PRESet on page 630

Save/Recall

Calls the "Save/Recall" dialog.

From the "Save/Recall" dialog the "File Select" windows for saving and recalling the complete settings in the "Custom Digital Modulation" menu can be called.

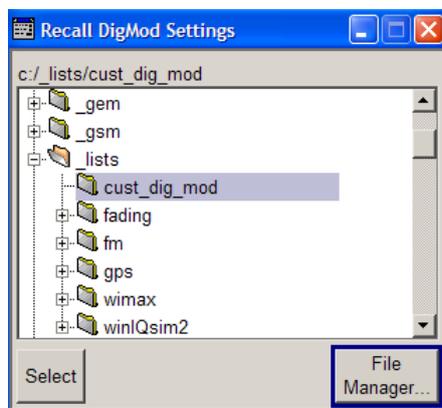

The "Digital Modulation" settings are stored as files with the predefined file extension * .dm. The file name and the directory they are stored in are user-definable.

The complete settings in the "Custom Digital Modulation" dialog are saved and recalled.

Remote command:

[:SOURce<hw>] :BB:DM:SETTing:CATalog? on page 663

[:SOURce<hw>] :BB:DM:SETTing:DELeTe on page 664

[:SOURce<hw>] :BB:DM:SETTing:LOAD on page 664

[:SOURce<hw>] :BB:DM:SETTing:STORe on page 664

Fast Save

Determines whether the instrument performs an absolute or a differential storing of the settings.

Enable this function to accelerate the saving process by saving only the settings with values different to the default ones.

Note: This function is not affected by the "Preset" function.

Remote command:

`[:SOURce<hw>] :BB:DM:SETTing:STORe:FAST` on page 665

`[:SOURce<hw>] :BB:ARBitrary:MCARrier:SETTing:STORe:FAST` on page 610

refer to the description of firmware options for the syntax of the corresponding SCPI commands

Data Source

The data source is selected and set in the "Data Source" section. The parameters offered depend on the data source selected. The More button opens a submenu for calling the data editor and the file manager.

Data Source

Selects the data source (see [Chapter 5.8.1, "Data and Signal Sources in Baseband"](#), on page 313).

You may choose from the following data sources:

"All 0, All 1" 0 data or 1 data is internally generated.

"PRBS, PRBS Type" PRBS data in accordance with the IUT-T with period lengths between 2^9-1 and $2^{23}-1$ are internally generated. The length is selected in the "PRBS Type" input box.

PRBS Type	PRBS 9
-----------	--------

Remote command:

`[:SOURce<hw>] :BB:DM:PRBS [:LENGth]` on page 629

"Pattern" A user-definable bit pattern with a maximum length of 64 bits is internally generated. The bit pattern is defined in the "Pattern" input box.

Pattern	000 0000 0000 0000 0011 1111 1111 1111 1111
List Management	
Set acc to standard	

"Data List ...,
Select Data" Data lists will be used.
Data lists can be generated internally in the data editor or externally.
Data lists are selected in the "File Select" window, which is called by means of the "Select Data" button.



The "File" "Manager" is used to transmit external data lists to the R&S SMJ, and can be called within every "File" Select window by means of the "File" "Manager" button.

Remote command:

[:SOURce<hw>] :BB:DM:DLIST:SElect on page 661

"External Serial" External serial data is supplied via the DATA connector.


"External Parallel (AUX I/O)" External parallel data is supplied externally via the PARDATA pins on the AUX I/O interface.

Remote command:

[:SOURce<hw>] :BB:DM:SOURce on page 630

List Management

Calls the menu for managing data and control lists (see "List Management" on page 351).

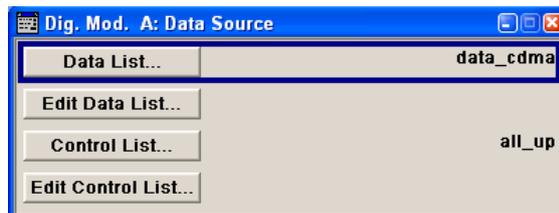

Remote command:

n.a.

Standard, Symbol Rate, Coding

The middle part of the menu is used for selecting the standard, the symbol rate and the coding.

Set acc. to Standard

Selects a standard.

After selection, modulation parameters "Modulation Type", "Symbol Rate", "Filter" and "Coding" are automatically set in accordance with the standard.

If one of these parameters is subsequently altered, the display changes to User. The User setting can be saved to a file so that it can be recalled at some later time ("Save/Recall User.." button).

The following table shows the standards that are available, together with the associated settings of the modulation parameters.

Table 5-9: Standards (Custom Digital Modulation)

Standard	Modulation	Symbol Rate	Filter	Coding	Parameter for SCPI command
APCO Phase1 C4FM	4FSK, Deviation 1.8 KHz	4.8 ksym/s	APCO25, roll off = 0.2	APCO25(FSK)	APCOPH1C4fm
APCO Phase1 CQPSK	pi/4-DQPSK	4.8 ksym/s	Cosine, roll off = 0.2, BW = 4.8 KHz	APCO25(PSK)	APCOPH1CQpsk
APCO Phase2 H-CPM	4FSK, Deviation 3 KHz	6 ksym/s	APCO25 (H-CPM)	APCO25(FSK)	APCOPH2HCpm
APCO Phase2 H-DQPSK	pi/4-DQPSK	6 ksym/s	Cosine, roll off = 1, BW = 7.2 KHz	APCO25(PSK)	APCOPH2HDQpsk
APCO Phase2 H-D8PSK Wide	pi/8-D8PSK	4 ksym/s	Cosine, roll off = 1, BW = 7.2 KHz	APCO25(8PSK)	APCOPH2HD8PSKW
APCO Phase2 H-D8PSK Narrow	pi/8-D8PSK	4 ksym/s	Cosine, roll off = 1, BW = 5 KHz	APCO25(8PSK)	APCOPH2HD8PSKN
APCO Phase1 LSM	pi/4-DQPSK	4.8 ksym/s	APCO25 (LSM), Gauss Cut Off = 2.04 KHz, Low-pass Cut Off = 6.2 KHz	APCO25(8FSK)	APCOPH1Lsm
APCO Phase1 WCQPSK	pi/4-DQPSK	4.8 ksym/s	Cosine, roll off = 1, BW = 7.2 KHz	APCO25(8FSK)	APCOPH1Wcqpsk
Bluetooth	2FSK, Deviation 160.0 kHz	1.0 Msym/s	Gauss, B*T = 0.5	OFF	BLUetooth
DECT	2FSK, Deviation 288.0 kHz	1.152 Msym/s	Gauss, B*T = 0.5	OFF	DECT
ETC (ARIB STD T55)	ASK, ASK Depth 100%	1.024 Msym/s	Split Phase, B*T = 2.0	OFF	ETC
GSM	MSK	270.833333 ksym/s	Gauss, B*T = 0.3	GSM	GSM
GSM EDGE	8PSK EDGE (3pi/8 8PSK)	270.833333 ksym/s	Gauss linear	OFF	GSMEdge
NADC	pi/4 DQPSK	24.3 ksym/s	Root Cosine, alpha = 0.35	NADC	NADC
PDC	pi/4 DQPSK	21.0 ksym/s	Root Cosine, alpha = 0.50	PDC	PDC
PHS	pi/4 DQPSK	192.0 ksym/s	Root Cosine, alpha = 0.50	PHS	PHS
TETRA	pi/4 DQPSK	18.0 ksym/s	Root Cosine, alpha = 0.35	TETRA	TETRa
WCDMA 3GPP	QPSK 45° Offset	3.84 Msym/s	Root Cosine, alpha = 0.22	WCDMA 3GPP	w3GPp
TD-SCDMA	QPSK 45° Offset	1.28 Msym/s	Root Cosine, alpha = 0.22	OFF	TCSCdma
cdma2000 Forward	QPSK	1.2288 Msym/s	cdmaOne + Equalizer	cdma2000	CFORward
cdma2000 Reverse	Offset QPSK	1.2288 Msym/s	cdmaOne	cdma2000	CREVerse

Standard	Modulation	Symbol Rate	Filter	Coding	Parameter for SCPI command
Worldspace	QPSK	1.84 Msym/s	Root Cosine, alpha = 0.40	OFF	WORLdspace
TFTS	pi/4 DQPSK	22.1 ksym/s	Root Cosine, alpha = 0.40	TFTS/ TETRA	TFTS

Remote command:

[\[:SOURce<hw>\]:BB:DM:STANdard](#) on page 632

Save/Recall User

Calls the "Save/Recall User" menu.

From the "Save/Recall User Standard" menu the "File Select" windows for saving and recalling user-defined standards and the "File Manager" can be called.



User standards are stored as files with the predefined file extension `*.dm_stu`. The file name and the directory they are stored in are user-definable.

Remote command:

[\[:SOURce<hw>\]:BB:DM:STANdard:ULISt:CATalog?](#) on page 665

[\[:SOURce<hw>\]:BB:DM:STANdard:ULISt:DELeTe](#) on page 665

[\[:SOURce<hw>\]:BB:DM:STANdard:ULISt:LOAD](#) on page 666

[\[:SOURce<hw>\]:BB:DM:STANdard:ULISt:STORe](#) on page 666

Symbol Rate

Selects the symbol rate.

The value range is dependent on the selected modulation type.

When the modulation type changes, the range is automatically redefined. If the set symbol rate is outside this range, an error message is generated and the maximum value for the newly chosen modulation type is automatically set.

Remote command:

[\[:SOURce<hw>\]:BB:DM:SRATe](#) on page 631

Coding

Selects the coding (see [Chapter 5.8.2.3, "Coding - Custom Digital Mod"](#), on page 330).

The menu offers only the coding settings that are permissible for the chosen modulation type. The other coding methods are grayed out.

If the system is subsequently switched to a modulation type for which the selected coding is not available, coding is automatically set to OFF.

Remote command:

[\[:SOURce<hw>\]:BB:DM:CODing](#) on page 648

Modulation

The modulation type is set in the "Modulation section". The parameters offered depend on what is currently selected. The "More..." button opens a submenu for displaying the user-defined mapping.

Modulation Type

Selects a modulation type.

The associated symbol mapping is displayed in the "More..." submenu (see [Chapter 5.8.2.2, "Modulation Types - Custom Digital Mod"](#), on page 326).

If the "coding" that is set is not possible with the chosen modulation type, "coding" is set to "Off".

For selection "Variable FSK", the deviation of each symbol can be set in the "More..." submenu.

Remote command:

`[:SOURce<hw>] :BB:DM:FORMat` on page 649

Load User Mapping

Selects user defined mapping table. This opens the "Select List File User Mapping" window in which the mapping table can be selected (see ["User Mapping"](#) on page 330). The button is only available if modulation type "USER" is selected.

The button "File Manager" calls the "File Manager" menu. The "File" "Manager" menu is used to display and delete files.

Remote command:

`[:SOURce<hw>] :BB:DM:MLISt:SElect` on page 663

`[:SOURce<hw>] :BB:DM:MLISt:CATalog?` on page 655

`[:SOURce<hw>] :BB:DM:MLISt:DElete` on page 662

ASK Depth

Sets the modulation depth m for ASK modulation.

$$m = (\text{Amplitude}_{\max} - \text{Amplitude}_{\min}) / (\text{Amplitude}_{\max} + \text{Amplitude}_{\min})$$

Remote command:

`[:SOURce<hw>] :BB:DM:ASK:DEPTh` on page 648

FSK Deviation

Sets the frequency deviation for FSK modulation. The range of values depends on the chosen symbol rate (see data sheet).


Whenever "MSK" is selected, the deviation corresponds to 1/4 of the symbol rate and cannot be set.

Remote command:

`[:SOURce<hw>] :BB:DM:FSK:DEVIation` on page 649

Angle Alpha

For AQPSK modulation, sets the angle alpha between the point (0,0) and the I axis.

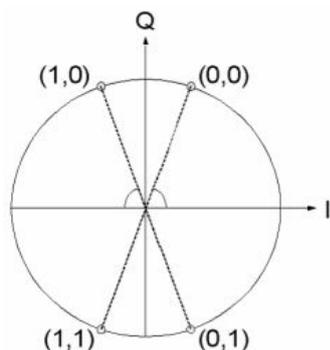


Remote command:


`[:SOURce<hw>] :BB:DM:AQPSk:ANGLE` on page 647

More - Modulation Type


Calls the submenu which displays the mapping of the currently selected modulation type and the digital modulation delay in the case of an external data source.

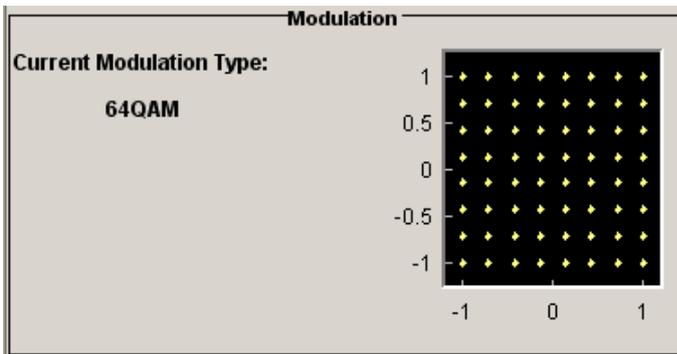

The "Modulation - CW Switching" section can be used to enable switching of the signal between modulated and unmodulated.

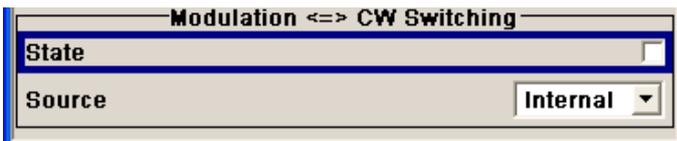

In case of selection "Variable FSK", the FSK type and the deviation for each symbols is set in the "Variable FSK" section.

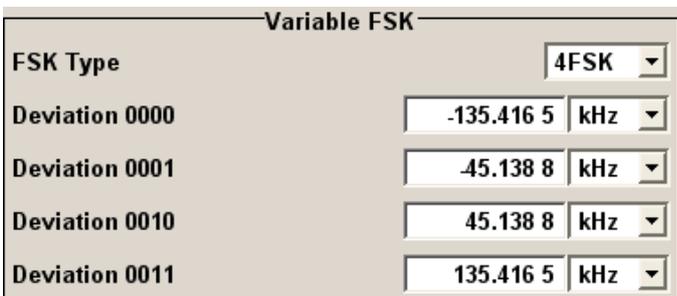

FSK Type

(Variable FSK only)

Selects the FSK modulation type for selection "Variable FSK".

You may choose from 4FSK, 8FSK and 16FSK.

Remote command:

[\[:SOURce<hw>\]:BB:DM:FSK:VARiable:TYPE](#) on page 650**Deviation xxxx**

(Variable FSK only)

Set the deviation of the associated symbol. The number of symbols depends on the selected modulation type. The value of each symbol is indicated in binary format.

Remote command:

[\[:SOURce<hw>\]:BB:DM:FSK:VARiable:SYMBOL<ch0>:DEVIation](#) on page 650**Modulation Delay**

(Data Source ext serial and ext parallel only)

Displays the digital modulation delay from the data input to the I/Q output.

The value is displayed only if an external synchronous data source is selected. In this case the value represents the delay between the active clock edge for data and the corresponding peak I/Q value (associated with this data item) on the I/Q connectors.

Remote command:

[\[:SOURce<hw>\]:BB:DM:MDELay?](#) on page 650**Current Modulation Type**

Displays the currently selected modulation type together with its associated mapping.

Remote command:

n.a.

Modulation - CW Switching

The "Modulation <=> CW Switching" section is used to enable switching the signal between modulated and unmodulated.

State Mod - CW

Enables switching between a modulated and an unmodulated signal.

Switching is carried out by a control signal (CW) that is defined internally in the control list or supplied from an external source via a user-defined input.

Remote command:

[\[:SOURce<hw>\]:BB:DM:SWITching:STATE](#) on page 633**Source Mod - CW**

Selects the CW control signal for switching between a modulated and an unmodulated signal.

- | | |
|------------|--|
| "Internal" | The CW signal in the control list is used for the control.
The internal signal can be output on one of the user interfaces. |
| "External" | The control signal on the CW pin of the AUX I/O connector is used. |

Remote command:

`[:SOURce<hw>] :BB:DM:SWITching:SOURce` on page 632

Filter

The filter is set in the Filter section.

Filter

Selects the baseband filter (see [Chapter 5.8.2.4, "Baseband Filter - Custom Digital Mod"](#), on page 333).

Remote command:

`[:SOURce<hw>] :BB:DM:FILTer:TYPE` on page 647

Filter Parameter

Sets the filter parameter.

The filter parameter offered ("Roll Off Factor" or "B x T") depends on the currently selected filter type.

Remote command:

`[:SOURce<hw>] :BB:DM:FILTer:PARAmeter:APCO25` on page 645

`[:SOURce<hw>] :BB:DM:FILTer:PARAmeter:COSine [:ROLLoff]` on page 645

`[:SOURce<hw>] :BB:DM:FILTer:PARAmeter:GAUSSs` on page 645

`[:SOURce<hw>] :BB:DM:FILTer:PARAmeter:PGAuss` on page 645

`[:SOURce<hw>] :BB:DM:FILTer:PARAmeter:RCOSine` on page 645

`[:SOURce<hw>] :BB:DM:FILTer:PARAmeter:SPHase` on page 645

Cut Off Frequency Factor

(available for filter parameter Lowpass and APCO25 (LSM) only)

Sets the value for the cut off frequency factor. The cut off frequency of the filter can be adjusted to reach spectrum mask requirements.

Remote command:

`[:SOURce<hw>] :BB:DM:FILTer:PARAmeter:LPASSs` on page 645

`[:SOURce<hw>] :BB:DM:FILTer:PARAmeter:LPASSEVM` on page 645

`[:SOURce<hw>] :BB:DM:FILTer:PARAmeter:APCO25Lsm:GAUSSs` on page 646

`[:SOURce<hw>] :BB:DM:FILTer:PARAmeter:APCO25Lsm:LOWPass` on page 646

Bandwidth

Determines the bandwidth of the cosine filter, so that the function $H(f) = 0$ is fulfilled for $f \geq (1 + \text{RollOff}) * \text{Bandwidth} / 2$.

Remote command:

`[:SOURce<hw>] :BB:DM:FILTer:PARAmeter:COSine:BANDwidth` on page 646

Oversampling

Determines the upsampling factor. If the check box is activated, the most sensible parameter values are selected. The value depends on the coherence check. If the check box is deactivated, the values can be changed manually.

Remote command:

[:SOURce<hw>] :BB:DM:FILTER:OSAMpling:AUTO on page 645

[:SOURce<hw>] :BB:DM:FILTER:OSAMpling on page 644

More - Filter

Calls the menu for displaying the filter characteristic of the currently selected filter.

Load User Filter

Calls the menu "Select List File User Filter" for selecting a user-defined filter file with extension *.vaf (see "User filter" on page 338). The button is only available if filter type "USER" is selected.

The button "File" "Manager" calls the "File" "Manager" menu. The "File" "Manager" menu is used to display and delete files.

Remote command:


[:SOURce<hw>] :BB:DM:FLIST:SElect on page 662

[:SOURce<hw>] :BB:DM:FLIST:CATalog? on page 655

[:SOURce<hw>] :BB:DM:FLIST:DElete on page 661

Current Filter Response

Displays the filter characteristic of the currently selected filter.

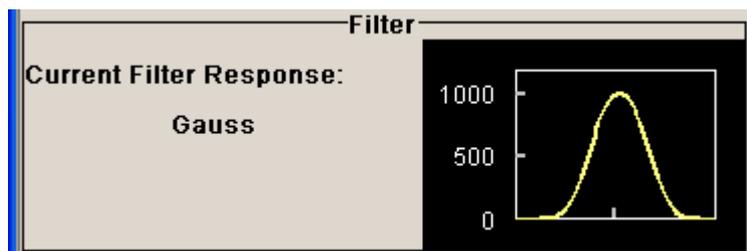

Remote command:

n.a.

Power Ramp

The lower part of the "Custom Digital Modulation" menu is used for setting triggers, marker and clocks, as well as for power ramp settings.

Power Ramp Control

Calls the power ramp control menu (see "Power Ramp Control" on page 358).

Remote command:

n.a.

Trigger/Marker

Calls the "Trigger/Marker/Clock" dialog, used to select the trigger source, set the time delay on an external trigger signal and configure the marker output signals.

See "Trigger/Marker/Clock" on page 361.

Remote command:

n.a.

Execute Trigger

Executes trigger manually. A manual trigger can be executed only when an internal trigger source and a trigger mode other than Auto have been selected.

Remote command:

[:SOURce<hw>] :BB:DM:TRIGger:EXECute on page 635

Clock

Calls the "Trigger/Marker/Clock" menu. The "Trigger/Marker/Clock" menu is used to select the clock source (see "Clock Settings" on page 366).

Remote command:

n.a.

List Management

The "List Management" menu is called from the "Custom Digital Modulation" main menu.



The data and control lists are selected and created in the "File Select" menu which is called up by means of the "Data List..." and "Control List..." buttons.



The "File Manager" is used to copy, rename and delete files and to create directories.

For more information, see [Chapter 4.7, "File Management"](#), on page 114.

To ensure that the selected data or control list is used for generating the digital signal, the list must be selected as the data source:

Data	Parameter	Selection
Digital data	"Source"	DList
Marker	"Marker Mode"	CList
Control signals CW, Level Attenuation and Burst Gate	"Source"	Internal

The data editor is called using the "Edit Data List..." and "Edit Control List ..." buttons. The contents of the selected list are displayed.

Operating the list editors is described in [Chapter 4.5.1, "Working with List Editor"](#), on page 106.

Select Data/Control List

Selects data/control list. This opens the "File Select" window in which the data/control list can be selected.

Remote command:

[:SOURce<hw>] :BB:DM:DLISt:SElect on page 661

[:SOURce<hw>] :BB:DM:CLISt:SElect on page 658

Create Data/Control List

Creates new data/control list. This opens the "File Select" window in which the data/control list can be created.

The file name has to be entered in field "File Name:". The new list contains no data, it can be edited in the list editor.

Remote command:

[:SOURce<hw>] :BB:DM:DLISt:SElect on page 661

[:SOURce<hw>] :BB:DM:CLISt:SElect on page 658

File Manager

Calls the "File Manager".

The "File Manager" is used to copy, delete and rename files and to create new directories.

For detailed description, see [Chapter 4.7.2, "File Manager"](#), on page 117.

Remote command:

[:SOURce<hw>] :BB:DM:DLISt:SElect on page 661

[:SOURce<hw>] :BB:DM:DLISt:COpy on page 656

[:SOURce<hw>] :BB:DM:DLISt:DElete on page 660

[:SOURce<hw>] :BB:DM:CLISt:SElect on page 658


[:SOURce<hw>] :BB:DM:CLISt:COpy on page 656

[:SOURce<hw>] :BB:DM:CLISt:DElete on page 658

Data List Editor

The "Data List Editor" for editing the selected data list is called up in the "List Management" submenu of the "Custom Digital Modulation" main menu by means of the "Edit Data List..." button.

See [Chapter 4.5, "Editors"](#), on page 105 for description on how to use the editor.

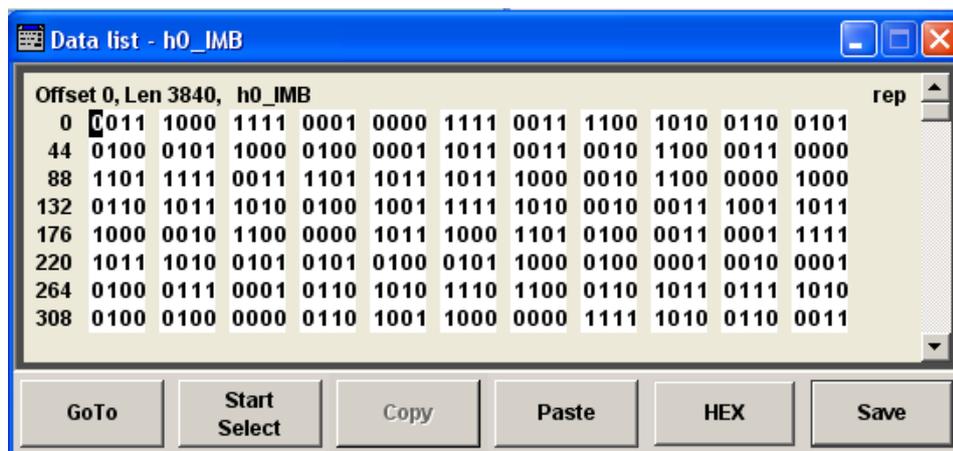

Data List Editor

A list of binary values with a maximum length of 2^{31} bits can be entered in the "Data List Editor". This value corresponds to a file size of approx. 268 Mbyte.

To increase readability, the bits are displayed in groups of four. The current cursor position, the length of the list and the list file name are displayed above the list. The offset starts with the value 0 which corresponds to the bit position on the left side of the first row, i.e. the beginning of the list. On the left edge of the editor, the last three offset positions are specified at the beginning of the row.

An existing list can be edited in the insert or overwrite mode.

Remote command:


[\[:SOURce<hw>\]:BB:DM:DLIST:SElect](#) on page 661

[\[:SOURce<hw>\]:BB:DM:DLIST:DATA](#) on page 659

[\[:SOURce<hw>\]:BB:DM:DLIST:DATA:APPend](#) on page 660

GoTo ← Data List Editor

Opens the entry window for the bit position. The cursor marks the bit at the selected position.

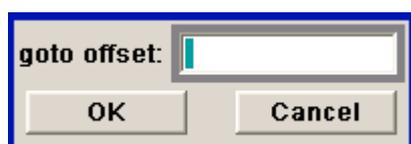

Remote command:

n.a.

Start Select ← Data List Editor

Defines the current cursor position as the start position for the range to be marked. The stop position is defined by entering an offset under "GoTo".

When a start position has been activated, the button will be re-labelled to "Undo Select". When the button is clicked now, the selected range will be deactivated.

Remote command:

n.a.

Copy ← Data List Editor

Copies the selected values.

Remote command:

n.a.

Cut ← Data List Editor

Cuts the selected values.

Remote command:

n.a.

Paste ← Data List Editor


Pastes the values that have been copied or cut before.

Remote command:

n.a.

Hex ← Data List Editor

Switchover to hexadecimal display.

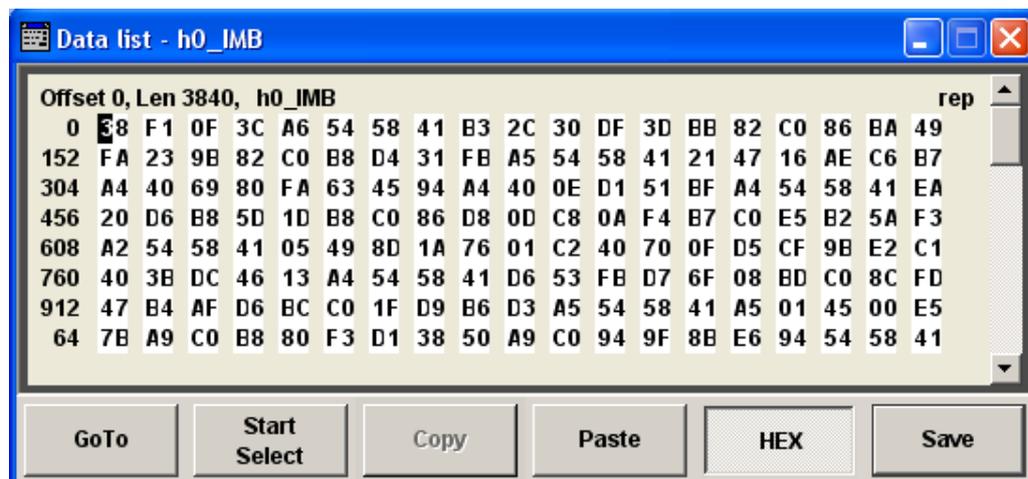

Each four bits are displayed as a hexadecimal value: To increase readability, the hexadecimal values in turn are displayed in pairs of two. The hex functions are automatically assigned to the numeric keys at the front panel.

Remote command:

n.a.

Save (Data List) ← Data List Editor

Saves the changes made to the Data List file selected for editing.

Remote command:

n.a.

Control and Marker List Editor

The "Control and Marker List Editor" for editing the selected control list is called up in the "List Management" submenu of the "Custom Digital Modulation" main menu by means of the "Edit Control List"... button.

Edit Control List

The available marker signals and the CW, Hop, Burst Gate and Level Attenuation control signals can be defined in the "Control and Marker List Editor".



The marker signals defined in the Control and Marker List Editor are activated by selecting the Marker mode "CList" in the "Trigger/Marker/Clock" menu. The control signals have to be activated by selecting an "Internal Source" in the respective setting menu, e.g. the "Power Ramp Control" menu for the Burst Gate and Level Attenuation control signals.

The available marker/control signals are color-coded. In the left "Configure Control Signal" section, each individual signal is assigned a colour; a check in the check box shows the marker for which the "CList" marker type has been selected and the control signal for which the "Internal" source has been selected.



In the "Select Ramp to Edit" section the signal characteristics are graphically displayed. The scaling of the x-axis is always adapted to the overall length of the control list to provide constant overview of all defined ramps.

The ramps can be assigned the exact bit position in the signal by means of

- The bit scale below the marker/control signal characteristic.
- The display of the current cursor position in the "Cursor" menu section if the cursor marks the ramp.

The ramps can be set either graphically in the "Select Ramp to Edit" section or in the table of the "Positions <Signal>" section in the lower right corner. To make the setting easy, a selection of preset ramp characteristics is offered in the "Preset Ramp <Signal>" section.

Edit Control List

The configuration of the currently selected control list is displayed. This list is either selected in the "File Select" menu ("List Management" submenu by means of the "Control List..." button) or via the remote-control command.

Remote command:

[:SOURce<hw>] :BB:DM:CLIST:SElect on page 658

[:SOURce<hw>] :BB:DM:CLIST:DATA on page 657

Configure Control Signal

Displays the colour the marker/control signal has been assigned.

Displays whether the "CList" marker type has been selected in the Trigger/Marker/Clock menu for this marker.

Displays whether the "Internal" source has been selected for this control signal in the individual setting menu.

Burst Gate and Level Attenuation are set in the "Power Ramping" submenu, CW in the "Modulation" submenu.

The source "CList/Internal" for the individual marker/control signal can be selected here as well and will then be used in the associated menus.

Remote command:

n.a.

Select Ramp to Edit

Graphically edit marker/control signals.

For this purpose, the cursor is set to the position where a ramp is required. The ramp is generated by pressing Enter (e.g. clicking on the rotary knob). Any number of ramps can be defined per marker. Each of the generated ramp positions will be saved even if the definition of another ramp produces a low/low or high/high transition. These ramps are displayed as dashed lines.

Existing ramps can be shifted after the cursor has been placed on the ramp and Enter has been pressed - it then changes colour twice. The ramp is shifted by using the cursor keys or the rotary knob. The new position is determined by pressing Enter again.

Ramps can be deleted by means of the BACKSPACE key after the cursor has been placed on the ramp.

For detailed information on how to operate the control and marker list editor, see [Chapter 4.5.3, "Working with Control and Marker List Editor"](#), on page 109.

Remote command:

n.a.

Total List Length

Enters the length of the definition range of the control list in bits. The starting value is always bit 0. The entire definition range is displayed, i.e. the bit scale is adapted to the entry.

With very long control lists, the displayed area can be zoomed around the current cursor position ("Zoom in" button).

The preset functions set the ramp in the center of the currently selected area.

If the definition range is decreased, the ramps outside the range are lost.

When used, the control list is always repeated over the length of the definition range if the length of the data list exceeds the length of the control list.

Remote command:

n.a.

Preset Type

Activates presetting for the ramp characteristic of the selected control signal. The pre-setting is selected with "Preset Type" and activated by means of the "Preset" button.

You can select from:

"All Up "	The marker/control signal is continuously high.
"All Down"	The marker/control signal is continuously low.
"Ramp Up"	The marker/control signal contains a ramp from low to high. The ramp is shifted to the center of the displayed signal area and can subsequently be shifted as required.
"Ramp Down"	The marker/control signal contains a ramp from high to low. The ramp is shifted to the center of the displayed signal area and can subsequently be shifted as required.
"Ramp Up/ Down"	The marker/control signal contains a ramp from low to high and from high to low. The ramps are symmetrically shifted around the center of the displayed signal area and can subsequently be shifted as required.
"Ramp Down/Up"	The marker/control signal contains a ramp from high to low and from low to high. The ramps are symmetrically shifted around the center of the displayed signal area and can subsequently be shifted as required.

Remote command:

n.a.

Cursor Position

Enters the cursor position.

In the graphic display, the cursor is positioned according to the entry.

Vice versa, graphically shifting the cursor will change the displayed value.

If the entered value exceeds the selected length of the definition range, the length is adjusted automatically.


Remote command:

n.a.

Positions Control Signal

Opens table by using the "Edit Table .." button.

The ramps of the selected signal can be edited in the table. When the table is opened, the current configuration of the selected marker/control signal is displayed.

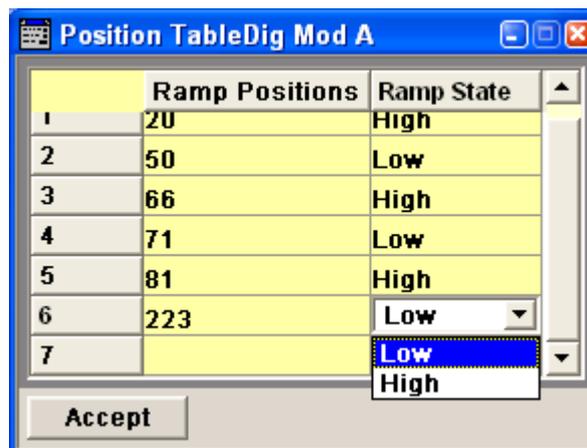

The bit position is specified in the "Ramp Position" column, the high or low signal status in the "Ramp State" column. At the end of the list, there is always a blank row for entering new values.

The changes are accepted in the graphic display after pressing the "Accept" button.

Remote command:

n.a.

Zoom/Visible

Zooms the displayed area of the control list. The designation of the button changes from "Zoom in" to "Zoom out".

With long control lists, the displayed area can be zoomed around the current "Cursor Position".

Parameter "Visible/Bits Visible" determines the number of symbols/bits to be displayed.

Ramps outside the displayed area are not lost by zooming.

Remote command:

n.a.

Save/Save As

Pressing the "Save" button saves the changes made to the CList file selected for editing.

Selecting the "Save As" button creates a new control list. This opens the "Create Lists Files Which Name?" window in which the control list can be created.

The file name has to be entered in field "File Name."

Remote command:

n.a.

Power Ramp Control

The Power Ramp Control menu is accessed via the "Custom Digital Modulation" main menu.

The dialog provides access to the settings used to configure the power ramping, like the source for the necessary control signals "Burst" and "Lev_Att", the form of the ramp

function and the applied attenuation (see also "[Power Ramping and Level Attenuation](#)" on page 321).



Power ramping is possible up to a symbol rate of 5 MHz. If a higher symbol rate is set, power ramping is automatically switched off and an error message is output.

State	Off
Source	Internal
Ramp Function	Cosine
Ramp Time	1.00 sym
Rise Delay	0.00 sym
Fall Delay	0.00 sym
Attenuation	15.0 dB
Power Ramping / Level Attenuation	
In Baseband Only	<input type="checkbox"/> On

State

Enables/disables power ramping.

Remote command:

`[:SOURce<hw>] :BB:DM:PRAMP [:STATe]` on page 653

Source

Enters the source for the power ramp control signals.

"Internal" The control signals in the internal control list are used for control purposes.

See also "[Control and Marker List Editor](#)" on page 354.

The signals are output on the LEV_ATT and BURST pin on the AUX I/O interface of path A.

"External Digital" The control signal is fed in via the AUX I/O interface.

Remote command:

`[:SOURce<hw>] :BB:DM:PRAMP:SOURCE` on page 653

Ramp Function

Selects the ramp function that describes the shape of the rising and falling edges during power ramp control, see [Figure 5-25](#).

"Linear" The transmitted power rises and falls linear fashion.

"Cosine" The transmitted power rises and falls with a cosine-shaped edge. This gives rise to a more favorable spectrum than the "Linear" setting.

Remote command:

[:SOURce<hw>] :BB:DM:PRAMp:SHAPE on page 652

Ramp Time

Enters the power ramping rise time and the fall time for a burst. The setting is expressed in symbols. See also [Figure 5-25](#).

Remote command:

[:SOURce<hw>] :BB:DM:PRAMp:TIME on page 653

Rise Delay

Sets the offset in the rising edge of the envelope at the start of a burst, see [Figure 5-25](#).

A positive value gives rise to a delay (the envelope length decreases) and a negative value causes an advance (the envelope length increases). The setting is expressed in symbols.

Remote command:

[:SOURce<hw>] :BB:DM:PRAMp:RDELay on page 652

Fall Delay

Sets the offset in the falling edge of the envelope at the end of a burst, see [Figure 5-25](#).

A positive value gives rise to a delay, the envelope length increases and a negative value causes an advance (the envelope length decreases). The setting is expressed in symbols.

Remote command:

[:SOURce<hw>] :BB:DM:PRAMp:FDELay on page 652

Attenuation

Determines the level by that the average signal level is attenuated during the signal attenuation period, during the time the "Lev_Att" signal is high. See also [Figure 5-24](#).

For information about the required control signal LEV_ATT, refer to "[Power Ramping and Level Attenuation](#)" on page 321.

The LEV_ATT control signal is defined in "Control Data Editor" or supplied via the LEV_ATT pin on the AUX I/O interface.

Remote command:

[:SOURce<hw>] :BB:DM:PRAMp:ATTenuation on page 651

Baseband Only

Restricts power ramping to the baseband signal.

"Off" Level attenuation is effected via the attenuator stages in the RF section; only the remaining part is attenuated in the baseband. The signal is issued at the RF output with the defined level values.

"On" Level attenuation is effected in the baseband only. This setting is mandatory in the following cases: When only the baseband signal is issued at the I/Q outputs. It is thus ensured that, with power ramping active, this signal is output with the defined level values.


Remote command:

[:SOURce<hw>] :BB:DM:PRAMP:BBONly [:STATe] on page 651


Trigger/Marker/Clock

The "Trigger/Marker/Clock" dialogis accessed via the "Custom Digital Modulation" main menu.


The "Trigger In" section is where the trigger for the modulation signal is set. Various parameters will be provided for the settings, depending on which trigger source - internal or external - is selected. The current status of signal generation ("Running" or "Stopped") is indicated for all trigger modes.

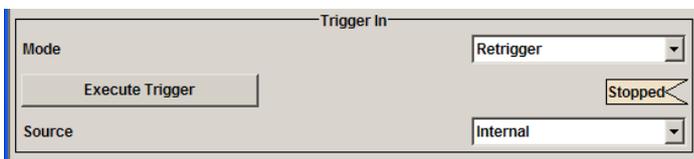


The "Marker Mode" section is where the marker signals at the MARKER output connectors are configured.

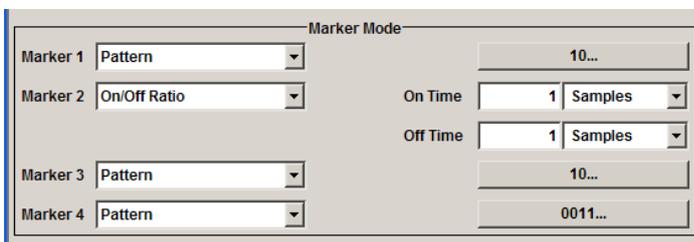

The "Marker Delay" section is where a marker signal delay can be defined, either without restriction or restricted to the dynamic section, i.e., the section in which it is possible to make settings without restarting signal and marker generation.

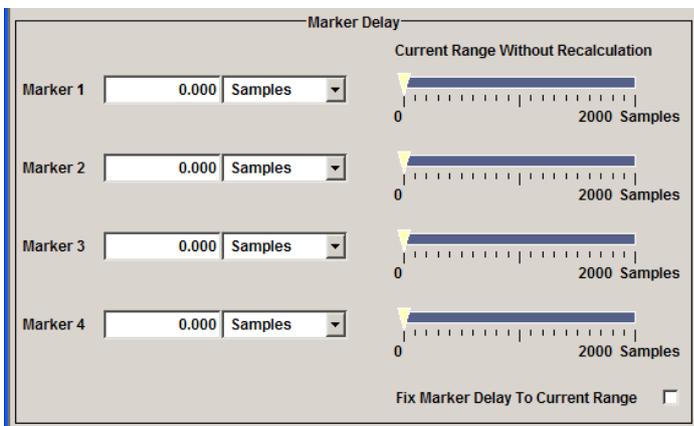

 The "Clock Settings" section is where the clock source is selected and - in the case of an external source - the clock type.



The "Global Trigger/Clock Settings" button leads to a submenu for general trigger, clock and external input settings.



Trigger In

The "Trigger In" section is used to configure the trigger signal for the digital modulation. The current status of signal generation is indicated for all trigger modes.

Trigger Mode

Selects trigger mode.

"Auto"	The digital modulation signal is generated continuously.
"Retrigger"	The digital modulation signal is generated continuously. A trigger event (internal with "Execute Trigger" or external) causes a restart.
"Armed_Auto"	The digital modulation signal is generated only when a trigger event occurs. Then the digital modulation signal is generated continuously. Button "Arm" stops signal generation. A subsequent trigger event (internal with "Execute Trigger" or external) causes a restart.
"Armed_Retrigger"	The digital modulation signal is generated only when a trigger event occurs. Then the signal is generated continuously. Every subsequent trigger event (internal with "Execute Trigger" or external) causes a restart. The button "Arm" stops signal generation. A subsequent trigger event (internal with "Execute Trigger" or external) causes a restart.
"Single"	The digital modulation signal is generated only when a trigger event occurs. Then the signal is generated once to the length specified at "Signal Duration". Every subsequent trigger event (internal with "Execute Trigger" or external) causes a restart.

Remote command:

[\[:SOURce<hw>\]:BB:DM\[:TRIGger\]:SEquence](#) on page 641

Trigger Signal Duration

Enters the length of the signal sequence to be output in the "Single" trigger mode. The input is to be expressed in symbols.

Remote command:

[\[:SOURce<hw>\]:BB:DM:TRIGger:SLENgth](#) on page 638

Running - Stopped

Displays the status of signal generation for all trigger modes. This display appears only when Custom Dig Mod is enabled (State On).

"Running"	The digital modulation signal is generated; a trigger was (internally or externally) initiated in triggered mode. If Armed_Auto and Armed_Retrigger have been selected, generation of signals can be stopped with the "Arm" button. A new trigger (internally with "Execute Trigger" or externally) causes a restart.
"Stopped"	The signal is not generated, and the instrument waits for a trigger event (internal or external).

Remote command:

[\[:SOURce<hw>\]:BB:DM:TRIGger:RMODE?](#) on page 638

Arm

Stops signal generation. This button appears only with "Running" signal generation in the "Armed_Auto" and "Armed_Retrigger" trigger modes.

Signal generation can be restarted by a new trigger (internally with "Execute Trigger" or externally).

Remote command:

[\[:SOURce<hw>\]:BB:DM:TRIGger:ARM:EXECute](#) on page 635

Execute Trigger

Executes trigger manually. A manual trigger can be executed only when an internal trigger source and a trigger mode other than "Auto" have been selected.

Remote command:

[\[:SOURce<hw>\]:BB:DM:TRIGger:EXECute](#) on page 635

Trigger Source

Selects trigger source.

"Internal"	The trigger event is executed by "Execute Trigger". As a precondition a trigger mode other than "Auto" must be selected.
"External"	The trigger event is executed with the aid of the active edge of an external trigger signal. The trigger signal is supplied via the TRIGGER 1/2 connector. The polarity, the trigger threshold and the input impedance of the trigger input can be set in the "Global Trigger Settings" menu.

Remote command:

[\[:SOURce<hw>\]:BB:DM:TRIGger:SOURce](#) on page 638

Sync. Output to External Trigger


(enabled for "Trigger Source" External)

Enables/disables output of the signal synchronous to the external trigger event.

"On"

Corresponds to the default state of this parameter.


The signal calculation starts simultaneously with the external trigger event but because of the instrument's processing time the first samples are cut off and no signal is outputted. After elapsing of the internal processing time, the output signal is synchronous to the trigger event.

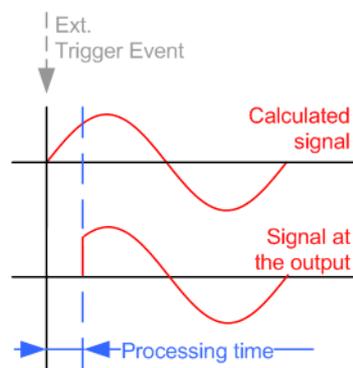

"Off"

The signal output begins after elapsing of the processing time and starts with sample 0, i.e. the complete signal is outputted.

This mode is recommended for triggering of short signal sequences with signal duration comparable with the processing time of the instrument.

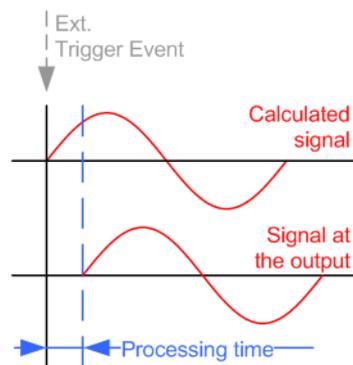

Remote command:

`[:SOURce<hw>] :BB:DM:TRIGger:EXTernal:SYNChronize:OUTPut`
on page 636

External Delay Unit

Determine whatever the trigger delay is expressed in samples or directly defined as a time period (seconds).

The parameter displays the delay converted in time.

Remote command:

`[:SOURce<hw>] :BB:DM:TRIGger:DELay:UNIT` on page 639

Trigger Delay

Sets trigger signal delay in symbols on external triggering.

This enables the R&S SMJ to be synchronized with the device under test or other external devices.

The parameter **Actual Trigger Delay** displays the delay converted in time.

Remote command:

`[:SOURce<hw>] :BB:DM:TRIGger [:EXTernal<ch>] :DELay` on page 639

`[:SOURce<hw>] :BB:DM:TRIGger [:EXTernal] :TDELay` on page 640

Actual Trigger Delay

Displays the time (in seconds) an external trigger event or a trigger event from the other path is delayed by.

Remote command:

`[:SOURce<hw>] :BB:DM:TRIGger [:EXTernal] :RDELay?` on page 640

Trigger Inhibit

(available on external triggering)

Sets the duration for inhibiting a new trigger event subsequent to triggering. The input is to be expressed in symbols.

In the "Retrigger" mode every trigger signal causes signal generation to restart. This restart is inhibited for the specified number of samples.

Remote command:

`[:SOURce<hw>] :BB:DM:TRIGger [:EXTernal<ch>] :INHibit` on page 640

Marker Mode

Provides the settings necessary to define the marker output signal for synchronizing external instruments.

Marker x

Marker configuration for up to 4 marker channels. The settings are used to select the marker mode defining the shape and periodicity of the markers. The contents of the dialog change with the selected marker mode; the settings are self-explanatory.

All regular marker signals are described in "**Marker Modes**" on page 324.

Remote command:

`[:SOURce<hw>] :BB:DM:TRIGger:OUTPut<ch>:MODE` on page 641

`[:SOURce<hw>] :BB:DM:TRIGger:OUTPut<ch>:PULSe:DIVider` on page 643

`[:SOURce<hw>] :BB:DM:TRIGger:OUTPut<ch>:PATtern` on page 643

`[:SOURce<hw>] :BB:DM:TRIGger:OUTPut<ch>:OFFTime` on page 642

`[:SOURce<hw>] :BB:DM:TRIGger:OUTPut<ch>:ONTime` on page 642

Marker x Delay

Defines the delay between the marker signal at the marker outputs relative to the signal generation start.

"Marker x" For the corresponding marker, sets the delay as a number of symbols.

Remote command:

`[:SOURce<hw>] :BB:DM:TRIGger:OUTPut<ch>:DELay` on page 637

"Current Range without Recalculation"

Displays the dynamic range within which the delay of the marker signals can be set without restarting the marker and the signal.
Move the setting mark to define the delay.

Remote command:

`[:SOURce<hw>] :BB:DM:TRIGger:OUTPut<ch>:DELay:MAXimum?` on page 637

`[:SOURce<hw>] :BB:DM:TRIGger:OUTPut<ch>:DELay:MINimum?` on page 637

"Fix marker delay to current range"

Restricts the marker delay setting range to the dynamic range.

Remote command:

`[:SOURce<hw>] :BB:DM:TRIGger:OUTPut:DELay:FIXed` on page 636

Clock Settings

The clock source is selected in the Clock Settings section.

Clock Source

Selects the clock source (also see section "Clock Signals", page 2).

"Internal" The internal clock reference is used.

"External" The external clock reference is fed in as the symbol clock or a multiple thereof via the CLOCK connector.
The chip rate must be correctly set to an accuracy of ($\pm 2\%$ (see data sheet)).
The polarity of the clock input can be changed with the aid of "Global Trigger/Clock/External Input" Settings.

Remote command:

`[:SOURce<hw>] :BB:DM:CLOCK:SOURCE` on page 634

Clock Mode

Enters the type of externally supplied clock.

"Symbol" A symbol clock is supplied via the CLOCK connector.

"Multiple Symbol" A multiple of the symbol clock is supplied via the CLOCK connector, the symbol clock is derived internally from this.
The "Multiplier" window provided allows the multiplication factor to be entered.

Note: This setting is not possible if the serial or parallel external data source is selected.

"Bit" A bit clock is supplied via the CLOCK connector; the symbol clock is derived internally from this.

Note: This setting is not possible if the serial or parallel external data source is selected.

Remote command:

`[:SOURce<hw>] :BB:DM:CLOCK:MODE` on page 633

Symbol Clock Multiplier

Enters the multiplication factor for clock type "Multiple".

Remote command:

[\[:SOURce<hw>\]:BB:DM:CLOCK:MULTIPLIER](#) on page 634

Measured External Clock

Displays the measured frequency of the external clock signal. This enables the user to permanently monitor the frequency of the externally introduced clock.

This information is displayed only if the external clock source has been selected.

Remote command:

[:CLOCK:INPut:FREQuency?](#) on page 524

Global Trigger/Clock/Input Settings

Calls the "Global Trigger/Clock/Input Settings" menu. This menu is used among other things for setting the trigger threshold, the input impedance and the polarity of the clock and trigger inputs.

The parameters in this menu affect all digital modulations and standards, and are described in the [Chapter 5.2.3.10, "Global Trigger/Clock/External Input Settings"](#), on page 141.

Remote command:

n.a.

5.8.3 Arbitrary Waveform Generator ARB

The Arbitrary Waveform Generator (ARB) is an I/Q modulation source forming an integral part of the R&S SMJ. It can be used to output any externally calculated modulation signals or internally generated multi carrier signals or waveform files.

The Arbitrary Waveform Generator is incorporated in the Baseband Generator (R&S SMJ-B9/B10/B11) option. The Baseband Main Module (R&S SMJ-B13) option is also required. The three Baseband Generator options feature different ARB memory sizes (see data sheet). Apart from the memory size, however, the three options offer the same functionality, either one can be installed.

5.8.3.1 Introduction

This chapter provides background information on the ARB functionality and the impact of the provided settings.

For description on the multi carrier, multi segment and multi carrier continuous wave functions, refer to:

- [Chapter 5.8.3.4, "Multi Carrier Waveforms"](#), on page 411
- [Chapter 5.8.3.3, "Multi Segment Waveforms"](#), on page 394
- [Chapter 5.8.4, "Multi Carrier Continuous Wave"](#), on page 424

Waveform Files Sources

The R&S SMJ can replay any waveform file stored on a network drive but also generate and replay simple waveforms for test purposes.

A waveform is a file with specified file format containing raw IQ samples. The IQ values are calculated in advance and stored as waveform files with predefined extension *.wv. When created by the R&S SMJ, the instrument inserts a tagged waveform header at the beginning of each created ARB file. For more information, refer to [Chapter 7.4, "Waveform and List Format"](#), on page 490.

Depending on whether the R&S SMJ creates the waveform files itself or not, two waveform files sources can be distinguished:

- Internally generated waveforms
The ARB generator enables the calculation and the generation of multi segment and multi carrier waveform files as well as the build in function to create a test waveform (e.g. a sine or rectangle signal) and keep it as a file or in the RAM. Several digital standards provide the special function "Generate Waveform File" and enable the calculation and storage of the signal as a waveform file that can be afterwards processed by the ARB generator.
- Externally generated waveforms
The ARB can also process externally generated waveform files e.g. the waveform files generated on a PC by the Windows software package R&S WinIQSIM2, the software R&S ARB Toolbox, the R&S SMx-K6 Pulse Sequencer software or signals calculated using a mathematical program such as Matlab.
For more information also on the required options, refer to the Rohde&Schwarz web site at <http://www.rohde-schwarz.com>. See also the Application Note 1MA28, "IQWizard - I/Q Signal Measurement and Conversion".
The externally generated waveform files can be loaded into the instrument via one of the available interfaces (USB, LAN or GPIB). Usually, the waveform file is stored on one of the network drives which are accessible for the operating system.

Playing and Streaming Waveform Files

Depending on the way the loaded waveforms are processed, an ARB works in one of the following modes:

- Playback from the internal memory
In the most common case, the ARB generator plays back a waveform file with a selectable clock frequency. The R&S SMJ loads the entire file into the ARB memory from where the IQ samples are played repeatedly.
This is suitable for files of limited size, e.g. up to 256 MB for instruments equipped with option R&S SMJ-B10.
The maximum size for streaming and ARB files is also listed in the R&S SMJ data sheet.
- Streaming
For playing of larger waveform files, the R&S SMJ provides the second ARB mode, the HDD streaming mode. In this mode, the instrument streams the modulation data direct form its hard drive (HDD). HDD streaming is recommended for processing of files that require more ARB memory than the currently installed one. The HDD streaming limits the sample rate to 1 MHz.


ARB Test Signals

The following test signals are available:

- Sine Test Signal:** Two sinewave signals with a selectable (but equal) number of samples per period and equal frequencies. When the generation is triggered, the number of samples per period, together with the frequency of the test signal, determines the ARB clock frequency: "Clock Frequency" = "Frequency" * "Samples per Period".

Note: Because the resulting clock rate must not exceed the maximum ARB clock rate (see data sheet), the number of sample values is automatically restricted depending on the selected frequency.


The first sine signal is mapped on the I samples, the second on the Q samples. The two signals differ by a selectable phase offset. For a -90 deg offset, the result is a unit vector in the I/Q plane, rotating counter-clockwise and starting at I = 0, Q = -1. For a 0 deg offset, the I and Q samples are on the diagonal of a unit square (I(t) = Q(t)).

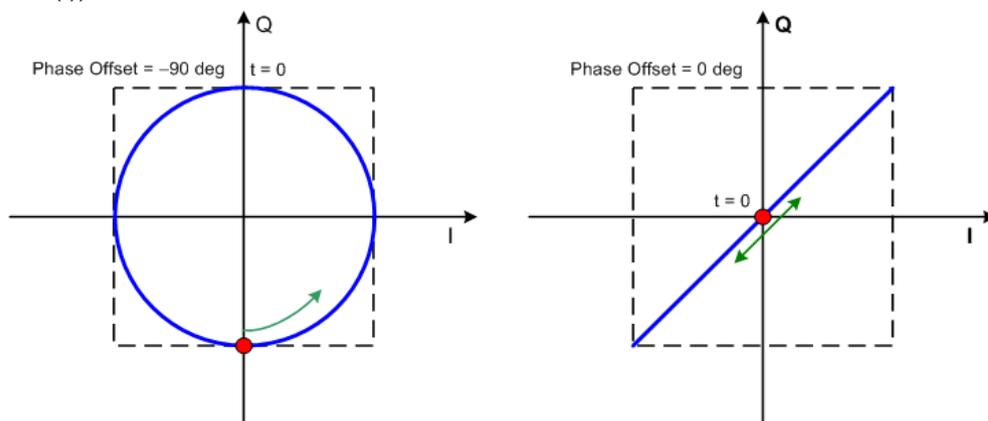

In general the I/Q samples are located on a deformed circle which is confined to the dashed square in the upper diagrams.

- Rect Test Signal:** Rectangle signal with selectable but equal On and Off periods and amplitude. The period is defined by the selected frequency: <Period> = 1 / "Frequency".

The signal is mapped on both the I and Q samples. This results in two distinct points in the I/Q plane. The "Offset DC" shifts both points along the diagonal I(t) = Q(t).

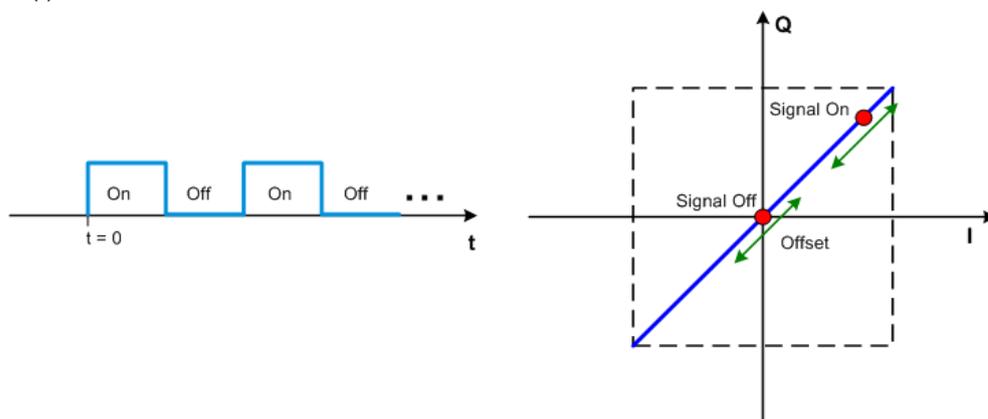

- Const I/Q Test Signal:** Continuous test signal with constant IQ and constant Clock Frequency of 10 KHz. The values for each I and Q components are selectable but constant. They are defined as a decimal number, which is decimal-to-binary converted internally. The signal is provided as a 16-bit wide digital signal for both I and Q channels.
 Converted to analog, the signal is output directly at the BNC connectors I and Q outputs of the instrument.

Waveform Sample Rate

The Arbitrary Waveform Generator includes a resampling unit that interpolates the input samples to reach a target digital output I/Q sample rate before digital-to-analog conversion (DAC). The input sample rate f_{input} is retrieved from the waveform (the default sample rate tag) or is defined by the corresponding parameter in the ARB user interface.

The [Figure 5-26](#) depicts the stages involved in the processing and resampling of a waveform in the ARB.

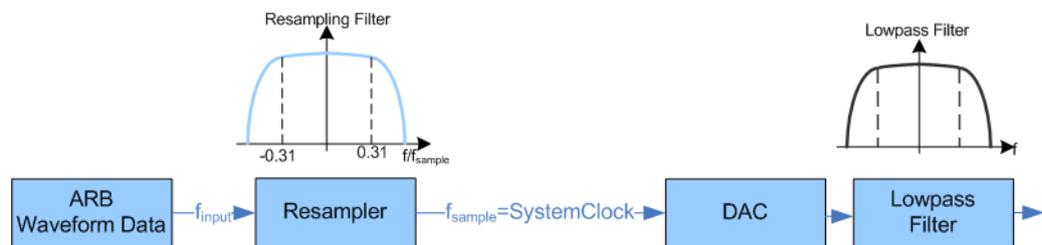


Figure 5-26: Processing of the waveform files in the ARB

The R&S SMJ uses a 100 MHz system clock and a sample rate of 100 MSamples/s.

Impact of the Resampling Lowpass Filter

As illustrated on the [Figure 5-26](#), the lowpass filter in the resampling stage is a distortion-free for signals with the following maximum baseband bandwidth:

$$BasebandBandwidth_{max}, MHz = 0.31 \times f_{input}$$

An externally created waveform file have to provide a sample rate f_{input} that is high enough for perfect signal reconstruction. For distortion-free resampling the lower bound of the required sample rate f_{input} is than calculated as follow:

$$f_{input} \geq BasebandBandwidth / 0.31$$

A modulation signal with a sample rate $f_{input} = 100$ MHz is passed directly to the digital-to-analog converter (DAC), i.e. the resampling unit is bypassed. After the DAC, this signal features a $RFBandwidth_{max} = 80$ MHz.

Impact of the Oversampling Factor

Waveforms generated by the R&S WinIQSIM2 software can be optimized by choosing a suitable integer oversampling factor.

In comparison with conventional ARB generators that often assume oversampling factors of 4, the ARB generator of the R&S SMJ requires low oversampling factors, but still providing excellent signal quality in terms of EVM and ACP.

A reduced sample rate saves significantly the amount of memory or allows an increased signal cycle time, vice versa.

Impact on the Enabled Number of Marker Signals on the Waveform Length

The R&S SMJ provides the possibility to define marker signals, that are sent to the marker outputs in synchronicity with the I/Q output signals. Marker signals can be either predefined or subsequently defined (see also [Chapter 5.8.1.8, "Marker Output Signals"](#), on page 324).

The I/Q data and marker data are located in separate memory areas of the SDRAM and can be independently configured whereas each marker signal requires one bit of the available memory size. In some cases, it might be useful to generate a modulation signal without additional marker signals in order to increase the maximum waveform length.

The example below explains the dependency between the number of enabled marker signals, the available memory size and the resulting waveform length.

Example: Calculating the maximum waveform length

The calculation in this example is based on an instrument equipped with option R&S SMJ-B10 (256 MSamples).

- Total Memory Size = 256 MB
- Required Memory Size (per complex sample) = 32 bits + 4 bits = 36 bits = 4.5 bytes, where:
 - the raw I/Q samples are stored as 16 bit values, i.e.
for I/Q data = 2 x 16 bits = 32 bits (16 bits per I/Q channel)
 - each software defined marker requires 1 bit, i.e.
for 4 enabled markers = 4 x 1 bit = 4 bits
- Maximum Waveform Length (with 4 markers) = 256 MB / 4.5 bytes = 56 MSamples
- Theoretical Maximum Waveform Length (no markers) = 256 MB / 4 bytes = 64 MSamples

Hence, a memory size of 256 MB yields a maximum waveform length of 56 MSamples if four markers are enabled. The maximum waveform length increases to 64 MSamples if the internal hardware markers are used, and the complete memory is available for I/Q data.

In instruments equipped with option R&S SMJ-B11, the maximum available waveform length is 16 MSamples.

The minimum length of a waveform is 512 samples. A waveform is shorter than this value is automatically repeated until it reaches the minimum length.

Specifying Delay and Inhibit Values in Time Units

In the R&S SMJ you can delay and suppress trigger events.

The delay and inhibit values are usually expressed in the units of the generated signal. To enable you to define the exact delay or inhibit period directly as a time value (e.g. in seconds), the instruments provide additional parameters. You can determine the units the values are defined in and the instrument calculates and displays the actual time delay/inhibit.

Example:

This example is based on a signal with 1 MHz clock frequency ("Baseband > ARB > Clock Frequency > 1 MHz").

Step 1: Enable the following settings:

- "Baseband > ARB > Trigger In > Mode > Armed Auto"
- "ARB > Trigger In > Source > External"
- "ARB > Trigger In > External Delay Unit > Samples"
- "ARB > Trigger In > External Delay > 100 Samples"

The parameter "Actual External Delay = 100 us" displays the time delay in seconds.

Step 2: Enable the following settings:

- "ARB > Trigger In > External Delay Unit > Time"
- "ARB > Trigger In > Specified External Delay > 10 us"
Logically, the "Actual External Delay" changes to 10 us.

Step 3:

- Switch to "ARB > Trigger In > External Delay Unit > Samples".

The value of "ARB > Trigger In > External Delay" is 10 Samples.

Step 1	Step 2	Step 3



This principle applies for any external triggering and triggering via the other path(s).

5.8.3.2 ARB User Interface

To access the ARB dialog, select "Baseband > ARB" or use the MENU key under "Baseband".




The "ARB" dialog is divided into an upper and a lower general part together with a "Marker" section.


The upper part of the menu is used for powering up, selecting and configuring ARB modulation.



The section "Multi Segment Waveform Options" is only indicated if a multi segment waveform is loaded. In this part, the segment to be output is selected.

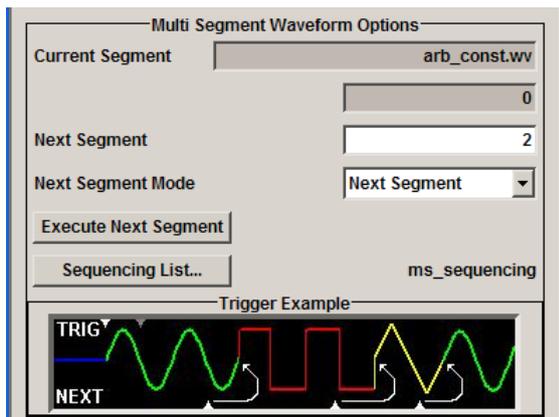

The buttons in the lower part of the menu open submenus for setting triggers and clocks, for configuring the test signal and for calculating a multi segment waveform or a multi carrier waveform.

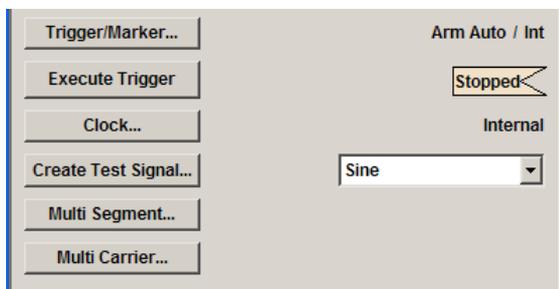

ARB MOD Main Menu

The upper part of the menu is used for powering up, selecting and configuring ARB modulation.

The lower part of the menu is used for setting triggers and clocks, as well as for file management. Test signals can be output for test purposes.

Multi Segment Waveform Options

The section "Multi Segment Waveform Options" of the menu is only displayed if a multi segment waveform is loaded.

The section comprises the settings necessary to adjust the trigger for the switch between the segments of a multi segment waveform. The parameters displayed depend on the selected trigger source.

The parameters in this sections are identical with the parameters in the section "Next Segment Trigger In" in the "Trigger/Marker" dialog; for detailed information see ["Next Segment Trigger In"](#) on page 382.

State (ARB)

Enables/disables ARB modulation.

Switching on this standard turns off all the other digital standards and digital modulation types.

The output is based on the waveform file that is loaded. The name of the waveform file is displayed next to "Load Waveform".

If a multi segment waveform is loaded the section "Multi Segment Waveform Options" is indicated. In this section, the segment to be output is selected.

If no waveform file is loaded, ARB modulation cannot be powered up. "None" will be displayed next to "Load Waveform". An error message asks the user to load a waveform file:

"No waveform file loaded. ARB MOD state remains off. Please select a waveform file to load, before switching ARB MOD state on."

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:STATe` on page 581

Set To Default

Calls default settings. The values are shown in the [Table 5-10](#).

Table 5-10: Default Settings

Parameter	Value
State	Off
Clock Freq.	1 MHz
Trigger Mode	Auto
Trigger Source	Internal
Marker State	Off
Marker Mode	Unchanged
Clock Source	Internal

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:PRESet` on page 581


Load Waveform

Calls the "File Select" menu for loading the waveform file.

The files last used are listed in the "Recent Data Sets" section. The directory can be selected from the center left section. All waveform files (file extension *.wv) available from the selected directory are listed on the right side. The file info (tag contents and multi segment state) for the selected file is displayed below the file section.

The "Select..." button selects the marked file. This file is loaded when the ARB modulation is enabled ("State On").

The "File Manager..." button leads to the file manager.

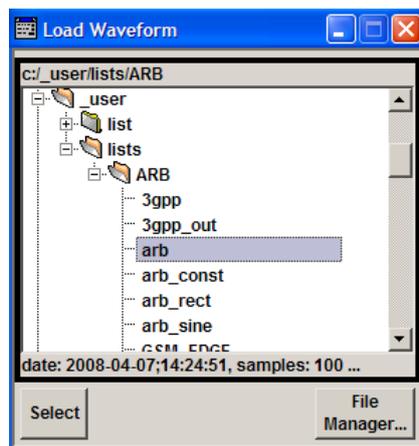


Remote command:

`[:SOURce<hw>] :BB:ARbitrary:WAVEform:SElect` on page 617

Waveform Info

Opens a dialog with detailed information about the currently selected waveform.

The waveform information displayed in this dialog depends on whether the selected waveform file is a multi segment one or not. All parameters are read-only.

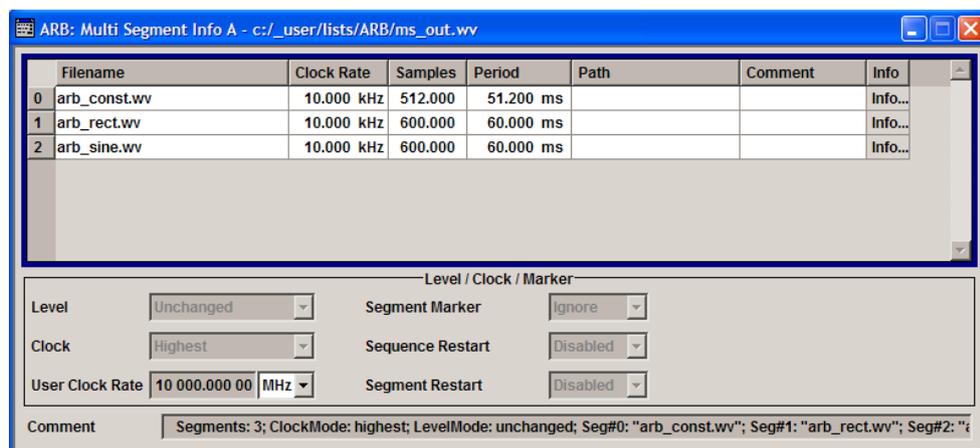

For non-multi segment waveform files, the values of the settings can be queried by means of the Tag commands (see Chapter 7.4, "Waveform and List Format", on page 490).

Remote command:

n.a.

HDD Streaming

Enables/disables the streaming of modulation data direct form the hard drive (HDD).

HDD streaming is recommended for processing of large files that require more ARB memory than the currently installed one.

HDD Streaming is enabled for waveform with "Clock Freq." \leq 1 MHz and "Number of Samples" $>$ 16 MS.

Remote command:

[\[:SOURce<hw>\]:BB:ARbitrary:WAVEform:HDDStreaming:STATe](#) on page 617

Streaming Buffer

(enabled for waveform with "Clock Freq." \leq 1MHz and "Number of Samples" $>$ 16MS)

Displays the filling level of the streaming buffer.

During normal operation, the streaming buffer level should have a value of 90% .. 100%. Buffer level around 0% indicates a buffer underrun and the signal processing will be interrupted.

Adjustment in the parameter value or state usually results in short decreasing of the streaming buffer level but this buffer state should not be misunderstood as buffer underrun.

Remote command:

[\[:SOURce<hw>\]:BB:ARbitrary:WAVEform:HDDStreaming:BLEVel?](#)

on page 616

Clock Frequency

Displays or enters the ARB output clock rate.

When the waveform file is loaded, this value is automatically set to the clock rate defined in the file (Clock tag). The user can subsequently alter the value if necessary.

When intending to work with an external clock source, the frequency to be applied must be entered here.

Remote command:

[\[:SOURce<hw>\]:BB:ARbitrary:CLOCK](#) on page 581

Trigger/Marker

Calls the Trigger and Marker menu.

This menu is used to select the trigger source, set the time delay on an external trigger signal and configure the marker output signals (see "[Trigger/Marker/Clock Settings](#)" on page 377).

Remote command:

n.a.

Execute Trigger

Executes trigger manually. A manual trigger can be executed only when an internal trigger source and a trigger mode other than Auto are selected.

Remote command:

[\[:SOURce<hw>\]:BB:ARbitrary:TRIGger:EXECute](#) on page 584

Clock

Calls the "Clock" menu. The "Clock" menu is used to select the clock source (see ["Clock Settings"](#) on page 389).

Remote command:

n.a.

Create Test Signal...

Selects the form of the test signal and calls the menu for generating it. A sinusoidal, rectangular or test signal with constant I/Q can be selected.

See the corresponding section for detailed description of the parameters for the selected test signal:

- ["Sine Test Signals"](#) on page 391
- ["Rect Test Signal"](#) on page 392
- ["Const IQ Test Signal"](#) on page 393

Remote command:

n.a.

Multi Segment

Calls the menu for calculating multi segment waveforms (see [Chapter 5.8.3.3, "Multi Segment Waveforms"](#), on page 394).

Remote command:

n.a.

Multi Carrier

Calls the menu for calculating multi carrier waveforms (see [Chapter 5.8.3.4, "Multi Carrier Waveforms"](#), on page 411).


Remote command:

n.a.


Trigger/Marker/Clock Settings

To access this dialog, select "Main Menu > Trigger/Marker".


The "Trigger In" section is where the trigger for the signal is set. Various parameters will be provided for the settings, depending on which trigger source - internal or external - is selected. The current status of signal generation ("Running" or "Stopped") is indicated for all trigger modes.

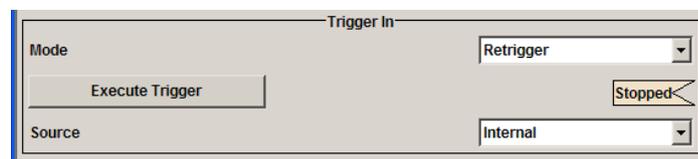


The "Next Segment Trigger In" is where the segment triggering is configured. This section is enabled only for multi segment waveforms.

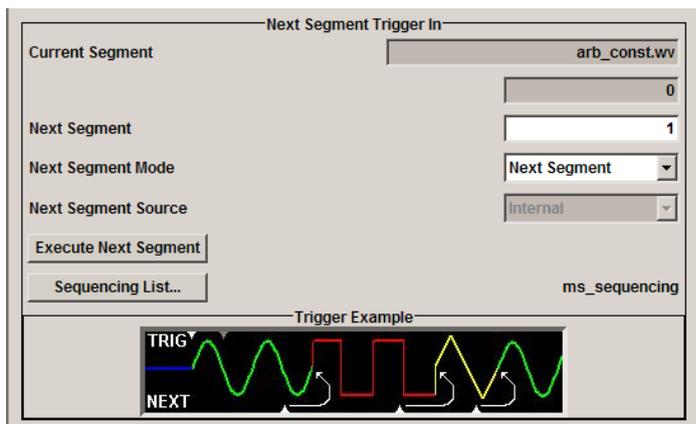


The "Marker Mode" section is where the marker signals at the MARKER output connectors are configured.

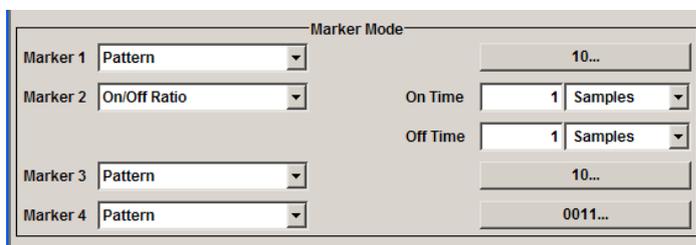

The "Marker Delay" section is where a marker signal delay can be defined, either without restriction or restricted to the dynamic section, i.e., the section in which it is possible to make settings without restarting signal and marker generation.

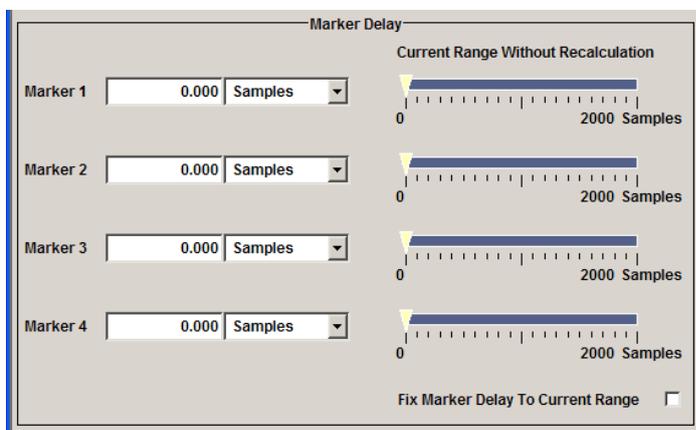

 The "Clock Settings" section is where the clock source is selected and - in the case of an external source - the clock type.



The buttons in the last section lead to submenu for general trigger, clock and mapping settings.



Trigger In

The "Trigger In" section is where the trigger for the signal is set. Various parameters will be provided for the settings, depending on which trigger source - internal or external - is selected. The current status of signal generation ("Running" or "Stopped") is indicated for all trigger modes.

Trigger Mode

Selects trigger mode.

The trigger mode determines the effect of a trigger on the signal generation.

"Auto"	The signal is generated continuously.
"Retrigger"	The signal is generated continuously. A trigger event (internal or external) causes a restart.
"Armed_Auto"	The signal is generated only when a trigger event occurs. Then the signal is generated continuously. Button "Arm" stops signal generation. A subsequent trigger event (internal with "Execute Trigger" or external) causes a restart.
"Armed_Retrigger"	The signal is generated only when a trigger event occurs. Then the signal is generated continuously. Every subsequent trigger event causes a restart. Button "Arm" stops signal generation. A subsequent trigger event (internal with "Execute Trigger" or external) causes a restart.
"Single"	The signal is generated only when a trigger event occurs. Then the signal is generated once to the length specified at "Signal Duration". Every subsequent trigger event (internal with "Execute Trigger" or external) causes a restart.

Remote command:

[\[:SOURce<hw>\]:BB:ARbitrary\[:TRIGger\]:SEQUence](#) on page 590

Signal Duration Unit

Defines the unit for the entry of the length of the signal sequence to be output in the "Single" trigger mode.

Remote command:

[\[:SOURce<hw>\]:BB:ARbitrary:TRIGger:SLUNit](#) on page 587

Signal Duration

Defines the length of the signal sequence to be output in the "Single" trigger mode. The unit of the entry is defined under "Signal Duration Unit". It is then possible to output deliberately just part of the signal, an exact sequence of the signal, or a defined number of repetitions of the signal.

Remote command:

[\[:SOURce<hw>\]:BB:ARbitrary:TRIGger:SLENgth](#) on page 587

Running/Stopped

Displays the status of signal generation for all trigger modes. This display appears only when signal generation is enabled ("State" On).

"Running"	The waveform is output; a trigger was (internally or externally) initiated in triggered mode. If "Armed_Auto" and "Armed_Retrigger" have been selected, generation of signals can be stopped with the "Arm" button. A new trigger (internally with "Execute Trigger" or externally) causes a restart.
"Stopped"	The Waveform output is stopped. The instrument waits for an internal or external trigger event to restart. ARB modulation is disabled (State Off).

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:TRIGger:RMODE?` on page 586

Arm

Stops waveform output. This button appears only with "Running" signal generation in the "Armed_Auto" and "Armed_Retrigger" trigger modes.

Signal output can be restarted by a new trigger (internally with "Execute Trigger" or externally).

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:TRIGger:ARM:EXECute` on page 583

Execute Trigger

Executes trigger manually. A manual trigger can be executed only when an internal trigger source and a trigger mode other than "Auto" have been selected.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:TRIGger:EXECute` on page 584

Trigger Source

Selects trigger source. This setting is effective only when a trigger mode other than "Auto" has been selected.

"Internal"	The trigger event is executed by "Execute Trigger".
"External"	The trigger event is executed with the aid of the active edge of an external trigger signal. The trigger signal is supplied via the TRIGGER 1/2 connector. The polarity, the trigger threshold and the input impedance of the trigger input can be set in the "Global Trigger/Clock Settings" dialog. Note: For multi segment waveforms, an external trigger source can be used for cyclical output of the segments. Each trigger event starts the output of the next segment. After the last segment, the first segment is output again.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:TRIGger:SOURce` on page 588

Sync. Output to External Trigger


(enabled for "Trigger Source > External")

Enables/disables output of the signal synchronous to the external trigger event.

"On"

Corresponds to the default state of this parameter.


The signal calculation starts simultaneously with the external trigger event but because of the instrument's processing time the first samples are cut off and no signal is outputted. After elapsing of the internal processing time, the output signal is synchronous to the trigger event.

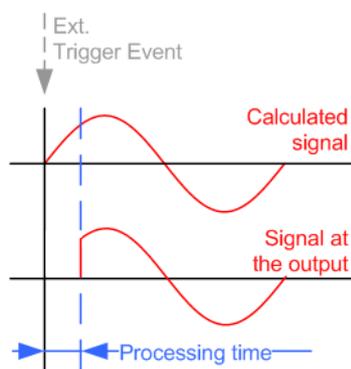

"Off"

The signal output begins after elapsing of the processing time and starts with sample 0, i.e. the complete signal is outputted.

This mode is recommended for triggering of short signal sequences with signal duration comparable with the processing time of the instrument.

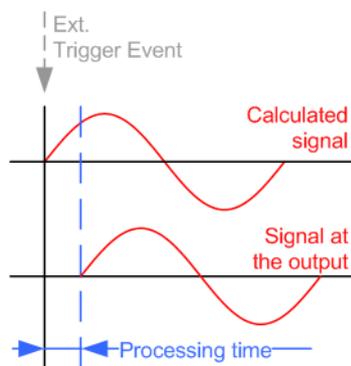

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:TRIGger[:EXternal]:SYNChronize:OUTPut`
on page 584

External Delay Unit

Determine whatever the trigger delay is expressed in samples or directly defined as a time period (seconds).

The parameter displays the delay converted in time.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:TRIGger:DELay:UNIT` on page 588

Trigger Delay

Sets the trigger signal delay in samples on external triggering or on internal triggering via the second path. This enables the R&S SMJ to be synchronized with the device under test or other external devices.

The parameter **Actual Trigger Delay** displays the delay converted in time.

Remote command:

```
[ :SOURce<hw> ] :BB:ARbitrary:TRIGger [ :EXTernal<1|2> ] :DELay
```

on page 589

```
[ :SOURce<hw> ] :BB:ARbitrary:TRIGger [ :EXTernal<1|2> ] :TDELay
```

on page 589

Actual Trigger Delay

Displays the time (in seconds) an external trigger event or a trigger event from the other path is delayed by.

Remote command:

```
[ :SOURce<hw> ] :BB:ARbitrary:TRIGger [ :EXTernal<1|2> ] :RDELay?
```

on page 589

Trigger Inhibit

Sets the duration for inhibiting a new trigger event subsequent to triggering. The input is to be expressed in samples.

In the "Retrigger" mode, every trigger signal causes signal generation to restart. This restart is inhibited for the specified number of samples.

This parameter is only available on external triggering.

Remote command:

```
[ :SOURce<hw> ] :BB:ARbitrary:TRIGger [ :EXTernal<1|2> ] :INHibit
```

on page 589

Next Segment Trigger In

The section "Next Segment Trigger" In of the menu is only displayed if a multi segment waveform is loaded.

The section comprises the settings necessary to adjust the trigger for the switch between the segments of a multi segment waveform. The parameters displayed depend on the selected trigger source.

Current Segment

Indication of the waveform segment (segment file name and index) that is currently output.

Remote command:

```
[ :SOURce<hw> ] :BB:ARbitrary:WSEGment? on page 618
```

```
[ :SOURce<hw> ] :BB:ARbitrary:WSEGment:NAME? on page 626
```

Next Segment

Selects the waveform segment to be output next. It determines the start segment when switching on the ARB and enables switchover to any other segment.

The switchover is performed either after receiving an external next segment trigger event or, for the internal trigger case, by changing the segment index in the "Next Segment" field. The definition whether the new segment is generated immediately or only after the previous segment has been fully generated (wrap around) is determined by the parameter [Next Segment Mode](#).

The segment currently being output (segment index and file name) is displayed at "Current Segment". The subsequent trigger event after the last segment causes the first segment to be output again.

Remote command:


`[:SOURce<hw>] :BB:ARbitrary:WSEgment:NEXT` on page 626

Next Segment Mode

Sets the segmented trigger mode of a multi segment waveform, i.e. defines the way the **switch over between the segments** in a multi segment waveform will be executed:


- In "Same Segment" mode, the processing of the multi segment waveform file is similar to the processing of a non-multi segment waveform, i.e. there is no switching to consecutive segment the upon receiving of a trigger event. Switching between the segments is triggered by changing the segment index in the "Next Segment" field.
- When "Next Segment" is selected, the current segment ceases to be output as soon as a trigger event for a new segment occurs, and the new segment starts to be output after a system-imposed signal gap.

The following figure shows an example of the transition from a sinewave signal segment to a sawtooth segment (1 channel, above) in the case of next segment external triggering (below).

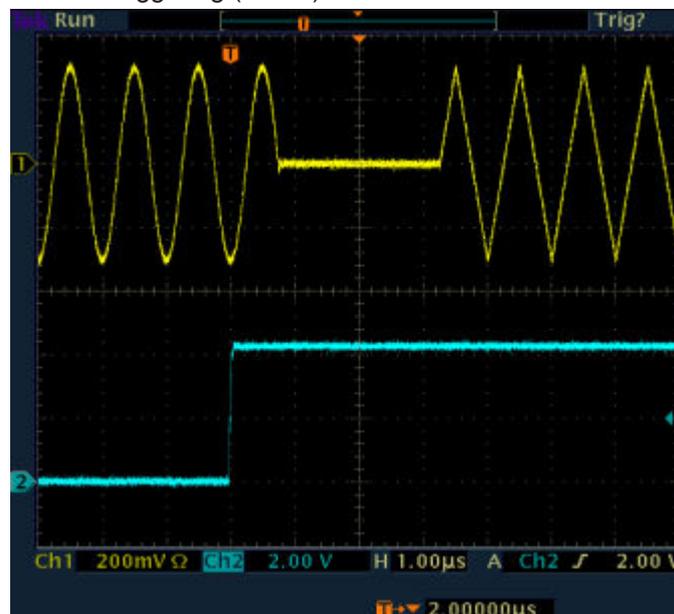

- When "Next Segment" Seamless is selected and a new segment trigger event occurs, the new segment is not output until the whole of the current segment has been output (wrap around). In this case the signal transition is seamless. As a prerequisite for a seamless switchover, all segments must have the same sample rate.

The following figure shows an example of the seamless transition from a sinewave signal segment to a sawtooth segment (I channel, above) in the case of next segment external triggering (below).

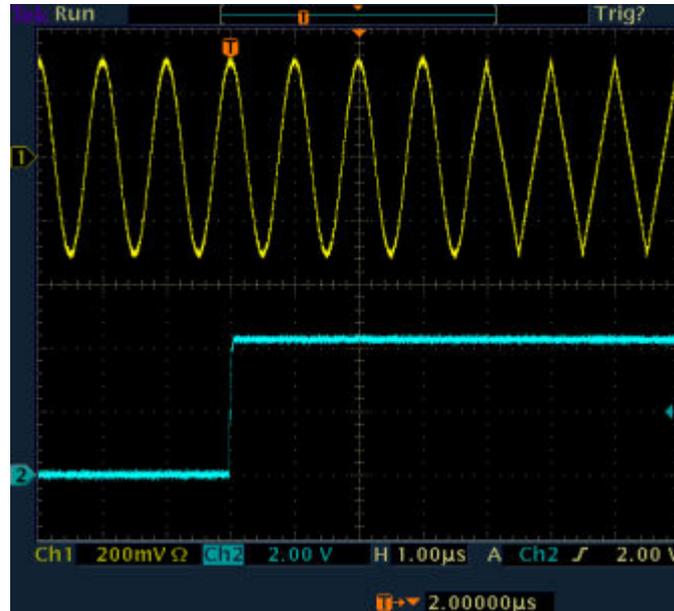

The regular trigger mode for starting the waveform generation and **triggering the whole multi segment sequence** is set with the parameters in the "Trigger In" section of the "Trigger/Marker/Clock" dialog.

The segment currently being output is displayed at "Current Segment".

The "Trigger Example" graph displays schematically the waveform output, depending on the activated trigger and the next segment settings.

"Same Segment"	<p>Depending on the trigger setting, the currently selected segment is continuously output either immediately or after a trigger event.</p> <p>Signal generation takes place differently according to the trigger selected in the "Trigger In" section:</p> <ul style="list-style-type: none">• In the case of "Trigger = Auto", output starts at once and the segment is generated continuously. Trigger events are ignored. If the segment is changed in "Next Segment", output of the current segment is stopped and the new segment is output immediately, following a system-imposed signal gap (see above).• In the case of "Trigger = Armed_Auto", output starts after the first trigger event. The segment is then generated continuously. Further trigger events are ignored. If the segment is changed in "Next Segment", signal output is stopped and the new segment is not output until a trigger occurs.• In the case of "Trigger = Retrigger", output starts at once and the segment is generated continuously, a trigger event causes a restart. If the segment is changed in "Next Segment", output of the current segment is stopped and the new segment is output immediately, following a system-imposed signal gap (see above).• In the case of "Trigger = Armed_Retrigger", output starts after the first trigger event. The segment is then generated continuously. Further trigger events cause a restart. If the segment is changed in "Next Segment", signal output is stopped and the new segment is not output until a trigger occurs.• In the case of "Trigger = Single", output starts after the first trigger event. The segment is then generated once. Further trigger events cause a restart. If the segment is changed in "Next Segment", signal output is not stopped. The new segment is not output until a trigger occurs.
----------------	--

"Next Segment"

Depending on the trigger setting, the segment selected under "Next Segment" is output either immediately or after a trigger event.

- In the case of "internal Trigger = Auto", output starts at once and the segment is generated continuously.
If the segment index is changed in "Next Segment", output of the current segment is stopped and the new segment is output immediately, following a system-imposed signal gap.
- In the case of "internal Trigger = Armed_Auto", output starts after the first trigger event. The segment is then generated continuously.
If the segment index is changed in "Next Segment", output of the current segment is stopped and the new segment is output immediately, following a system-imposed signal gap.
- In the case of "internal Trigger = Single", output starts after the first trigger event. The segment is then generated once. Further trigger events cause a restart.
If the segment index is changed in "Next Segment", the new segment is not output until a trigger occurs.
- In the case of "External Trigger = Auto", output starts at once and the segment is generated continuously.
Each trigger event switches over to outputting the subsequent segment, following a system-imposed signal gap.
If the segment index is changed in "Next Segment", output of the current segment is stopped and the new segment is output immediately, following a system-imposed signal gap.
The subsequent trigger event after the last segment causes the first segment to be output again.
- In the case of "External Trigger = Armed_Auto", output starts after the first trigger event. The segment is then generated continuously.
Each trigger event switches over to outputting the subsequent segment, following a system-imposed signal gap.
If the segment is changed in Next Segment, signal output is stopped and the new segment is not output until a trigger occurs.
The subsequent trigger event after the last segment causes the first segment to be output again.
- In the case of "External Trigger = Single", output starts after the first trigger event. The segment is then generated once.
Each trigger event switches over to outputting the subsequent segment once.
If the segment is changed in "Next Segment", signal output is not stopped. The new segment is not output until a trigger occurs.
The subsequent trigger event after the last segment causes the first segment to be output again.
The remaining trigger modes ("Retrigger" and "Armed_Retrigger") are not available.

"Next Segment Seamless"	<p>The segment selected under "Next Segment" is output. This mode is only available if all segments have the same sample rate.</p> <ul style="list-style-type: none"> • In the case of "Internal Trigger = Auto", output starts at once and the segment is generated continuously. If the segment is changed in "Next Segment", the new segment is output seamlessly after the output of the current segment is complete. • In the case of "internal Trigger = Armed_Auto", output starts after the first trigger event. The segment is then generated continuously. If the segment is changed in "Next Segment", signal output is stopped and the new segment is not output until a trigger occurs. • In the case of "External Trigger = Auto", output starts at once and the segment is generated continuously. Each trigger event switches over to outputting the subsequent segment once the output of the current segment has been completed. If the segment is changed in "Next Segment", the new segment is output seamlessly after the output of the current segment is complete. • In the case of "External Trigger = Armed_Auto", output starts after the first trigger event. The segment is then generated continuously. Each trigger event switches over to outputting the subsequent segment once the output of the current segment has been completed. If the segment is changed in "Next Segment", signal output is stopped and the new segment is not output until a trigger occurs. <p>The remaining trigger modes ("Retrigger" and "Armed_Retrigger") are not available.</p>
"Sequencer"	<p>The waveform files are processed according to the order and repetition cycles defined in the special sequencing list file (*.wvs) assigned to the multi segment waveform file. This "play list" is defined in the Multi Segment Waveform Sequencing dialog.</p> <p>Note: This feature is disabled in case the segments in the multi segment waveform file have different clock rates.</p>

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:TRIGger:SMODE` on page 588

Next Segment Source

Displays the next segment source, internal or external, as selected with the parameter "Trigger Source".

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:WSEgment:NEXT:SOURce?` on page 627

Execute Next Segment

Triggers manually switchover to the subsequent segment in the multi segment file. A manual trigger can be executed only when an internal "Next Segment Source" has been selected.

To perform a switchover to any segment within the multi segment file, adjust the parameter "Next Segment".

This parameter is disabled, if a sequencing play list is enabled.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:WSEgment:NEXT:EXECute` on page 627

Sequencing List

Open a dialog box for defining the "play lists" (see ["Multi Segment Waveform Sequencing"](#) on page 407).

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:WSEgment:SEquence:SElect` on page 628

Trigger Example

Displays an example of a multi segment waveform. The currently enabled trigger and next segment mode are considered. After the instrument switch on, the graph of the last loaded waveform is displayed.

Note: The curves plotted in this dialog box are textbook examples, "not measured" waveforms. They are intended to visualize the trigger and next segment settings more clearly.

Remote command:

n.a.

Marker Mode

Provides the settings necessary to define the marker output signal for synchronizing external instruments.

Marker Mode

Marker configuration for up to 4 marker channels. The settings are used to select the marker mode defining the shape and periodicity of the markers. The contents of the dialog change with the selected marker mode; the settings are self-explanatory.

Note: The marker trace in the waveform file remains unchanged. It is not overwritten, even if something else than "Unchanged" has been selected.

All regular marker signals are described in ["Marker Modes"](#) on page 324.

"Unchanged" The marker signal remains unchanged as defined in the waveform file.

"Restart" A marker signal is generated at the start of each ARB sequence. This marker mode is not enabled for multi segment waveforms.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:TRIGger:OUTPut<ch>:MODE` on page 591

`[:SOURce<hw>] :BB:ARbitrary:TRIGger:OUTPut<ch>:PULSe:DIVider` on page 592

[\[:SOURce<hw>\]:BB:ARbitrary:TRIGger:OUTPut<ch>:PULSe:FREQuency?](#)

on page 593

[\[:SOURce<hw>\]:BB:ARbitrary:TRIGger:OUTPut<ch>:PATtern](#) on page 592

[\[:SOURce<hw>\]:BB:ARbitrary:TRIGger:OUTPut<ch>:OFFTime](#) on page 591

[\[:SOURce<hw>\]:BB:ARbitrary:TRIGger:OUTPut<ch>:ONTime](#) on page 591

Marker Delay

The delay of the signals on the MARKER outputs is set in the "Marker Delay" section.

Marker x Delay

Enters the delay between the marker signal at the marker outputs and the start of the frame or slot.

The input is expressed as a number of symbols. If the setting "Fix marker delay to dynamic range" is enabled, the setting range is restricted to the dynamic range. In this range the delay of the marker signals can be set without restarting the marker and signal.

Remote command:

[\[:SOURce<hw>\]:BB:ARbitrary:TRIGger:OUTPut<ch>:DELay](#) on page 585

Current Range without Recalculation

Displays the dynamic range within which the delay of the marker signals can be set without restarting the marker and signal.

The delay can be defined by moving the setting mark.

Remote command:

[\[:SOURce<hw>\]:BB:ARbitrary:TRIGger:OUTPut<ch>:DELay:MINimum?](#)

on page 586

[\[:SOURce<hw>\]:BB:ARbitrary:TRIGger:OUTPut<ch>:DELay:MAXimum?](#)

on page 586

Fix marker delay to current range

Restricts the marker delay setting range to the dynamic range. In this range the delay can be set without restarting the marker and signal.

Remote command:

[\[:SOURce<hw>\]:BB:ARbitrary:TRIGger:OUTPut:DELay:FIXed](#) on page 585

Clock Settings

The "Clock Settings" is used to set the clock source and a delay if required.

Clock Source

Selects the clock source.

"Internal" The internal clock reference is used to generate the symbol clock.

"External" The external clock reference is fed in as the symbol clock or multiple thereof via the CLOCK connector.
The symbol rate must be correctly set to an accuracy of +/-2 % (see data sheet).
The polarity of the clock input can be changed with the aid of "Global Trigger/Clock Settings".

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:CLOCK:SOURce` on page 583

Clock Mode

Enters the type of externally supplied clock.

"Sample" A sample clock is supplied via the CLOCK connector.

"Multiple Sample" A multiple of the sample clock is supplied via the CLOCK connector; the sample clock is derived internally from this.
The "Multiplier" window provided allows the multiplication factor to be entered.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:CLOCK:MODE` on page 582

Sample Clock Multiplier

Enters the multiplication factor for clock type "Multiple".

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:CLOCK:MULTIPLIER` on page 582

Measured External Clock

Provided for permanent monitoring of the enabled and externally supplied clock signal.

Remote command:

`CLOCK:INPut:FREQuency?`

Global Settings

The buttons in this section lead to submenu for general trigger, clock and mapping settings.

Global Trigger/Clock Settings

Calls the "Global Trigger/Clock/Input Settings" dialog.

This dialog is used among other things for setting the trigger threshold, the input impedance and the polarity of the clock and trigger inputs.

The parameters in this menu affect all digital modulations and standards, and are described in [Chapter 5.2.3.10, "Global Trigger/Clock/External Input Settings"](#), on page 141.

User Marker / AUX I/O Settings

Calls the "User Marker AUX I/O Settings" menu, used used to map the connector on the rear of the instruments.


See also [Chapter 5.2.3.12, "User Marker / AUX I/O Settings"](#), on page 144.

Sine Test Signals

To access the "Sine Test Signals" dialog, in the "ARB MOD" dialog set the parameter "Create Test Signal" to Sine and press "Create Test Signal".

The menu can be used to configure a sinusoidal test signal. A sine wave is generated on the I path, and a sine wave of the same frequency but phase-shifted is generated on the Q path.

The signal actually set is displayed in graphical form in the center of the menu.

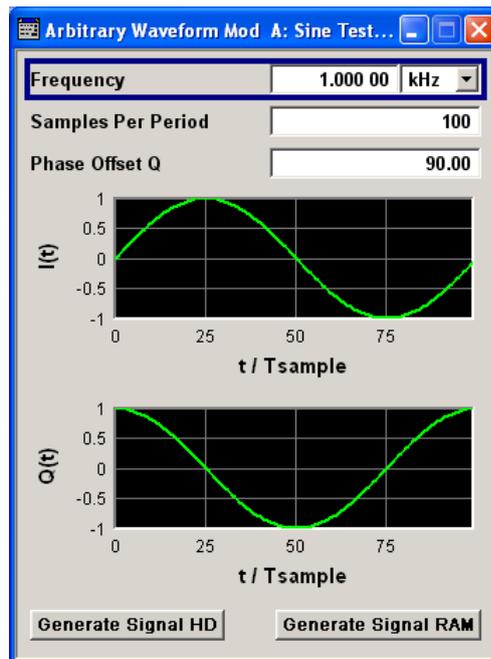

Frequency (Sine Test Signal)

Enters the frequency of the test signal.

Remote command:

[\[:SOURce<hw>\]:BB:ARbitrary:TSIGnal:SINE:FREQuency](#) on page 595

Samples per Period (Sine Test Signal)

Enters the number of sample values required from the sine wave per period.

The resulting clock rate must not exceed the maximum ARB clock rate (see data sheet). The number of sample values is automatically restricted by reference to the set frequency.

Remote command:

[\[:SOURce<hw>\]:BB:ARbitrary:TSIGnal:SINE:SAMPles](#) on page 596

Phase Offset Q (Sine Test Signal)

Enters the phase offset of the sinewave signal on the Q channel relative to the sinewave signal on the I channel.

Remote command:

[\[:SOURce<hw>\]:BB:ARbitrary:TSIGnal:SINE:PHASe](#) on page 596

Generate Signal HD (Sine Test Signal)

Generates a signal and saves it to a file.

The File Select window opens automatically and the signal can be stored as a waveform file.

Remote command:

[\[:SOURce<hw>\]:BB:ARbitrary:TSIGnal:SINE:CREate:NAMed](#) on page 594

Generate Signal RAM (Sine Test Signal)

Generates a signal and uses it as output straight away.


Remote command:

[\[:SOURce<hw>\]:BB:ARbitrary:TSIGnal:SINE:CREate](#) on page 593

Rect Test Signal

To access the "Sine Test Signals" dialog, in the "ARB MOD" dialog set the parameter "Create Test Signal" to Rect and press "Create Test Signal".

The dialog can be used to configure a rectangular test signal. A rectangular test signal with a duty factor of 0.5 is created. Amplitude and offset are adjustable. Both paths, I and Q, get the same signal.

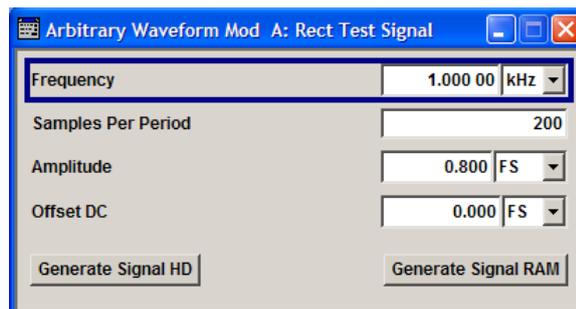**Frequency (Rect Test Signal)**

Enters the frequency of the test signal.

Remote command:

[\[:SOURce<hw>\]:BB:ARbitrary:TSIGnal:RECTangle:FREQuency](#) on page 595

Samples per Period (Rect Test Signal)

Enters the number of sample values required for the rectangular signal per period.

The resulting clock rate must not exceed the maximum ARB clock rate (see data sheet). The number of sample values is automatically restricted by reference to the set frequency.

Remote command:

[\[:SOURce<hw>\]:BB:ARbitrary:TSIGnal:RECTangle:SAMPles](#) on page 595

Amplitude (Rect Test Signal)

Enters the digital amplitude of the rectangular wave.

The abbreviation FS means full scale.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:TSIGnal:RECTangle:AMPLitude` on page 594

Offset DC (Rect Test Signal)

Enters a DC component.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:TSIGnal:RECTangle:OFFSet` on page 595

Generate Signal HD (Rect Test Signal)

Generates a signal and saves it to a file.

The File Select window opens automatically and the signal can be stored as a waveform file.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:TSIGnal:RECTangle:CREate:NAMed`
on page 594

Generate Signal RAM (Rect Test Signal)

Generates a signal and uses it as output straight away.

Remote command:


`[:SOURce<hw>] :BB:ARbitrary:TSIGnal:SINE:CREate` on page 593

Const IQ Test Signal

To access the "Sine Test Signals" dialog, in the "ARB MOD" dialog set the parameter "Create Test Signal" to Const I/Q and press "Create Test Signal".

The dialog can be used to configure a continuous test signal with constant I/Q. The I and Q values for each path are adjustable but constant. The I and Q values are entered as a decimal number, which is decimal-to-binary converted internally. The signal is provided as a 16-bit wide digital signal for both I and Q channels.

Converted to analog the signal is output directly at the BNC connectors I and Q outputs of the instrument.

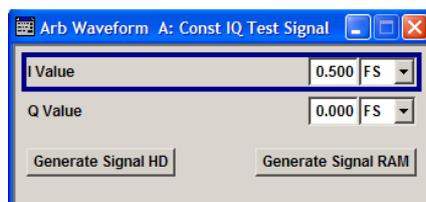

I Value (Const IQ Test Signal)

Enters the value for the I component of the test signal.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:TSIGnal:CIQ:I` on page 594

Q Value (Const IQ Test Signal)

Enters the value for the Q component of the test signal.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:TSIGnal:CIQ:Q` on page 594

Generate Signal HD

Generates a signal and saves it to a file.

The File Select window opens automatically and the signal can be stored as a waveform file.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:TSIGnal:CIQ:CREate:NAMed` on page 594

Generate Signal RAM

Generates a signal and uses it as output straight away.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:TSIGnal:CIQ:CREate` on page 593

5.8.3.3 Multi Segment Waveforms

Modern chip technologies implement several communication standards within one chip and rise spacial verification and test requirements. To fulfill the requirements of these test systems and to enable rapid alternation between different waveforms with differing test signals, the R&S SMJ provides the functionality to generate multi segment waveform files.

This section introduces the concept of the multi segment waveform files, together with description of the provided settings and some typical configuration examples.

Required options

Multi segment waveform files require the corresponding Digital Standard options (R&S SMJ-K2xx) of all included standards.

Introduction

A multi segment waveform is a composed signal containing several multiple independent waveforms called segments. Each segment represents a completely independent waveform that can be output with its own marker and clock settings.

The [Figure 5-27](#) shows the principle of building a multi segment waveform.

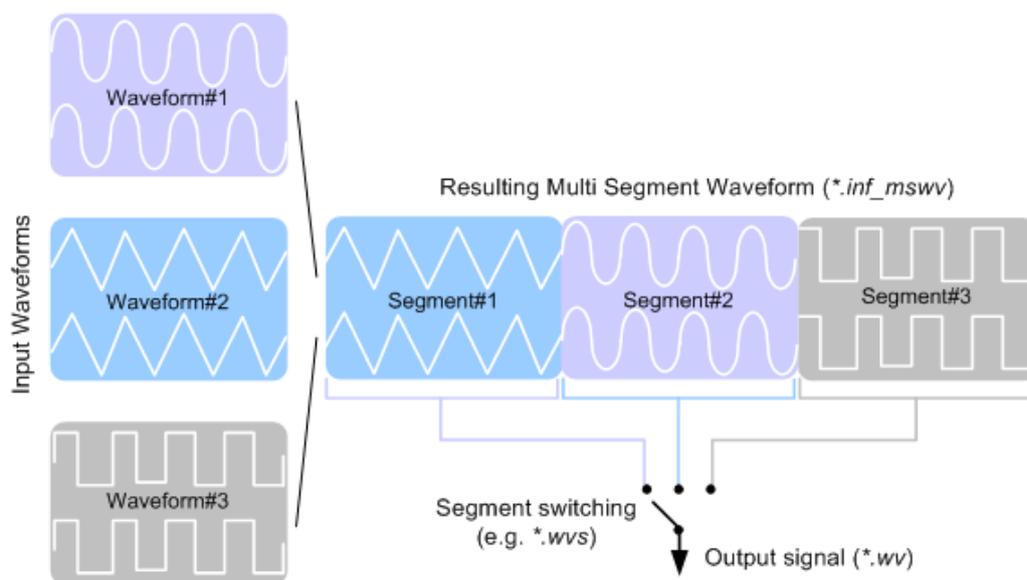


Figure 5-27: ARB Multi Segment Waveform Concept

It is also possible to create and output a blank segment, i.e. segments containing a zero signal.

Typical applications for the multi segment mode are described in section "[Typical Applications for Multi Segment Waveforms](#)" on page 410.

Multi Segment Waveforms Processing

Processing of the waveform is triggered by the "Create" or "Create and Load" function. To process the waveform, the instrument loads the entire multi segment waveform into the memory. It is therefore possible to alternate between the individual waveforms without delay due to loading. You can define the output order of the segments, as well as the segment intended to be output at any given moment.

When the created waveform is loaded, the graphical interface displays information on clock rate, number of samples and creation day. Additionally, you can acquire information about the waveform in the dedicated "Waveform Info" dialog.

The ARB Sequencer Mode

If very high switch over speeds are required, the test signals can be continuously scrolled through with the aid of an external trigger or by applying a predefined "Play List". The R&S SMJ provides the possibility not only to define a sequence of different segment but also to determine whether a segment is played once or repeated several times and to adjust the transition between the segments.

For the correct and fast processing as well as for seamless transition between the multiple waveforms, segments with a common sample rate are required. If the combined waveforms features different sample rates, they should be adapted to a common sample rate by resampling. Another advantage of this procedure is the scaling of the instantaneous amplitude of the various waveforms to a common RMS level.

File Concept

To provide flexible configuration, the building of a composed multi segment waveform file involves different stages; by completing of each of them, the R&S SMJ creates and stores a dedicated file. The following files are used:

- **Configuration list:** is a dedicated file with details on how a multi segment waveform is made up from different waveforms, the level and the clock rate settings, and the file name. The file extension is `*.inf_mswv`.
You can create any number of configurations as a basis for defining further multi segment waveforms.
- **Output file:** is the created output multi segment waveform file. The R&S SMJ stores it under a user definable name; as with the standard waveforms, the used file extension is `*.wv`. The instrument appends additional information to the header of the composed waveform file, e.g. user comments.
- **Sequencing list:** are files created in the "Multi Segment Waveform Sequencing" dialog, i.e. when the ARB sequencer mode is used (see ["The ARB Sequencer Mode"](#) on page 395).
The sequencing list file has an extension `*.wvs` and is automatically assigned to but independent from the multi segment file. By default, both files have the same name and are located in the same file directory. You can create more than one sequencing list file per multi segment waveform file.
The sequencing list file carries information only about the segment number, the corresponding waveform file names are retrieved from the assigned multi segment waveform file, i.e. the same sequencing list file can be reused for different multi segment waveform files with the same number of segments.
Changes and re-calculations of a multi segment waveform file cause a re-check whether the assigned sequencing list files are still valid. A message is displayed to inform about necessary corrections in the "play list".

Impact of the Marker Settings

The general purpose of the marker signal is the triggering of the DUT (device under test) and the synchronization with other measurement instruments.

For better flexibility, the instrument provides several possibilities to define marker signals:

- **Segment markers**
Because the multiple segments are stand alone waveforms, it might be that they already carry marker signals. Settings are provided to define how the instrument should process these available marker signal, to ignore them or to use them in the composed multi segment waveform.
- **Additional segment restart and sequence restart markers**
Additional marker signal can be defined to restart the multi segment sequence or to restart each of the multiple segments. A marker output configured and defined for one of these purposes overwrites markers that use the same output connector and that are defined in the individual waveforms.



Figure 5-28: Example of marker signals

The segment begin is defined by the low-high slope of the marker. This applies for switching between two segments as well as in case of segment replay.

- General marker signals for the composed multi segment waveform
The "ARB" dialog provides also access to the standard marker settings. Settings other than "unchanged" overwrite existing marker in the waveforms or markers defined for the multi segment waveform.

The [Figure 5-29](#) shows schematically how the instrument evaluates the priorities of the different marker signals, if multiple marker signals are mapped to the same connector.

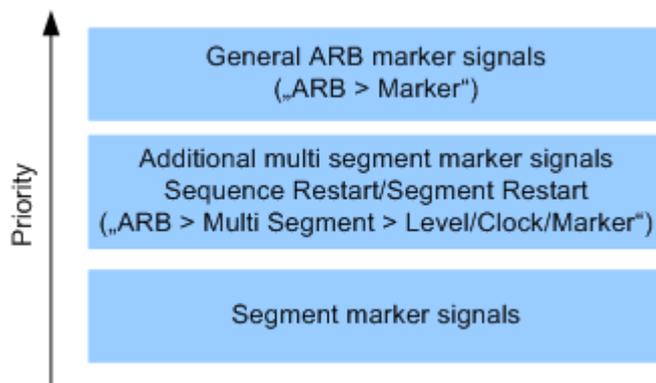


Figure 5-29: Marker priority used by assigning of marker signals to a hardware connector

Impact of the Trigger Settings and Next Segment Settings

The ARB dialog is equipped with the standard (regular) trigger settings. These settings are provided for triggering of the composed multi segment waveform as a **sequence**, i.e. as one file.

This section focuses on the additional settings provided for triggering of the individual segments building the composed multi segment waveform. These settings are enabled and visible only if a multi segment waveform is loaded for processing. The settings are grouped in the "Multi Segment Waveform Options/Next Segment Trigger In" section.

The [Figure 5-30](#) is intended to explain how trigger events impact the processing of the multi segment waveforms.

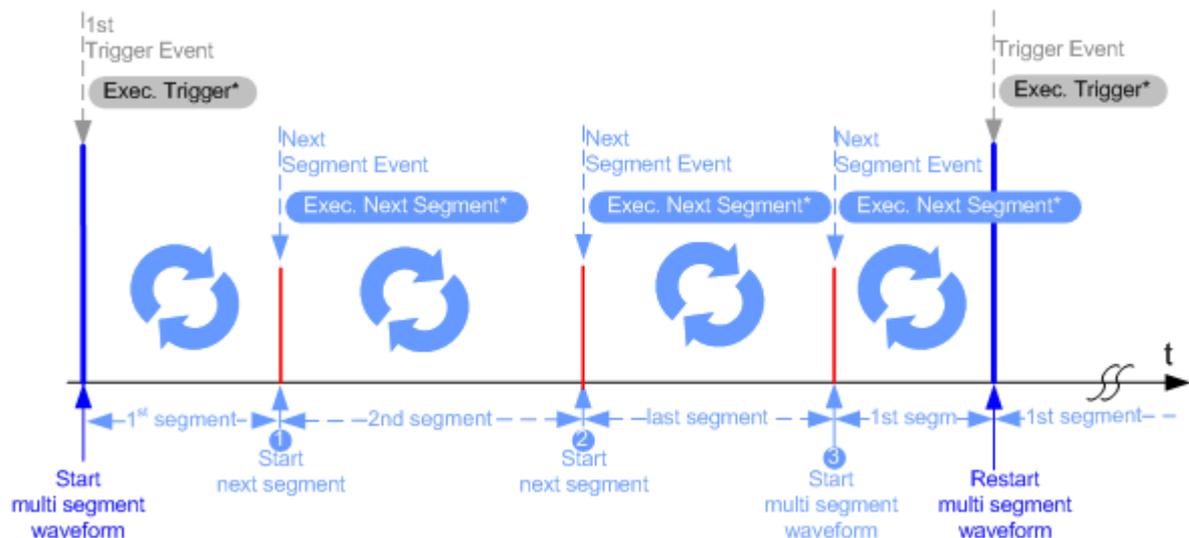


Figure 5-30: Principle of segment triggering

- * = To simplify the description, an internal next segment trigger event ("Exec. Next Segment") and an internal trigger event ("Execute Trigger") are used; an external trigger event has the same effect on the signal generation.
- 1, 2 = Any next segment trigger event (internal or external) causes a switch over to the subsequent available segment in the waveform. The currently output segment (segment file name and segment index) is indicated at "Current Segment".
- 3 = When the last segment of the multi segment waveform has been output, the sequence starts again with the output of the first segment after the subsequent trigger event. Hence, a sequence of external next segment trigger events can be used to cyclically output the segments in the multi segment file.

Defining Next Segment Source

As with the standard trigger system, provided are the following two sources for the next segment signal:

- **Internal:** the switch over to the subsequent segment is triggered manually by means of the "Execute Next Segment" function.
To trigger a switch over to any segment within the multi segment waveform, change the value of the "Next Segment".
- **External:** the instrument expects an external trigger event (signal at the corresponding connector)

Defining the Subsequent Segment

By default, the instrument replays the segments in incremental order, e.g. Segment#1, Segment#2, etc. If other order is required, use one of the following possibilities to define the segment to be played next:

- **Next Segment:** defines the subsequent segment while triggering the segments manually, i.e. by "Next Segment Source > Internal"
- **Sequencing List:** the subsequent segment is defined in the selected play list.

Defining the Transition between the Segments

The R&S SMJ provides the parameter "Next Segment Mode" to define the transition to the subsequent segment (see the two graphics below).


- **Next Segment:** by receiving a Next Segment Event, the ARB aborts immediately the playing of the current waveform and starts playing the next segment waveform (see [Table 5-11](#)).
- **Next Segment Seamless:** by receiving a Next Segment Event, the ARB completes the processing of the current waveform before starting the next segment waveform (see [Table 5-11](#)).

Use this setting to avoid signal gaps and wrap-around problems. Seamless transition requires segments with equal clock rates.

Another way to generate a multi segment signal without signal gaps between the segments is to use the provided ARB sequencer mode (see "[Multi Segment Waveform Settings](#)" on page 400).

The [Table 5-11](#) shows two examples of the transition from a sinewave signal segment to a sawtooth segment (1 channel, upper curve) in the case of next segment external triggering. The left graphic displays an abrupt transition; the right graphic, the **seamless** transition case.

Table 5-11: Transition examples

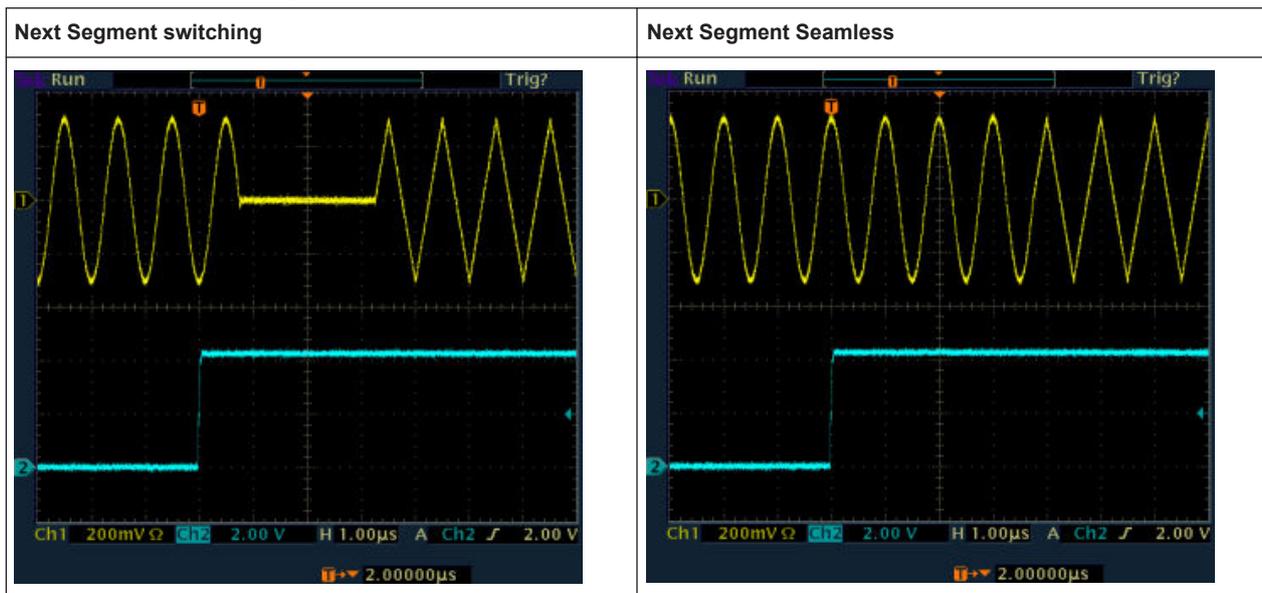

Understanding the Trigger Examples


A simplified diagram in the ARB dialog is intended to explain the effect of the triggering on the signal processing. The currently enabled settings for trigger and next segment mode are considered.



The curves plotted in the dialog are textbook examples, "not measured" waveforms. They are intended to visualize the trigger and the next segment settings more clearly.

- The triangle on the top line denotes a trigger event. A filled triangle on the bottom line denotes a next segment event.
- A green sinewave (or other shape) over a full period indicates one replay cycle of a segment ; A shorter example signal indicates a replay cycle which was interrupted, e.g. due to a next segment event (compare the two graphics in [Table 5-12](#)).

 Table 5-12: Trigger examples in the "ARB" dialog

"Next Segment Mode = Next Segment"	"Next Segment Mode = Next Segment Seamless"
	


Multi Segment Waveform Settings

To access the "Multi Segment" dialog, select "Baseband > ARB > Multi Segment...".

Example

How to create multi segment waveform file

1. Select "New List" to create empty list.
2. Use the "Append" function to add two or more waveform files.
3. Adjust the "Level", "Clock" and "Segment Marker" settings.
4. Select the "Output File" and enter file name.
5. Select "Save List" to save the configuration.
6. Select "Create" or "Create and Load" to create and save the multi segment waveform.

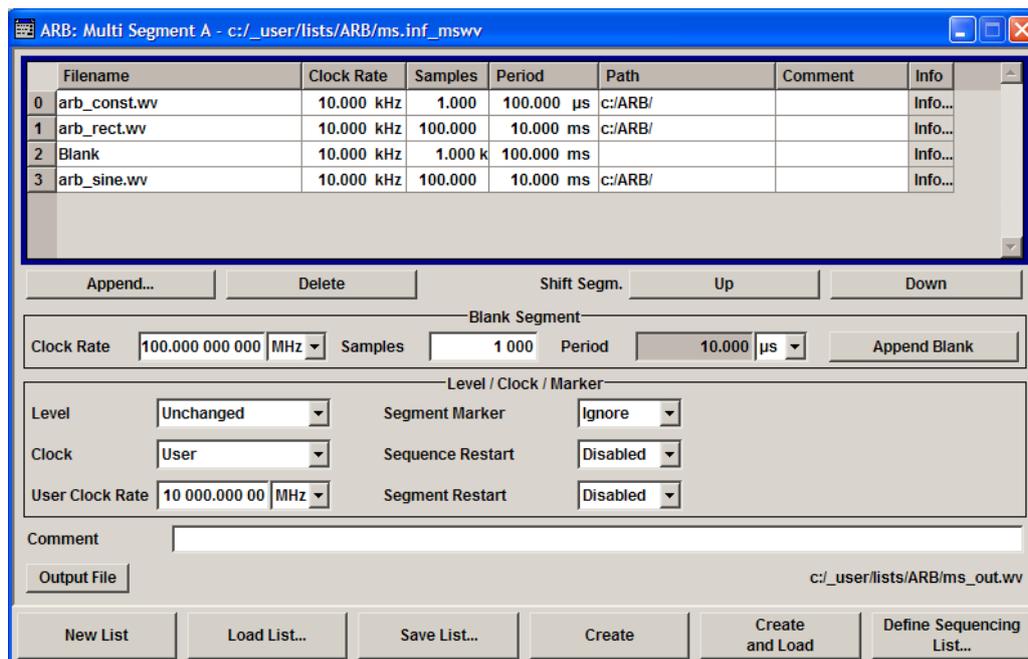

Multi Segment File Contents


The upper part of the dialog provides the functions, necessary to create and adjust the contents of the multi segment file.

Multi Segment Table

The table lists the individual waveforms (segments) of the selected multi segment waveform. The information about the segments is taken from the tags of the corresponding waveform files.

"Segment#"	Indication of segment index. The segment index is used to select the segment to be output. The segment index also defines the sequence of the output during triggering in the "Next Segment" or "Next Segment Seamless".
"Waveform"	Indication of the waveform file name of the segment.
"Clock Rate"	Indication of the clock rate of the segment.
"Samples"	Indication of the number of samples in the segment.
"Period"	Indication of the segment duration.
"Path"	Indication of the location of the waveform file used for the corresponding segment.
"Comment"	Indication of the comment on the segment.

"Info" Opens a dialog with detailed information about the currently selected waveform.

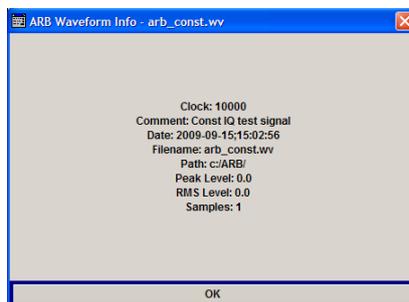

Remote command:
n.a.

Append

Opens the file menu to enter the file name of the waveform file to be appended.

Remote command:

`[:SOURce<hw>] :BB:ARBitrary:WSEgment:CONFigure:SEGment:CATalog?`
on page 625

`[:SOURce<hw>] :BB:ARBitrary:WSEgment:CONFigure:SEGment:APPend`
on page 624

Delete

Deletes the selected segment.

Remote command:

`[:SOURce<hw>] :BB:ARBitrary:WSEgment:CONFigure:DELeTe` on page 622

Shift Seg.# Up/Down

Shifts the selected segment up and down.

Blank Segment

The Blank Segment section is where a blank segment can be configured.

Clock Rate

Selects the clock rate of the blank segment.

Remote command:

`[:SOURce<hw>] :BB:ARBitrary:WSEgment:CONFigure:BLANk:APPend`
on page 620

Samples

Selects the number of samples for the blank segment.

Remote command:

`[:SOURce<hw>] :BB:ARBitrary:WSEgment:CONFigure:BLANk:APPend`
on page 620

Period

Displays the resulting period for the blank segment.

Remote command:
n.a.

Append Blank

Adds the blank segment to the multi segment file.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:WSEgment:CONFigure:BLANK:APPend`
on page 620

Level / Clock /Marker

The Level/Marker/Clock section provides the parameters necessary to adjust the level, marker and clock settings for the selected multi segment waveform file.

Level

Defines the level mode for the multi segment waveform.

- | | |
|-------------|---|
| "Unchanged" | Concerning the level settings, the segments are output exactly as defined in the files. The "Level" display applies only to the segment with the highest rms value. In some circumstances the remaining segments are output at a lower level than that displayed. |
| "Equal RMS" | Segments are output so that all segments have the same rms value. The "Level" display applies to all segments. |

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:WSEgment:CONFigure:LEVel [:MODE]`
on page 622

Clock

Selects the clock rate mode for the multi segment waveform.

- | | |
|-------------|---|
| "Unchanged" | A segment is output with the clock rate defined in the file. If segments have different clock rates, extended trigger mode "Next Segment" allows internal segment switchovers only ("Internal" trigger source).
Extended trigger mode "Next Segment Seamless" can only be selected if all segments have the same clock rate. |
| "Highest" | All segments are output at the highest available clock rate. This mode provides very short switchover times between segments. The time for calculating the multi segment waveform is increased since the individual segments have to be resampled. |
| "User" | All segments are output at the clock rate defined in "User Clock". This mode provides very short switchover times between segments. The time for calculating the multi segment waveform is increased since the individual segments have to be resampled. |

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:WSEgment:CONFigure:CLOCK:MODE`
on page 621

User Clock Rate

Defines the sample rate used for multi segment waveform output in case of Clock Mode "User".

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:WSEgment:CONFigure:CLOCK` on page 620

Segment Marker

Defines the way the marker information within the separate segments is processed.

"Ignore" The marker information carried in the individual segment waveform files is not considered.

"Take Over" The output waveform file contains the marker information as configured in the individual waveform files.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:WSEgment:CONFigure:MARKer:MODE`
on page 623

Sequence Restart

Enables/disables the generation of an additional marker restart signal in the output waveform file.

If additional marker generation is enabled, the existing marker signals in the individual segment waveform files are not considered.

"Disable" No additional marker is generated.

"Marker
1/2/3/4" Generates a restart marker signal at the beginning of the first segment for the corresponding marker.
Use this setting to generate a restart marker for the complete sequence.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:WSEgment:CONFigure:MARKer:FSEgment`
on page 623

Segment Restart

Enables/disables the generation of an additional marker restart signal in the output waveform file.

If additional marker generation is enabled, the existing marker signals in the individual segment waveform files are not considered.

"Disable" No additional marker is generated.

"Marker
1/2/3/4" Generates a restart marker signal at the beginning of each segment for the corresponding marker.
The segment begin is defined by the low-high slope of the marker.
This applies for switching between two segments as well as in case of segment replay.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:WSEgment:CONFigure:MARKer:ESEgment`
on page 622

Output File

In the Output File section, the output file name is specified and a comment can be added to the file.

Comment

Adds a comment to the multi segment file.

Remote command:

`[:SOURce<hw>] :BB:ARBitrary:WSEgment:CONFigure:COMment` on page 621

Output file

Opens the File menu, where the file name of the multi segment waveform which has to be calculated can be entered. The multi segment waveform is saved under this name by clicking the "Create" or "Create and Load" button.

A name must also be entered here before the list can be saved as a configuration file ("Save List"). In this case the name is needed for internal storage procedures. It is entered as the default name for the multi segment waveform file when loading the list.

Remote command:

`[:SOURce<hw>] :BB:ARBitrary:WSEgment:CONFigure:OFILe` on page 624

Handling of Multi Segment Files

The buttons in this sections are provided for handling of the multi segment files.

Save List

Saves the current entries of the table in a configuration file, including the level mode, clock mode, segment marker mode and output file name settings.

The file name is entered in the "File" menu. Configuration files have the file extension *.inf_mswv. They can be used later as the basis for further multi segment waveforms.

Before a multi segment configuration file can be saved, a file name must be entered in "Output File", since this is saved with the configuration file for internal purposes.

Remote command:

The configuration file to be used for the creation of the multi segment waveform is defined with the command:

`[:SOURce<hw>] :BB:ARBitrary:WSEgment:CREate`

or `[:SOURce<hw>] :BB:ARBitrary:WSEgment:CLoad`

The file name of the waveform file is always determined with the command `[:SOURce<hw>] :BB:ARBitrary:WSEgment:CONFigure:OFILe`

Load List

Opens the file menu to select the configuration file to be edited.

Remote command:

`[:SOURce<hw>] :BB:ARBitrary:WSEgment:CONFigure:CATalog?` on page 620

`[:SOURce<hw>] :BB:ARBitrary:WSEgment:CONFigure:SElect` on page 625

New List

Calls the "Create Multi Segment Waveform List" dialog to enter the name of the new file.

A new new configuration table is created.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:WSEgment:CONFigure:SElect` on page 625

Define Sequencing List

Open a dialog box for configuring of the play lists (see "Multi Segment Waveform Sequencing" on page 407).

Remote command:

n.a.

Create

Creates a new multi segment waveform using the current table entries.

This multi segment waveform is saved with the file name specified in "Output File". As with normal waveforms, the file extension is "*.wv".

Depending on the configuration of the multi segment waveform, calculation may take some time. A panel with a progress bar and an "Abort" button appears during creating of the multi segment waveform.

In remote control the configuration file to be used for the creation of the multi segment waveform is defined with the command: `[:SOURce<hw>] :BB:ARbitrary:WSEgment:CREate` or `[:SOURce<hw>] :BB:ARbitrary:WSEgment:CLOad`.

The file name of the waveform file is always determined with the command `[:SOURce<hw>] :BB:ARbitrary:WSEgment:CONFigure:OFILe`

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:WSEgment:CREate` on page 625

Create and Load

Creates a new multi segment waveform using the current table entries.

This multi segment waveform is saved with the file name specified in "Output File". As with normal waveforms, the file extension is *.wv.

Depending on the configuration of the multi segment waveform, calculation may take some time.

Following this the "Create Multi Segment Waveform File" submenu is closed and the new multi segment waveform is loaded.

In remote control the configuration file to be used for the creation of the multi segment waveform is defined with the command: `[:SOURce<hw>] :BB:ARbitrary:WSEgment:CREate` or `[:SOURce<hw>] :BB:ARbitrary:WSEgment:CLOad`.

The file name of the waveform file is always determined with the command `[:SOURce<hw>] :BB:ARbitrary:WSEgment:CONFigure:OFILe`

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:WSEgment:CLOad` on page 619


Multi Segment Waveform Sequencing

The settings provided in the "Multi Segment Waveform Sequencing" dialog can be adjusted to create a "play list", i.e. to define the sequence in which the waveform file segments are processed and how many times each of them is repeated. The configured play list is displayed in form of a "Sequencing Graphic".



All segments in a "play list" must have the same clock rate.

In the "ARB" main dialog or in the "ARB Trigger/Marker/Clock" dialog, set the "Next Segment Mode" to "Sequencer" to activate the configured "play list".

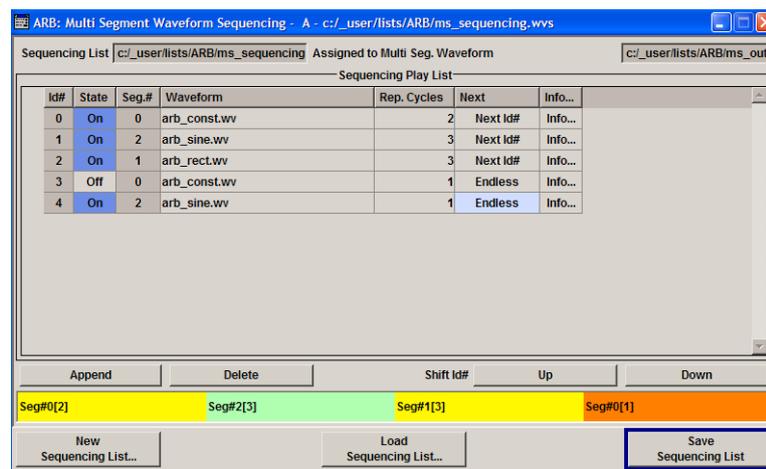

Sequencing List

Displays the name of the selected sequencing list file, i.e. the file with the "play list" settings.

The sequencing list file has an extension *.wvs and is automatically assigned to but independent from the multi segment file. By default, both files have the same name and are located in the same file directory. More than one sequencing list files can be created per multi segment waveform file.

The sequencing list file carries information only about the segment number, the corresponding wavefile names are retrieved from the assigned multi segment waveform file, i.e. the same sequencing list file can be reused for different multi segment waveform files with the same number of segments.

Changes and re-calculations of a multi segment waveform file cause a re-check whether the assigned sequencing list files are still valid. A message is displayed to inform about necessary corrections in the "play list".

Remote command:
n.a.

Assigned to Multi Seg. Waveform

Displays the name of the multi segment waveform file the current sequencing list file is assigned to.

Remote command:
n.a.

Sequencing Play List

The "Sequencing Play List" table is used to define the sequence in which the waveform file segments are processed and how many times each of them is repeated.

Id# ← Sequencing Play List

Indication of the row number.

n.a.

State ← Sequencing Play List

Enables/disables the selected row. Only active segments are processed.

n.a.

Segment# ← Sequencing Play List

Indication of segment index.

The sequencing list file carries information only about the segment index, the corresponding wavefile names are retrieved from the assigned multi segment waveform file.

n.a.

Waveform ← Sequencing Play List

Indication of the waveform file name of the segment. The file name is retrieved from the assigned multi segment waveform file.

Available for selection are only waveform files from the pool of segments of the selected multi segment waveform file.

n.a.

Repetition Cycles ← Sequencing Play List

Sets the number of times the selected segment is cyclically repeated before the next segment in the sequence is processed.

n.a.

Next ← Sequencing Play List

Determines the action after completing the current one, like for instance which segment is processed after the processing of the current one is finished.

"Next Id#" The next active segment in the play list is processed.

"Blank" After the processing of the current segment is completed, the signal output is stopped until a signal restart like a retrigger signal is received.

A restart signal causes a complete restart of the sequencing play list.

"Endless" The current segment is re-played until a signal restart like a retrigger signal is received and the complete sequencing play list is restarted. Only active segments are considered.

"Goto Id#" Determines the row number of the segment to be processed next. This feature is currently limited for the first 32 rows.

Remote command:

n.a.

Info ← Sequencing Play List

Opens a dialog with detailed information about the currently selected waveform.

See also "[Waveform Info](#)" on page 375.

Remote command:

n.a.

Append

Inserts a new row at the end of the sequencing play list table.

Remote command:

[\[:SOURce<hw>\]:BB:ARbitrary:WSEgment:SEquence:SElect](#) on page 628

[\[:SOURce<hw>\]:BB:ARbitrary:WSEgment:SEquence:APPend](#) on page 628

Delete

Deletes the selected row.

Remote command:

n.a.

Shift Id# Up/Down

Shifts the selected row up and down.

Remote command:

n.a.

Sequencing Graphic

Displays the play list graph according to the current configuration.

The graph shows the segment sequence, the segment number and the number of times, the segment is repeated; considered are only the active segments.

Remote command:

n.a.

New Sequencing List

Opens the "Select Sequencing List" dialog to enter the name of the new file.

Remote command:

n.a.

Load Sequencing List

Opens the "Select Sequencing List" dialog to select an existing play list file.

Remote command:

n.a.

Save Sequencing List

Saves the current entries of the table in a play list file.

The default file name of the play list file is the same as the multi segment waveform file name, but it can be changed.

Play list files have the file extension *.wvs.

Remote command:

n.a.

Typical Applications for Multi Segment Waveforms

This section gives examples of the typical applications for multi segment waveforms.

High Speed Switchovers

To test DUTs/chips using different test signals at high throughput requires extremely fast switchovers (for instance when testing ATE devices during manufacture). The following settings enable switching times of approx. 5 us and the test signals are scrolled through with the aid of an external trigger signal:

1. "Trigger Mode" = "Auto"
2. "Trigger Source" = "External Trigger"
3. If the waveforms have different sample rates:
"Clock Mode" = "Highest" or "User" (when creating the waveform in the Multi Segment Editor)

Flexible Dynamic Switchovers

When testing DUTs using different test signals, it may be necessary to switch dynamically and flexibly between any of the test signals, for instance depending on the outcome of the previous test. When using remote control via an external computer, the following settings enable switching times of approx. 20 ms for segments with the same sample rate and approx. 200 ms for segments with different sample rates:

1. "Extended Trigger Mode" = "Next Segment"
2. "Trigger Mode" = "Auto"
3. "Trigger Source" = "Internal"

Flexible Dynamic Switchovers without Signal Interruptions

Testing receivers requires a continuous output of different test signals without interrupting the signal. The test signals then produce a complex total signal with no signal gaps on switchover. Control procedures can use a simulated back channel of the receiver (trigger line or remote control).

Switching times depend on the length of the segment currently being output, since switchover to the next segment does not take place until the current segment comes to an end.

1. "Extended Trigger Mode" = "Next Segment Seamless"
2. "Trigger Mode" = "Auto"
3. "Trigger Source" = "Internal or External"
If the waveforms have different sample rates:
4. "Clock Mode" = "Highest" or "User" (when creating the waveform in the Multi Segment Editor)

5.8.3.4 Multi Carrier Waveforms

Multi carrier waveforms consisting of up to 512 carriers modulated by user-selectable baseband signals can be created in order to simulate complex multi carrier scenarios with different baseband signals (e.g. CDMA2000 or 3GPP FDD).

The carriers are equally spaced and centered toward the RF frequency or baseband DC line, respectively. The carrier spacing is adjustable within the total available baseband bandwidth of 80 MHz. Each carrier can be separately defined in terms of power, phase and modulated input signal. Optionally, crest factor optimization can be applied.

Thus, multi carrier waveforms can be very easily configured as broadband test signals and used for such purposes as transmitter or receiver tests. Even complex multi carrier scenarios composed of signals from different digital standards can be created and used for these tests.

Example for the creation of a multi carrier waveform file

1. Configure general settings
2. Configure carrier table
3. Enter file name of multi carrier waveform ("Output File")
4. Save and load multi carrier waveform ("Create" or "Create and Load")

User Interface

To access the "Multi Carrier" dialog, select "Baseband > ARB > Multi Carrier...".


The menu can be used to create a multi carrier waveform and save it under its own name. As with normal waveforms, the file extension is *.wv. Information on clock rate, number of samples and creation day is displayed in the File menu when a waveform is loaded.

The "Multi Carrier" dialog is divided into the following sections.

The upper part of the menu is used for calling the default settings and saving and recalling the submenu settings.




The General Settings section is used to configure the main multi carrier waveform.

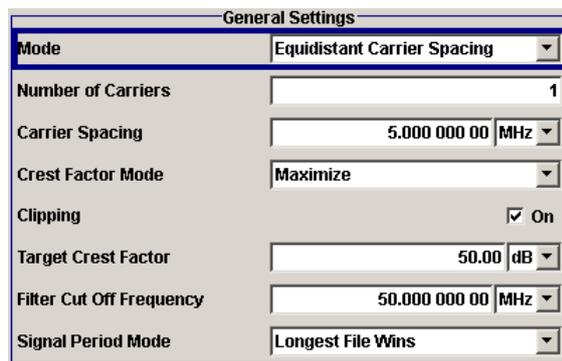

The buttons in the middle part of the menu open submenus for defining the carrier table. The carrier settings can be checked in the graphical "Carrier Graph" submenu.



The "Output Settings" section indicates the name, the size and the clock rate of the multi carrier waveform (after calculation).

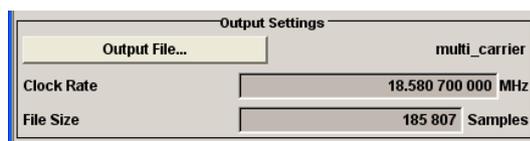

The buttons in the lower part of the menu activate creation and optionally loading of multi carrier waveform files into the main ARB menu.



Default Settings and State

The upper part of the dialog is used for calling the default settings and saving and recalling existing ARB multi carrier submenu settings.

Set to Default

Calls default settings. The values are shown in the following table.

Parameter	Value
Number of Carriers	1
Carrier Spacing	0 MHz
Crest Factor Mode	Off
Signal Period Mode	Longest file wins

Remote command:

[\[:SOURce<hw>\]:BB:ARbitrary:MCARrier:PRESet](#) on page 609

Save/Recall Frame

Calls the "Save/Recall" menu.

From the "Save/Recall" menu the "File Select" windows for saving and recalling the configurations of the ARB "Multi Carrier" submenu and the "File Manager" can be called.



Multi Carrier configurations are stored as files with the predefined file extension *.arb_multcarr. The file name and the directory they are stored in are user-definable.

The complete settings in the Multi Carrier menu are saved and recalled.

"Recall Multi Carrier Settings"

Opens the "File Select" window for loading a saved Multi Carrier configuration.

The configuration of the selected (highlighted) file is loaded by pressing the "Select" button.

"Save Multi Carrier Settings"

Opens the "File Select" window for saving the current Multi Carrier signal configuration.

The name of the file is specified in the "File name" entry field, the directory selected in the "Save Into" field. The file is saved by pressing the "Save" button.

The "Fast Save" checkbox determines whether the instrument performs an absolute or a differential storing of the settings. Enable this function to accelerate the saving process by saving only the settings with values different to the default ones. "Fast Save" is not affected by the "Preset" function.

"File Manager"

Calls the "File Manager".
The "File Manager" is used to copy, delete, and rename files and to create new directories.

Remote command:

[\[:SOURce<hw>\]:BB:ARbitrary:MCARrier:SETTing:CATalog?](#) on page 609

[\[:SOURce<hw>\]:BB:ARbitrary:MCARrier:SETTing:LOAD](#) on page 610

[\[:SOURce<hw>\]:BB:ARbitrary:MCARrier:SETTing:STORe:FAST](#) on page 610

[\[:SOURce<hw>\]:BB:ARbitrary:MCARrier:SETTing:STORe](#) on page 610

General Settings

The "General Settings" section is used to configure the Multi Carrier signal.

Mode

Selects the carrier frequency mode.

"Equidistant Carrier Spacing"

Sets an equidistant carrier spacing. The carrier frequency in the carrier table is not configurable.

"Arbitrary Carrier Frequency"

Enables you to specify the carrier frequency in the carrier table. Carrier spacing is irrelevant.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:MCARrier:CARRier:MODE` on page 598

Number of Carriers

Sets the number of carriers for the multi carrier waveform.

By default the multi carrier table lists 1 carrier. When the number of carriers is increased, the multi carrier table is extended by adding further lines at the end of the table. If these carrier already have been defined before, the settings are preset according to the former settings. Otherwise the parameters are preset with the default values.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:MCARrier:CARRier:COUNT` on page 597

Carrier Spacing

Sets the frequency spacing between adjacent carriers of the multi carrier waveform.

The carriers are arranged symmetrically around the RF carrier and the maximum carrier spacing is limited to:

"Carrier Spacing" = Total Baseband Bandwidth / ("Number of Carriers" - 1).

The total baseband bandwidth is 80 MHz.

Note: In order to avoid wrap-around problems, the effective "Carrier Spacing" might be slightly modified.

The "Carrier Spacing" is rounded in that way that the carrier closest to the center RF frequency shows no phase jump assuming that the carrier is unmodulated.

- For odd number of carriers:
RoundedCarrierSpacing=1/OutputSignalDuration* round(CarrierSpacing * OutputSignalDuration);
- For even number of carriers:
RoundedCarrierSpacing=2/OutputSignalDuration*round(0.5 *CarrierSpacing * OutputSignalDuration).

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:MCARrier:CARRier:SPACing` on page 598

Crest Factor Mode

Selects the mode for optimizing the crest factor by calculating the carrier phases.

The crest factor represents the ratio of the peak voltage value to the rms voltage value. The higher the crest factor and resulting dynamics of a signal, the greater the requirement for a power amplifier fed by the signal to be linear.

The following modes are available:

- | | |
|------------|--|
| "Off" | There is no automatic setting for minimizing or maximizing the crest factor. The "Phase" setting as defined in the carrier table is in use. |
| "Minimize" | The crest factor is minimized by internally calculating optimized carrier phases. The Phase setting displayed in the carrier table is invalid. |
| "Maximize" | The crest factor is maximized by internally calculating optimized carrier phases. The Phase setting displayed in the carrier table is invalid. |

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:MCARrier:CFACTOR:MODE` on page 601

Clipping

Switches baseband clipping on and off.

Clipping reduces the peak power of the resulting multi carrier signal according to the input parameter "Target Crest Factor".

The resulting clipped peak power is defined by sum of the the RMS level of the unclipped multi carrier signal and the input parameter "Target Crest Factor". Note that clipping reduces also the RMS level. Hence the resulting crest factor of the clipped signal is slightly above the "Target Crest Factor". In order to get the unclipped parts of the clipped multicarrier signal matched with the unclipped multicarrier signal, the RF output power should be reduced by the difference between resulting crest factor and "Target Crest Factor".

Remote command:

```
[ :SOURce<hw> ] :BB:ARbitrary:MCARrier:CLIPping[:STATe] on page 603
```

Target Crest Factor

Sets the value of the desired crest factor, if baseband clipping is enabled.

A "Target Crest Factor" above the crest factor of the unclipped multicarrier signal has no effect.

Remote command:

```
[ :SOURce<hw> ] :BB:ARbitrary:MCARrier:CLIPping:CFACTOR on page 602
```

Filter Cut Off Frequency

Sets the cut off frequency of the final lowpass filter, if baseband clipping is enabled.

When the cut off frequency is set as half of the output sample rate, a final lowpass filter improves the spectrum of the clipped multicarrier signal, but may also increase the resulting crest factor.

Remote command:

```
[ :SOURce<hw> ] :BB:ARbitrary:MCARrier:CLIPping:CUTOFF on page 602
```

Signal Period Mode

Selects the mode for calculating the resulting signal period of the multi carrier waveform. The carrier table provides an information button to obtain sample rate and file length data of each carrier.

The resulting period is always calculated for all carriers in the carrier table irrespective of their state (On/Off).

Note: Wrap-around and timing problems may occur when I/Q signals of different length are used. Thus, demodulation of a carrier may be difficult or even impossible. It is therefore recommended to consider the timing already when creating the input I/Q files or to adjust the signal duration to the carrier which is subsequently demodulated (in this case, the other carriers are for interfering the signal only). These problems do not arise with signals of the same standard (e.g. 3GPP).

The following modes are available:

"Longest File Wins"

The resulting signal period is defined by the longest I/Q file in the carrier table. Shorter I/Q files are periodically repeated.

"Shortest File Wins"

The resulting signal period is defined by the shortest I/Q file in the carrier table. Only the first part of longer I/Q files is used.

"User"

The signal period can be set by the user in the "Signal Period" field. Shorter I/Q files are repeated periodically, and only the first part of longer I/Q files is used.

"Least Common Multiple"

The output file duration is the least common multiple of all input file durations.

Remote command:

`[:SOURce<hw>]:BB:ARbitrary:MCARrier:TIME:MODE` on page 611

Signal Period

Sets the signal period in Signal Duration Mode "User". Shorter I/Q files are repeated periodically, and only the first part of longer I/Q files is used.

Remote command:

`[:SOURce<hw>]:BB:ARbitrary:MCARrier:TIME` on page 611

Power Reference

Defines the way the individual carriers in a composed multi carrier signal are leveled. The difference between the provided modes is especially important if signals with different crest factors are composed together into a multi carrier signal.

"RMS"

The individual carriers are leveled based on their RMS power and the configured "Carrier Gain".

Example:

A multi carrier signal is composed from two waveform files.

First carrier "Gain" = 0 dB

Second carrier "Gain" = -3 dB

In the resulting multi carrier signal, the *RMS power* of the second carrier signal will be 3 dB lower than the RMS power of the first carrier signal.

"Peak" The individual carriers are leveled based on their peak power and the configured "Carrier Gain".

Example:

A multi carrier signal is composed from two waveform files.

First carrier "Gain" = 0 dB

Second carrier "Gain" = -3 dB

In the resulting multi carrier signal, the *peak power* of the second carrier signal will be 3 dB lower than the peak power of the first carrier signal.

Example: Multi carrier signal composed of waveforms with different crest factor


A multi carrier signal is composed from two waveform files with the following characteristics:

3GPP FDD signals with the same "Sample Rate" but *different "Crest Factors"*.

"Peak" = 0 dBFS

"Carrier Gain" = 0 dB

	State	Carrier Freq [MHz]	Gain [dB]	Phase [deg]	Delay [ns]	File	Info	!!!
0	On	-5.000 000	0.00	0.00	0		e:/file1 Info...	
1	On	5.000 000	0.00	0.00	0		e:/file2 Info...	

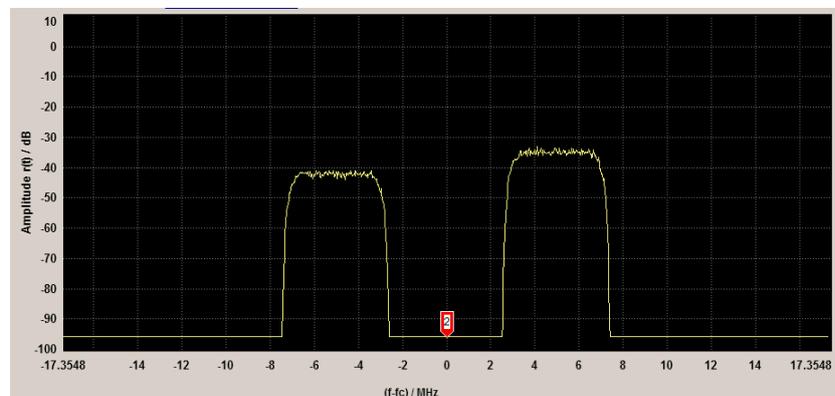

The Peak values of the carrier signals are equal, the RMS values are different.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:MCARrier:POWer:REference` on page 601

Carrier Table


Calls the table for configuring individual carriers. A selectable carrier range can be set with the aid of the optional "Carrier Table Assistant" (see "Muti Carrier Table" on page 419).

The multi carrier configuration can be checked with the aid of the "Carrier Graph".

Carrier Graph

Calls a graphical representation of the current multi carrier configuration in the frequency domain.

The height of the bars corresponds to the chosen gain of each individual carrier. The bandwidth of the carriers signals is indicated by the width of the bars.

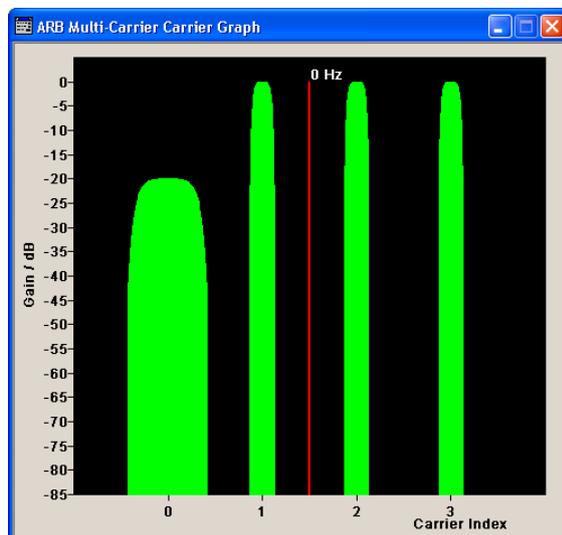

Output Settings

The "Output Settings" section in the multi carrier main menu indicates the name, the size and the clock rate of the currently calculated multi carrier output file.

File

Opens the "File" menu, where the output file name of the multi carrier waveform which has to be calculated can be entered.

The multi carrier waveform is calculated and saved under this name by clicking the "Create" or "Create and Load" button.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:MCARrier:OFILe` on page 608

Clock Rate

Displays the resulting sample rate at which the multi carrier waveform is output by the arbitrary waveform generator. The output clock rate depends on the number of carriers, carrier spacing and input sample rate of the leftmost or rightmost carriers.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:MCARrier:CLOCK?` on page 604

File Size

Displays the resulting number of samples of the multi carrier waveform.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:MCARrier:SAMPles?` on page 609

Create

Creates a new multi carrier waveform defined by the multi carrier table and General Setting entries.

This multi carrier waveform is saved with the file name specified in "Output File". If no file name is specified, the File Manager opens so that the file name can be entered. As with normal waveforms, the file extension is *.wv.

Depending on the configuration of the multi carrier waveform, calculation may take some time. A panel with a progress bar and an "Abort" button appears during the calculation process.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:MCARrier:CREate` on page 604

Create and Load

Creates a new multi carrier waveform defined by the multi carrier table and General Setting entries and loads it subsequently in the "ARB" main menu.

This multi carrier waveform is saved with the file name specified in "Output File". If no file name is specified, the File Manager opens so that the file name can be entered. As with normal waveforms, the file extension is *.wv.

Depending on the configuration of the multi carrier waveform, calculation may take some time. A panel with a progress bar and an "Abort" button appears during the calculation process.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:MCARrier:CLoad` on page 603

Muti Carrier Table

The "Multi Carrier Table" manu is oped by means of the "Carrier Table" button in the middle part of the Multi Carrier Waveforms menu. The carrier settings can be checked in the graphical "Carrier Graph" submenu.

The "Carrier Table Assistant" section can be used to set a selectable carrier range. This section serves as a optional mean to quickly set up a multi carrier scenario within a specified carrier range.



	State	Carrier Freq [MHz]	Gain [dB]	Phase [deg]	Delay [ns]	File	Info	!!!
0	On	-7.500 000	0.00	0.00		0 \Lists\Arb\ArbMccwDummy	Info...	
1	On	-2.500 000	0.00	0.00		0 \Lists\Arb\ArbMccwDummy	Info...	
2	On	2.500 000	0.00	0.00		0 \Lists\Arb\ArbMccwDummy	Info...	
3	Off	7.500 000	0.00	0.00		0 \Lists\Arb\ArbMccwDummy	Info...	

Carrier Table Assistant

Number of Carriers

Defines the number of carriers of the multi carrier waveform.

This parameter is identical to that in the "General Setting" section.

Remote command:

[\[:SOURce<hw>\]:BB:ARbitrary:MCARrier:CARRier:COUNT](#) on page 597

Carrier State

Switches the carriers in the range "Carrier Start" to "Carrier Stop" on/off.

Remote command:

[\[:SOURce<hw>\]:BB:ARbitrary:MCARrier:EDIT:CARRier:STATE](#) on page 608

Carrier Start

Defines the start index of the carrier range to which the assistant settings are intended to apply.

Remote command:

[\[:SOURce<hw>\]:BB:ARbitrary:MCARrier:EDIT:CARRier:START](#) on page 608

Carrier Stop

Defines the stop index of the carrier range to which the assistant settings are intended to apply.

Remote command:

[\[:SOURce<hw>\]:BB:ARbitrary:MCARrier:EDIT:CARRier:STOP](#) on page 608

Gain Start

Sets the gain of the carrier marked by "Carrier Start".

Remote command:

[\[:SOURce<hw>\]:BB:ARbitrary:MCARrier:EDIT:CARRier:POWER\[:START\]](#)
on page 607

Gain Step

Sets the step width that is used to increment the gain

The resulting carrier gain in the carrier table equals:

GainStart + n* Gain Step

where n ranges from 0 to (Carrier Stop - Carrier Start).

Remote command:

```
[ :SOURce<hw> ] :BB:ARbitrary:MCARrier:EDIT:CARRier:POWer:STEP  
on page 607
```

Phase Start

Sets the phase of the carrier marked by "Carrier Start".

Remote command:

```
[ :SOURce<hw> ] :BB:ARbitrary:MCARrier:EDIT:CARRier:PHASe [ :START ]  
on page 607
```

Phase Step

Sets the step width that is used to increment the phase.

The resulting phase in the carrier table equals:

PhaseStart + n* PhaseStep

where n ranges from 0 to (Carrier Stop – Carrier Start)

Remote command:

```
[ :SOURce<hw> ] :BB:ARbitrary:MCARrier:EDIT:CARRier:POWer:STEP  
on page 607
```

Delay Start

Sets the delay of the carrier marked by "Carrier Start".

Remote command:

```
[ :SOURce<hw> ] :BB:ARbitrary:MCARrier:EDIT:CARRier:DELay [ :START ]  
on page 605
```

Delay Step

Sets the step width that is used to increment the delay

The resulting delay in the carrier table equals:

DelayStart + n* DelayStep

where n ranges from 0 to (Carrier Stop – Carrier Start).

Remote command:

```
[ :SOURce<hw> ] :BB:ARbitrary:MCARrier:EDIT:CARRier:DELay:STEP  
on page 605
```

Input Waveform File

Calls the "File" menu for selecting the inputfile with the I/Q signal to be modulated onto all carriers of the selected carrier range.

Remote command:

```
[ :SOURce<hw> ] :BB:ARbitrary:MCARrier:EDIT:CARRier:FILE on page 606
```

Apply Assistant Settings

Transfer the assistant settings to the carrier table.

Remote command:

```
[ :SOURce<hw> ] :BB:ARbitrary:MCARrier:EDIT:CARRier:EXECute  
on page 605
```

Carrier Table

The table displays the settings of all available carriers. Previously applied assistant settings can be further refined. The number of lines corresponds to the number of carriers.

Note: The phase/deg settings are only valid if optimization of the crest factor is disabled ("Crest Factor Mode" = Off).

	State	Carrier Freq [MHz]	Gain [dB]	Phase [deg]	Delay [ns]	File	Info	!!!
0	On	-7.500 000	0.00	0.00		0 \Lists\Arb\ArbMccwDummy	Info...	
1	On	-2.500 000	0.00	0.00		0 \Lists\Arb\ArbMccwDummy	Info...	
2	On	2.500 000	0.00	0.00		0 \Lists\Arb\ArbMccwDummy	Info...	
3	Off	7.500 000	0.00	0.00		0 \Lists\Arb\ArbMccwDummy	Info...	

No ← Carrier Table

Indicates the carrier index ranging from 0 to (number of carriers -1).

Individual carriers can be set using the remote control commands by specifying the index in the parameter CARR.

State ← Carrier Table

Switches On/Off a carrier.

Remote command:

[\[:SOURCE<hw>\]:BB:ARbitrary:MCARrier:CARRier<ch>:STATE](#) on page 601

Carrier Freq [MHz] ← Carrier Table

Sets the carrier frequency.

Note: The carrier frequency can only be set in "Arbitrary Carrier frequency" mode. For "Equidistant Carrier Spacing", the carrier spacing is determined automatically.

Remote command:

[\[:SOURCE<hw>\]:BB:ARbitrary:MCARrier:CARRier<ch>:FREQuency](#)

on page 600

Gain ← Carrier Table

Sets the gain of a carrier.

Remote command:

[\[:SOURCE<hw>\]:BB:ARbitrary:MCARrier:CARRier<ch>:POWER](#) on page 600

Phase ← Carrier Table

Sets the starting phase of a carrier.

Remote command:

[\[:SOURCE<hw>\]:BB:ARbitrary:MCARrier:CARRier<ch>:PHASe](#) on page 600

Delay ← Carrier Table

Sets the starting delay of a carrier.

Remote command:

[\[:SOURCE<hw>\]:BB:ARbitrary:MCARrier:CARRier<ch>:DELay](#) on page 599

File ← Carrier Table

Calls the "File" menu for selecting the input file with the I/Q signal to be modulated onto the carrier.

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:MCARrier:CARRIER<ch>:FILE` on page 599

Info ← Carrier Table

Indicates the sample rate, number of I/Q value pairs (number of samples), and the resulting signal period of the selected I/Q input file.

Remote command:


n.a.

!!! ← Carrier Table

Indicates an occurred conflict by a means of a red LED. A conflict arises when the carriers overlap.

Example:

A conflict is indicated both in the table, as well as in the graph, as shown in the following figures:

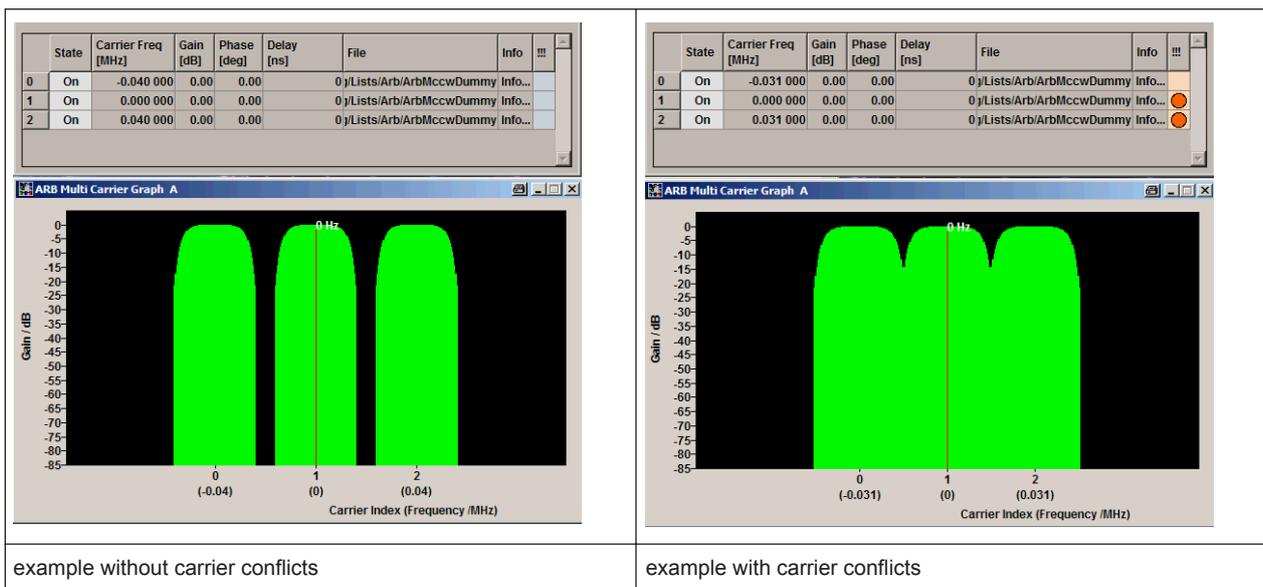

Remote command:

`[:SOURce<hw>] :BB:ARbitrary:MCARrier:CARRIER<ch>:CONFLICT?`

on page 599

Typical Applications for Multi Carrier Waveforms

High Power Amplifiers of multi carrier base stations face increased requirements in terms of linearity and acceptable intermodulation performance.

A standard transmitter test might be quickly setup by the following instructions:

1. Load a standardized 3GPP downlink test model, e.g. "Test Model 1_16" and set State to "ON".
2. Create a 3GPP Testmodel ARB file by activating "Generate Waveform File".
3. Setup a multi carrier scenario with 4 carriers and a carrier spacing of 5 MHz.
4. Apply the input file containing the previously generated 3GPP testmodel to all 4 carriers.

5.8.4 Multi Carrier Continuous Wave

The R&S SMJ can generate a Multi Carrier CW signal with user-definable offset from carrier, based on a selection of up to 8192 unmodulated carriers. Each carrier can be separately set and switched on, or multiple carriers can be jointly configured. Automatic start phase setting is provided in order to minimize the crest factor.

Multi Carrier CW signals can be very easily configured as broadband test signals and used for such purposes as receiver tests.


To access the dialog for setting a Multi Carrier CW signal, select "Baseband > Multi Carrier CW" or use MENU key under "Baseband".




5.8.4.1 Multi Carrier CW User Interface

The "Multi Carrier CW" dialog is divided into the following sections.


The upper part of the menu is used for powering up the Multi Carrier CW and calling the default settings.

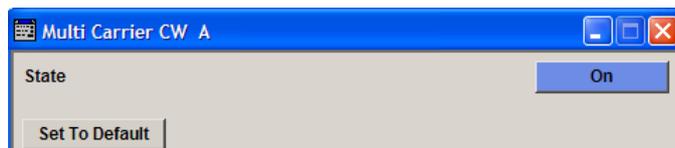

The "Carrier Setup" section is used to configure the Multi Carrier CW signal.

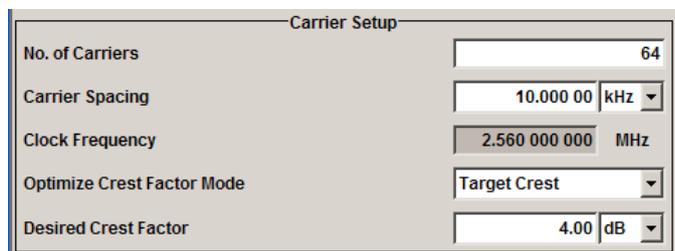

The "Table Setup Assistant" section can be used to set a selectable carrier range.

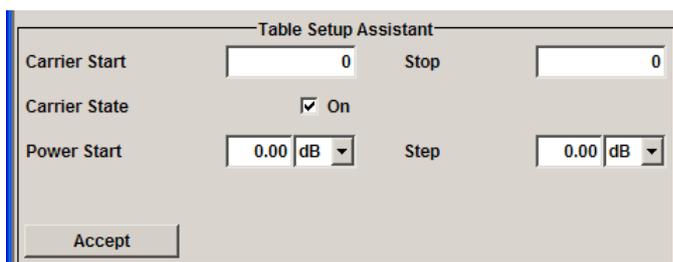

The buttons in the lower part of the menu open dialogs for defining carrier tables and for configuring markers, triggers and clocks.

The carrier settings can be visualized in the graphical "Carrier Graph" dialog.



General Settings for Multi Carrier CW

The upper part of the menu is used for powering up the Multi Carrier CW signal and calling the default settings.

State

Enables/disables the Multi Carrier CW.

Switching on this standard turns off all the other digital standards and digital modulation modes.

Since Multi Carrier CW signals are computed in arbitrary waveform mode, changes to the settings of individual carriers are not adopted until the Accept button is pressed. This applies to the settings in the "Table Setup Assistant" section and the "Carrier Table" dialog.

Remote command:

[:SOURce<hw>] :BB:MCCW:STATE on page 672

Set to Default

Calls default settings. The values are shown in the following table.

Parameter	Value
State	Not affected by "Set to Default"
Carrier Setup	
Number of Carriers	64
Carrier Spacing	10 kHz
Optimize Crest Factor	Chirp
Desired Crest Factor	3 dB

Parameter	Value
Trigger	
Mode	Auto
Source	Internal
Ext. Delay	0
Ext. Inhibit	0
Marker	
Channel 1...4	Restart
Clock	
Source	Internal
Multi Channel Setup	
Start Carrier	0
Stop Carrier	0
State	ON
Power	0 dB
Power Step	0 dB
Initial Phase	0°
Phase Step	0°
Channel Setup	
State	ON
Phase	0°
Power	0 dB

Remote command:

[:SOURce<hw>] :BB:MCCW:PRESet on page 673

Carrier Setup

The "Carrier Setup" section is used to configure the Multi Carrier CW.

Number of Carriers

Sets the number of carriers for the Multi Carrier CW signal.

By default the multi carrier table already lists 64 carriers that are preset to the settings State = ON, Power = 0 dB, Phase = 0°.

When entering fewer carriers than the table contains, the approach is generally to delete the superfluous entries from the table, and when entering more carriers than the table contains the missing entries are usually added at the end of the table.

Remote command:

[:SOURce<hw>] :BB:MCCW:CARRier:COUNT on page 673

Carrier Spacing

Sets the spacing between carriers for the Multi Carrier CW signal.

The carriers are arranged symmetrically around the HF carrier.

The total bandwidth is calculated as follow:

Total Bandwidth = ("Number of Carriers" - 1) * "Carrier Spacing"

The result must not exceed the system bandwidth of the instrument (see data sheet).

Remote command:

[\[:SOURce<hw>\]:BB:MCCW:CARRier:SPACing](#) on page 676

Clock Frequency

Displays the clock rate at which the multi carrier signal is output by the arbitrary waveform generator. The output clock rate depends on the number of carriers and the selected carrier offset.

The value indicates the resolution during the marker generation.

Remote command:

[\[:SOURce<hw>\]:BB:MCCW:CLOCK?](#) on page 678

Optimize Crest Factor Mode

Selects the mode for automatically minimizing the crest factor.

The carrier start phases are automatically set to this.

The crest factor represents the ratio of the peak voltage value to the rms voltage value. The higher the crest factor and resulting dynamics of a signal, the greater the requirement for a power amplifier fed by the signal to be linear.

A very high crest factor arises when the carriers have an identical start phase, since the carriers are periodically superposed and very high peak voltages occur in relation to the rms voltage values.

Methods of reducing the crest factor differ with regard to both the optimization achievable and the time required for computation.

"Off"	There are no automatic settings for minimizing the crest factor. The "Phase" setting has an effect.
"Chirp"	Very rapid crest factor optimization regardless of the number of carriers. A minimal crest factor of < 3 dB is only obtained for multi carrier signals in which all carriers are switched on and the power of the carriers is identical. In a configuration which differs from this, the achievable crest factor is worse.
"Target Crest"	Optimization of the crest factor to a desired value for all carrier configurations. The optimization time depends on the number of carriers and the desired crest factor. Computation time increases only when the number of carriers exceeds 256 and the crest factor is below 4 dB. The desired value can be entered in "Desired Crest Factor". Note: Optimization can be cancelled at any time, and the current value being displayed at that moment is then used.

Remote command:

[\[:SOURce<hw>\]:BB:MCCW:CFACTOR:MODE](#) on page 678

Desired Crest Factor

Enters the desired crest factor.

This is only possible when the optimization "Target Crest" has been selected.

Remote command:

`[:SOURce<hw>] :BB:MCCW:CFACTor` on page 677

Table Setup Assistant

The "Table Setup Assistant" section can be used to set a selectable carrier range. The carrier table can be edited in the "Carrier Table" dialog.

Carrier Start

Defines the start index of the carrier range to which the following settings are intended to apply.

Remote command:

`[:SOURce<hw>] :BB:MCCW:EDIT:CARRier:STARt` on page 681

Carrier Stop

Defines the stop index of the carrier range to which the following settings are intended to apply.

Remote command:

`[:SOURce<hw>] :BB:MCCW:EDIT:CARRier:STOP` on page 681

Carrier State

Switches the carriers in the carrier range on/off.

Remote command:

`[:SOURce<hw>] :BB:MCCW:EDIT:CARRier:STATe` on page 681

Power Start

Sets the power of the starting carrier.

Remote command:

`[:SOURce<hw>] :BB:MCCW:EDIT:CARRier:POWer[:STARt]` on page 681

Power Step

Sets the width of the step with which the power will be changed from carrier to carrier.

The carrier power that is set with **Power + n* Power Step** must be within the valid value range -80 dB to 0 dB.

Remote command:

`[:SOURce<hw>] :BB:MCCW:EDIT:CARRier:POWer:STEP` on page 680

Phase Start

Sets the phase of the starting carrier. This setting is only available for "Optimize Crest Factor Mode" = Off.

Remote command:

`[:SOURce<hw>] :BB:MCCW:EDIT:CARRier:PHASe[:STARt]` on page 680

Phase Step

Sets the width of the step with which the phase will be changed from carrier to carrier.

The phase that is set with **Phase + n* Phase Step** must be within the valid value range 0° to 360°.

This setting is only available for "Optimize Crest Factor Mode" = Off.

Remote command:

`[:SOURce<hw>] :BB:MCCW:EDIT:CARRier:PHASe:STEP` on page 679

Accept

Adopts the carrier range setting into the table ("Carrier Table").

Remote command:

`[:SOURce<hw>] :BB:MCCW:EDIT:CARRier:EXECute` on page 679

Carrier Table and Carrier Graph

The lower part of the menu is used to open submenus for configuring carrier tables and for setting triggers, markers and clocks.

Carrier Table

Calls the table for configuring individual carriers. This configuration can be checked with the aid of the "Carrier Graph".

	State	Power / dB	Phase / deg
0	On	0.00	0.00
1	On	0.00	0.00
2	On	0.00	0.00
3	Off	0.00	0.00
4	Off	0.00	0.00
5	Off	0.00	0.00
6	On	0.00	0.00
7	On	0.00	0.00
8	On	0.00	0.00

Accept

The table displays the settings of all available carriers. Carriers in the On state are highlighted. All carrier parameters can be edited in the table.

The Multi Carrier CW signal is only computed when the "Accept" button is pressed. Whenever the table contains settings that have not yet been adopted with the "Accept" button, the background is yellow.

Note: The phase/deg settings are only valid if optimization of the crest factor is disabled ("Optimize Crest Factor" = Off).

- "No." This is the carrier index.
- "State" Switch a carrier on/off
- "Power" Sets the power of a carrier.
- "Phase" Sets the starting phase of a carrier.
- "Accept" Transfer the settings in the carrier table into the instrument.

Remote command:

[:SOURce<hw>] :BB:MCCW:CARRier:LIST:STATe on page 675

[:SOURce<hw>] :BB:MCCW:CARRier:STATe on page 677

[:SOURce<hw>] :BB:MCCW:CARRier:LIST:POWer on page 674

[:SOURce<hw>] :BB:MCCW:CARRier:POWer on page 676


[:SOURce<hw>] :BB:MCCW:CARRier:LIST:PHASe on page 673

[:SOURce<hw>] :BB:MCCW:CARRier:PHASe on page 675

Carrier Graph

Calls a graphical representation of the chosen carrier configuration.

The carriers are on the X-axis and the colored bars represent those carriers which are in the On state. Power is on the Y-axis, and the height of the bars corresponds to the chosen power of each individual carrier.

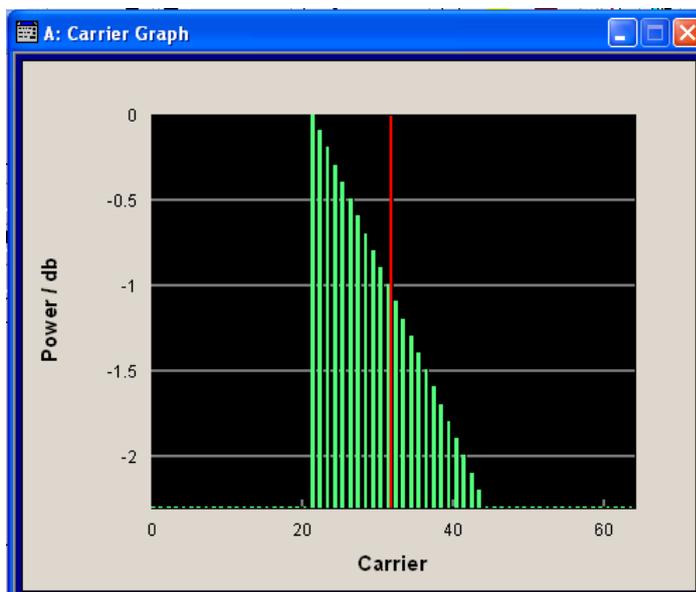

Remote command:

n.a.

Trigger/Marker

Calls the "Trigger/Marker" dialog (see "Trigger/Marker/Clock Settings" on page 431).

This dialog is used to select the trigger source, set the time delay on an external trigger signal and configure the marker output signals.

Remote command:

n.a.

Clock

Calls the "Clock" dialog for selecting the clock source (see "Clock Settings" on page 436).


Remote command:

n.a.


Trigger/Marker/Clock Settings

To access this dialog, select "Main Menu > Trigger/Marker".


The "Trigger In" section is where the trigger for the signal is set. Various parameters will be provided for the settings, depending on which trigger source - internal or external - is selected. The current status of signal generation ("Running" or "Stopped") is indicated for all trigger modes.

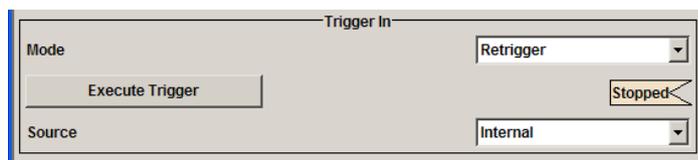


The "Marker Mode" section is where the marker signals at the MARKER output connectors are configured.

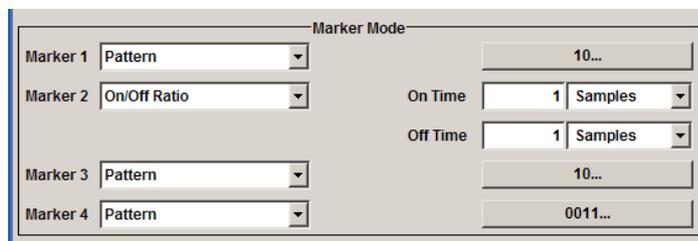

The "Marker Delay" section is where a marker signal delay can be defined, either without restriction or restricted to the dynamic section, i.e., the section in which it is possible to make settings without restarting signal and marker generation.

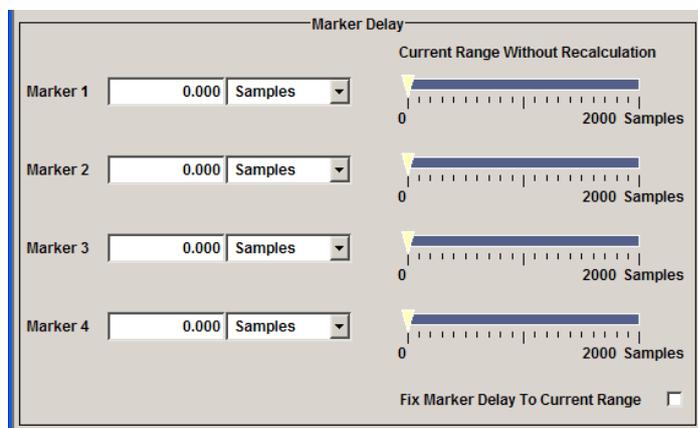

 The "Clock Settings" section is where the clock source is selected and - in the case of an external source - the clock type.



The buttons in the last section lead to submenu for general trigger, clock and mapping settings.



Trigger In

The "Trigger In" section is where the trigger for the signal is set. Various parameters will be provided for the settings, depending on which trigger source - internal or external - is selected. The current status of signal generation ("Running" or "Stopped") is indicated for all trigger modes.

Trigger Mode

Selects trigger mode.

The trigger mode determines the effect of a trigger on the signal generation.

"Auto"	The signal is generated continuously.
"Retrigger"	The signal is generated continuously. A trigger event (internal or external) causes a restart.
"Armed_Auto"	The signal is generated only when a trigger event occurs. Then the signal is generated continuously. Button "Arm" stops signal generation. A subsequent trigger event (internal with "Execute Trigger" or external) causes a restart.
"Armed_Retrigger"	The signal is generated only when a trigger event occurs. Then the signal is generated continuously. Every subsequent trigger event causes a restart. Button "Arm" stops signal generation. A subsequent trigger event (internal with "Execute Trigger" or external) causes a restart.
"Single"	The signal is generated only when a trigger event occurs. Then the signal is generated once to the length specified at "Signal Duration". Every subsequent trigger event (internal with "Execute Trigger" or external) causes a restart.

Remote command:

[\[:SOURce<hw>\]:BB:MCCW\[:TRIGger\]:SEquence](#) on page 686

Signal Duration

Defines the length of the signal sequence to be output in the "Single" trigger mode. The unit of the entry is defined under "Signal Duration Unit". It is then possible to output deliberately just part of the signal, an exact sequence of the signal, or a defined number of repetitions of the signal.

Remote command:

[\[:SOURce<hw>\]:BB:MCCW:TRIGger:SLENgth](#) on page 685

Running/Stopped

Displays the status of signal generation for all trigger modes. This display appears only when signal generation is enabled ("State" On).

"Running"	The modulation signal is generated; a trigger was (internally or externally) initiated in triggered mode. If "Armed_Auto" and "Armed_Retrigger" have been selected, generation of signals can be stopped with the "Arm" button. A new trigger (internally with "Execute Trigger" or externally) causes a restart.
"Stopped"	The signal is not generated, and the instrument waits for a trigger event (internal or external).

Remote command:

[\[:SOURce<hw>\]:BB:MCCW:TRIGger:RMODE?](#) on page 684

Arm

Stops signal generation. This button appears only with "Running" signal generation in the "Armed_Auto" and "Armed_Retrigger" trigger modes.

Signal generation can be restarted by a new trigger (internally with "Execute Trigger" or externally).

Remote command:

[\[:SOURce<hw>\]:BB:MCCW:TRIGger:ARM:EXECute](#) on page 682

Execute Trigger

Executes trigger manually. A manual trigger can be executed only when an internal trigger source and a trigger mode other than "Auto" have been selected.

Remote command:

[\[:SOURce<hw>\]:BB:MCCW:TRIGger:EXECute](#) on page 682

Trigger Source

Selects trigger source. This setting is effective only when a trigger mode other than "Auto" has been selected.

"Internal"	The trigger event is executed by "Execute Trigger".
"External"	The trigger event is executed with the aid of the active edge of an external trigger signal. The trigger signal is supplied via the TRIGGER 1/2 connector. The polarity, the trigger threshold and the input impedance of the trigger input can be set in the "Global Trigger/Clock Settings" dialog.

Remote command:

[\[:SOURce<hw>\]:BB:MCCW:TRIGger:SOURce](#) on page 685

Sync. Output to External Trigger


(enabled for Trigger Source External)

Enables/disables output of the signal synchronous to the external trigger event.

"On"

Corresponds to the default state of this parameter.


The signal calculation starts simultaneously with the external trigger event but because of the instrument's processing time the first samples are cut off and no signal is outputted. After elapsing of the internal processing time, the output signal is synchronous to the trigger event.

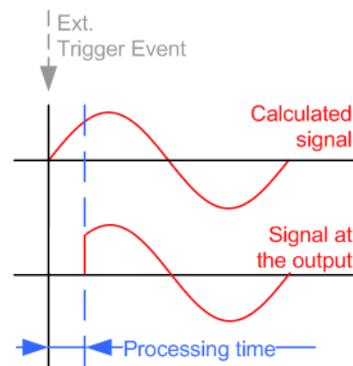

"Off"

The signal output begins after elapsing of the processing time and starts with sample 0, i.e. the complete signal is outputted.

This mode is recommended for triggering of short signal sequences with signal duration comparable with the processing time of the instrument.

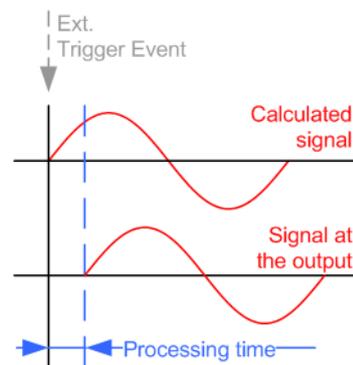

Remote command:

`[:SOURce<hw>] :BB:MCCW:TRIGger:EXTernal:SYNChronize:OUTPut`
on page 683

Trigger Delay

Sets the trigger signal delay in samples on external triggering.

This enables the R&S SMJ to be synchronized with the device under test or other external devices.

Remote command:

`[:SOURce<hw>] :BB:MCCW:TRIGger [:EXTernal<ch>] :DELay` on page 685

Trigger Inhibit

Sets the duration for inhibiting a new trigger event subsequent to triggering. The input is to be expressed in samples.

In the "Retrigger" mode, every trigger signal causes signal generation to restart. This restart is inhibited for the specified number of samples.

This parameter is only available on external triggering.

Remote command:

`[:SOURce<hw>] :BB:MCCW:TRIGger [:EXTernal<ch>] :INHibit` on page 686

Marker Mode

Provides the settings necessary to define the marker output signal for synchronizing external instruments.

Marker Mode

Marker configuration for up to 4 marker channels. The settings are used to select the marker mode defining the shape and periodicity of the markers. The contents of the dialog change with the selected marker mode; the settings are self-explanatory.

All regular marker signals are described in "[Marker Modes](#)" on page 324.

"Restart" A marker signal is generated at the start of the waveform.

Remote command:

`[:SOURce<hw>] :BB:MCCW:TRIGger:OUTPut<ch>:MODE` on page 689

`[:SOURce<hw>] :BB:MCCW:TRIGger:OUTPut<ch>:PULSe:DIVider` on page 690

`[:SOURce<hw>] :BB:MCCW:TRIGger:OUTPut<ch>:PULSe:FREQuency?`
on page 691

`[:SOURce<hw>] :BB:MCCW:TRIGger:OUTPut<ch>:PATtern` on page 690

`[:SOURce<hw>] :BB:MCCW:TRIGger:OUTPut<ch>:ONTime` on page 689

`[:SOURce<hw>] :BB:MCCW:TRIGger:OUTPut<ch>:OFFTime` on page 689

Marker Delay

The delay of the signals on the MARKER outputs is set in the "Marker Delay" section.

Marker x Delay

Enters the delay between the marker signal at the marker outputs and the start of the frame or slot.

The input is expressed as a number of symbols. If the setting "Fix marker delay to dynamic range" is enabled, the setting range is restricted to the dynamic range. In this range the delay of the marker signals can be set without restarting the marker and signal.

Remote command:

`[:SOURce<hw>] :BB:MCCW:TRIGger:OUTPut<ch>:DELay` on page 688

Current Range without Recalculation

Displays the dynamic range within which the delay of the marker signals can be set without restarting the marker and signal.

The delay can be defined by moving the setting mark.

Remote command:

`[:SOURce<hw>] :BB:MCCW:TRIGger:OUTPut<ch>:DELaY:MINimum?`

on page 688

`[:SOURce<hw>] :BB:MCCW:TRIGger:OUTPut<ch>:DELaY:MAXimum?`

on page 688

Fix marker delay to current range

Restricts the marker delay setting range to the dynamic range. In this range the delay can be set without restarting the marker and signal.

Remote command:

`[:SOURce<hw>] :BB:MCCW:TRIGger:OUTPut:DELaY:FIXed` on page 687

Clock Settings

The Clock Settings is used to set the clock source and a delay if required.

Clock Source

Selects the clock source.

"Internal" The internal clock reference is used to generate the symbol clock.

"External" The external clock reference is fed in as the symbol clock or multiple thereof via the CLOCK connector.
The polarity of the clock input can be changed with the aid of "Global Trigger/Clock Settings".

Remote command:

`[:SOURce<hw>] :BB:MCCW:CLOCK:SOURCE` on page 692

Clock Mode

Enters the type of externally supplied clock.

"Sample" A sample clock is supplied via the CLOCK connector.

"Multiple Sam- A multiple of the sample clock is supplied via the CLOCK connector;
ple" the sample clock is derived internally from this.

Remote command:

`[:SOURce<hw>] :BB:MCCW:CLOCK:MODE` on page 691

Clock Multiplier

Enters the multiplication factor for clock type "Multiple".

Remote command:

`[:SOURce<hw>] :BB:MCCW:CLOCK:MULTiplier` on page 691

Measured External Clock

Provided for permanent monitoring of the enabled and externally supplied clock signal.

Remote command:

`CLOCK:INPut:FREQuency?`

Global Settings

The buttons in this section lead to dialogs for general trigger, clock and mapping settings.

Global Trigger/Clock Settings

Calls the "Global Trigger/Clock/Input Settings" dialog.

This dialog is used among other things for setting the trigger threshold, the input impedance and the polarity of the clock and trigger inputs.

The parameters in this dialog affect all digital modulations and standards, and are described in chapter "Global Trigger/Clock/Input Settings" in the Operating Manual.

User Marker / AUX I/O Settings

Calls the "User Marker AUX I/O Settings" dialog, used to map the connector on the rear of the instruments.

See also "User Marker / AUX I/O Settings" in the Operating Manual.

6 Remote Control Basics

This chapter provides basic information on operating an instrument via remote control.

6.1 Remote Control Interfaces and Protocols

The instrument supports different interfaces for remote control. The following table gives an overview.

Table 6-1: Remote control interfaces and protocols

Interface	Protocols, VISA ^{*)} address string	Remarks
Local Area Network (LAN)	Protocols: <ul style="list-style-type: none"> VXI-11 VISA^{*)} address string: TCP/IP::host address[:: LAN device name][::INSTR] socket communication (Raw Ethernet, simple telnet) VISA^{*)} address string: TCP/IP::host address[:: LAN device name>::<port>:: SOCKET 	A LAN connector is located on the front or rear panel of the instrument, or both. The interface is based on TCP/IP and supports various protocols. For a description of the protocols refer to: <ul style="list-style-type: none"> Chapter 6.1.3.2, "VXI-11 Protocol", on page 443 Chapter 6.1.3.3, "Socket Communication", on page 443
GPIB (IEC/IEEE Bus Interface)	VISA ^{*)} address string: GPIB::primary address[::INSTR] (no secondary address)	Optional GPIB bus interfaces according to standard IEC 625.1/IEEE 488.1 are located on the rear panel of the instrument. For a description of the interface refer to Chapter 6.1.4, "GPIB Interface (IEC/IEEE Bus Interface)", on page 444. Note: Within this interface description, the term GPIB is used as a synonym for the IEC/IEEE bus interface.

^{*)} VISA is a standardized software interface library providing input and output functions to communicate with instruments. A VISA installation on the controller is a prerequisite for remote control over LAN (when using VXI-11 or HiSLIP protocol), USB and serial interface. For remote control via socket communication VISA installation is optional. For more information, see Chapter 6.1.1, "VISA Libraries", on page 440.



Rohde & Schwarz provides the standardized I/O software library R&S VISA for communication via TCP/IP (LAN: HiSLIP, VXI-11 and raw socket), USB (USBTMC) or serial interfaces.

R&S VISA is available for download at the Rohde & Schwarz website <http://www.rohde-schwarz.com/rsvisa>.

How to configure the remote control interfaces, see Chapter 6.2, "Starting a Remote Control Session", on page 446.

SCPI (Standard Commands for Programmable Instruments)

SCPI commands - messages - are used for remote control. Commands that are not taken from the SCPI standard follow the SCPI syntax rules. The instrument supports the SCPI version 1999. The SCPI standard is based on standard IEEE 488.2 and aims

at the standardization of device-specific commands, error handling and the status registers. The tutorial "Automatic Measurement Control - A tutorial on SCPI and IEEE 488.2" from John M. Pieper (R&S order number 0002.3536.00) offers detailed information on concepts and definitions of SCPI.

Tables provide a fast overview of the bit assignment in the status registers. The tables are supplemented by a comprehensive description of the status registers.

6.1.1 VISA Libraries

VISA is a standardized software interface library providing input and output functions to communicate with instruments. Thus, you can configure the interface without having to adjust the application program to the used interface. The I/O channel (LAN or TCP/IP, USB, GPIB,...) is selected at initialization time by means of the channel-specific address string ("VISA resource string"), or by an appropriately defined VISA alias (short name). See also [Chapter 6.1, "Remote Control Interfaces and Protocols"](#), on page 439 for an overview.

Instrument access via VXI-11 or HiSLIP protocols is achieved from high level programming platforms using VISA as an intermediate abstraction layer. VISA encapsulates the low-level VXI or GPIB function calls and thus makes the transport interface transparent for the user.

A VISA installation is a prerequisite for remote control using the following interfaces:

- LAN Interface using [Chapter 6.1.3, "LAN Interface"](#), on page 441
- LAN interface using [Chapter 6.1.3.2, "VXI-11 Protocol"](#), on page 443
- [Chapter 6.1.4, "GPIB Interface \(IEC/IEEE Bus Interface\)"](#), on page 444

Instrument access via the LAN socket protocol or GPIB connections can be operated both, with or without the VISA library.

See also [Chapter 6.1.3.3, "Socket Communication"](#), on page 443 and [Chapter 6.1.4, "GPIB Interface \(IEC/IEEE Bus Interface\)"](#), on page 444.

For more information about VISA refer to the user documentation.

6.1.2 Messages

The messages transferred on the data lines are divided into the following categories:

- Interface messages
Interface messages are transmitted to the instrument on the data lines, with the attention line being active (LOW). They are used to communicate between the controller and the instrument. Interface messages can only be sent by instruments that have GPIB bus functionality. For details see the sections for the required interface.
- Instrument messages
Instrument messages are employed in the same way for all interfaces, if not indicated otherwise in the description. Structure and syntax of the instrument messages are described in [Chapter 6.3, "SCPI Command Structure"](#), on page 462. A detailed

description of all messages available for the instrument is provided in the chapter "Remote Control Commands".

There are different types of instrument messages, depending on the direction they are sent:

- Commands
- Instrument responses

Commands

Commands (program messages) are messages the controller sends to the instrument. They operate the instrument functions and request information. The commands are subdivided according to two criteria:

- According to the effect they have on the instrument:
 - **Setting commands** cause instrument settings such as a reset of the instrument or setting the frequency.
 - **Queries** cause data to be provided for remote control, e.g. for identification of the instrument or polling a parameter value. Queries are formed by directly appending a question mark to the command header.
- According to their definition in standards:
 - **Common commands**: their function and syntax are precisely defined in standard IEEE 488.2. They are employed identically on all instruments (if implemented). They refer to functions such as management of the standardized status registers, reset and self-test.
 - **Instrument control commands** refer to functions depending on the features of the instrument such as frequency settings. Many of these commands have also been standardized by the SCPI committee. These commands are marked as "SCPI confirmed" in the command reference chapters. Commands without this SCPI label are device-specific; however, their syntax follows SCPI rules as permitted by the standard.

Instrument responses

Instrument responses (response messages and service requests) are messages the instrument sends to the controller after a query. They can contain measurement results, instrument settings and information on the instrument status.

6.1.3 LAN Interface

To be integrated in a LAN, the instrument is equipped with a LAN interface, consisting of a connector, a network interface card and protocols. For remote control via a network, the PC and the instrument must be connected via the LAN interface to a common network with TCP/IP network protocol. They are connected using a commercial RJ45 cable. The TCP/IP network protocol and the associated network services are preconfigured on the instrument. Software for instrument control and (for specified protocols only) the VISA program library must be installed on the controller.

VISA library

Instrument access via VXI-11 protocols is usually achieved from high level programming platforms using VISA as an intermediate abstraction layer. VISA encapsulates the low level VXI or GPIB function calls and thus makes the transport interface transparent for the user. See [Chapter 6.1.1, "VISA Libraries"](#), on page 440 for details.

IP address

Only the IP address or the computer name (LAN device name) is required to set up the connection. The IP address/computer name is part of the "visa resource string" used by the programs to identify and control the instrument.

Forms of the VISA resource string:

```
TCPIP::host address[:LAN device name][:INSTR]
```

or

```
TCPIP::host address::port::SOCKET
```

where

- **TCPIP** designates the network protocol used
- **host address** is the IP address or host name of the device
- **LAN device name** defines the protocol and the instance number of a sub-instrument:
 - `inst0` selects the VXI-11 protocol (optional, default)
 - `hislip0` selects the newer HiSLIP protocol
- **INSTR** indicates the instrument resource class (optional)
- **port** determines the used port number
- **SOCKET** indicates the raw network socket resource class

Example:

- Instrument has the IP address `192.1.2.3`; the valid resource string using VXI-11 protocol is:

```
TCPIP::192.1.2.3::INSTR
```
- The DNS host name name is `RSSM1`; the valid resource string is:

```
TCPIP::RSSM1::hislip0 (HiSLIP)
```

```
TCPIP::RSSM1::INSTR (VXI-11)
```
- A raw socket connection can be established using:

```
TCPIP::192.1.2.3::5025::SOCKET
```



Identifying instruments in a network

If several instruments are connected to the network, each instrument has its own IP address and associated resource string. The controller identifies these instruments by the resource string.

6.1.3.1 HiSLIP Protocol

The HiSLIP (**H**igh **S**peed **L**AN **I**nstrument **P**rotocol) is the successor protocol for VXI-11 for TCP-based instruments specified by the IVI foundation. The protocol uses two TCP sockets for a single connection - one for fast data transfer, the other for non-sequential control commands (e.g. `Device Clear` or `SRQ`).

HiSLIP has the following characteristics:

- High performance as with raw socket network connections
- Compatible IEEE 488.2 support for Message Exchange Protocol, Device Clear, Serial Poll, Remote/Local, Trigger, and Service Request
- Uses a single IANA registered port (4880), which simplifies the configuration of firewalls
- Supports simultaneous access of multiple users by providing versatile locking mechanisms
- Usable for IPv6 or IPv4 networks



Using VXI-11, each operation is blocked until a VXI-11 device handshake returns. However, using HiSLIP, data is sent to the device using the "fire and forget" method with immediate return. Thus, a successful return of a VISA operation such as `viWrite()` does not guarantee that the instrument has finished or started the requested command, but is delivered to the TCP/IP buffers.

For more information see also the application note: [1MA208: Fast Remote Instrument Control with HiSLIP](#).

6.1.3.2 VXI-11 Protocol

The VXI-11 standard is based on the ONC RPC (Open Network Computing Remote Procedure Call) protocol which in turn relies on TCP/IP as the network/transport layer. The TCP/IP network protocol and the associated network services are preconfigured. TCP/IP ensures connection-oriented communication, where the order of the exchanged messages is adhered to and interrupted links are identified. With this protocol, messages cannot be lost.

6.1.3.3 Socket Communication

An alternative way for remote control of the software is to establish a simple network communication using sockets. The socket communication, also referred to as "Raw Ethernet communication", does not necessarily require a VISA installation on the remote controller side. It is available by default on all operating systems.

The simplest way to establish socket communication is to use the built-in telnet program. The telnet program is part of every operating system and supports a communication with the software on a command-by-command basis. For more convenience and to enable automation by means of programs, user-defined sockets can be programmed.

Socket connections are established on a specially defined port. The socket address is a combination of the IP address or the host name of the instrument and the number of the port configured for remote-control. All R&S SMJ use port number 5025 for this purpose. The port is configured for communication on a command-to-command basis and for remote control from a program.

6.1.3.4 LAN Interface Messages

In the LAN connection, the interface messages are called low-level control messages. These messages can be used to emulate interface messages of the GPIB bus.

Command	Long term	Effect on the instrument
&ABO	Abort	Aborts processing of the commands just received.
&DCL	Device Clear	Aborts processing of the commands just received and sets the command processing software to a defined initial state. Does not change the instrument setting.
>L	Go to Local	Transition to the "local" state (manual control). (The instrument automatically returns to remote state when a remote command is sent UNLESS &NREN was sent before.)
>R	Go to Remote	Enables automatic transition from local state to remote state by a subsequent remote command (after &NREN was sent).
&GET	Group Execute Trigger	Triggers a previously active instrument function (e.g. a sweep). The effect of the command is the same as with that of a pulse at the external trigger signal input.
&LLO	Local Lockout	Disables transition from remote control to manual control by means of the front panel keys.
&NREN	Not Remote Enable	Disables automatic transition from local state to remote state by a subsequent remote command. (To re-activate automatic transition use >R.)
&POL	Serial Poll	Starts a serial poll.

6.1.4 GPIB Interface (IEC/IEEE Bus Interface)

To be able to control the instrument via the GPIB bus, the instrument and the controller must be linked by a GPIB bus cable. A GPIB bus card, the card drivers and the program libraries for the programming language used must be provided in the controller. The controller must address the instrument with the GPIB bus address (see [Chapter 6.1.4.2, "GPIB Instrument Address"](#), on page 446).

Characteristics

The GPIB interface is described by the following characteristics:

- Up to 15 instruments can be connected
- The total cable length is restricted to a maximum of 15 m; the cable length between two instruments should not exceed 2m.

- A wired "OR"-connection is used if several instruments are connected in parallel, since the slowest instrument determines the speed.



Any connected IEC bus cable must be terminated by an instrument or controller.

6.1.4.1 GPIB Interface Messages

Interface messages are transmitted to the instrument on the data lines, with the attention line (ATN) being active (LOW). They are used for communication between the controller and the instrument and can only be sent by a computer which has the function of a GPIB bus controller. GPIB interface messages can be further subdivided into:

- **Universal commands:** act on all instruments connected to the GPIB bus without previous addressing
- **Addressed commands:** only act on instruments previously addressed as listeners

Universal Commands

Universal commands are encoded in the range 10 through 1F hex. They affect all instruments connected to the bus and do not require addressing.

Command	Effect on the instrument
DCL (Device Clear)	Aborts the processing of the commands just received and sets the command processing software to a defined initial state. Does not change the instrument settings.
IFC (Interface Clear *)	Resets the interfaces to the default setting.
LLO (Local Lockout)	The LOC/IEC ADDR key is disabled.
SPE (Serial Poll Enable)	Ready for serial poll.
SPD (Serial Poll Disable)	End of serial poll.
PPU (Parallel Poll Unconfigure)	End of the parallel-poll state.
*) IFC is not a real universal command, it is sent via a separate line; however, it also affects all instruments connected to the bus and does not require addressing	

Addressed Commands

Addressed commands are encoded in the range 00 through 0F hex. They only affect instruments addressed as listeners.

Command	Effect on the instrument
GET (Group Execute Trigger)	Triggers a previously active instrument function (e.g. a sweep). The effect of the command is the same as with that of a pulse at the external trigger signal input.
GTL (Go to Local)	Transition to the "local" state (manual control).
GTR (Go to Remote)	Transition to the "remote" state (remote control).

Command	Effect on the instrument
PPC (Parallel Poll Configure)	Configures the instrument for parallel poll.
SDC (Selected Device Clear)	Aborts the processing of the commands just received and sets the command processing software to a defined initial state. Does not change the instrument setting.

6.1.4.2 GPIB Instrument Address

In order to operate the instrument via remote control, it must be addressed using the GPIB address. The remote control address is factory preset, but it can be changed if it does not fit in the network environment. For remote control, addresses 0 through 30 are allowed. The GPIB address is maintained after a reset of the instrument settings.

Changing the GPIB address of the instrument

The GPIB address can be changed manually or using a remote control command.

1. Manually: press the SETUP key and select "Remote > GPIB".



Select parameter "GPIB channel address" and set the GPIB address.

2. Using remote control command:

```
SYST:COMM:GPIB:ADDR 18
```

6.1.5 LXI Browser Interface

LAN extension for instrumentation (LXI) is an instrumentation platform for measuring instruments and test systems that is based on standard Ethernet technology, see also [Chapter 2.9, "LXI Configuration"](#), on page 60.

The LXI browser interface allows easy configuration of the LAN and remote control of the R&S SMJ without additional installation requirements. The instrument's LXI browser interface works correctly with all W3C compliant browsers.

The LAN settings are configured using the LXI Browser Interface of the R&S SMJ described in [Chapter 2.9.2, "LAN Configuration"](#), on page 64. The LXI status settings in the R&S SMJ are described in [Chapter 5.2.3.14, "LXI Status"](#), on page 147.

6.2 Starting a Remote Control Session

The instrument and the controller have to be connected with the suitable cable and switched on.

A remote control program must open a connection to the instrument (using VISA functionality), before it can send commands to and receive device responses from the instrument.



Instrument Address

In order to operate the instrument via remote control it must be addressed using the defined interface address. See [Chapter 6.1.3, "LAN Interface"](#), on page 441, [Chapter 6.1.4, "GPIB Interface \(IEC/IEEE Bus Interface\)"](#), on page 444 or [Chapter 6.1.5, "LXI Browser Interface"](#), on page 446 for details.

The VISA resource strings are indicated in the "Setup > Remote Channel Settings" menu.



Securing the display

To prevent unauthorized personnel from reading the display, you can disable the frequency and level display explicitly. This is useful when you remotely control the instrument from a different location.

For information on how to disable the frequency and level display, refer to ["Annotation Frequency"](#) on page 151 and ["Annotation Amplitude"](#) on page 151.

Refer to [Chapter 6.2.3, "Examples"](#), on page 449 for practical examples on setting up of a remote control link and starting of a remote control session.

6.2.1 Switching to Remote Control

After switching on, the instrument is usually in the local state and can be operated via the front panel controls (for instruments equipped with a display), a mouse and an external keyboard.


Starting remote control

1. Send a command from a controller to the instrument.

The instrument changes to remote state as soon as it receives the command from the controller.

Note: If you have sent `&NREN` before, the automatic transition from local state to manual control by a subsequent remote command is disabled (use `>R` to enable it again).

In remote state, operation via the front panel or via mouse and keyboard is disabled. The status line indicates the "REMOTE" state.

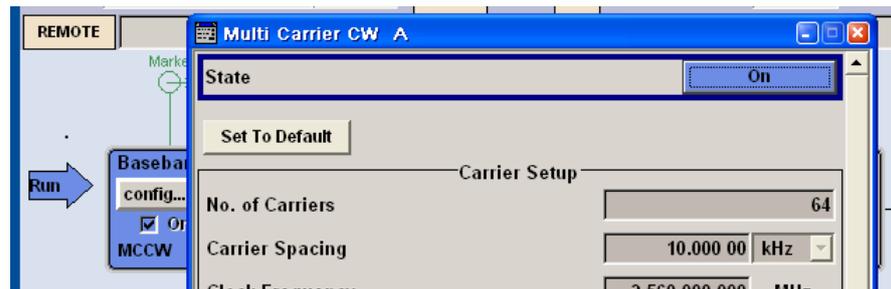


The instrument remains in the remote state until it is reset to the local state, see [Chapter 6.2.2, "Returning to Manual Operation"](#), on page 448).

Tip: Switching from manual operation to remote control and vice versa does not affect the other instrument settings.

- Although operation via front panel, mouse and keyboard is disabled, the dialog boxes can still be opened, for example to verify settings. The buttons and setting fields are grayed out and cannot be activated. Additionally, you can disable the access to the dialogs with the command `SYST:KLOC ON` to protect the instrument against unauthorized readings.
- To prevent unintentional return to manual operation, disable the LOCAL key of the instrument with the `&LLO` command (see [Chapter 6.1.3.4, "LAN Interface Messages"](#), on page 444).

The instrument switches to "REM-LLO" state.

The automatic transition from local state to remote state by a subsequent remote command, and the command `*GTL` are disabled.

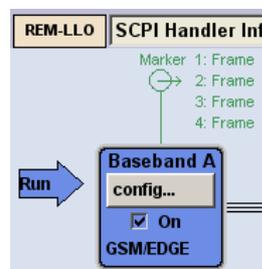

To return to manual mode is only possible via remote control.

- Unlock the LOCAL key with `>R`.

6.2.2 Returning to Manual Operation



Before returning to manual control, command processing must be completed. Otherwise, the instrument switches back to remote control immediately.

To return to manual operation, perform one of the following:

- Press the LOCAL key on the front panel.

- Select "Setup > Remote Control Channels > Local".
- While using the socket communication, terminate the remote control session.
- Send the interface command `>L` via the remote control interface.



Use the `>R` to enable the LOCAL key if it is locked.

6.2.3 Examples

This section provides examples for setting up the remote control connection, and starting a remote control session.

This section assumes basic knowledge of programming and operation of the controller. A description of the interface commands can be obtained from the corresponding manuals.

6.2.3.1 Remote Control over GPIB

The program example in this section is written in VISUAL BASIC. A condition for programming in VISUAL BASIC is that the modules NIGLOBAL (`Niglobal.bas`) and VBIB32 (`Vbib_32.bas`) are added to the projects.



Drivers for instrument, e.g. IVI-COM and LabVIEW drivers, are available in the download area of the product website (http://www.rohde-schwarz.com/en/products/test_and_measurement/product_categories/signal_generation/).

Starting a remote control session over GPIB

As a prerequisite, the GPIB address of the instrument, which is factory-set to 28, must not have been changed.

1. Connect instrument and controller using GPIB cable and switch them on.
2. Execute following commands on the controller:
 - a) Open port to the instrument
`CALL IBFIND("DEV1", generator%)`
 - b) Inform controller about instrument address
`CALL IBPAD(generator%, 28)`
 - c) Reset instrument
`CALL IBWRT(generator%, "*RST;*CLS")`
 - d) Set instrument to new address
`CALL IBWRT(generator%, "SYST:COMM:GPIB:ADDR 18")`
 - e) Inform controller about new address
`CALL IBPAD(generator%, 18)`

The GPIB address of the instrument is changed.

3. To return to manual operation sent `CALL IBLOC (generator%)` or press the LOCAL key at the front panel.

6.2.3.2 Remote Control over LAN using VXI-11 Protocol

In this example, the I/O software library R&S VISA from Rohde & Schwarz is used to set up a LAN remote control link and remotely control the R&S SMJ. R&S VISA is running on a controller PC with Windows operating system. When the connection is set up you can send commands to the instrument, and receive the responses.

The remote control connection requires a VISA installation but no additional hardware on the controller PC. The LAN I/O channel is selected at initialization time using the VISA resource string (also referred to as "address string"). A VISA alias (short name) is used to replace the complete resource string. The host address is either the R&S SMJ's hostname or IP address. See also [Chapter 6.1.3, "LAN Interface"](#), on page 441.



In this example, it is assumed that:

- A LAN remote control link between the controller and the R&S SMJ is already set up.
- The R&S VISA program is installed on the remote PC, see "<http://www.rohde-schwarz.com/rsvisa> > RS VISA Release Notes".

Configuring the controller


To remote control the R&S SMJ, we use the R&S VISA Tester application.



The instrument is preconfigured for networks using DHCP (dynamic host configuration protocol). If this configuration is used, enter the computer name in the position of the IP address.

To enable the external controller to communicate with the R&S SMJ via TCP/IP protocol, set up a remote control link as follows:


1. Make sure that the controller and the instrument are connected in the network (network cable) and switched on.
2. On the controller, start "R&S VISA > Tester 32bit" or "R&S VISA > Tester 64bit", respectively.

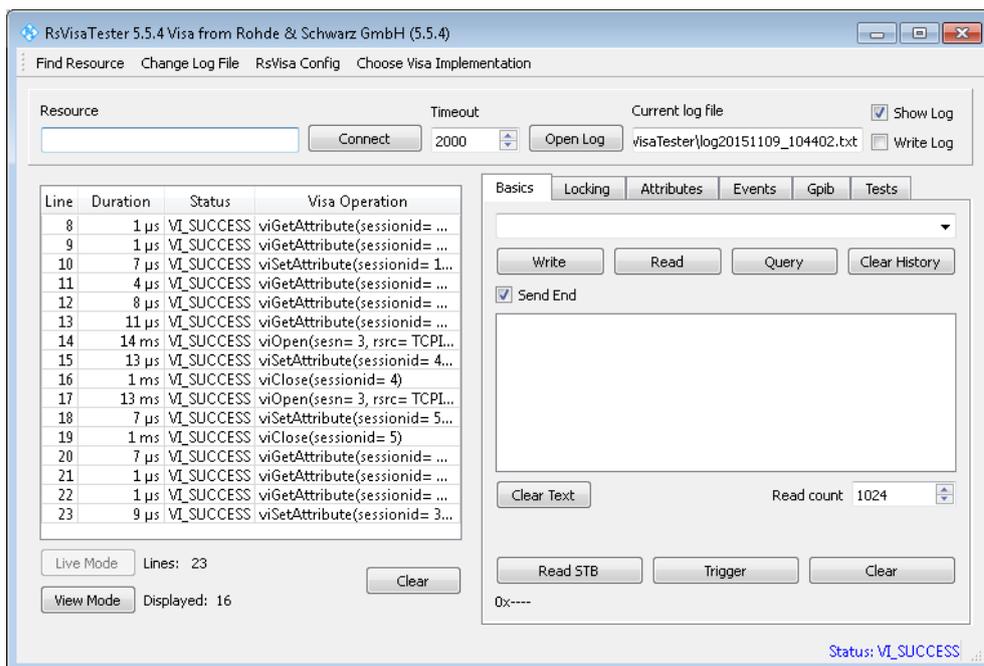


- In the menu bar, select "Choose VISA Implementation > Rohde & Schwarz Visa".



- Select "Rohde & Schwarz Visa" and confirm with "OK".
- In the menu bar, select "Find Resource" to search for the instrument in the LAN.

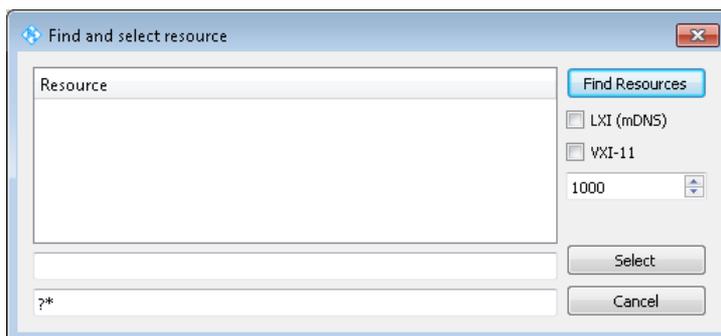


- Select "VXI-11" and "Find Resources".
R&S VISA scans the network for connected instruments and lists all detected instruments in the "Resource" list.
Note: The search may take some time, particularly in large networks.
- Select the required instrument and confirm with "Select".

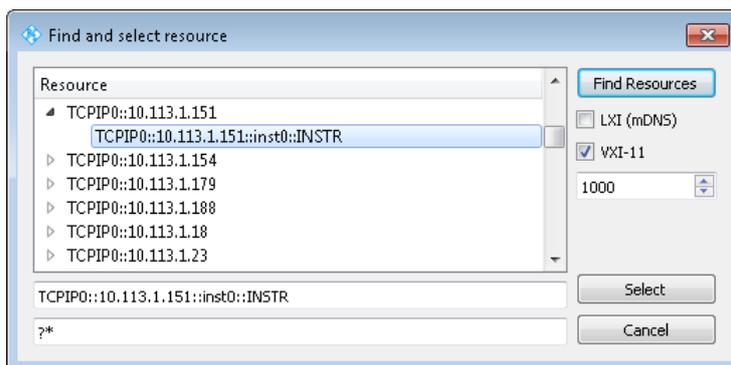


The "Find and select resource" dialog closes and R&S VISA indicates the instruments IP address in the "Resource" field of the main application window.

8. As an alternative to the IP address, you can assign an alias name to the R&S SMJ:
 - a) In the menu bar, select "RsVisaConfig".

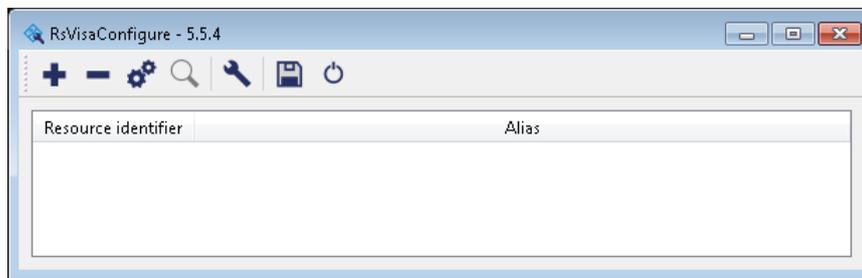

- b) In the toolbar, select "+" to access the "VISA Resource String Composer".

- c) Fill in the "Alias" name, the "VISA Resource String" and the "Device IP Address or host name" as shown in the figure, and confirm with "OK".

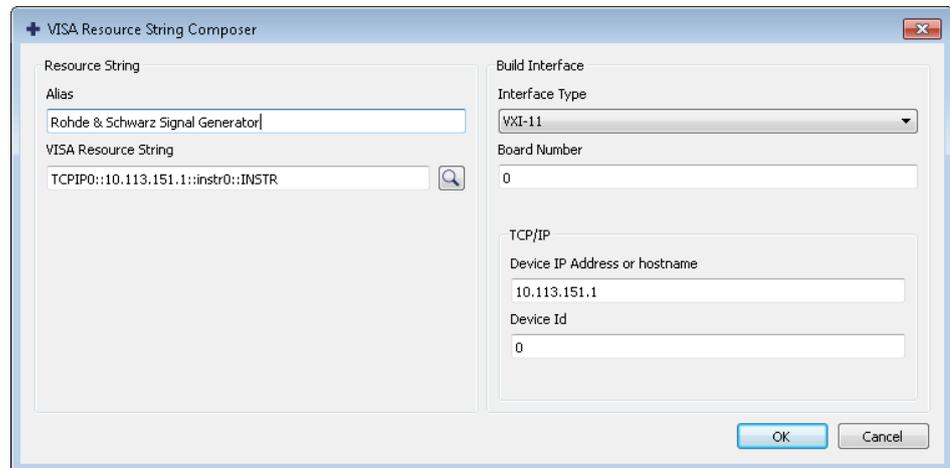

The "Alias" name is assigned to the instrument.



- d) Close the dialog.
The R&S SMJ is now registered in the program and can be addressed via the resource string or alias name.

9. In the main window, select "Connect".

R&S VISA establishes the connection to the R&S SMJ.

Now you can send settings to configure the instrument and receive its responses.

Note: If the connection cannot be set up, R&S VISA displays an error in the log view. For information on how to proceed when network failures occur, see [Chapter 9.5, "Resolving Network Connection Failures"](#), on page 819.

For further information on the functions to read and write to an open session, as well as the utility applications the software provides, see the R&S VISA User Manual.

Starting a remote control over LAN (using VXI-11)


To set the instrument to remote control, you can use the addressed command `>R`, or send any command from the controller.

1. Start the R&S VISA Tester and establish the connection to the R&S SMJ, see ["Configuring the controller"](#) on page 450.

- In the R&S VISA "Basics" tab, enter a SCPI command, e.g. "*IDN?" and confirm with "Query".

The instrument is switched to remote control when it receives a command from the controller.

- Select "Read" to obtain the instrument response.

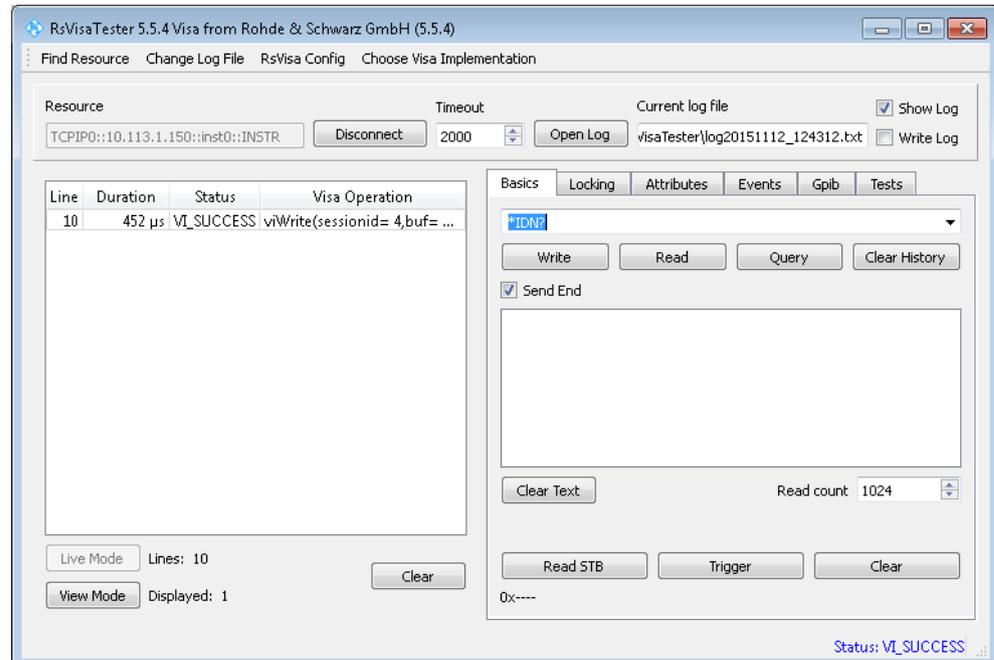

Tip: If the "Show Log" checkbox is checked R&S VISA displays each VISA function call in the log-view on the left. If you check the "Write Log" checkbox the log-view entry is written to the log file as well. You can operate the log-view in two modes: the "Live Mode" shows only the most recent messages whereas the "View Mode" allows you to scroll the history.

- To set, e.g. the frequency, enter `SOUR1:FREQ 4 GHz` and select "Write". To check the performed setting, `SOUR1:FREQ?` and select "Read". The instrument response is `4000000000`, i.e. the frequency is returned in Hz.

While remote control is active, the "Remote" icon in the status bar indicates that the instrument is in remote control mode. The operation via the front panel or via mouse and keyboard are locked, allowing a remote control program to be performed without interruption.

On the display, keys and entry fields are grayed out and cannot be activated or modified, but you can still open dialogs, for example to verify settings.

- To disable the access to the dialogs, use the command `SYST:KLOC ON`.
- To prevent unintentional return to manual operation, use the command `&LLO`. See also [Chapter 6.1.3.4, "LAN Interface Messages"](#), on page 444. The instrument switches to "Remote LLO" state. The LOCAL key is disabled.

7. To enable the LOCAL key, use the command `>R`.
8. To return to manual operation, see [Chapter 6.2.2, "Returning to Manual Operation"](#), on page 448.

Tip: Switching from manual operation to remote control and vice versa does not affect the other instrument settings.

6.2.3.3 Remote Control over LAN using Socket Communication


This chapter provides an example on how to establish a remote control connection over telnet protocol and a simple sockets-based program example that can be further developed.

Setting up a Telnet Connection

To control the software, only a telnet program is required. The telnet program is part of every operating system.

1. To establish a Telnet connection with the R&S SMJ, start the telnet program.
2. Enter the access string to connect to the instrument and confirm with ENTER. The access string is composed of the open command short form) and the socket address. The socket address is a combination of the IP address or the host name of the R&S SMJ and the number of the port configured for remote-control via telnet. The R&S SMJ uses the port number 5025 for remote connection via Telnet.



Example: `o 10.113.1.150 5025`

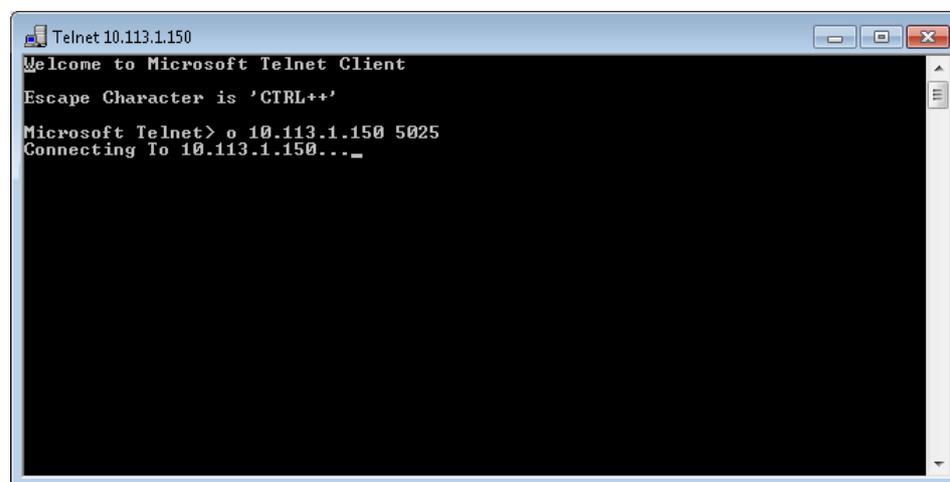

```
Telnet 10.113.1.150
Welcome to Microsoft Telnet Client
Escape Character is 'CTRL++'
Microsoft Telnet> o 10.113.1.150 5025
Connecting To 10.113.1.150..._
```

The connection to the instrument is set up and you can send remote-control commands.

3. Even if the cursor is not visible on the screen, enter blind a remote-control command and confirm with "Enter".

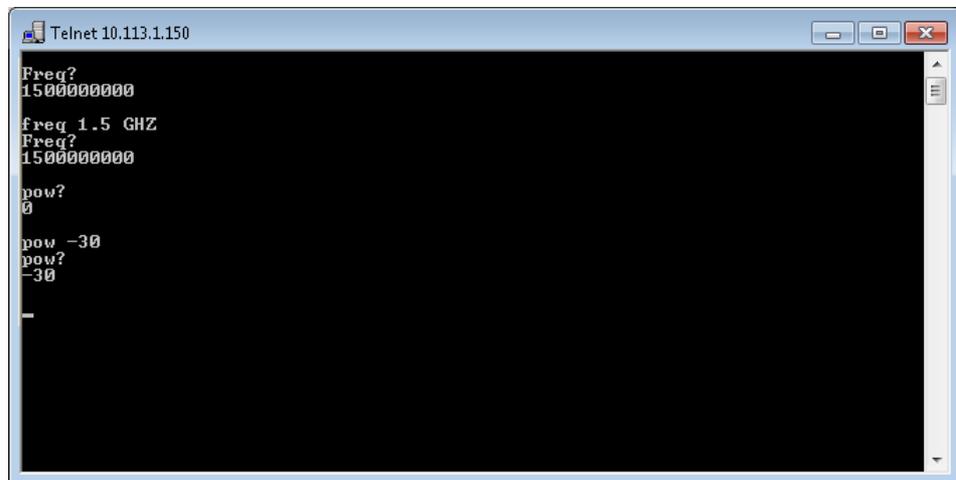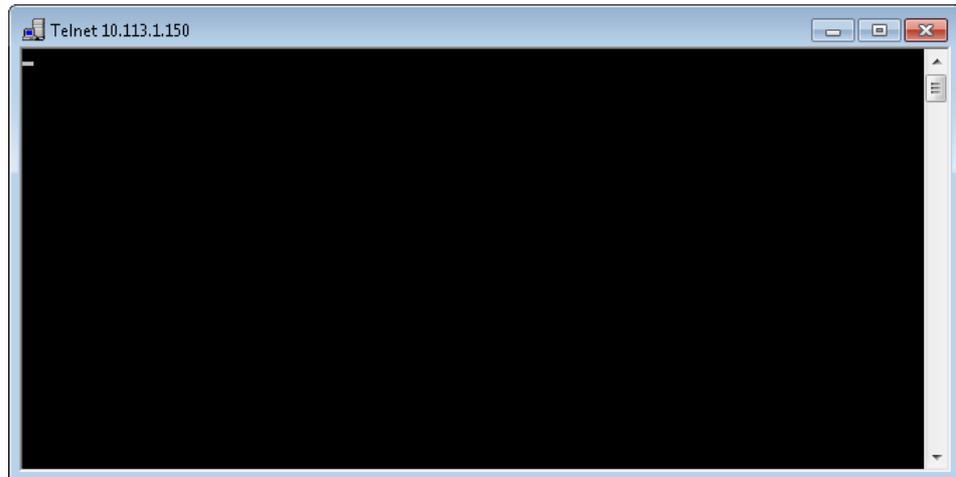

After the first remote-control command has been sent, the instrument is in the "REMOTE" state, i.e. instrument control from the front panel or via mouse and keyboard is disabled and "REMOTE" is displayed in the status line.

TcpClient program examples

The following program example shows a simple TcpClient class that is intended to explain on how to get started with programming of sockets.

The example sets up a socket communication to R&S SMJ and opens a simple user interface, very similar to the telnet, which allows input of commands. To enable real automation, further development of the program is required.

TcpClient.h

```

#include <string>
using namespace std;

//defines structs for socket handling
#ifdef LINUX
#include "Winsock2.h"
  
```

```

#else
    #include <netinet/in.h>
#endif

typedef struct sockaddr_in SockAddrStruct;
typedef struct hostent HostInfoStruct;
class TcpClient
{
public:
    TcpClient();
    ~TcpClient();
    void connectToServer( string &hostname, int port );
    void disconnect( );
    void transmit( string &txString );
    void receive( string &rxString );
    string getCurrentHostName( ) const;
    int getCurrentPort( ) const;
private:
    string currentHostName;
    int currentPort;
    int currentSocketDescr;
    SockAddrStruct serverAddress;
    HostInfoStruct * currentHostInfo;
    bool clientIsConnected;
    int receiveBufferSize;
};

```

TcpClient.cpp

```

#ifdef LINUX
    #include <netdb.h>
    #include <unistd.h>
#endif

#include "TcpClient.h"
TcpClient::TcpClient()
: currentHostName( "" )
, currentPort( 0 )
, currentSocketDescr( 0 )
, serverAddress ( )
, currentHostInfo( NULL )
, clientIsConnected( false )
, receiveBufferSize( 1024 )
{}
TcpClient::~~TcpClient()
{
    currentHostInfo = NULL;
}
void TcpClient::connectToServer( string &hostname, int port )
{

```

```

currentHostInfo = gethostbyname( hostname.c_str( ) );
if( currentHostInfo == NULL )
{
#ifdef LINUX
    int error = WSAGetLastError();
    switch (error)
    {
        case WSANOTINITIALISED: throw string(" A successful case WSStartup
call must occur before using this function."); break;
        case WSAENETDOWN: throw string
(" The network subsystem has failed."); break;
        case WSAHOST_NOT_FOUND: throw string
(" Authoritative answer host not found."); break;
        case WSATRY_AGAIN: throw string
(" Nonauthoritative host not found, or server failure."); break;
        case WSANO_RECOVERY: throw string
(" A nonrecoverable error occurred."); break;
        case WSANO_DATA: throw string
(" Valid name, no data record of requested type."); break;
        case WSAEINPROGRESS: throw string(" A blocking Windows Sockets 1.1 call
is in progress, or the service provider is still processing a callback function.");
break;
        case WSAEFAULT: throw string
(" The name parameter is not a valid part of the user address space."); break;
        case WSAEINTR: throw string
(" A blocking Windows Socket 1.1 call was canceled through case
WSACancelBlockingCall."); break;
    }
#endif

    currentHostName = "";
    currentPort = 0;
    currentHostInfo = NULL;
    clientIsConnected = false;
    throw string("error connecting host\n" );
}
else
{
    currentHostName = hostname;
    currentPort = port;
    currentSocketDescr = socket(AF_INET, SOCK_STREAM, 0);
    if( currentSocketDescr == 0 )
    {
        currentHostName = "";
        currentPort = 0;
        currentHostInfo = NULL;
        clientIsConnected = false;
        throw string("can't create socket\n" );
    }
    serverAddress.sin_family = currentHostInfo->h_addrtype;

```

```

        serverAddress.sin_port = htons( currentPort );
        memcpy( (char *) &serverAddress.sin_addr.s_addr, currentHostInfo->
h_addr_list[0], currentHostInfo->h_length );
        if( connect( currentSocketDescr, ( struct sockaddr *) &serverAddress,
sizeof(serverAddress) ) < 0 )
        {
            throw string("can't connect server\n" );
        }
        clientIsConnected = true;
    }
}
void TcpClient::disconnect( )
{
    if( clientIsConnected )
    {
#ifdef LINUX
        closesocket( currentSocketDescr );
#else
        close( currentSocketDescr );
#endif
    }
    currentSocketDescr = 0;
    currentHostName = "";
    currentPort = 0;
    currentHostInfo = NULL;
    clientIsConnected = false;
}
void TcpClient::transmit( string &txString )
{
    if( !clientIsConnected )
    {
        throw string("connection must be established before any data can be sent\n");
    }
    char * transmitBuffer = new char[txString.length() +1];
    memcpy( transmitBuffer, txString.c_str(), txString.length() );
    transmitBuffer[txString.length()] = '\n'; //newline is needed!
    if( send( currentSocketDescr, transmitBuffer, txString.length() + 1, 0 ) < 0 )
    {
        throw string("can't transmit data\n");
    }
    delete [] transmitBuffer;
}
void TcpClient::receive( string &rxString )
{
    if( !clientIsConnected )
    {
        throw string("connection must be established before any data can be received\n");
    }
    char * receiveBuffer = new char[receiveBufferSize];
    memset( receiveBuffer, 0, receiveBufferSize );

```

```

bool receiving = true;
while( receiving )
{
    int receivedByteCount = recv( currentSocketDescr, receiveBuffer,
        receiveBufferSize, 0 );
    if( receivedByteCount < 0 )
    {
        throw string("error while receiving data\n");
    }
    rxString += string( receiveBuffer );
    receiving = ( receivedByteCount == receiveBufferSize );
}
delete [] receiveBuffer;
}
string TcpClient::getCurrentHostName( ) const
{
    return currentHostName;
}
int TcpClient::getCurrentPort( ) const
{
    return currentPort;
}

```

TelnetClient.cpp

```

//TelnetClient.cpp: Defines the entry point for the console application.//

#include <iostream>
#include "TcpClient.h"
void printUsage()
{
    cout<<"usage: EthernetRawCommand <server-ip> [scpi-command]"<<endl;
}
int main( int argc, char *argv[] )
{
    int errorCode = 0; //no error
    bool useSingleCommand = false;
    string singleCommand = "";
    string hostname = "";
    int port = 5025;
    string input = "";
    TcpClient client;
    switch( argc )
    {
        case 3:
            useSingleCommand = true;
            singleCommand = argv[2];
        case 2:
            hostname = argv[1];
            break;
    }
}

```

```
default:
    printUsage();
    getchar();
    return(-1);
}
try
{
#ifdef LINUX
    WORD wVersionRequested = MAKEWORD( 2, 2 );
    WSADATA wsaData;
    int err = WSASStartup( wVersionRequested, &wsaData );
    if ( err != 0 )
    {
        throw string ("Could not find a usable WinSock DLL.");
    }
#endif
    client.connectToServer( hostname, port );
    bool terminate = false;
    while( !terminate )
    {
        char buffer[1024];
        if( useSingleCommand )
        {
            input = singleCommand; //send string
        }
        else
        {
            cout <<">";
            cin.getline( buffer, 1024 );
            input = buffer;
            if( input == "end" )
            {
                terminate = true;
            }
        }
        if( !terminate)
        {
            client.transmit( input ); //send string
            int qPos = input.find( "?", 0 );
            //receive string only when needed
            if( qPos > 0 )
            {
                string rcStr = "";
                client.receive( rcStr );
                cout << rcStr;
            }
        }
        if( useSingleCommand )
        {
            terminate = true;
        }
    }
}
```

```

    }
  }
} catch( const string errorString )
{
  cout<<errorString<<endl<<endl;
  cout<<"Press Enter to exit"<<endl;
  getchar();
}
client.disconnect( );
return errorCode;
}

```

6.3 SCPI Command Structure

SCPI commands consist of a so-called header and, in most cases, one or more parameters. The header and the parameters are separated by a "white space" (ASCII code 0 to 9, 11 to 32 decimal, e.g. blank). The headers may consist of several mnemonics (keywords). Queries are formed by appending a question mark directly to the header.

The commands can be either device-specific or device-independent (common commands). Common and device-specific commands differ in their syntax.

6.3.1 Syntax for Common Commands

Common (=device-independent) commands consist of a header preceded by an asterisk (*) and possibly one or more parameters.

Examples:

*RST	RESET	Resets the instrument.
*ESE	EVENT STATUS ENABLE	Sets the bits of the event status enable registers.
*ESR?	EVENT STATUS QUERY	Queries the contents of the event status register.
*IDN?	IDENTIFICATION QUERY	Queries the instrument identification string.

6.3.2 Syntax for Device-Specific Commands



Not all commands used in the following examples are necessarily implemented in the instrument.

For demonstration purposes only, assume the existence of the following commands for this section:

- `DISPlay[:WINDow<1...4>]:MAXimize <Boolean>`
- `FORMat:READings:DATA <type>[,<length>]`
- `HCOpy:DEvice:COLor <Boolean>`
- `HCOpy:DEvice:CMAP:COLor:RGB <red>,<green>,<blue>`
- `HCOpy[:IMMediate]`
- `HCOpy:ITEM:ALL`
- `HCOpy:ITEM:LABel <string>`
- `HCOpy:PAGE:DIMensions:QUADrant [<N>]`
- `HCOpy:PAGE:ORientation LANDscape | PORTrait`
- `HCOpy:PAGE:SCALE <numeric value>`
- `MMEMory:COpy <file_source>,<file_destination>`
- `SENSE:BANDwidth|BWIDth[:RESolution] <numeric_value>`
- `SENSe:FREQuency:STOP <numeric value>`
- `SENSe:LIST:FREQuency <numeric_value>{,<numeric_value>}`

Long and short form

The mnemonics feature a long form and a short form. The short form is marked by upper case letters, the long form corresponds to the complete word. Either the short form or the long form can be entered; other abbreviations are not permitted.

Example:

`HCOpy:DEvice:COLor ON` is equivalent to `HCOP:DEV:COL ON`.



Case-insensitivity

Upper case and lower case notation only serves to distinguish the two forms in the manual, the instrument itself is case-insensitive.

Numeric suffixes

If a command can be applied to multiple instances of an object, e.g. specific channels or sources, the required instances can be specified by a suffix added to the command. Numeric suffixes are indicated by angular brackets (<1...4>, <n>, <i>) and are replaced by a single value in the command. Entries without a suffix are interpreted as having the suffix 1.

Example:

Definition: `HCOPY:PAGE:DIMensions:QUADrant [<N>]`

Command: `HCOP:PAGE:DIM:QUAD2`

This command refers to the quadrant 2.

**Different numbering in remote control**

For remote control, the suffix may differ from the number of the corresponding selection used in manual operation. SCPI prescribes that suffix counting starts with 1. Suffix 1 is the default state and used when no specific suffix is specified.

Some standards define a fixed numbering, starting with 0. If the numbering differs in manual operation and remote control, it is indicated for the corresponding command.

Optional mnemonics

Some command systems permit certain mnemonics to be inserted into the header or omitted. These mnemonics are marked by square brackets in the description. The instrument must recognize the long command to comply with the SCPI standard. Some commands are considerably shortened by these optional mnemonics.

Example:

Definition: `HCOPY[:IMMEDIATE]`

Command: `HCOP:IMM` is equivalent to `HCOP`

**Optional mnemonics with numeric suffixes**

Do not omit an optional mnemonic if it includes a numeric suffix that is relevant for the effect of the command.

Example:

Definition: `DISPlay[:WINDow<1...4>]:MAXimize <Boolean>`

Command: `DISP:MAX ON` refers to window 1.

In order to refer to a window other than 1, you must include the optional `WINDow` parameter with the suffix for the required window.

`DISP:WIND2:MAX ON` refers to window 2.

Parameters

Parameters must be separated from the header by a "white space". If several parameters are specified in a command, they are separated by a comma (.). For a description of the parameter types, refer to [Chapter 6.3.3, "SCPI Parameters"](#), on page 465.

Example:

Definition: `HCOPY:DEvice:CMAP:COLor:RGB <red>, <green>, <blue>`

Command: `HCOP:DEV:CMAP:COL:RGB 3, 32, 44`

Special characters

	<p>Parameters</p> <p>A vertical stroke in parameter definitions indicates alternative possibilities in the sense of "or". The effect of the command differs, depending on which parameter is used.</p> <p>Example:</p> <p>Definition: <code>HCOPY:PAGE:ORIENTATION LANDscape PORTRait</code></p> <p>Command <code>HCOPY:PAGE:ORI LAND</code> specifies landscape orientation</p> <p>Command <code>HCOPY:PAGE:ORI PORT</code> specifies portrait orientation</p> <p>Mnemonics</p> <p>A selection of mnemonics with an identical effect exists for several commands. These mnemonics are indicated in the same line; they are separated by a vertical stroke. Only one of these mnemonics needs to be included in the header of the command. The effect of the command is independent of which of the mnemonics is used.</p> <p>Example:</p> <p>Definition: <code>SENSE:BANDwidth BWIDTH[:RESolution] <numeric_value></code></p> <p>The two following commands with identical meaning can be created:</p> <p><code>SENS:BAND:RES 1</code></p> <p><code>SENS:BWID:RES 1</code></p>
[]	<p>Mnemonics in square brackets are optional and may be inserted into the header or omitted.</p> <p>Example: <code>HCOPY[:IMMEDIATE]</code></p> <p><code>HCOP:IMM</code> is equivalent to <code>HCOP</code></p>
{ }	<p>Parameters in curly brackets are optional and can be inserted once or several times, or omitted.</p> <p>Example: <code>SENSe:LIST:FREQuency <numeric_value>{,<numeric_value>}</code></p> <p>The following are valid commands:</p> <p><code>SENS:LIST:FREQ 10</code></p> <p><code>SENS:LIST:FREQ 10,20</code></p> <p><code>SENS:LIST:FREQ 10,20,30,40</code></p>

6.3.3 SCPI Parameters

Many commands are supplemented by a parameter or a list of parameters. The parameters must be separated from the header by a "white space" (ASCII code 0 to 9, 11 to 32 decimal, e.g. blank). Allowed parameters are:

- Numeric values
- Special numeric values
- Boolean parameters
- Text
- Character strings
- Block data

The parameters required for each command and the allowed range of values are specified in the command description.

Numeric values

Numeric values can be entered in any form, i.e. with sign, decimal point and exponent. Values exceeding the resolution of the instrument are rounded up or down. The mantissa may comprise up to 255 characters, the exponent must lie inside the value range -32000 to 32000. The exponent is introduced by an "E" or "e". Entry of the exponent alone is not allowed. In the case of physical quantities, the unit can be entered. Allowed unit prefixes are G (giga), MA (mega), MOHM and MHZ (also allowed), K (kilo), M (milli), U (micro) and N (nano). If the unit is missing, the basic unit is used.

Example: `SENS:FREQ:STOP 1.5GHz = SENS:FREQ:STOP 1.5E9`

Units

For physical quantities, the unit can be entered. Allowed unit prefixes are:

- G (giga)
- MA (mega), MOHM, MHZ
- K (kilo)
- M (milli)
- U (micro)
- N (nano)

If the unit is missing, the basic unit is used.

Example:

`SENSe:FREQ:STOP 1.5GHz = SENSe:FREQ:STOP 1.5E9`

Some settings allow relative values to be stated in percent. According to SCPI, this unit is represented by the `PCT` string.

Example:

`HCOP:PAGE:SCAL 90PCT`

Special numeric values

The texts listed below are interpreted as special numeric values. In the case of a query, the numeric value is provided.

- **MIN/MAX**
MINimum and MAXimum denote the minimum and maximum value.
- **DEF**
DEFault denotes a preset value which has been stored in the EPROM. This value conforms to the default setting, as it is called by the `*RST` command.
- **UP/DOWN**
UP, DOWN increases or reduces the numeric value by one step. The step width can be specified via an allocated step command for each parameter which can be set via UP, DOWN.
- **INF/NINF**

INFinity, Negative INFinity (NINF) represent the numeric values 9.9E37 or -9.9E37, respectively. INF and NINF are only sent as instrument responses.

- **NAN**

Not A Number (NAN) represents the value 9.91E37. NAN is only sent as a instrument response. This value is not defined. Possible causes are the division of zero by zero, the subtraction of infinite from infinite and the representation of missing values.

Example:

Setting command: `SENSe:LIST:FREQ MAXimum`

Query: `SENS:LIST:FREQ?`, Response: `3.5E9`



Queries for special numeric values

The numeric values associated to `MAXimum`/`MINimum`/`DEFault` can be queried by adding the corresponding mnemonics to the command. They must be entered following the quotation mark.

Example: `SENSe:LIST:FREQ? MAXimum`

Returns the maximum numeric value as a result.

Boolean Parameters

Boolean parameters represent two states. The "ON" state (logically true) is represented by "ON" or a numeric value 1. The "OFF" state (logically untrue) is represented by "OFF" or the numeric value 0. The numeric values are provided as the response for a query.

Example:

Setting command: `HCOpy:DEV:COL ON`

Query: `HCOpy:DEV:COL?`

Response: `1`

Text parameters

Text parameters observe the syntactic rules for mnemonics, i.e. they can be entered using a short or long form. Like any parameter, they have to be separated from the header by a white space. In the case of a query, the short form of the text is provided.

Example:

Setting command: `HCOpy:PAGE:ORientation LANDscape`

Query: `HCOp:PAGE:ORI?`

Response: `LAND`

Character strings

Strings must always be entered in quotation marks (' or ").

Example:

```
HCOP:ITEM:LABel "Test1" or HCOP:ITEM:LABel 'Test1'
```

Block data

Block data is a format which is suitable for the transmission of large amounts of data. A command using a block data parameter has the following structure:

Example:

```
FORMat:READings:DATA #45168xxxxxxxx
```

The ASCII character # introduces the data block. The next number indicates how many of the following digits describe the length of the data block. In the example the 4 following digits indicate the length to be 5168 bytes. The data bytes follow. During the transmission of these data bytes all end or other control signs are ignored until all bytes are transmitted.

#0 specifies a data block of indefinite length. The use of the indefinite format requires a `NL^END` message to terminate the data block. This format is useful when the length of the transmission is not known or if speed or other considerations prevent segmentation of the data into blocks of definite length.

6.3.4 Overview of Syntax Elements

The following table provides an overview of the syntax elements:

:	The colon separates the mnemonics of a command. In a command line the separating semicolon marks the uppermost command level.
;	The semicolon separates two commands of a command line. It does not alter the path.
,	The comma separates several parameters of a command.
?	The question mark forms a query.
*	The asterisk marks a common command.
'' ..	Quotation marks introduce a string and terminate it (both single and double quotation marks are possible).
#	The hash symbol introduces binary, octal, hexadecimal and block data. <ul style="list-style-type: none"> • Binary: #B10110 • Octal: #O7612 • Hexa: #HF3A7 • Block: #21312
	A "white space" (ASCII-Code 0 to 9, 11 to 32 decimal, e.g. blank) separates the header from the parameters.

6.3.5 Structure of a command line

A command line may consist of one or several commands. It is terminated by one of the following:

- a <New Line>
- a <New Line> with EOI
- an EOI together with the last data byte

Several commands in a command line must be separated by a semicolon ";". If the next command belongs to a different command system, the semicolon is followed by a colon.

Example:

```
MMEM:COPY "Test1", "MeasurementXY";:HCOP:ITEM ALL
```

This command line contains two commands. The first command belongs to the MMEM system, the second command belongs to the HCOP system.

If the successive commands belong to the same system, having one or several levels in common, the command line can be abbreviated. To this end, the second command after the semicolon starts with the level that lies below the common levels. The colon following the semicolon must be omitted in this case.

Example:

```
HCOP:ITEM ALL;:HCOP:IMM
```

This command line contains two commands. Both commands are part of the HCOP command system, i.e. they have one level in common.

When abbreviating the command line, the second command begins with the level below HCOP. The colon after the semicolon is omitted. The abbreviated form of the command line reads as follows:

```
HCOP:ITEM ALL;IMM
```

A new command line always begins with the complete path.

Example:

```
HCOP:ITEM ALL
```

```
HCOP:IMM
```

6.3.6 Responses to Queries

A query is defined for each setting command unless explicitly specified otherwise. It is formed by adding a question mark to the associated setting command. According to SCPI, the responses to queries are partly subject to stricter rules than in standard IEEE 488.2.

- The requested parameter is transmitted without a header.
Example: `HCOP:PAGE:ORI?`, **Response:** `LAND`
- Maximum values, minimum values and all other quantities that are requested via a special text parameter are returned as numeric values.
Example: `SENSe:FREQuency:STOP? MAX`, **Response:** `3.5E9`

- Numeric values are output without a unit. Physical quantities are referred to the basic units or to the units set using the `Unit` command. The response `3.5E9` in the previous example stands for 3.5 GHz.
- Truth values (Boolean values) are returned as 0 (for OFF) and 1 (for ON).

Example:

Setting command: `HCOPY:DEV:COL ON`

Query: `HCOPY:DEV:COL?`

Response: 1

- Text (character data) is returned in a short form.

Example:

Setting command: `HCOPY:PAGE:ORIENTATION LANDscape`

Query: `HCOP:PAGE:ORI?`

Response: LAND

6.4 Command Sequence and Synchronization

IEEE 488.2 defines a distinction between overlapped and sequential commands:

- A sequential command is one which finishes executing before the next command starts executing. Commands that are processed quickly are usually implemented as sequential commands. Sequential commands are not implemented in the instrument, however the execution time of most commands is so short that they act as sequential commands when sent in different command lines.
- An overlapping command is one which does not automatically finish executing before the next command starts executing. Usually, overlapping commands take longer to process and allow the program to do other tasks while being executed. If overlapping commands do have to be executed in a defined order, e.g. in order to avoid wrong measurement results, they must be serviced sequentially. This is called synchronization between the controller and the instrument.

Setting commands within one command line, even though they may be implemented as sequential commands, are not necessarily serviced in the order in which they have been received. In order to make sure that commands are actually carried out in a certain order, each command must be sent in a separate command line.

Example: Commands and queries in one message

The response to a query combined in a program message with commands that affect the queried value is not predictable.

The following commands always return the specified result:

```
:FREQ:STAR 1GHZ;SPAN 100 :FREQ:STAR?
```

Result:

```
1000000000 (1 GHz)
```

Whereas the result for the following commands is not specified by SCPI:

```
:FREQ:STAR 1GHz;STAR?;SPAN 1000000
```

The result could be the value of `START` before the command was sent since the instrument might defer executing the individual commands until a program message terminator is received. The result could also be 1 GHz if the instrument executes commands as they are received.



As a general rule, send commands and queries in different program messages.

Example: Overlapping command with *OPC

The instrument implements `INITiate[:IMMediate]` as an overlapped command. Assuming that `INITiate[:IMMediate]` takes longer to execute than `*OPC`, sending the following command sequence results in initiating a sweep and, after some time, setting the `OPC` bit in the `ESR`:

```
INIT; *OPC.
```

Sending the following commands still initiates a sweep:

```
INIT; *OPC; *CLS
```

However, since the operation is still pending when the instrument executes `*CLS`, forcing it into the "Operation Complete Command Idle" State (OCIS), `*OPC` is effectively skipped. The `OPC` bit is not set until the instrument executes another `*OPC` command.

Example: Overlapped command followed by non-conflicting commands

Suppose that the instrument is switched on to provide a real time test signal that requires some calculation time. At the same time some settings for the configuration of a different signal are made which do not interact with the generated signal (e.g. the signal may be used later on). The signal generation and the signal configuration are independent from each other, so none of the following overlapped commands needs to be synchronized:

```
SOUR:BB:3GPP:STAT ON
SOUR:BB:GSM:FORM FSK2
```

6.4.1 Preventing Overlapping Execution

To prevent an overlapping execution of commands, one of the commands `*OPC`, `*OPC?` or `*WAI` can be used. All three commands cause a certain action only to be

carried out after the hardware has been set. By suitable programming, the controller can be forced to wait for the corresponding action to occur.

Table 6-2: Synchronization using *OPC, *OPC? and *WAI

Com-mand	Action	Programming the controller
*OPC	Sets the Operation Complete bit in the ESR after all previous commands have been executed.	<ul style="list-style-type: none"> • Setting bit 0 in the ESE • Setting bit 5 in the SRE • Waiting for service request (SRQ)
*OPC?	Stops command processing until 1 is returned. This is only the case after the Operation Complete bit has been set in the ESR. This bit indicates that the previous setting has been completed.	Sending *OPC? directly after the command whose processing should be terminated before other commands can be executed.
*WAI	Stops further command processing until all commands sent before *WAI have been executed.	Sending *WAI directly after the command whose processing should be terminated before other commands are executed.

Command synchronization using *WAI or *OPC? appended to an overlapped command is a good choice if the overlapped command takes only little time to process. The two synchronization techniques simply block overlapped execution of the command.

For time consuming overlapped commands it is usually desirable to allow the controller or the instrument to do other useful work while waiting for command execution. Use one of the following methods:

***OPC with a service request**

1. Set the OPC mask bit (bit no. 0) in the ESE: *ESE 1
2. Set bit no. 5 in the SRE: *SRE 32 to enable ESB service request.
3. Send the overlapped command with *OPC
4. Wait for a service request

The service request indicates that the overlapped command has finished.

***OPC? with a service request**

1. Set bit no. 4 in the SRE: *SRE 16 to enable MAV service request.
2. Send the overlapped command with *OPC?
3. Wait for a service request

The service request indicates that the overlapped command has finished.

Event Status Register (ESE)

1. Set the OPC mask bit (bit no. 0) in the ESE: *ESE 1
2. Send the overlapped command without *OPC, *OPC? or *WAI

3. Poll the operation complete state periodically (by means of a timer) using the sequence: *OPC; *ESR?

A return value (LSB) of 1 indicates that the overlapped command has finished.

***OPC? with short timeout**

1. Send the overlapped command without *OPC, *OPC? or *WAI
2. Poll the operation complete state periodically (by means of a timer) using the sequence: <short timeout>; *OPC?
3. A return value (LSB) of 1 indicates that the overlapped command has finished. In case of a timeout, the operation is ongoing.
4. Reset timeout to former value
5. Clear the error queue with `SYStem:ERROR?` to remove the "-410, Query interrupted" entries.

Using several threads in the controller application

As an alternative, provided the programming environment of the controller application supports threads, separate threads can be used for the application GUI and for controlling the instrument(s) via SCPI.

A thread waiting for a *OPC? thus will not block the GUI or the communication with other instruments.

6.5 Status Reporting System

The status reporting system stores all information on the current operating state of the instrument, and on errors which have occurred. This information is stored in the status registers and in the error queue.

You can query both with the commands of the [STATus Subsystem](#).

6.5.1 Hierarchy of the Status Registers

The [Figure 6-1](#) shows the hierarchical structure of information in the status registers (ascending from left to right).

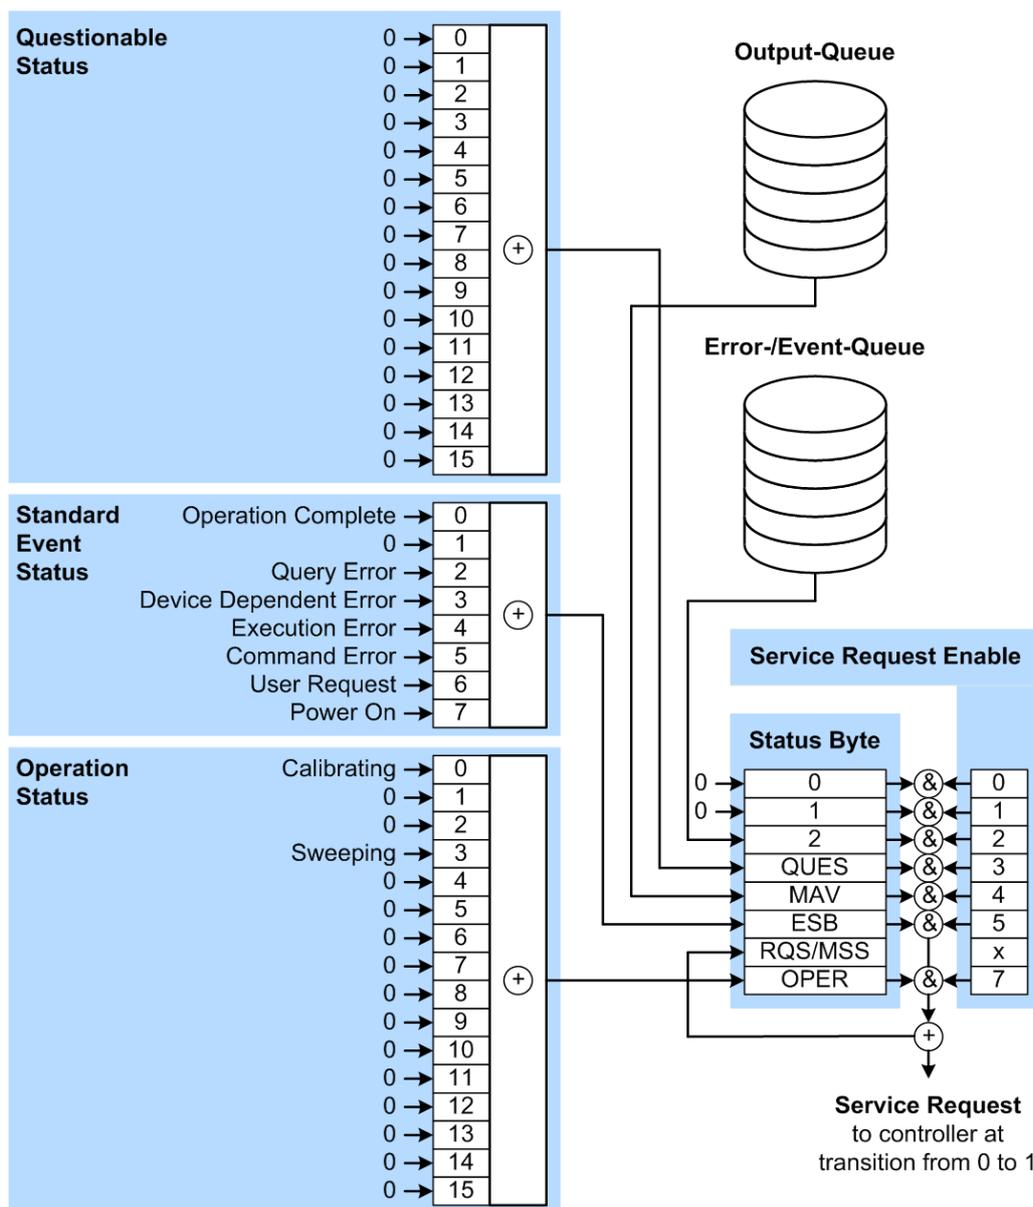


Figure 6-1: Graphical overview of the status registers hierarchy

- OPER = Operation Status Summary Bit
- RQS/MSS = Service Request Generation
- ESB = Standard Event Status Summary Bit
- MAV = Message Available in Output Queue
- QUES = Questionable Status Summary Bit
- 2 = Error- /Event-Queue
- 1, 0 = not used

Note: This legend explains the abbreviations to the Status Byte Register.

The R&S SMJ uses the following status registers:

- **Status Byte (STB)** and **Service Request Enable (SRE)**, see [Chapter 6.5.3, "Status Byte \(STB\) and Service Request Enable Register \(SRE\)"](#), on page 477.

- **Standard Event Status**, i.e. the Event status Register (ESR) and the Event Status Enable (ESE), see [Chapter 6.5.4, "Event Status Register \(ESR\) and Event Status Enable Register \(ESE\)"](#), on page 478.
- **Questionable Status and Operation Status**, the (SCPI) status registers, see [Chapter 6.5.2, "Structure of a SCPI Status Register"](#), on page 475, [Chapter 6.5.5, "Questionable Status Register \(STATus:QUEStionable\)"](#), on page 478 and [Chapter 6.5.6, "Operation Status Register \(STATus:OPERation\)"](#), on page 479.
- **Output-Queue**
The output queue contains the messages the instrument returns to the controller. It is not part of the status reporting system but determines the value of the MAV bit in the STB and thus is represented in the overview.
- **Error- /Event-Queue**
The error-/event-queue contains all errors and events that have occurred in the past. When reading the queue, the instrument starts with the first occurred error/ event.

All status registers have the same internal structure.



SRE, ESE

The service request enable register SRE can be used as ENABLE part of the STB if the STB is structured according to SCPI. By analogy, the ESE can be used as the ENABLE part of the ESR.

6.5.2 Structure of a SCPI Status Register

Each standard SCPI register consists of 5 parts. Each part has a width of 16 bits and has different functions. The individual bits are independent of each other, i.e. each hardware status is assigned a bit number which is valid for all five parts. Bit 15 (the most significant bit) is set to zero for all parts. Thus the contents of the register parts can be processed by the controller as positive integers.

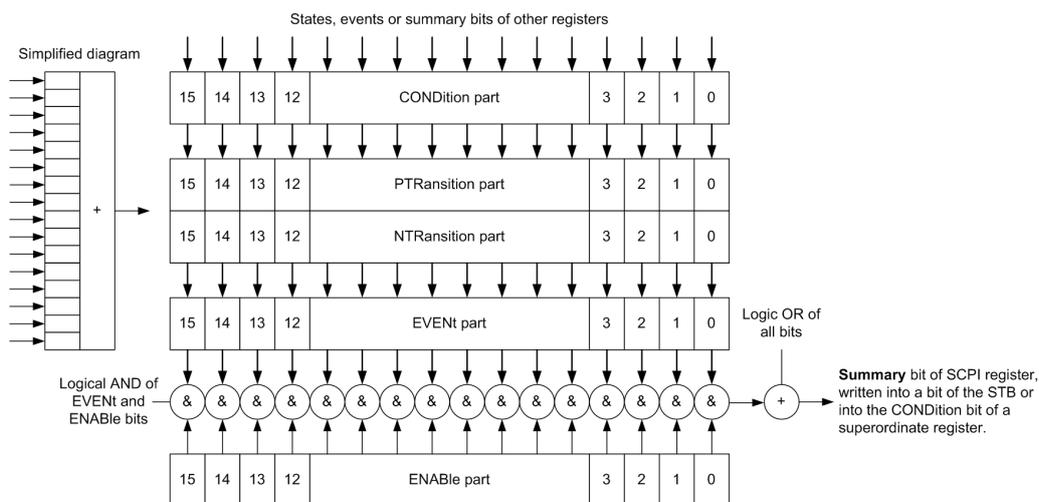


Figure 6-2: The status-register model

Description of the five status register parts

The five parts of a SCPI register have different properties and functions:

- **CONDition**

The `CONDition` part is written into directly by the hardware or the sum bit of the next lower register. Its contents reflect the current instrument status. This register part can only be read, but not written into or cleared. Its contents are not affected by reading.

- **PTRansition / NTRansition**

The two transition register parts define which state transition of the `CONDition` part (none, 0 to 1, 1 to 0 or both) is stored in the `EVENT` part.

The **Positive-TRansition** part acts as a transition filter. When a bit of the `CONDition` part is changed from 0 to 1, the associated `PTR` bit decides whether the `EVENT` bit is set to 1.

- `PTR` bit =1: the `EVENT` bit is set.
- `PTR` bit =0: the `EVENT` bit is not set.

This part can be written into and read as required. Its contents are not affected by reading.

The **Negative-TRansition** part also acts as a transition filter. When a bit of the `CONDition` part is changed from 1 to 0, the associated `NTR` bit decides whether the `EVENT` bit is set to 1.

- `NTR` bit =1: the `EVENT` bit is set.
- `NTR` bit =0: the `EVENT` bit is not set.

This part can be written into and read as required. Its contents are not affected by reading.

- **EVENT**

The `EVENT` part indicates whether an event has occurred since the last reading, it is the "memory" of the condition part. It only indicates events passed on by the transition filters. It is permanently updated by the instrument. This part can only be read by the user. Reading the register clears it. This part is often equated with the entire register.

- **ENABLE**

The `ENABLE` part determines whether the associated `EVENT` bit contributes to the sum bit (see below). Each bit of the `EVENT` part is "ANDed" with the associated `ENABLE` bit (symbol '&'). The results of all logical operations of this part are passed on to the sum bit via an "OR" function (symbol '+').

`ENABLE` bit = 0: the associated `EVENT` bit does not contribute to the sum bit

`ENABLE` bit = 1: if the associated `EVENT` bit is "1", the sum bit is set to "1" as well.

This part can be written into and read by the user as required. Its contents are not affected by reading.

Sum bit

The sum bit is obtained from the `EVENT` and `ENABLE` part for each register. The result is then entered into a bit of the `CONDition` part of the higher-order register.

The instrument automatically generates the sum bit for each register. Thus an event can lead to a service request throughout all levels of the hierarchy.

6.5.3 Status Byte (STB) and Service Request Enable Register (SRE)

The `STatus Byte` (STB) is already defined in IEEE 488.2. It provides a rough overview of the instrument status by collecting the pieces of information of the lower registers. A special feature is that bit 6 acts as the sum bit of the remaining bits of the status byte.

The STB is read using the command `*STB?` or a serial poll.

The `STatus Byte` (STB) is linked to the `Service Request Enable` (SRE) register. Each bit of the STB is assigned a bit in the SRE. Bit 6 of the SRE is ignored. If a bit is set in the SRE and the associated bit in the STB changes from 0 to 1, a service request (SRQ) is generated. The SRE can be set using the command `*SRE` and read using the command `*SRE?`.

Table 6-3: Meaning of the bits used in the status byte

Bit No.	Meaning
0...1	Not used
2	Error Queue not empty The bit is set when an entry is made in the error queue. If this bit is enabled by the SRE, each entry of the error queue generates a service request. Thus an error can be recognized and specified in greater detail by polling the error queue. The poll provides an informative error message. This procedure is to be recommended since it considerably reduces the problems involved with remote control.
3	QUESTionable status register summary bit The bit is set if an <code>EVENT</code> bit is set in the <code>QUESTionable</code> status register and the associated <code>ENABLE</code> bit is set to 1. A set bit indicates a questionable instrument status, which can be specified in greater detail by querying the <code>STATus:QUESTionable</code> status register.
4	MAV bit (message available) The bit is set if a message is available in the output queue which can be read. This bit can be used to enable data to be automatically read from the instrument to the controller.
5	ESB bit Sum bit of the event status register. It is set if one of the bits in the event status register is set and enabled in the event status enable register. Setting of this bit indicates a serious error which can be specified in greater detail by polling the event status register.
6	MSS bit (master status summary bit) The bit is set if the instrument triggers a service request. This is the case if one of the other bits of this registers is set together with its mask bit in the service request enable register SRE.
7	<code>STATus:OPERation</code> status register summary bit The bit is set if an <code>EVENT</code> bit is set in the <code>OPERation</code> status register and the associated <code>ENABLE</code> bit is set to 1. A set bit indicates that the instrument is just performing an action. The type of action can be determined by querying the <code>STATus:OPERation</code> status register.

6.5.4 Event Status Register (ESR) and Event Status Enable Register (ESE)

The ESR is defined in IEEE 488.2. It can be compared with the `EVENT` part of a SCPI register. The event status register can be read out using command `*ESR?`.

The ESE corresponds to the `ENABLE` part of a SCPI register. If a bit is set in the ESE and the associated bit in the ESR changes from 0 to 1, the ESB bit in the STB is set. The ESE register can be set using the command `*ESE` and read using the command `*ESE?`.

Table 6-4: Meaning of the bits used in the event status register

Bit No.	Meaning
0	Operation Complete This bit is set on receipt of the command <code>*OPC</code> exactly when all previous commands have been executed.
1	Not used
2	Query Error This bit is set if either the controller wants to read data from the instrument without having sent a query, or if it does not fetch requested data and sends new instructions to the instrument instead. The cause is often a query which is faulty and hence cannot be executed.
3	Device-dependent Error This bit is set if a device-dependent error occurs. An error message with a number between -300 and -399 or a positive error number, which denotes the error in greater detail, is entered into the error queue.
4	Execution Error This bit is set if a received command is syntactically correct but cannot be performed for other reasons. An error message with a number between -200 and -300, which denotes the error in greater detail, is entered into the error queue.
5	Command Error This bit is set if a command is received, which is undefined or syntactically incorrect. An error message with a number between -100 and -200, which denotes the error in greater detail, is entered into the error queue.
6	User Request This bit is set when the instrument is switched over to manual control.
7	Power On (supply voltage on) This bit is set on switching on the instrument.

6.5.5 Questionable Status Register (STATus:QUESTionable)

This register contains information on questionable instrument states. Such states may occur when the instrument is not operated in compliance with its specifications.

To read the register, use the query commands `STAT:QUEST:COND?` or `STAT:QUEST[:EVEN]?`.

Table 6-5: Meaning of the bits used in the questionable status register

Bit No.	Meaning
0–15	Not used

6.5.6 Operation Status Register (STATus:OPERation)

This condition part contains information on the actions currently being performed by the instrument, while the event part contains information on the actions performed by the instrument since the last readout of the register.

To read the register, use the query commands `STAT:OPER:COND?` or `STAT:OPER[:EVEN]?`.

Table 6-6: Meaning of the bits used in the operation status register

Bit No.	Meaning
0	Calibrating The bit is set during the calibration phase.
1–2	Not used
3	Sweeping This bit is set during a sweep in automatic or single mode.
4–15	Not used

6.5.7 Application of the Status Reporting System

The purpose of the status reporting system is to monitor the status of one or several devices in a measuring system. To do this and react appropriately, the controller must receive and evaluate the information of all devices. The following standard methods are used:

- **Service request** (SRQ) initiated by the instrument
- **Serial poll** of all devices in the bus system, initiated by the controller to find out who sent an SRQ and why
- Query of a **specific instrument status** by commands
- Query of the **error queue**

6.5.7.1 Service Request

Under certain circumstances, the instrument can send a service request (SRQ) to the controller. Usually this service request initiates an interrupt at the controller, to which the control program can react appropriately. An SRQ is always initiated if one or several of bits 2, 4 or 5 of the status byte are set and enabled in the SRE. Each of these bits combines the information of the error queue or the output buffer. To use the possibilities of the service request effectively, all bits should be set to "1" in the enable registers SRE and ESE.

Example:

Use command `*OPC` to generate an SRQ .

`*ESE 1` - set bit 0 of ESE (Operation Complete)

`*SRE 32` - set bit 5 of SRE (ESB).

After its settings have been completed, the instrument generates an SRQ.

The SRQ is the only possibility for the instrument to become active on its own. Each controller program should set the instrument such that a service request is initiated in the case of malfunction. The program should react appropriately to the service request.

6.5.7.2 Serial Poll

In a serial poll, just as with command `*STB`, the status byte of an instrument is queried. However, the query is realized via interface messages and is thus clearly faster.

The serial poll method is defined in IEEE 488.1 and used to be the only standard possibility for different instruments to poll the status byte. The method also works for instruments which do not adhere to SCPI or IEEE 488.2.

The serial poll is mainly used to obtain a fast overview of the state of several instruments connected to the controller.

6.5.7.3 Query of an instrument status

Each part of any status register can be read using queries. There are two types of commands:

- The common commands `*ESR?`, `*IDN?`, `*IST?`, `*STB?` query the higher-level registers.
- The commands of the `STATus` system query the SCPI registers (`STATus:QUEStionable...`)

The returned value is always a decimal number that represents the bit pattern of the queried register. This number is evaluated by the controller program.

Queries are usually used after an SRQ in order to obtain more detailed information on the cause of the SRQ.

6.5.7.4 Error Queue

Each error state in the instrument leads to an entry in the error queue. The entries of the error queue are detailed plain text error messages that can be looked up in the Error Log or queried via remote control using `SYSTEM:ERRor[:NEXT]?` or `SYSTEM:ERRor:ALL?`. Each call of `SYSTEM:ERRor[:NEXT]?` provides one entry from the error queue. If no error messages are stored there any more, the instrument responds with 0, "No error".

The error queue should be queried after every SRQ in the controller program as the entries describe the cause of an error more precisely than the status registers. Especially in the test phase of a controller program the error queue should be queried regu-

larly since faulty commands from the controller to the instrument are recorded there as well.

6.5.8 Reset Values of the Status Reporting System

The following table contains the different commands and events causing the status reporting system to be reset. None of the commands, except of *RST and SYSTem:PRESet affect the functional instrument settings. In particular, DCL does not change the instrument settings.

Table 6-7: Resetting the status reporting system

Event	Switching on supply voltage Power-On-Status-Clear		DCL, SDC (Device Clear, Selected Device Clear)	*RST or SYSTem: PRESet	STATus: PRESet	*CLS
	0	1				
Clear STB, ESR	-	Yes	-	-	-	Yes
Clear SRE, ESE	-	Yes	-	-	-	-
Clear PPE	-	Yes	-	-	-	-
Clear error queue	Yes	Yes	-	-	-	Yes
Clear output buffer	Yes	Yes	Yes	1)	1)	1)
Clear command processing and input buffer	Yes	Yes	Yes	-	-	-

1) The first command in a command line that immediately follows a <PROGRAM MESSAGE TERMINATOR> clears the output buffer.

6.6 General Programming Recommendations

Initial instrument status before changing settings

Manual operation is designed for maximum possible operating convenience. In contrast, the priority of remote control is the "predictability" of the instrument status. Thus, when a command attempts to define incompatible settings, the command is ignored and the instrument status remains unchanged, i.e. other settings are not automatically adapted. Therefore, control programs should always define an initial instrument status (e.g. using the *RST command) and then implement the required settings.

Command sequence

As a general rule, send commands and queries in different program messages. Otherwise, the result of the query may vary depending on which operation is performed first (see also Preventing Overlapping Execution).

Reacting to malfunctions

The service request is the only possibility for the instrument to become active on its own. Each controller program should instruct the instrument to initiate a service request in case of malfunction. The program should react appropriately to the service request.

Error queues

The error queue should be queried after every service request in the controller program as the entries describe the cause of an error more precisely than the status registers. Especially in the test phase of a controller program the error queue should be queried regularly since faulty commands from the controller to the instrument are recorded there as well.

7 Remote Control Commands

In the following, all remote-control commands will be presented in detail with their parameters and the ranges of numerical values.

For an introduction to remote control and the status registers, refer to [Chapter 6, "Remote Control Basics"](#), on page 439.

7.1 Conventions used in SCPI Command Descriptions

Note the following conventions used in the remote command descriptions:

- **Command usage**
If not specified otherwise, commands can be used both for setting and for querying parameters.
If a command can be used for setting or querying only, or if it initiates an event, the usage is stated explicitly.
- **Parameter usage**
If not specified otherwise, a parameter can be used to set a value and it is the result of a query.
Parameters required only for setting are indicated as **Setting parameters**.
Parameters required only to refine a query are indicated as **Query parameters**.
Parameters that are only returned as the result of a query are indicated as **Return values**.
- **Conformity**
Commands that are taken from the SCPI standard are indicated as **SCPI confirmed**. All commands used by the R&S SMJ follow the SCPI syntax rules.
- **Asynchronous commands**
A command which does not automatically finish executing before the next command starts executing (overlapping command) is indicated as an **Asynchronous command**.
- **Reset values (*RST)**
Default parameter values that are used directly after resetting the instrument (*RST command) are indicated as ***RST** values, if available.
- **Default unit**
This is the unit used for numeric values if no other unit is provided with the parameter.
- **Manual operation**
If the result of a remote command can also be achieved in manual operation, a link to the description is inserted.

7.2 Common Commands

Common commands are described in the IEEE 488.2 (IEC 625-2) standard. These commands have the same effect and are employed in the same way on different devi-

ces. The headers of these commands consist of "*" followed by three letters. Many common commands are related to the Status Reporting System.

Available common commands:

*CLS.....	484
*ESE.....	484
*ESR?.....	484
*IDN?.....	485
*IST?.....	485
*OPC.....	485
*OPT?.....	485
*PRE.....	486
*PSC.....	486
*RCL.....	486
*RST.....	486
*SAV.....	487
*SRE.....	487
*STB?.....	487
*TRG.....	487
*TST?.....	487
*WAI.....	488

*CLS

Clear status

Sets the status byte (STB), the standard event register (ESR) and the `EVENT` part of the `QUESTIONABLE` and the `OPERATION` registers to zero. The command does not alter the mask and transition parts of the registers. It clears the output buffer.

Usage: Setting only

*ESE <Value>

Event status enable

Sets the event status enable register to the specified value. The query returns the contents of the event status enable register in decimal form.

Parameters:

<Value> Range: 0 to 255

*ESR?

Event status read

Returns the contents of the event status register in decimal form and subsequently sets the register to zero.

Return values:

<Contents> Range: 0 to 255

Usage: Query only

*IDN?

Identification

Returns the instrument identification.

Return values:

<ID> "Rohde&Schwarz,<device type>,<serial number>,<firmware version>"

Example: Rohde&Schwarz, SMJ,
1407.6004k02/000000, 3.1.17.1-03.01.158

Usage: Query only

Manual operation: See "[Hardware Options / Software Options](#)" on page 134

*IST?

Individual status query

Returns the contents of the IST flag in decimal form. The IST flag is the status bit which is sent during a parallel poll.

Return values:

<ISTflag> 0 | 1

Usage: Query only

*OPC

Operation complete

Sets bit 0 in the event status register when all preceding commands have been executed. This bit can be used to initiate a service request. The query form writes a "1" into the output buffer as soon as all preceding commands have been executed. This is used for command synchronization.

*OPT?

Option identification query

Queries the options included in the instrument. For a list of all available options and their description refer to the data sheet.

Return values:

<Options> The query returns a list of options. The options are returned at fixed positions in a comma-separated string. A zero is returned for options that are not installed.

Usage: Query only

Manual operation: See "[Hardware Options / Software Options](#)" on page 134

***PRE** <Value>

Parallel poll register enable

Sets parallel poll enable register to the indicated value. The query returns the contents of the parallel poll enable register in decimal form.

Parameters:

<Value> Range: 0 to 255

***PSC** <Action>

Power on status clear

Determines whether the contents of the `ENABLE` registers are preserved or reset when the instrument is switched on. Thus a service request can be triggered when the instrument is switched on, if the status registers ESE and SRE are suitably configured. The query reads out the contents of the "power-on-status-clear" flag.

Parameters:

<Action> 0 | 1

0

The contents of the status registers are preserved.

1

Resets the status registers.

***RCL** <Number>

Recall

Loads the instrument settings from an intermediate memory identified by the specified number. The instrument settings can be stored to this memory using the command [*SAV](#) with the associated number.

It also activates the instrument settings which are stored in a file and loaded using the `MMEMory:LOAD <number>, <file_name.extension>` command.

Manual operation: See "[Recall](#)" on page 162

***RST**

Reset

Sets the instrument to a defined default status. The default settings are indicated in the description of commands.

The command is equivalent to `SYSTem:PRESet`.

Usage: Setting only

Manual operation: See "[Preset](#)" on page 128

***SAV** <Number>

Save

Stores the current instrument settings under the specified number in an intermediate memory. The settings can be recalled using the command ***RCL** with the associated number.

To transfer the stored instrument settings in a file, use the command **:MMEMory:STORe:STATe**.

Manual operation: See "Save" on page 160

***SRE** <Contents>

Service request enable

Sets the service request enable register to the indicated value. This command determines under which conditions a service request is triggered.

Parameters:

<Contents> Contents of the service request enable register in decimal form.
Bit 6 (MSS mask bit) is always 0.
Range: 0 to 255

***STB?**

Status byte query

Reads the contents of the status byte in decimal form.

Usage: Query only

***TRG**

Trigger

Triggers all actions waiting for a trigger event. In particular, ***TRG** generates a manual trigger signal. This common command complements the commands of the **TRIGger** subsystem.

Usage: Event

***TST?**

Self-test query

Initiates self-tests of the instrument and returns an error code

Return values:

<ErrorCode> **integer > 0 (in decimal format)**
 An error occurred.
 (For details see the Service Manual supplied with the instrument).

0
 No errors occurred.

Usage: Query only

***WAI**

Wait to continue

Prevents servicing of the subsequent commands until all preceding commands have been executed and all signals have settled (see also command synchronization and [*OPC](#)).

Usage: Event

7.3 Preset Commands

The preset commands are not bundled in one subsystem. Therefore, they are listed separately in this section. In addition, a specific preset command is provided for each digital standard and for the fader. These specific commands are described in the associated subsystems.

Four presetting actions are available:

- Activating the default state of all internal instrument functions ([*RST](#) on page 486). Functions that concern the integration of the instrument into a measurement setup are not changed, e.g. GPIB address or reference oscillator source settings.
- Activating the preset state of the parameters related to the selected signal path ([:SOURCE<hw>:PRESet](#) on page 489)
- Activating the preset state of all parameters that are not related to the signal path ([:DEVICE:PRESet](#) on page 488)
- Activating the original state of delivery (factory reset, [:SYSTEM:FPRreset](#) on page 489). Only functions that are protected by a password remain unchanged as well as the passwords themselves.

:DEVICE:PRESet

Presets all parameters which are not related to the signal path, including the LF generator.

It also includes presetting the bit/block error measurement.

Example: presets all instruments settings that are not related to the signal path

Usage: Event

:SOURce<hw>:PRESet

The command presets all parameters which are related to the selected signal path.

Fading (if available) and transient recorder are only preset by command *RST.

Example: SOUR: PRES
 presets all settings that are related to signal path

Usage: Event

:SYSTem:PRESet

Triggers an instrument reset. It has the same effect as:

- the PRESET key on the front panel
- the *RST command

For an overview of the settings affected by the preset function, see [Chapter 5.2.2, "Default Instrument Settings - Preset Key"](#), on page 128.

Example: SYST: PRES
 All instrument settings (also those that are not currently active)
 are reset to their default values.

Usage: Setting only

:SYSTem:FPReset

Triggers an instrument reset to the original state of delivery.

Note: Since Factory Preset resets the Remote Channel and network settings to the default values, executing Factory Preset via remote control terminates the connection to the instrument, if these settings had been configured to values different to the default ones!

The factory preset function resets nearly all instrument settings. In addition to the regular preset by means of the PRESET key, a "Factory Preset" resets also the following values:

- Reference frequency settings ("Ref Oscillator" menu)
- Power on settings ("Level/EMF" menu)
- Network settings including hostname ("Setup" menu)
- Remote Channel settings including GPIB address ("Setup" menu)
- Start/Stop Display Update ("Setup" menu)
- Display and keyboard settings ("Setup" menu).

To maintain security, password settings and all settings protected by these passwords like disabled USB and LAN connections are not changed.

Not affected by the "Factory Preset" are also user data, lists or instrument settings files, created for example by means of the Save/Recall function.

Example:	<code>SYST:FPR</code> all instrument settings (also those that are not currently active) are reset to the factory values.
Usage:	Event
Manual operation:	See " Factory Preset " on page 152

7.4 Waveform and List Format

The R&S SMJ uses a tag-oriented format for externally or internally generated waveforms as well as for data and control lists. The data can be transmitted via the GPIB interface from an external computer to the instrument and vice versa.

For these purposes the file is transmitted as a binary data block, using SCPI command `[:SOURce<hw>] :BB:ARbitrary:WAVEform:DATA`.



A waveform version number is not necessary due to the flexible, tag-based form.

Tags are self-contained information units. Their general format is `{Name: Data}` or `{Name-Length: Data}`. The colon separates the name part and the data part. The colon can be followed by a space for the sake of legibility.

The **Name** identifies the tag. It is always expressed in capital letters.

The **Data** is tag-specific, and in most cases it is in ASCII plain text.

The **Length** specifies the number of bytes in a `WAVEFORM` tag, a `DATA LIST` tag or a `EMPTYTAG` (from `: to }`, ASCII integer).

Each waveform file must begin with the `TYPE` tag. The sequence of the remaining tags is arbitrary. For each tag an indication shows whether it must be included in the file concerned (mandatory) or may be included (optional).

Unknown tags are not analyzed by the R&S SMJ. On the other hand they are left unchanged, are saved without an error message and can be read back again.

R&S AMIQ waveforms can also be loaded on the instrument, where they are converted internally into an R&S SMJ waveform.

7.4.1 Tag Description

This section first describe the mandatory `TYPE` tag which identifies the file and is always located at the start of the file. The rest of the tags used in the R&S SMJ are then described in alphabetical order. Most tags are valid for all three file types. If a tag is valid only for a single file type, e.g. only for a waveform, this fact is indicated in the description.

{TYPE: magic, xxxxxxxx}.....	491
{CLOCK: frequency}.....	492
{COMMENT: string}	492
{COPYRIGHT: string}.....	493
{DATA BITLENGTH: BitLength}.....	493
{DATA LIST-Length: #d0d1...dx...dN-1...}.....	493
{DATE: yyyy-mm-dd;hh:mm:ss}.....	494
{EMPTYTAG-Length: #EmptySequence}.....	494
{CONTROL LENGTH: ControlLength}.....	495
{LEVEL OFFS: RMSOffset_dB,PeakOffset_dB}.....	496
{SAMPLES: Samples}.....	497
{[TRACE] LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	497
{WAVEFORM-Length: #I0Q0I1Q1...IxQx...IN-1QN-1...}.....	498
{MWV_SEGMENT_COUNT: NumOfSeg}.....	499
{MWV_SEGMENT_LENGTH: SamplesSeg0, SamplesSeg1, ..., SamplesSegN-1}.....	499
{MWV_SEGMENT_START: SampleStartOffsetSeg0, SampleStartOffsetSeg1, ..., SampleStartOffsetSegN-1}.....	500
{MWV_SEGMENT_CLOCK_MODE: Mode}.....	500
{MWV_SEGMENT_CLOCK: ClockSeg0, ClockSeg1, ..., ClockSegN-1}.....	501
{MWV_SEGMENT_LEVEL_OFFS: RMSOffs_dBSg0,PeakOffs_dBSg0, ..., RMSOffs_dBSgN-1, PeakOffs_dBSgN-1}.....	502
{MWV_SEGMENT_FILES: "FileNameSeg0.wv", "FileNameSeg1.wv", ..., "FileNameSegN-1.wv"}.....	502
{MWV_SEGMENTx_COMMENT: text}.....	502
{CONTROL LIST WIDTH4-Length: #m0m1...mx...mM-1}.....	502

{TYPE: magic, xxxxxxxx}

(mandatory, must be the first tag in the file)

Identifies the file as a valid R&S SMJ file. It must be present and must be the first in the waveform. If a file of the same name exists on the target medium, it is overwritten.

Setting parameters:

magic Designates the file type and has the following values:

SMU-WV

A valid R&S SMJ waveform.

SMU-MWV

A valid R&S SMJ multi-segment waveform.

SMU-DL

A valid R&S SMJ data list.

SMU-CL

A valid R&S SMJ control list.

xxxxxxx

Is an ASCII-coded checksum of the data part of the `WAVEFORM` tag in the file. This value is always 0 for data lists and control lists.

The checksum for waveforms is used for detecting transmission errors. If the `TYPE` tag contains 0 or a non-numeric value for the checksum, it is ignored.

It is calculated in accordance with the algorithm given below, where 'start' is a pointer to the first byte after the '#' character in the `WAVEFORM` tag and 'length' is the number of bytes between 'start' and the closing curly bracket (excluding the latter; 'length' must be divisible by 4 without a remainder):

```
UINT32 checksum(void *start, UINT32 length)
{
    UINT32 i, result = 0xA50F74FF;
    for(i=0; i < length/4; i++)
        result = result ^ ((UINT32 *)start)[i];
    return(result);
}
```

Example:

```
{TYPE: SMU-WV,106656}
BB:ARB:WAV:TAG? 'TYPE'
Queries the content of the TYPE tag.
Response: 'SMU-WV,106656'
This is a valid waveform.
```

{CLOCK: frequency}**(mandatory for waveforms)**

The tag specifies the clock frequency at which the waveform has to be output, in Hz (on multi-segment waveforms this tag contains the maximal clock of all segments).

A query of `ARB:CLOCK?` after loading the waveform returns the value set using the `CLOCK` tag. This value can later be altered with the command `ARB:CLOCK?`.

Example:

```
{CLOCK: 54000000}
BB:ARB:WAV:TAG? 'CLOCK'
Queries the content of the CLOCK tag.
Response: 54000000
The clock frequency is set to 54 MHz.
```

Usage:

Setting only

{COMMENT: string}

The tag contains a plain text ASCII string of arbitrary length. The string is not analyzed in the R&S SMJ. It is used to describe the file. The string is allowed to contain all printable ASCII characters except the closing curly bracket.

Example: {COMMENT: File with data for 3GPP enhanced channels}
 BB:ARB:WAV:TAG? 'COMMENT'
 queries the content of the COMMENT tag of the selected waveform file.
 Response: 'File with data for 3GPP enhanced channels'
 the comment on the waveform reads "File with data for 3GPP enhanced channels".

Usage: Setting only

{COPYRIGHT: string}

The tag contains an ASCII string of arbitrary length. The string is not analyzed in the R&S SMJ. It is used to store copyright information about the file content.

Example: {COPYRIGHT: Rohde&Schwarz}
 BB:ARB:WAV:TAG? 'COPYRIGHT'
 queries the content of the COPYRIGHT tag of the selected waveform file.
 Response: 'Rohde&Schwarz'
 copyright resides with Rohde&Schwarz.

Usage: Setting only

{DATA BITLENGTH: BitLength}

(mandatory for data lists)

The tag contains the length of the data held in the DATA LIST tag in bits in ASCII format.

Example: {DATA BITLENGTH: 444}
 BB:DM:DLIS:TAG? 'DATA BITLENGTH'
 queries the content of the DATA BITLENGTH tag of the selected data list file.
 Response: '444'
 the data list is 444 bits long.

Usage: Setting only

{DATA LIST-Length: #d0d1...dx...dN-1...}

(mandatory for data lists)

The tag contains the actual bit sequence of the data list in binary format.

Setting parameters:

Length Defines the number of bytes in the DATA LIST tag in ASCII Format (for format see WAVEFORM length).

dx Data bits in binary format (8-bit unsigned characters, MSB first).

Example: DATA LIST-17: #d0d1...dx...d127}
16 bytes containing 128 data bits, first bit is the MS bit of the first byte.

Usage: Setting only

{DATE: yyyy-mm-dd;hh:mm:ss}

(optional)

The tag contains the date and time at which the file was created. The year must be expressed as four digits. The instrument does not analyze this tag.

Example: {DATE: 2009-04-02;14:32:12}
BB:ARB:WAV:TAG? 'DATE'
queries the content of the DATE tag of the selected waveform file.

Response: '2009-04-02;14:32:12'
the waveform was created on April 2, 2009 at 14 hrs 32 min

Usage: Setting only

{EMPTYTAG-Length: #EmptySequence}

(mandatory in automatically generated one and multi-segment waveforms)

This tag is empty, i.e. contains no data, and is used as placeholder.

Setting parameters:

Length An ASCII integer value that specifies the number of bytes in the EMPTYTAG, i.e. defines the number of bytes from the colon : to the end brace }

Note: If you change the content of a waveform file, change also the {EMPTYTAG-Length} value. For example, if you add a tag or add bytes to a tag, reduce the length by the number of newly introduced bytes.

EmptySequence An empty sequence containing blanks only. The number of used blanks is calculated as the difference between the hex addresses of the {WAVEFORM} tag and the hash sign # in the {EMPTYTAG}.

The {WAVEFORM} tag always starts at hex address #4000.

Example:

```
{TYPE:SMU-WV, 837236424}
{COPYRIGHT:2003 Rohde&Schwarz SMU}
{DATE:2012-07-11;14:38:01}
{SAMPLES:80000}
{CLOCK:86666666.666666666}
{VECTOR MAX:1.000000038569158}
{LEVEL OFFS:3.333553817875577e-07,0}
{MARKER LIST 1:0:1;1:0;1249:0}
{MARKER LIST 2:0:1;1:0;1249:0}
{MARKER LIST 3:0:1;1:0;1249:0}
{MARKER LIST 4:0:1;1:0;1249:0}
{EMPTYTAG-15947:# ...}
{WAVEFORM-320017:#IQIQIQ...}
```

The example waveform file contains 436 (0x1b4) bytes before the # sign in the EMPTYTAG; the hex address of the # sign is 0x1b5. The {WAVEFORM} starts at 0x4000. The EMPTYTAG contains 15946 blanks and has a length of (15946+1) bytes.

Usage: Setting only

{CONTROL LENGTH: ControlLength}

(optional / recommended for marker and control lists)

The tag specifies the length of *all* control or marker list in ASCII format.

The control length influences the way the marker and control lists are processed, in particular the way traces are repeated; see Figure 7-1.

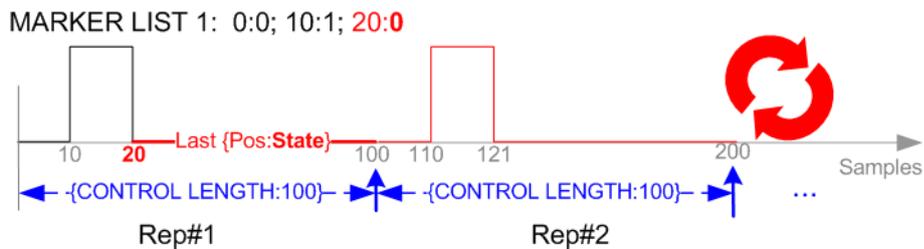


Figure 7-1: Example: Processing of MARKER TRACE if CONTROL LENGHT is specified

If the CONTROL LENGTH tag is not used, the marker and control list length are determined by the last position, that is the last {Pos:State} couple, defined in the particular [TRACE] LIST tag; see Figure 7-2.



Figure 7-2: Example: Processing of MARKER TRACE if CONTROL LENGHT is not used

To maintain marker signals and waveform data synchronized, set the `CONTROL LENGTH` to be equal to the number of samples specified with the tag `SAMPLES`.

See also [Chapter 7.4.2, "How to Define Periodically Repeating Traces"](#), on page 503.

Example:

```
{CONTROL LENGTH: 500}
SOURCE:BB:ARBitary:CLISt:TAG? 'CONTROL LENGTH'
Queries the length of the control list.
Response: 500
```

{LEVEL OFFS: RMSOffset_dB,PeakOffset_dB}

(recommended for waveforms)

The tag determines the level of the ARB signal in the waveform file. The offset levels define the offset of RMS and peak value relative to the 16-bit full scale modulation (-32767 to + 32767) = 0 dB.

Setting parameters:

RMSOffset_dB Defines the RMS level offset of the signal relative to full scale ARB signal in the `WAVEFORM` tag. The offset is defined in ASCII float format. The value is always positive.
A 3 dB value indicates that the RMS level of the signal is 3 dBs below the full scale.
full scale = max. amplitude of vector of I/Q samples = $|S_{IQ}|_{max} = \sqrt{I^2+Q^2}_{max} = 0$ dB

PeakOffset_dB Defines the peak level offset of the signal relative to full scale for the ARB signal in the `WAVEFORM` tag. The offset is defined in ASCII float format.
The value usually equals 0 dB as usually the I/Q samples (signed 16-bit integer values) are modulated to full scale: Full scale = 0 dB = max. amplitude of vector of I/Q samples = $|S_{IQ}|_{max} = \sqrt{I^2+Q^2}_{max} = (2^{15})-1 = 32767$.

A positive `PeakOffset_dB` value indicates that a headroom to full scale is provided when generating the waveform. A negative `PeakOffset_dB` value indicates that overrange is likely for some samples, i.e. clipping might occur.

The crest factor can be calculated from the two values as follows:

$$\text{Crest Factor} = |\text{PeakOffset_dB} - \text{RMSOffset_dB}|$$

Example:

```
{LEVEL OFFS: 3.45,2}
BB:ARB:WAV:TAG? 'LEVEL OFFS'
Queries the content of the LEVEL OFFS tag of the selected waveform file.
Response: 3.45,2
The level of the waveform is below full scale, clipping does not occur.
```

Usage: Setting only

{SAMPLES: Samples}**(recommended for waveforms)**

The tag contains the number of I/Q samples in the waveform in ASCII format.

On multi-segment waveforms, this tag contains the total I/Q samples of all segments.

Example: {SAMPLES: 1000}
 BB:ARB:WAV:TAG? 'SAMPLES'
 Queries the content of the SAMPLES tag of the selected waveform file.
 Response: 1000
 The waveform contains 1000 I/Q samples.

Usage: Setting only

See also [Chapter 7.4.2, "How to Define Periodically Repeating Traces"](#), on page 503.

{[TRACE] LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}**(mandatory for control lists / optional for waveforms)**

The tag contains the data for the marker and control signals in the control list or the marker signals of ARB waveforms.

Traces are processed different, depending on the selected [CONTROL LENGTH](#).

See also [Chapter 7.4.2, "How to Define Periodically Repeating Traces"](#), on page 503.

Setting parameters:

[TRACE]	MARKER BURST LEVATT CW MODE HOP MAP Name of the marker or control signal. For ARB waveforms, it is only meaningful to define marker signals; in the ARB multi-segment waveforms these tags are ignored!
[#]	1 .. 4 Sets the marker or control trace number; supported is only LEVATT LIST 1.
Pos	Specifies in ASCII format the position (i.e. sample number or data value), with effect from which the binary State of the marker or of the control signal changes.
State	0 1 Specifies the binary state of the marker or of the control signal from Pos _x to Pos _{x+1} exclusive in ASCII format.

Example: {MARKER LIST 1: 0:0;10:1;20:0;30:1}
 BB:DM:CLIS:TAG? 'MARKER LIST 1'
 Queries the content of the MARKER LIST 1 tag of the selected control list file.

Response: '0:0;10:1;20:0;30:1'

The marker setting for samples 0 to 9 = 0 (low), for 10 to 19 = 1 (high) and for 20 to 29 = 0. From sample 30 onward the marker setting = 1.

Example: {LEVATT LIST 1: 0:0;10:1;20:0;30:1}
 BB:DM:CLIS:TAG? 'LEVATT LIST 1'
 Queries the content of the LEVATT LIST 1 tag of the selected control list file.

Response: '0:0;10:1;20:0;30:1'

Level attenuation applies to data values 10 to 19 (high) and from data value 30 onward.


Usage: Setting only

{WAVEFORM-Length: #I0Q0I1Q1...IxQx...IN-1QN-1...}

(mandatory for waveforms)

The tag contains the actual waveform data or multi-segment waveform data (I/Q stream).

The following figure shows the principle of multi-segment work mode.

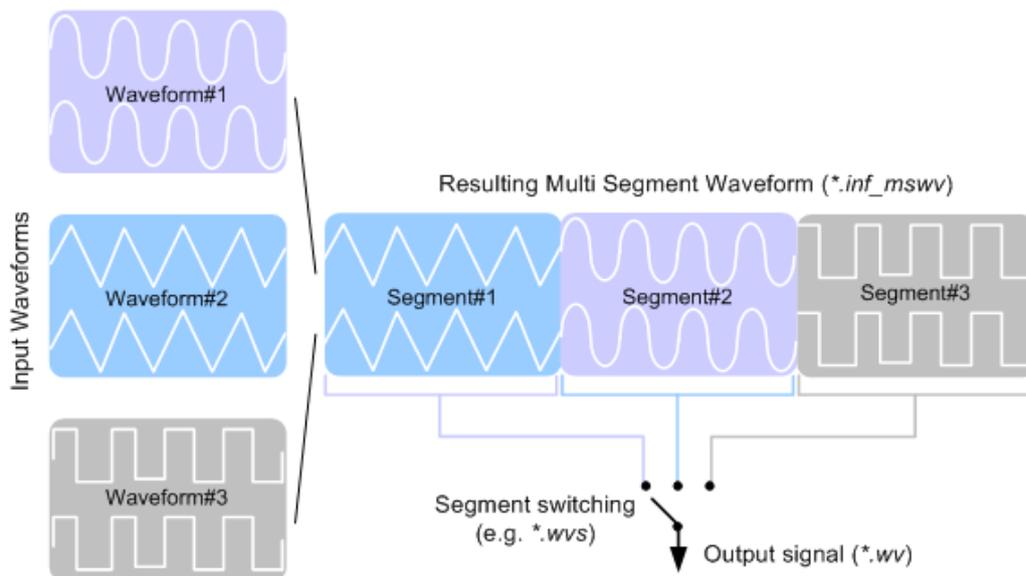

Setting parameters:

Length Specifies the number of bytes in a WAVEFORM tag and is calculated as follows:

$$\text{Length} = \text{Number of I/Q pairs} * 4 \text{ (2 bytes per I and 2 bytes per Q value)} + 1 \text{ byte (the length of the \#)}$$

IxQx	<p>$I \times Q \times \dots$ represents binary data (16-bit signed integer in 2's complement notation) containing the I and Q component alternately and starting with the I component. Each component consists of 2 bytes in Little endian format representation, i.e least significant byte (LSB) first.</p> <p>The values of the 2 bytes in an I component and a Q component are in the range 0x0 to 0xFFFF (-32767 to +32767). This value is transferred to the D/A converter.</p> <p>This tag is also used to store multi-segment waveforms. The I/Q streams of the individual waveforms are directly concatenated to one collectively waveform I/Q stream.</p> <p>The number of segments and the start offset and length of the individual segments inside the total waveform I/Q stream is determined by the additional tags MWV_SEGMENT_COUNT, MWV_SEGMENT_START, and MWV_SEGMENT_LENGTH. Further MWV_SEGMENT_ . . . tags are also available, for example for level and clock information.</p>
Example:	<p>One segment waveform {WAVEFORM-401:#I₀,Q₀,I₁,Q₁,I₂,Q₂,...I₉₉,Q₉₉} 100 I/Q pairs with 4 bytes each are transmitted - none multi-segment</p>
Example:	<p>Multi-segment waveform {WAVEFORM-1201: #I_{0,Seg0},Q_{0,Seg0},I_{1,Seg0},Q_{1,Seg0},...I_{99,Seg0},Q_{99,Seg0},I_{0,Seg1},Q_{0,Seg1},I_{1,Seg1},Q_{1,Seg1},...I_{199,Seg1},Q_{199,Seg1}} 2 segments: segment 0 with 100 I/Q pairs; segment 1 with 200 I/Q pairs. Each I/Q pair consists of 2*16 bit = 4 bytes</p>
Usage:	Setting only

{MWV_SEGMENT_COUNT: NumOfSeg}

(mandatory for multi-segment waveforms)

The tag contains the number of segments in the multi-segment waveform in ASCII integer format.

Example: {MWV_SEGMENT_COUNT: 2}
Multi-segment waveform with 2 segments

Usage: Setting only

{MWV_SEGMENT_LENGTH: SamplesSeg0, SamplesSeg1, ..., SamplesSegN-1}

(mandatory for multi-segment waveforms)

The tag contains a list of I/Q sample lengths for every segment in the multi-segment waveform in ASCII integer format.

Example: {MWV_SEGMENT_LENGTH: 100,200}
2 segments: 100 samples in segment 0 and 200 samples in segment 1.

Usage: Setting only

**{MWV_SEGMENT_START:
SampleStartOffsetSeg0, SampleStartOffsetSeg1, ..., SampleStartOffsetSegN-1}**

(mandatory for multi-segment waveforms)

The tag contains a list of I/Q sample start offsets for every segment in the multi-segment waveform in ASCII integer format.

Example: {MWV_SEGMENT_START: 0,100}
2 segments with 100 samples in segment 0 and 200 samples in segment 1.
The start offset of first segment is 0 samples, start offset of next segment 1 is the sample length of segment 0 = 100 samples.

Usage: Setting only

{MWV_SEGMENT_CLOCK_MODE: Mode}

(mandatory for multi segment waveforms)

The tag contains a string in ASCII format which supplies the clock rate mode, that was used for calculation of the multi segment output waveform.

The tag `CLOCK` contains always the highest clock rate of all segments.

The tag `MWV_SEGMENT_CLOCK` contains the clock rates of the individual segments.

Setting parameters:

Mode

UNCHANGED

The segments may have different clock rates.

During the multi segment calculation, the clock rates of all individual original waveforms were taken over unchanged in the segments of the multi segment output waveform (no software resampling is done).

If the segments have different clock rates, there are some restrictions on signal output, i.e. switching per external trigger and seamless switching between segments is not possible.

If all segments have already an identical clock rate, this mode is usually set to `HIGHEST`.

HIGHEST

All segments have an identical clock rate, which is the highest clock rate of all original waveforms.

If an individual original waveform has a lower clock rate, an upsampling to the highest clock rate will be performed on calculation of the multi segment output waveform.

USER

All segments have an identical clock rate, which is given by the user.

Note: Only upsampling is allowed, no downsampling!

If an individual original waveform has a lower clock rate, an upsampling to the user clock rate will be performed on calculation of the multi segment output waveform.

Example:

```
{MWV_SEGMENT_CLOCK_MODE: UNCHANGED}
{MWV_SEGMENT_CLOCK_MODE: HIGHEST}
{MWV_SEGMENT_CLOCK_MODE: USER}
```

Usage:

Setting only

{MWV_SEGMENT_CLOCK: ClockSeg0, ClockSeg1, ..., ClockSegN-1}**(mandatory for multi segment waveforms)**

The tag contains a list of clock frequencies for every segment in the multi segment waveform in ASCII floating point format.

Example:

```
{MWV_SEGMENT_CLOCK: 100e6,80e6}
```

2 segments: clock of segment 0 is 100 MHz, clock of segment 1 is 80 MHz.

Note: If the segments have different clock frequencies, there are some restrictions on signal output, i.e. seamless switching between segments is only possible, if all segments have the same clock frequency. Software resampling (upsampling) can be used to bring all segments to the same clock.

Usage:

Setting only

{MWV_SEGMENT_LEVEL_OFFS:
RMSOffs_dBSg0,PeakOffs_dBSg0, ..., RMSOffs_dBSgN-1, PeakOffs_dBSgN-1}

(mandatory for multi segment waveforms)

The tag contains a list of level pairs in ASCII floating point format, one pair for every segment in the multi segment waveform. The first value of a level pair defines the rms offset and the second value the peak offset relative to the 16-bit full scale modulation (-32767; + 32767) = 0 dB. The meaning of one level value pair is the same as in the **LEVEL OFFS** tag for normal waveforms.

Example: {MWV_SEGMENT_LEVEL_OFFS: 3.0,0.0,6.0,0.0}
 2 segments: RMS level of segment 0 is 3dB below full scale;
 RMS level of segment 1 is 6dB below full scale. Peak level of
 both segments is 0 dB full scale.

Usage: Setting only

{MWV_SEGMENT_FILES:
"FileNameSeg0.wv", "FileNameSeg1.wv", ..., "FileNameSegN-1.wv"}

(optional for multi segment waveforms)

The tag contains a list of file names for every segment in the multi segment waveform in ASCII format.

Example: {MWV_SEGMENT_FILES: "D:\user\sine.wv", "D:
 \user\rect.wv"}

Usage: Setting only

{MWV_SEGMENTx_COMMENT: text}

(optional for multi segment waveforms)

The tag contains a user comment for a specific segment $x = [0 \dots \text{NumOfSeg}-1]$ in the multi segment waveform in ASCII format.

Example: {MWV_SEGMENT1_FILES: segment 1 contains a QPSK
 signal.}

Usage: Setting only

{CONTROL LIST WIDTH4–Length: #m0m1...mx...mM-1}

(optional for waveforms and multi segment waveforms)

The tag contains a binary marker element stream, which will be given out synchronously to the I/Q sample sequence. One marker element m_x consists of 4 bit, which are assigned to the 4 possible marker lines of the instrument (one bit per marker line). One 4 bit marker elements is needed for every I/Q sample in the **WAVEFORM** tag - so the number of marker elements M should be equal to the number of I/Q samples. The **CONTROL LENGTH** tag has to contain the number of all marker elements M .

MSB 7	Byte							LSB 1
Marker element m_x (synchronous to I/Q Sample x)				Marker element m_{x+1} (synchronous to I/Q Sample $x+1$)				
Marker 4	Marker 3	Marker 2	Marker 1	Marker 4	Marker 3	Marker 2	Marker 1	

Figure 7-3: Marker element in 4-bit binary format bit order

For standard waveforms the `MARKER LIST x` tags are a more compact way to define markers, but in principle this `CONTROL LIST WIDTH4` format can also be used instead of the `MARKER LIST x` tags.

For multi segment waveforms this `CONTROL LIST WIDTH4` format is required for marker definition. The binary marker streams of the individual segments are directly concatenated (without any gap) to one collectively marker stream.

Setting parameters:

Length Defines the number of bytes in the `CONTROL LIST WIDTH4` tag in ASCII Format and is calculated as follow:

$$\text{Length} = \text{Size of "\#"} (1 \text{ byte}) + \text{Number of marker elements } m_x * (4 \text{ bit}) / (8 \text{ bits/byte})$$
The value is rounded up for byte alignment.

m_x Marker element in 4-bit binary format.

Example: {`CONTROL LIST WIDTH4-51: # $m_0m_1\dots m_x\dots m_{99}$` }
100 marker elements, each marker element with 4 bits

Usage: Setting only

7.4.2 How to Define Periodically Repeating Traces

If a marker trace is required that marks for example each frame start, it is sufficient to define the trace ones and repeat it over the length of a waveform. This is useful if you describe a long waveform and a periodical marker is required.

The following examples use marker traces; control lists are processed in the same way.

To define periodical marker trace

The waveform in the example on [Figure 7-4](#) consists of 3 frames, each frame is 100-samples long. The waveform is processed continuously ("Trigger Mode > Auto").

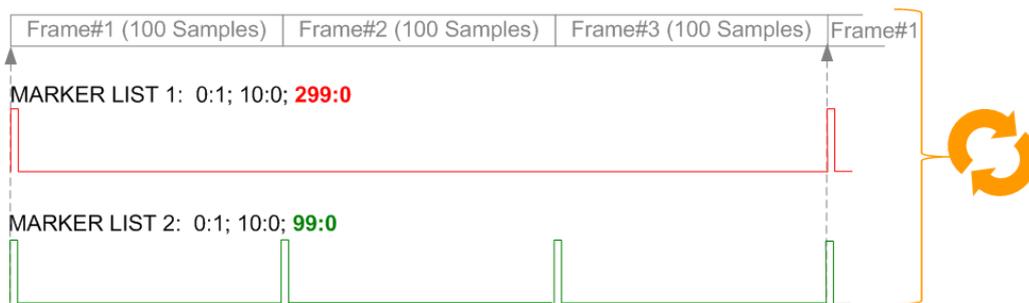


Figure 7-4: Example: Defining marker traces (*CONTROL LENGTH* tag is not used)

To define a restart marker and a frame start marker, use the following tags:

1. The waveform is 300 samples long, i.e. set `{SAMPLES: 300}`.
2. Set two `[TRACE] LIST` tags:
 - For Marker 1 that acts as a restart marker:
`{MARKER LIST 1: 0:1; 10:0; 299:0}`
 - For Marker 2 that marks each frame start:
`{MARKER LIST 2: 0:1; 10:0; 99:0}`
3. Do not use the `CONTROL LENGTH` tag.

The length of the repeated patterns is determined by the last sample number in the `[TRACE] LIST`, that is the last `{Pos:State}`.

Example: How the `CONTROL LENGTH` tag influences the processing of the traces

For the example on [Figure 7-4](#), use the same marker traces and set the `CONTROL LENGTH` tag, e.g. `{CONTROL LENGTH: 150}`.

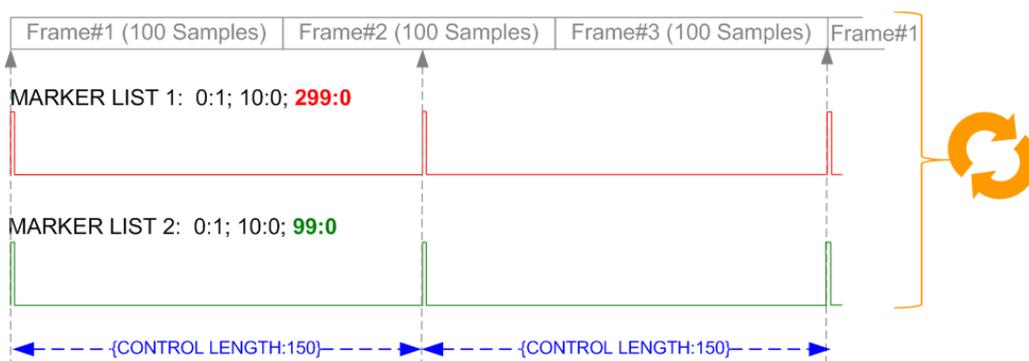


Figure 7-5: Example: Processing of control signals if the *CONTROL LENGTH* tag is used

The length of **all** control signals is determined by the `CONTROL LENGTH`. Observe how the marker traces are processed. In this example, both marker traces are repeated each 150 samples.

7.4.3 How to Manually Create a Waveform Using Tag File Format

The provided example uses a sine function in the I channel and a cosine function in the Q channel, each with 20 points. The example uses a short program written in the programming language C to calculate the sine and cosine values (see [Example "C-program for creating a waveform file"](#) on page 508). They are stored in the file `SICO.txt`. The decimal values in `SICO.txt` are normalized such that they are between -1.0 and $+1.0$. The data is converted into binary format. The appropriate mandatory tags are added and the data is packed into the `WAVEFORM` tag. As result, the waveform file `SICO.wv` is generated.

This example follows the general principle of creating of a waveform manually, using the tag file format. The [Figure 7-6](#) illustrates this general workflow.

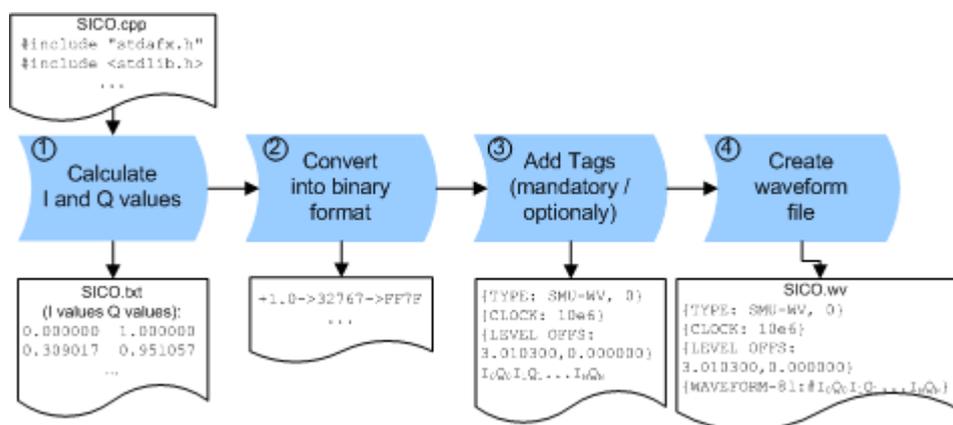


Figure 7-6: Principle of creating a waveform manually

The following steps outline how to create the waveform file `SICO.wv`:

1. Calculate the sine and cosine values, e.g. use the `SICO.cpp` program.
The result is stored in the file `SICO.txt`.

```

0.000000  1.000000
0.309017  0.951057
0.587785  0.809017
0.809017  0.587785
0.951057  0.309017
1.000000  -0.000000
0.951057  -0.309017
0.809017  -0.587785
0.587785  -0.809017
0.309017  -0.951057
-0.000000 -1.000000
-0.309017 -0.951056
-0.587785 -0.809017
-0.809017 -0.587785
-0.951056 -0.309017
-1.000000  0.000000
-0.951056  0.309017
-0.809017  0.587785
-0.587785  0.809017
-0.309017  0.951057

```

Figure 7-7: Contents of SICO.txt: first column Sine (I), second column Cosine (Q)

- Convert the values from the file `SICO.txt` into binary format consisting of 16-bit signed integer numbers. The numeric range between -1.0 and $+1.0$ corresponds to the modulation range of the waveform 16-bit D/A converter of -32767 to $+32767$.

```

+1.0 -> 32767 -> = 0x7FFF
0.0 -> 0 -> = 0x0000
-1.0 -> -32767 -> = 0x8001

```

The [Figure 7-8](#) shows the calculation and conversion steps. The highlighted columns contain the resulting I and Q values represented in Little endian format.

Sample n	deg = 360°/20 * n	I = sin(deg)	I _{quant,dec} = I * FS = I * (2 ¹⁵ -1)	I _{quant,hex}	I _{quant,hex} (Little endian waveform file representation)	Q = cos(deg)	Q _{quant,dec} = I * FS = I * (2 ¹⁵ -1)	Q _{quant,hex}	Q _{quant,hex} (Little endian waveform file representation)
0	0	0.000000	0	0000	0000 I ₀	1.000000	32767	7FFF	FF7F Q ₀
1	18	0.309017	10126	278E	8E27	0.951057	31163	79BB	BB79
2	36	0.587785	19260	4B3C	3C4B	0.809017	26509	678D	8D67
3	54	0.809017	26509	678D	8D67	0.587785	19260	4B3C	3C4B
4	72	0.951057	31163	79BB	BB79	0.309017	10126	278E	8E27
5	90	1.000000	32767	7FFF	FF7F	0.000000	0	0000	0000
6	108	0.951057	31163	79BB	BB79	-0.309017	-10126	D872	72D8
7	126	0.809017	26509	678D	8D67	-0.587785	-19260	B4C4	C4B4
8	144	0.587785	19260	4B3C	3C4B	-0.809017	-26509	9873	7398
9	162	0.309017	10126	278E	8E27	-0.951057	-31163	8645	4586
10	180	0.000000	0	0000	0000	-1.000000	-32767	8001	0180
11	198	-0.309017	-10126	D872	72D8	-0.951057	-31163	8645	4586
12	216	-0.587785	-19260	B4C4	C4B4	-0.809017	-26509	9873	7398
13	234	-0.809017	-26509	9873	7398	-0.587785	-19260	B4C4	C4B4
14	252	-0.951057	-31163	8645	4586	-0.309017	-10126	D872	72D8
15	270	-1.000000	-32767	8001	0180	0.000000	0	0000	0000
16	288	-0.951057	-31163	8645	4586	0.309017	10126	278E	8E27
17	306	-0.809017	-26509	9873	7398	0.587785	19260	4B3C	3C4B
18	324	-0.587785	-19260	B4C4	C4B4	0.809017	26509	678D	8D67
19	342	-0.309017	-10126	D872	72D8	0.951057	31163	79BB	BB79

Figure 7-8: I and Q values calculation and conversion

- Use an ASCII editor which is able to handle binary data. Create and add the following mandatory tags before this binary data set can be further processed:
 - TYPE
 - CLOCK
 - LEVEL OFFS

An example of the SICO.wv file contents could be:

```
{TYPE: SMU-WV, 0}{CLOCK: 10e6}{LEVEL OFFS: 3.010300,0.000000}
0000FF7F8E27BB79 ... 72D8BB79
```

To simplify the example, the checksum is set to 0, i.e. the instrument does not evaluate a checksum.

Tip: The tags TYPE, CLOCK, LEVEL OFFS and WAVEFORM are mandatory for each waveform. All other tags are optional and can be inserted after the TYPE tag in arbitrary order.

- Pack the binary data into a WAVEFORM tag with the described structure.

```
{WAVEFORM-Length: #I0Q0I1Q1I2Q2 ... InQn}
```

- Calculate the Length
Length = Number of I/Q pairs * 4 + 1 = 20*4 + 1 = 81 bytes
- Place the string {WAVEFORM-81: # at the beginning of the data set
- Place the symbol } at the end of the data set

The contents of the waveform file SICO.wv for 20 I/Q pairs is now ready for operation and reads:

```
{TYPE: SMU-WV, 0}
{CLOCK: 10e6}
{LEVEL OFFS: 3.010300,0.000000}
{WAVEFORM-81: #I0Q0I1Q1...InQn}
```

Note: There is no readable representation for binary values in this document. This is why we use the sequence I0Q0I1Q1...InQn to characterize the binary code in the present example.

The following figure shows this waveform in a data editor.

```

SICO.WV x
00000000h: 7B 54 59 50 45 3A 20 53 4D 55 2D 57 56 2C 30 7D ; {TYPE: SMU-WV,0}
00000010h: 7B 43 4C 4F 43 4E 3A 20 31 30 65 36 7D 7B 53 41 ; {CLOCK: 10e6}{SA
00000020h: 4D 50 4C 45 53 3A 20 32 30 7D 7B 4C 45 56 45 4C ; MPLES: 20}{LEVEL
00000030h: 20 4F 46 46 53 3A 20 33 2E 30 31 30 33 30 30 2C ; OFFS: 3.010300,
00000040h: 30 2E 30 30 30 30 30 30 30 7D 7B Q57 41 56 45 46 4F ; 0.000000}{WAVEFO
00000050h: 52 4D 2D 38 31 3A 23 00 00 FF 7F 8E 27 BB 79 3C ; RM-81:##.ÿ□Ž'»y<
00000060h: 4B 8D 67 8D 67 3C 4B BB 79 8E 27 FF 7F 00 00 BB ; K0g0g<K»yŽ'ÿ0...»
00000070h: 79 72 D8 8D 67 C4 B4 3C 4B 73 98 8E 27 45 86 00 ; yr00gÄ'<Ks"Ž'Et.
00000080h: 00 01 80 72 D8 45 86 C4 B4 73 98 73 98 C4 B4 45 ; ..Er0EtÄ's"s"Ä'E
00000090h: 86 72 D8 01 80 00 00 45 86 8E 27 73 98 3C 4B C4 ; tr0.€.EtŽ's"<KÄ
000000a0h: B4 8D 67 72 D8 BB 79 7D ; '0gr0»y)

```

Example: C-program for creating a waveform file

C-program SICO.cpp for creating the file SICO.txt containing 20 sine and cosine pairs, converting them into binary data and creating the waveform file SICO.wv.

```

// SICO.cpp
// Defines the entry point for the console application

#include "stdafx.h"
#include <stdlib.h>
#include <stdio.h>
#include <math.h>

int _tmain(int argc, _TCHAR* argv[])
{
    const unsigned int samples = 20;
    const float pi = 3.141592654f;
    int i;

    // SICO.txt
    // Creating the file SICO.txt containing 20 sine and cosine pairs
    float grad, rad;
    FILE *fp;
    fp = fopen("SICO.txt", "w");
    if (fp == 0)
        return;
    for (i=0; i<samples; i++)
    {
        grad = (360.0f / (float)samples) * (float)i;
        rad = grad * (pi / 180.0f);
        fprintf(fp, "%f %f\n", sin(rad), cos(rad));
    }
    fclose(fp);
}

```

```

// SICO.wv
// Generating a binary data set from the I/Q pairs in the file SICO.txt
// and storing the result to file SICO.wv
FILE *fp_sour, *fp_dest;
float i_float, q_float;
unsigned short i_usint, q_usint;
fp_sour = fopen("SICO.TXT", "rt");
if (fp_sour == 0)
    return -1;
fp_dest = fopen("SICO.WV", "wb");
if (fp_dest == 0)
{
    fclose(fp_sour);
    return -1;
}
// Write required tags to waveform file
fprintf(fp_dest, "{TYPE: SMU-WV,0}");
fprintf(fp_dest, "{CLOCK: 10e6}");
fprintf(fp_dest, "{SAMPLES: %d}", samples);
// RMS, Peak
fprintf(fp_dest, "{LEVEL OFFS: %f,%f}", -1.0f * 20.0f * log10(1.0f/sqrt(2.0f)), 0.0f);
fprintf(fp_dest, "{WAVEFORM-%d:#", (samples * 4) + 1);
for (i=0; i<samples; i++)
{
    // Read I/Q pair from ASCII file
    if (fscanf(fp_sour, "%f %f", &i_float, &q_float) == EOF)
        break;
    // Convert I/Q pair to unsigned short
    i_usint = (unsigned short)floor((i_float * 32767.0) + 0.5);
    q_usint = (unsigned short)floor((q_float * 32767.0) + 0.5);
    // Write converted I/Q pair to waveform file
    fwrite(&i_usint, 2, 1, fp_dest);
    fwrite(&q_usint, 2, 1, fp_dest);
}
fprintf(fp_dest, "}");
fclose(fp_dest);
fclose(fp_sour);
return 0;
}

```

7.4.4 Creating an ASCII C-List Manually

When you create the C-list in the editor, as shown in the figure, you get an ASCII file with the extension *.dm_iqc (see the example [C-List ASCII File](#)).

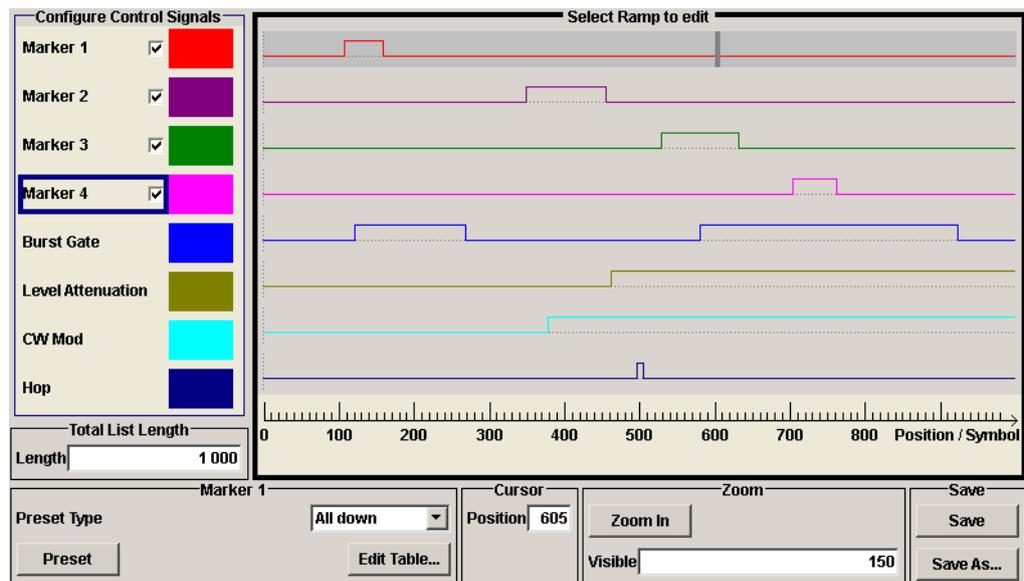


Figure 7-9: Representation in the C-List Editor

Example: C-List ASCII File

C-List in ASCII format, corresponding to C-List editor [Figure 7-9](#):

```
{TYPE:SMU-CL}{COPYRIGHT:2003 Rohde&Schwarz SMU}{DATE:2011-07-19;14:58:44}
{HOP LIST:0:0;498:1;506:0}{CW MODE LIST:0:0;380:1}{LEVATT LIST 1:0:0;464:1}
{BURST LIST:0:0;122:1;270:0;582:1;924:0}
{MARKER LIST 4:0:0;706:1;764:0}{MARKER LIST 3:0:0;530:1;633:0}
{MARKER LIST 2:0:0;350:1;457:0}{MARKER LIST 1:0:0;108:1;160:0}
{CONTROL LENGTH:1000}
```

The tags to the traces in the C-List editor are:

- HOP LIST
- CW MODE LIST
- LEVATT LIST 1
- BURST LIST
- MARKER LIST 4
- MARKER LIST 3
- MARKER LIST 2
- MARKER LIST 1
- CONTROL LENGTH

CONTROL LENGTH defines the periodicity of the total C-List. The remaining tags define the individual markers or control traces in a combined state/starting time way within the C-List period.

If you want to write an ASCII C-List directly without using the C-List editor, a special syntax has to be taken into account:

- The tag and the following [state: start time]-pairs are separated by a colon ":".

- The [state: start time] pairs in turn are separated by semicolons ";".
- The list state can be either 0 or 1.
- The time unit is the simple period.

Example:

"CW MODE LIST 0:0;380:1" for a CW trace:

The list status starts at time 0 with 0, and at time point 380 symbol periods after start, it changes to 1.



With the commands `BB:DM:CLIST:...` you can also generate control lists in binary format, if required. See "[DM Lists](#)" on page 654.

7.4.5 Editing Waveform Files, Data and Control Lists

You can edit the internally and externally created waveform files, data and control lists. The waveform, data and control lists files contain binary and ASCII data.

Consider the following rules while editing files with binary data.

Rules for editing binary data (waveforms, data and control lists)

- **Use hex data editor**
Always use a hex data editor to edit files containing binary data. Editing of binary data file with a text editor, even if you only change the ASCII part of the file, corrupts the file.
- **Adapt the length information in the {EMPTYTAG}**
If you change the content of a waveform file, change also the {EMPTYTAG-Length} value.
For example, if you add a tag or add bytes to an existing tag, reduce the length information by the number of newly introduced bytes.

7.5 BERT and BLER Subsystems

These subsystems contain the commands for the bit and block error rate measurement. Since the commands for these two subsystems are essentially identical, they are summarized in the following section.

:BLER:RESult?	512
:BERT:RESult?	512
:BLER:SEQuence	514
:BERT:SEQuence	514
:BLER:SETup:CLOCK[:POLarity]	514
:BERT:SETup:CLOCK[:POLarity]	514
:BLER:SETup:CORDer	515
:BLER:SETup:DATA[:POLarity]	515
:BERT:SETup:DATA[:POLarity]	515

:BLER:SETup:DEnable.....	515
:BERT:SETup:DEnable.....	515
:BERT:SETup:IGNore.....	516
:BLER:SETup:MCOunt.....	517
:BERT:SETup:MCOunt.....	517
:BLER:SETup:MERRor.....	517
:BERT:SETup:MERRor.....	517
:BERT:SETup:REStart[:STATe].....	517
:BERT:SETup:TYPE.....	518
:BLER:SETup:TYPE.....	518
:BLER:SETup:TIMeout.....	518
:BERT:SETup:TIMeout.....	518
:BLER:START.....	518
:BERT:START.....	518
:BLER:STATe.....	519
:BERT:STATe.....	519
:BLER:STOP.....	519
:BERT:STOP.....	519
:BLER:UNIT.....	520
:BERT:UNIT.....	520
[:SOURce]:INPut:BERT:IMPedance.....	520
[:SOURce]:INPut:BERT:THReshold.....	520
:TRIGger:BLER[:IMMediate].....	521
:TRIGger:BERT[:IMMediate].....	521

:BLER:RESult?**:BERT:RESult?**

Queries the result of the last BER measurement/BLER measurement. The response consists of seven results separated by commas. In the first measurement following the start, intermediate results for the number of data bits/data blocks, error bits/errors and error rate are also queried. In the following measurements (only for `BERT:SEQ AUTO/` for `BLER:SEQ AUTO`) only the final results of each single measurement are queried

Note: At the end of a measurement, the restart of a new one is delayed until the first measurement result has been queried with `BERT:RES`. The resulting brief measurement interruption is irrelevant because the subsequent measurement will be synchronized within 24 data bits.

Return values:

<Result>

string

<data bits/data blocks>

Number of checked data bits/data blocks

<errors>

Number of error bits/errors

<error rate>

If no termination criterion has been reached since the beginning of the measurement, the current quotient of "Number of error bits/errors" and "Number of data bits/data blocks" is entered. As soon as at least one final result has been reached in continuous measurement, the most recent final result is entered.

<measurement status>

Status of measurement.

1 = Measurement has been terminated, i.e. the number of data bits/data blocks or error bits/errors preset by the commands

BERT|BLER:SETup:MCOUNT and

BERT|BLER:SETup:MError has been reached, or the measurement has been stopped by the command

BERT|BLER:STOP.

0 = Measurement has not been terminated.

<clock detected>

Status of clock line

1 = Clock line active

0 = Clock line not active

<data detected>

Status of data line

1 = Data line active (only clocked data is detected; if the clock signal is missing, a data change is also not detected).

0 = Data line is not active.

<synchronization status>

1 = The measurement is synchronized, i.e. the clock and data lines are active and the "Number of error bits/errors" to "Number of data bits/data blocks" ratio is better than 0.1, so that the measurement ratio can be assumed to be realistic.

0 = The measurement is not synchronized.

Example:

BERT:RES

queries the results of the bit error rate measurement.

Response: "1000,5,5E-4,1,1,1,1"

The measurement has been terminated, and synchronization has been performed. Out of 1000 data bits, 5 error bits were measured, yielding an error rate of 0.005.

Usage:

Query only

Manual operation:

See "Data Bits" on page 187

:BLER:SEquence <Sequence>

:BERT:SEquence <Sequence>

Selects the type of measurement: single or continuous measurement.

These commands are automatically set to AUTO by `BERT:START` or `BLER:START`.

Parameters:

<Sequence> AUTO | SINGle

AUTO

Continuous measurement. If one or both termination criteria are met, the measurement in progress is terminated. At the end of a measurement, the restart of a new one is delayed until the first measurement result has been queried with `BERT:RES`. The resulting brief measurement interruption is irrelevant because the subsequent measurement will be synchronized within 24 data bits.

SIINGle

Single measurement. A single measurement must be started with `:TRIG:BERT`. A single measurement is terminated once the set number of data bits/blocks or number of errors is reached

*RST: AUTO

Example: `BERT:SEQ SING`
selects single measurement.

Example: `TRIG:BERT`
starts the single measurement.

Options: Dependencies: These commands are automatically set to AUTO by `BERT:START` or `BLER:START`

Manual operation: See "[Mode](#)" on page 189

:BLER:SETup:CLOCK[:POLarity] <Polarity>

:BERT:SETup:CLOCK[:POLarity] <Polarity>

Sets the polarity of the active slope of the feedback clock.

Parameters:

<Polarity> RISing | FALLing

RISing

The positive slope of the clock signal is active.

FALLing

The negative slope of the clock signal is active.

*RST: RISing

Example: `BERT:SET:CLOC FALL`
selects the falling slope of the clock signal as the active slope.

Manual operation: See "[Clock Slope](#)" on page 190

:BLER:SETup:CORDer <COrder>

Sets the byte order of the checksum (CRC).

Parameters:

<COrder> LSB | MSB

LSB

The checksum starts with the least significant byte.

MSB

The checksum starts with the most significant byte.

*RST: LSB

Example:

BLER:SET:CORD MSB

the checksum starts with the most significant byte.

Manual operation: See "[CRC Order](#)" on page 197

:BLER:SETup:DATA[:POLarity] <Polarity>

:BERT:SETup:DATA[:POLarity] <Polarity>

Sets the polarity of the feedback data bits.

Parameters:

<Polarity> NORMal | INVerted

NORMal

High level stands for a logic 1, low level for a logic 0.

INVerted

Low level stands for a logic 1, high level for a logic 0.

*RST: NORMal

Example:

BERT:SET:DATA INV

sets inversion of data signal.

Manual operation: See "[Data Polarity](#)" on page 190

:BLER:SETup:DENable <DENable>

:BERT:SETup:DENable <DENable>

Activates/deactivates the use of the **Data Enable** signal and the polarity of the signal if it is used. The **Data Enable** signal marks the data that is actually to be evaluated for the BER measurement. Any data in addition to the PRBS sequence is masked and thus not evaluated (e.g. sync, preambles, other channels, etc that are present in the data bits supplied by the DUT).

Parameters:

<DEnable> OFF | LOW | HIGH

OFF

Any signal at the **Data Enable** input is ignored; all data at the BERT data input is used for the measurement.

HIGH

The **Data Enable** signal is used. The only data measured is the data at the BERT data input during a high level of the **Data Enable** signal. The measurement is interrupted during a low level of the **Data Enable** signal.

LOW

The **Data Enable** signal is used. The only data measured is the data at the BERT data input during a low level of the **Data Enable** signal. The measurement is interrupted during a high level of the **Data Enable** signal.

*RST: OFF

Example:

BERT:SET:DEN HIGH

The measurement is interrupted during the low level of the **Data Enable** input.

Manual operation: See "[Data Enable](#)" on page 191

:BERT:SETup:IGNore <Ignore>

Activates/deactivates ignoring of pure "0" or "1" bit sequences at least 32 bits long. Activating excludes faulty frames from the measurement. In the case of some mobile radio standards, pure "0" or "1" bit sequences are generated when errors (e.g. an incorrect checksum) are detected within a frame. These sequences, instead of the frame data, are provided for the BER measurement and signal that the frame in question should not be used for the measurement.

Parameters:

<Ignore> OFF | ZERO | ONE

OFF

Pattern Ignore is not active.

ONE

Bit sequences consisting of 32 or more consecutive "1" data are not used (i.e. ignored) for the BER measurement.

ZERO

Bit sequence consisting of 32 or more consecutive "0" data are not used (i.e. ignored) for the BER measurement.

*RST: OFF

Example:

BERT:SET:IGN ONE

specifies that bit sequences of "1" data at least 32 bits long are not used for the measurement.

Manual operation: See "[Pattern Ignore](#)" on page 192

:BLER:SETup:MCOunt <MCount>

:BERT:SETup:MCOunt <MCount>

Enters the number of transmitted data bits/data blocks to be checked before the measurement is terminated. With a BER measurement, data that was suppressed by `BERT:SETup:DEnable` is not counted. This termination criterion always terminates the measurement after the specified number of data bits/data blocks. Starting from this point, the fourth value is output with 1 (= terminate measurement) if the result is queried with `:BERT|BLER:RES`. If the continuous measurement mode (`BERT|BLER:SEQ AUTO`) has been selected, the measurement is restarted once the results have been queried.

Parameters:

<MCount> integer
 Range: 0 to 4294967295
 *RST: 1E7

Example: `BERT:SET:MCO 1E6`
 sets a measurement over 1000000 data bits.

Example: `BLER:SET:MCO 1E3`
 sets a measurement over 1000 data blocks.

Manual operation: See "[Max Data Bits](#)" on page 189

:BLER:SETup:MERRor <MError>

:BERT:SETup:MERRor <Merror>

Enters the number of errors to occur before the measurement is terminated. This termination criterion always terminates the measurement after the specified number of errors. Starting from this point, the fourth value is output with 1 (= terminate measurement) if the measurement result is queried with `:BERT|BLER:RES`.

Parameters:

<Merror> integer
 Range: 0 to 4294967295
 *RST: 100

Example: `BERT:SET:MERR 1E4`
 sets a measurement over 1000 errors.

Manual operation: See "[Max Errors](#)" on page 189

:BERT:SETup:REStart[:STATe] <State>

Activates/deactivates an external restart of the BER measurement.

Parameters:

<State> INTernal | EXTernal
 *RST: INTernal

Example: `BERT:SET:REST:STAT INTernal`
 The external signal restarts the measurement.

Manual operation: See ["External Restart"](#) on page 191

:BERT:SETup:TYPE <Type>

Selects the PRBS sequence. The data generated by the PRBS generator is used as a reference for the measurement.

Parameters:

<Type> PRBS9 | PRBS11 | PRBS15 | PRBS16 | PRBS20 | PRBS21 | PRBS23
 *RST: PRBS9

Example: BERT:SET:TYPE PN15
 sets a pseudo random binary sequence consisting of 32767 bits.

Manual operation: See ["PRBS"](#) on page 190

:BLER:SETup:TYPE <Type>

Queries the CRC polynomial used. CCITT CRC 16 : $G(x) = x^{16} + x^{12} + x^5 + x^1$ is the CRC polynomial supported.

Parameters:

<Type> CRC16
 *RST: CRC16

Example: BLER:SET:TYPE
 queries the type of measurement.

Example: Response: CRC16

Manual operation: See ["BLER Type"](#) on page 197

:BLER:SETup:TIMEout <Timeout>

:BERT:SETup:TIMEout <Timeout>

Sets the time out.

Parameters:

<Timeout> float
 Range: 0.1 to 1
 Increment: 0.001
 *RST: 0.1

:BLER:START

:BERT:START

Starts a continuous measurement.

These commands automatically set BERT:SEquence or BLER:SEquence to AUTO and BERT:STATe or BLER:STATe to ON.

Example: `BERT:STAR`
starts a continuous measurement.

Usage: Event

Manual operation: See "[Mode](#)" on page 189

:BLER:STATe <State>
:BERT:STATe <State>

Switches the measurement on/off. Depending on the selected mode, either a continuous measurement (`BERT|BLER:SEQ AUTO`) or a single measurement (`BERT|BLER:SEQ SING`) is carried out. A single measurement must be triggered (`:TRIG:BERT|BLER`).

These commands are automatically set to ON by `BERT:START` or `BLER:START` and to OFF by `BERT:STOP` or `BLER:STOP`.

Parameters:

<State> 0 | 1 | OFF | ON
*RST: 0

Example: `BERT:SEQ SING`
selects a single measurement.
`BERT:STAT ON`
switches the BER measurement on.

Example: `TRIG:BERT`
starts a single measurement.

Manual operation: See "[State](#)" on page 186

:BLER:STOP
:BERT:STOP

Stops an ongoing measurement.

These commands automatically set `BERT:STATe` or `BLER:STATe` to OFF

.

Example: `BERT:STOP`
stops the measurement. To start a new measurement, the BER measurement must be switched on again by `BERT:STATe ON`.

Usage: Event

Manual operation: See "[Terminated By](#)" on page 187

:BLER:UNIT <Unit>

:BERT:UNIT <Unit>

Sets the unit for the error rate display on the screen. **BERT** | **BLER:RES** always specifies the error rate as the quotient of "Number of errors" and "Number of data items", unaffected by this command.

Parameters:

<Unit> ENgineering | SCientific | PCT | PPM

ENgineering

The error rate is output in exponential notation with the exponent -3 or -6 .

SCientific

The error rate is output in scientific notation, i.e. standardized to one place to the left of the decimal.

PCT

The error rate is output in percent.

PPM

The error rate is output in parts per million.

*RST: ENgineering

Example:

BERT:UNIT PPM

selects the unit "ppm" for the display of the error rate.

Manual operation: See "[Bit Error Rate](#)" on page 186

[:SOURce]:INPut:BERT:IMPedance <Impedance>

Sets the impedance of the BERT inputs **CLOCK**, **DATA**, **DATA ENABLE** and **RESTART**.

Parameters:

<Impedance> G1K | G50 | G10K

*RST: G1K

Example:

INP:BERT:IMP G50

The impedance of the BERT inputs is set to 50 ohm to ground.

Manual operation: See "[Impedance](#)" on page 190

[:SOURce]:INPut:BERT:THReshold <Threshold>

Sets the high/low threshold of the BERT inputs **Clock**, **Data**, **Data Enable** and **Restart**. In the case of positive polarity, this threshold determines the point as of which a signal is high (active) or low (inactive).

Parameters:

<Threshold> float
 Range: 0.01 to 2
 Increment: 0.01
 *RST: 1
 Default unit: Volt

Example:

```
INP:BERT:THR 1 V
```

A high/low threshold of 1 volt is set at the BERT inputs. The signal is high (active) for a signal voltage of 1 volt and higher.

Manual operation: See "[Threshold](#)" on page 190

:TRIGger:BLER[:IMMEDIATE]

:TRIGger:BERT[:IMMEDIATE]

Triggers a single bit error rate or block error rate measurement if the single trigger mode (BERT|BLER:SEQ SING) is selected.

Example:

```
BERT:SEQ SING
```

selects the single trigger mode.

Example:

```
TRIG:BERT
```

starts a single bit error rate measurement.

Usage:

Event

7.6 CALibration Subsystem

The CALibration system contains the commands for adjustment. Adjustment is triggered by the query commands. The response "0" indicates error-free adjustment, and the response "1" means that an error occurred during adjustment.

:CALibration<hw>:ALL[:MEASure]?	521
:CALibration<hw>:FMOffset[:MEASure]?	522
:CALibration<hw>:FREQuency[:MEASure]?	522
:CALibration<hw>:IQModulator:FULL?	522
:CALibration<hw>:IQModulator:LOCAL?	523
:CALibration<hw>:LEVel[:MEASure]?	523
:CALibration<hw>:LEVel:STATE	523
:CALibration<hw>:LEVel:HACCuracy[:STATE]	524
:CALibration<hw>:ROSCillator[:DATA]	524

:CALibration<hw>:ALL[:MEASure]? [<Force>]

Starts all internal adjustments that do not require external measurement equipment.

Query parameters:

<Force> string

Return values:

<Measure> select

Example:

CAL:ALL:MEAS?

starts the adjustment of all functions for the entire instrument.

Response: "0"

adjustment has been performed successfully.

Usage:

Query only

Manual operation: See ["Adjust All"](#) on page 131

:CALibration<hw>:FMOffset[:MEASure]?

The command starts all adjustment for the FM/PhiM modulator.

Return values:

<Measure> 0 | 1

Example:

CAL:FMOF?

starts the adjustments for the FM/PhiM modulator.

Response: "0"

the adjustments have been performed successfully

Usage:

Query only

Manual operation: See ["Adjust FM Offset"](#) on page 248

:CALibration<hw>:FREQuency[:MEASure]?

Starts all adjustments which affect the frequency.

Return values:

<Measure> 0 | 1

Example:

CAL:FREQ:MEAS?

starts the adjustments for maximum frequency accuracy.

Response: "0"

the adjustments have been performed successfully.

Usage:

Query only

Manual operation: See ["Adjust Synthesis"](#) on page 131

:CALibration<hw>:IQModulator:FULL?

Starts adjustment of the I/Q modulator for the entire frequency range. The I/Q modulator is adjusted with respect to carrier leakage, I/Q imbalance and quadrature.

Return values:

<Full> 0 | 1

*RST: 0

Example: `CAL:IQM:FULL?`
starts adjustments for the I/Q modulator across the entire frequency range.
Response: "0"
adjustment has been performed successfully

Usage: Query only

Manual operation: See "[Adjust I/Q Modulator Full Range](#)" on page 132

:CALibration<hw>:IQModulator:LOCal?

Starts adjustment of the I/Q modulator for the currently set frequency, I/Q swap and baseband gain. The I/Q modulator is adjusted with respect to carrier leakage, I/Q imbalance and quadrature.

Return values:

<Local> 0 | 1
*RST: 0

Example: `CAL:IQM:LOC?`
starts adjustment for the I/Q modulator for the currently set frequency.
Response: 0
adjustment has been performed successfully

Usage: Query only

Manual operation: See "[Adjust I/Q Modulator Current Frequency](#)" on page 132

:CALibration<hw>:LEVel[:MEASure]? [<Force>]

Starts all adjustments which affect the level.

Query parameters:

<Force> string
*RST: force

Return values:

<Measure> 0 | 1

Example: `CAL:LEV:MEAS?`
starts adjustments for maximum level accuracy.
Response: "0"
adjustment has been performed successfully.

Usage: Query only

Manual operation: See "[Adjust Level](#)" on page 131

:CALibration<hw>:LEVel:STATe <State>

Activates/deactivates internal level correction.

Parameters:

<State> ON | OFF
 *RST: 1

Example:

CAL:LEV:STAT
 switches on level correction.

Manual operation: See ["Use ext. Level Correction Data"](#) on page 132

:CALibration<hw>:LEVel:HACCuracy[:STATe] <State>

Enables/disables level adjustment with high accuracy.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: OFF

Example:

CAL:LEV:HACC:STAT ON
 switches on Hight Accuracy Level Adjustment

Manual operation: See ["High Accuracy Level Adjustment"](#) on page 131

:CALibration<hw>:ROSCillator[:DATA] <Data>

Sets the calibration value for the custom defined external adjustment.

Parameters:

<Data> integer
 Range: 0 to INT_MAX
 *RST: 0

7.7 CLOCK Subsystem

The CLOCK system contains the commands for configuration of the signals at the clock output and input connectors.

:CLOCK:INPut:FREQuency?	524
:CLOCK:INPut:SLOPe	525
:CLOCK:OUTPut:MODE	525
:CLOCK:OUTPut:SOURce	525

:CLOCK:INPut:FREQuency?

Queries the measured frequency of the external clock signal. An external clock reference must be supplied at the CLOCK input.

Return values:

<Frequency> float
 Range: 0 to max
 Increment: 0.001
 *RST: 0

Example:

CLOC:INP:FREQ?
 queries the measured frequency of the external clock reference.

Usage:

Query only

Manual operation: See "[Measured External Clock](#)" on page 367

:CLOCK:INPut:SLOPe <Slope>

Sets the active slope of an externally applied clock signal at the CLOCK connector.

Parameters:

<Slope> NEGative | POSitive
 *RST: POSitive

Example:

CLOC:INP:SLOP NEG
 The active slope of the external clock signal is the falling slope.

Manual operation: See "[Clock Input Slope](#)" on page 143

:CLOCK:OUTPut:MODE <Mode>

Sets the output of bit or symbol clock pulses at the CLOCK OUT connector at the rear panel.

Parameters:

<Mode> SYMBol | BIT
 *RST: SYMBol

Example:

CLOC:OUTP:MODE SYMB
 The internal symbol clock is output.

Manual operation: See "[Clock Output Mode](#)" on page 143

:CLOCK:OUTPut:SOURce <Source>

Queries the path for which the clock signal at the CLOCK OUT connector is to be output.

Parameters:

<Source> A
 *RST: A

Example: CLOC:OUTP:SOUR
 queries the path for which the clock signal at the CLOCK OUT connector is to be output.
 Response: A
 The clock signal of path is output at the CLOCK OUT connector.

7.8 DIAGnostic Subsystem

The `DIAGnostic` system contains the commands used for instrument diagnosis and servicing. SCPI does not define any `DIAGnostic` commands; the commands listed here are all Device-specific. All `DIAGnostic` commands are query commands which are not influenced by `*RST`.

<code>:DIAGnostic<hw>:BGInfo?</code>	526
<code>:DIAGnostic<hw>:BGInfo:CATalog?</code>	527
<code>:DIAGnostic:INFO:OTIMe?</code>	527
<code>:DIAGnostic:INFO:POCount?</code>	527

`:DIAGnostic<hw>:BGInfo? [<Board>]`

Checks the modules available in the instrument using the variant and revision state.

If the command is sent without parameters being specified, a complete list of all modules is returned (the various entries are separated by commas). The length of the list is variable and depends on the instrument equipment configuration.

If the command is sent with parameters, a list of the specified modules is returned (the various entries are separated by commas). A list of modules names can be called up using the command `:DIAGnostic<hw>:BGInfo:CATalog?` on page 527.

Query parameters:

<Board> string

Return values:

<BgInfo> <Module name> <Module stock number incl. variant> <Module revision> <Module serial number>

Each entry for one module consists of four parts which are separated by space characters.

Example: DIAG:BGIN
 Queries the instrument configuration.
 Response: MBRD,SSYN,IQOP3,IQOP3_LCM,....
 returns the data of all available modules.
 DIAG:BGIN? 'MBRD'
 Queries the configuration of the motherboard.
 Response: MBRD 1141.3501.02 1.5.3 100023
 Module motherboard with stock number 1141.3501.01 has revision 1.5.3 and serial number 100023.

Usage: Query only

Manual operation: See ["Assembly"](#) on page 133

:DIAGnostic<hw>:BGInfo:CATalog?

Queries the names of the assemblies available in the instrument.

Return values:

<Catalog> string

A complete list of all assemblies is returned (the various entries are separated by commas). The length of the list is variable and depends on the instrument equipment configuration.

Example:

DIAG:BGIN:CAT

queries the names of the assemblies.

Response: MBRD,SSYN,IQOP3,IQOP3_LCM,

Usage:

Query only

:DIAGnostic:INFO:OTIMe?

The command queries the number of operation hours.

Return values:

<OTIMe> float

Example:

DIAG:INFO:OTIM

queries the operation hours.

Response: 100023

The instrument was operated for 100023 hours up to now.

Usage:

Query only

Manual operation: See ["Operation Time / h"](#) on page 133

:DIAGnostic:INFO:POCount?

The command queries the number of power-on events.

Return values:

<Pocount> float

Example:

DIAG:INFO:POC

queries the number of power on events.

Response: 123

The instrument was switched on for 123 times up to now.

Usage:

Query only

Manual operation: See ["Power On Count"](#) on page 133

7.9 DISPlay Subsystem

The DISPlay subsystem contains the commands to set the power-save mode of the instrument.

:DISPlay:ANNotation:AMPLitude.....	528
:DISPlay:ANNotation:FREQuency.....	528
:DISPlay:ANNotation[:ALL].....	528
:DISPlay:DIALog:CLOSe.....	529
:DISPlay:DIALog:CLOSe:ALL.....	529
:DISPlay:DIALog:ID?.....	529
:DISPlay:DIALog:OPEN.....	529
:DISPlay:PSAVe:HOLDoff.....	530
:DISPlay:PSAVe[:STATe].....	530
:DISPlay:UPDate.....	530

:DISPlay:ANNotation:AMPLitude <State>

Indicates asterisks instead of the level values in the status bar.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 1

Example: DISP:ANN:AMPL ON
 suppresses the level display.

Manual operation: See "[Annotation Amplitude](#)" on page 151

:DISPlay:ANNotation:FREQuency <State>

Indicates asterisks instead of the frequency values in the status bar.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 1

Example: DISP:ANN:FREQ ON
 suppresses the frequency display.

Manual operation: See "[Annotation Frequency](#)" on page 151

:DISPlay:ANNotation[:ALL] <State>

Displays asterisks instead of the level and frequency values in the status bar of the instrument. This setting is particularly useful when you remotely control the instrument.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 1

Example: `DISP:ANN:AMPL ON`
 shows asterisks instead of frequency and level values.

:DISPlay:DIALog:CLOSe <DialogId>

Closes the specified dialog. To determine the dialog identifier, use command : [DISPlay:DIALog:ID?](#).

Setting parameters:

<DialogId> string

Example: `DISP:DIAL:CLOS "<dialog ID>"`
 closes the dialog, determined with the "<dialog ID>".

Usage: Setting only

:DISPlay:DIALog:CLOSe:ALL

Closes all open dialogs.

Example: `DISP:DIAL:CLOS:ALL`

Usage: Event

:DISPlay:DIALog:ID?

Returns the dialog identifiers of the open dialogs in a string separated by blanks.

Return values:

<DialogIdList> string

Example: `DISP:DIAL:ID?`
Response: "`<dialog ID(1)> <dialog ID(2)> ... <dialog ID(n)>`"
 returns the Ids of all opened dialogs.

Usage: Query only

:DISPlay:DIALog:OPEN <DialogId>

Opens the specified dialog. To determine the dialog identifier, use command : [DISPlay:DIALog:ID?](#).

Setting parameters:

<DialogId> string

Example: `DISP:DIAL:OPEN "<dialog ID>"`
 opens the dialog, determined with the "<dialog ID>".

Usage: Setting only

:DISPlay:PSAVe:HOLDoff <HoldoffTimeMin>

Sets the waiting time for the screen-save mode of the display.

Parameters:

<HoldoffTimeMin> integer
 Range: 1 to 60
 *RST: 10
 Default unit: minute

Example:

DISP:PSAV:HOLD 8
sets the timeout of the screen saver to 8 minutes.

Manual operation: See "Wait Time" on page 144

:DISPlay:PSAVe[:STATe] <State>

Activates the screen-save mode of the display. If activated, the display including back-light is completely switched off after the elapse of the wait time, provided no entries via front panel, external mouse or external keyboard are made. To determine the wait time, use command `:DISPlay:PSAVe:HOLDoff`.

This mode is recommended for protecting the display, especially if you operate the instrument via remote control.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 0

Example:

DISP:PSAV ON
activates screen saver mode.

Manual operation: See "Screen Saver Active" on page 143

:DISPlay:UPDate <Update>

Activates the refresh mode of the display.

Parameters:

<Update> 0 | 1 | OFF | ON
 *RST: 1

Example:

DISP:UPD ON
activates automatic update of the display at defined time intervals.

7.10 FORMat Subsystem

The FORMat subsystem contains the commands which determine the format of the data that the R&S SMJ returns to the controller. This affects all query commands which

return a list of numerical data or block data. Reference is made to this in the descriptions of the commands.

:FORMat:BORDER.....	531
:FORMat[:DATA].....	531
:FORMat:SREGister.....	532

:FORMat:BORDER <Border>

Determines the sequence of bytes within a binary block. This only affects blocks which use the IEEE754 format internally.

Parameters:

<Border> NORMal | SWAPped

NORMal

The instrument expects (with setting commands) and sends (with queries) the least significant byte of each IEEE754 floating-point number first and the most significant byte last.

SWAPped

The instrument expects (with setting commands) and sends (with queries) the most significant byte of each IEEE754 floating-point number first and the least significant byte last.

*RST: NORMal

Example:

FORM:BORD SWAP

the data is transferred with the most significant bit first.

:FORMat[:DATA] <Data>

Determines the data format which the R&S SMJ uses to return data. When data is transferred from the control computer to the instrument, the instrument detects the data format automatically. In this case, the value set here is irrelevant.

Parameters:

<Data> ASCii | PACKed

ASCii

Numerical data is transferred as plain text separated by commas.

PACKed

Numerical data is transferred as binary block data. The format within the binary data depends on the command. The various binary data formats are explained in the description of the parameter types.

*RST: ASCii

Example:

FORM ASC

The data is transferred as ASCII data.

:FORMat:SREGister <Format>

Determines the numerical format which is returned when the status registers are queried.

Parameters:

<Format>

ASCIi | BINary | HEXadecimal | OCTal

ASCIi

The register content is returned as a decimal number.

BINary

The register content is returned as a binary number. #B is placed in front of the number.

HEXadecimal

The register content is returned as a hexadecimal number. #H is placed in front of the number.

OCTal

The register content is returned as an octal number. #Q is placed in front of the number.

*RST: ASCIi

Example:

FORM:SREG HEX

The register content is returned as a hexadecimal number.

7.11 HCOPY Subsystem

The `HCOPY` subsystem contains the commands to generate a hardcopy of the display.

<code>:HCOPY:DATA?</code>	533
<code>:HCOPY:DEvice</code>	533
<code>:HCOPY:DEvice:LANGUage</code>	533
<code>:HCOPY[:EXECute]</code>	534
<code>:HCOPY:FILE[:NAME]</code>	534
<code>:HCOPY:FILE[:NAME]:AUTO?</code>	534
<code>:HCOPY:FILE[:NAME]:AUTO:DIRectory</code>	535
<code>:HCOPY:FILE[:NAME]:AUTO:DIRectory:CLEar</code>	535
<code>:HCOPY:FILE[:NAME]:AUTO:FILE?</code>	535
<code>:HCOPY:FILE[:NAME]:AUTO[:FILE]:DAY?</code>	536
<code>:HCOPY:FILE[:NAME]:AUTO[:FILE]:DAY:STATe</code>	536
<code>:HCOPY:FILE[:NAME]:AUTO[:FILE]:MONTH?</code>	537
<code>:HCOPY:FILE[:NAME]:AUTO[:FILE]:MONTH:STATe</code>	537
<code>:HCOPY:FILE[:NAME]:AUTO[:FILE]:NUMBer?</code>	537
<code>:HCOPY:FILE[:NAME]:AUTO[:FILE]:PREFix</code>	538
<code>:HCOPY:FILE[:NAME]:AUTO[:FILE]:PREFix:STATe</code>	538
<code>:HCOPY:FILE[:NAME]:AUTO[:FILE]:YEAR?</code>	538
<code>:HCOPY:FILE[:NAME]:AUTO[:FILE]:YEAR:STATe</code>	538
<code>:HCOPY:FILE[:NAME]:AUTO:STATe</code>	539
<code>:HCOPY:IMAGe:FORMat</code>	539
<code>:HCOPY:IMAGe:SIZE</code>	539

:HCOPY:REGion.....	539
:HCOPY:PRINter:COLor[:STATe].....	540
:HCOPY:PRINter:LIST?.....	540
:HCOPY:PRINter[:NAME].....	540
:HCOPY:PRINter:PAGE:MARGins.....	540
:HCOPY:PRINter:PAGE:ORientation.....	541
:HCOPY:PRINter:PAGE:SIZE.....	541
:HCOPY:PRINter:PAGE:UNIT.....	541

:HCOPY:DATA?

The command transfers the hardcopy data directly as a NByte stream to the remote client.

Return values:

<Data> block data

Example:

```
HCOP:DEV:LANG JPG
HCOP:DATA?
```

transfers the hardcopy to the remote client.

Usage:

Query only

:HCOPY:DEvice <Device>

The command selects the destination to which the hardcopy (snapshot) should be transferred to. The hardcopy either can be printed out by selecting `PRINter` or can be saved in a file by selecting `FILE`.

Parameters:

<Device> FILE | PRINter
*RST: FILE

Example:

```
HCOP:DEV FILE
```

the hardcopy will be stored in a file.

Manual operation: See "[Destination](#)" on page 154

:HCOPY:DEvice:LANGuage <Language>

Selects the bitmap graphic format for the screenshot. It is also possible to directly retrieve the data using command `HCOP:DATA?`. This command is an alias to command `HCOPY:IMAGe:FORMat`.

Parameters:

<Language> BMP | JPG | XPM | PNG
*RST: PNG

Example: `HCOP:DEV:LANG BMP`
selects bitmap as image format.
`HCOP:FILE 'E:\HCOPY'`
defines the directory, path and file name for storing the hardcopy.
`HCOP`
triggers the hardcopy generation.

Manual operation: See "[File Options](#)" on page 155

:HCOPY[:EXECute]

Triggers the generation of a hardcopy.

The data is either written into a file or sent to the selected printer.

Example: `HCOP`
triggers the generation of a hardcopy of the current display.

Usage: Event

Manual operation: See "[Save](#)" on page 157

:HCOPY:FILE[:NAME] <Name>

Creates/selects a file into which the hardcopy will be stored. The path is specified together with the file name. Access to the file via remote control is possible using the commands of the MMEM-Subsystem. In contrast, command `HCOPY:DATA?` transfers the hardcopy contents directly to the remote client where they can be further processed.

If automatic file naming is activated, the hardcopy is stored into a file with an automatically generated name (commands `HCOPY:FILE[:NAME]:AUTO:...`).

Parameters:

<Name> string

Example: `HCOP:FILE:NAME 'E:\HCOPY'`
defines the hardcopy file name.

Manual operation: See "[File Info](#)" on page 155

:HCOPY:FILE[:NAME]:AUTO?

Queries the path including the file name of the file with automatically generated name.

Return values:

<Auto> string

Example: see `:HCOPY:FILE[:NAME]:AUTO:FILE?` on page 535

Usage: Query only

Manual operation: See "[File Options](#)" on page 155

:HCOPY:FILE[:NAME]:AUTO:DIRectory <Directory>

Sets the directory into which the hardcopy files will be stored if auto naming is activated (HCOPY:FILE:AUTO:STAT ON). The directory will be created if it does not exist yet.

Parameters:

<Directory> string
 *RST: .\HCopy

Example: HCOPY:FILE:AUTO:DIR 'E:\'
 defines the destination directory 'E:\'

Manual operation: See ["File Options"](#) on page 155

:HCOPY:FILE[:NAME]:AUTO:DIRectory:CLEar

Deletes all files with extensions "bmp", "img", "png" and "xpm" in the directory set for automatic naming.

Example: HCOPY:FILE:AUTO:DIR:CLE
 deletes all image files with extensions "bmp", "img", "png" and "xpm".

Usage: Event

Manual operation: See ["File Options"](#) on page 155

:HCOPY:FILE[:NAME]:AUTO:FILE?

Queries the file name that what generated using the automatic naming settings. By default the automatically generated file name is composed of:

<Prefix><YYYY><MM><DD><Number>.<Format>.

Each component can be deactivated/activated separately to individually design the file name.

Return values:

<File> string

Example: HCOP:DEV:LANG BMP
 selects output format *.bmp.
 HCOP:FILE:AUTO:DIR 'E:\'
 defines the destination directory 'E:\'
 HCOP:FILE:AUTO:PREF 'gen'
 the file name starts with the prefix 'gen'. The usage of automatic naming with prefix and date in the file name is preset (...:STAT ON).
 HCOP
 triggers the generation of a hardcopy of the current trace.
 HCOP:FILE:AUTO?
 queries the path including the file name
 Response:
 E:\gen101012008001.bmp'
 HCOP:FILE:AUTO:FILE?
 queries the file name
 Response: 'gen101012008001.bmp'

Usage: Query only

Manual operation: See "File Info" on page 155

:HCOPY:FILE[:NAME]:AUTO[:FILE]:DAY?

Queries the day of the current system date which will be used in the file name if automatic naming is activated.

Return values:

<Day> integer
 Range: 1 to 31
 *RST: 1

Example: HCOP:FILE:AUTO:DAY?
 returns the day in the date part of the automatic file name.

Usage: Query only

:HCOPY:FILE[:NAME]:AUTO[:FILE]:DAY:STATe <State>

Activates the usage of the day in the automatic file name.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 1

Example: HCOP:FILE:AUTO:DAY:STAT OFF
 deactivates the use of the day in the automatically generated file name.

Manual operation: See "File Options" on page 155

:HCOpy:FILE[:NAME]:AUTO[:FILE]:MONTH?

Queries the month in the date part in the automatic file name.

Return values:

<Month> integer
Range: 1 to 12
*RST: 1

Example: HCOpy:FILE:AUTO:MONT?
queries the month in the date part in the automatic file name.

Usage: Query only

:HCOpy:FILE[:NAME]:AUTO[:FILE]:MONTH:STATe <State>

Activates the usage of the month in the automatic file name.

Parameters:

<State> 0 | 1 | OFF | ON
*RST: 1

Example: HCOpy:FILE:AUTO:MONT:STAT OFF
deactivates the usage of the month in the automatic file name.

Manual operation: See "[File Options](#)" on page 155

:HCOpy:FILE[:NAME]:AUTO[:FILE]:NUMBer?

Queries the number in the automatic file name. The number is assigned in such a way that always the lowest possible value for a unique file name within the selected path is used.

On initially switching on the device the number will be reset to the lowest possible value. Starting with number 0 the output directory will be scanned for already existing files. As long as files with the same name are existing the number will be incremented by 1. The number will be automatically set to a number so that the resulting file name will be unique within the selected path. The current number will not be saved in the save recall file but will be temporarily stored within the database. On subsequent saves the number will be incremented.

Return values:

<Number> integer
Range: 0 to 999999
*RST: 0

Example: HCOpy:FILE:AUTO:NUMB?
queries the number in the automatic file name.

Usage: Query only

Manual operation: See "[File Options](#)" on page 155

:HCOPY:FILE[:NAME]:AUTO[:FILE]:PREFIX <Prefix>

Sets the prefix part in the automatic file name. The usage of the prefix is activated with command `HCOPY:FILE:AUTO:PREFIX:STAT ON`.

Parameters:

<Prefix> string
 *RST: HCopy

Example: `HCOPY:FILE:AUTO:PREFIX 'Snapshot'`
 appends "Snapshot" as prefix to the generated file name.

Manual operation: See ["File Options"](#) on page 155

:HCOPY:FILE[:NAME]:AUTO[:FILE]:PREFIX:STATE <State>

Activates the usage of the prefix in the automatic file name. The prefix is entered with command `HCOPY:FILE:AUTO:PREFIX`.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 1

Example: `HCOPY:FILE:AUTO:PREFIX:STAT OFF`
 deactivates the usage of the prefix in the automatic file name.

Manual operation: See ["File Options"](#) on page 155

:HCOPY:FILE[:NAME]:AUTO[:FILE]:YEAR?

Queries the year in the date part in the automatic file name.

Return values:

<Year> integer
 Range: 1784 to 8000
 *RST: 0

Example: `HCOPY:FILE:AUTO:YEAR?`
 queries the year in the date part in the automatic file name.

Usage: Query only

:HCOPY:FILE[:NAME]:AUTO[:FILE]:YEAR:STATE <State>

Activates the usage of the year in the automatic file name.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 1

Example: `HCOPY:FILE:AUTO:YEAR:STAT OFF`
 deactivates the usage of the year in the automatic file name.

Manual operation: See ["File Options"](#) on page 155

:HCOPY:FILE[:NAME]:AUTO:STATe <State>

Activates/deactivates automatic naming of the hardcopy files.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 1

Example: HCOP:FILE:AUTO:STAT OFF
 deactivates automatic naming.

Manual operation: See ["Automatic Naming"](#) on page 154

:HCOPY:IMAGe:FORMat <Format>

This command selects the bitmap graphic format for the screenshot. It is also possible to directly retrieve the data using command `HCOP:DATA?`.

This command is an alias to command `HCOPY:DEVIce:LANGUage`.

Parameters:

<Format> BMP | JPG | XPM | PNG
 *RST: BMP

Example: HCOP:IMAG:FORM XPM
 selects the image format XPM.

Manual operation: See ["File Options"](#) on page 155

:HCOPY:IMAGe:SIZE <Size>

The command selects the image size of the hardcopy. The first value of the size setting defines the width, the second value the height of the image.

Parameters:

<Size> string
 *RST: depends on device

Example: HCOP:IMAG:SIZE 640,480
 sets width and height of the image.

:HCOPY:REGion <Region>

Selects the area to be copied.

You can create a snapshot of the screen or an active dialog.

Parameters:

<Region> ALL | DIALog
 *RST: ALL

Example: HCOP:REG DIAL

Manual operation: See "File Options" on page 155

:HCOPY:PRINter:COLor[:STATe] <State>

Defines whether the hardcopy is printed in color or grayscale.

Parameters:

<State> 0 | 1 | OFF | ON
ON
 prints in color.
OFF
 prints in gray scale
 *RST: OFF

:HCOPY:PRINter:LIST?

The command queries the available printers. If the list is empty, no printer driver is installed.

Return values:

<List> string

Example: HCOP:PRIN:LIST?
 returns a list of the available printers.

Usage: Query only

:HCOPY:PRINter[:NAME] <Name>

The command selects the printer.

Parameters:

<Name> string

Example: HCOP:PRIN:NAME "printer1"
 selects printer printer1.

:HCOPY:PRINter:PAGE:MARGins <Top>, <Bottom>, <Left>, <Right>

The command defines the margins of the paper for printing the hardcopy. The values are entered in the sequence <top,bottom,left,right>, the values are separated by commas. A dot is used as decimal separator. Depending on the set physical unit by the parameter Unit, width and height are expressed in cm or inches.

Parameters:

<Top> float
 Range: 0 to 356
 Increment: 0.01
 *RST: 2.5,2.5,2.5,2.5

<Bottom>	float
	Range: 0 to 356
	Increment: 0.01
	*RST: 2.5
<Left>	float
	Range: 0 to 356
	Increment: 0.01
	*RST: 2.5
<Right>	float
	Range: 0 to 356
	Increment: 0.01
	*RST: 2.5

Example:

```
HCOP:PRIN:PAGE:UNIT IN
```

sets the physical unit for the page layout values to inches.

```
HCOP:PRIN:PAGE:MARG 2.5,2.0,1.5,1.5
```

sets the margin values of the page layout to top=2.5 inches, bottom=2.0 inches, left=1.5 inches and right=.1.5 inches.

:HCOPY:PRINter:PAGE:ORientation <Orientation>

The command defines the orientation of the printer page..

Parameters:

<Orientation>	PORTrait LANDscape
	*RST: PORTrait

Example:

```
HCOP:PRIN:PAGE:ORI LAND
```

selects landscape orientation for the printer page.

:HCOPY:PRINter:PAGE:SIZE <Size>

The command selects the size of the printer paper.

Parameters:

<Size>	LETTer LEGal EXECutive A4 A5
	*RST: LETTer

Example:

```
HCOP:PRIN:PAGE:SIZE LETT
```

sets the page size to letter format.

```
HCOP:PRIN:PAGE:SIZE?
```

returns the selected page size, e.g. LETT

:HCOPY:PRINter:PAGE:UNIT <Unit>

This command defines the physical unit used for defining the page size and margins.

Parameters:

<Unit> CM | IN
 *RST: CM

Example:

HCOP:PRIN:PAGE:UNIT IN
 selects unit inch.

7.12 KBOard Subsystem

The KBOard system contains the commands to set the external keyboard.

:KBOard:LANGuage.....	542
:KBOard:LAYout.....	542

:KBOard:LANGuage <Language>

This command selects the keyboard language. The assignment of some keys depends on the selected language.

Parameters:

<Language> US | DE
 *RST: US

Example:

KBO:LANG US
 selects keyboard language American English.

Usage:

SCPI confirmed

Manual operation: See "[Layout \(Keyboard Settings\)](#)" on page 144

:KBOard:LAYout <Layout>

Selects the keyboard language. The assignment of some keys depends on the selected language.

Parameters:

<Layout> CHINese | DANish | DUTCh | DUTBe | ENGLish | ENGUK |
 FINNish | FRENch | FREBe | FRECa | GERMan | ITALian |
 JAPANese | KORean | NORWegian | PORTuguese | RUSSian |
 SPANish | SWEDish | ENGUS
 *RST: ENGLish

Example:

KBO:LAY US
 activates American keyboard layout.

Manual operation: See "[Layout \(Keyboard Settings\)](#)" on page 144

7.13 MMEMory Subsystem

The MMEMory subsystem (**Mass Memory**) contains the commands for managing files and directories as well as for loading and storing complete instrument settings in files.

The various drives can be selected using the "mass storage unit specifier" <msus>. The internal hard disk is selected with `D:\`, and a memory stick which is inserted at the USB interface is selected with `E:\`. The resources of a network can also be selected with <msus> in the syntax of the respective network, for example using the UNC format (Universal Naming Convention): `\\server\share`.

The default drive is determined using the command `MMEMory:MSIS <msus>`.



The `C:` drive is a protected system drive. This drive should not be accessed. Reconstruction of the system partition will not be possible without loss of data.



Use the command `:SYSTem:MMEMory:PATH:USER?` to query the path of the directory for user-defined data.

7.13.1 File Naming Conventions

To enable files in different file systems to be used, the following file naming conventions should be observed.

The file name can be of any length and no distinction is made between uppercase and lowercase letters.

The file and the optional file extension are separated by a dot. All letters and numbers are permitted (numbers are, however, not permitted at the beginning of the file name). If possible, special characters should not be used. The use of the slashes "\" and "/" should be avoided since they are used in file paths. A number of names are reserved for the operating system, e.g. `CLOCK$`, `CON`, `AUX`, `COM1` . . . `COM4`, `LPT1` . . . `LPT3`, `NUL` and `PRN`.

In the R&S SMJ all files in which lists and settings are stored are given a characteristic extension. The extension is separated from the actual file name by a dot (see [Chapter 4.7.2.1, "Extensions for User Files"](#), on page 118 for an overview of the file types).

The two characters "*" and "?" function as "wildcards", meaning they are used for selecting several files. The "?" character represents exactly one character, while the "*" character represents all characters up to the end of the file name. "*.*" therefore stands for all files in a directory.

When used in conjunction with the commands, the parameter <file_name> is specified as a string parameter with quotation marks. It can contain either the complete path including the drive, only the path and the file name, or only the file name. The file name must include the file extension. The same applies for the parameters <directory_name> and <path>.

Depending on how much information is provided, either the values specified in the parameter or the values specified with the commands `MMEM:MSIS` (default drive) and `MMEM:CDIR` (default directory) are used for the path and the drive settings in the commands.

Before the instrument settings can be stored in a file, they have to be stored in an intermediate memory using common command `*SAV <number>`. The specified number is subsequently used in the `:MMEMory:STORe:STATe` on page 553 command. Also, subsequently to loading a file with instrument settings with command `:MMEMory:LOAD:STATe` on page 552, these settings have to be activated with the common command `*RCL <number>`.

7.13.2 Extensions for User Files

The following table lists all available file extensions for user files. The currently available files on the instrument depend on the installed options.

Table 7-1: List of the automatically assigned file extensions in the instrument

Function/Digital Standard	List type	Contents	File suffix
Instrument State	Settings	Instrument settings	*.savrcl
"User Correction"	List	User-defined level correction values	*.uco
"List Mode"	List	User-defined frequency/level value pairs	*.lsw
"Frequency Response Correction"	Settings	User-defined frequency response correction file	*.frc
"Arbitrary Waveform Generator"	Waveform	ARB waveforms ARB multi segment waveforms	*.wv
	Waveform	ARB multi carrier settings	*.arb_multcarr
	Configuration data	Configuration file for creation of multisegment ARB waveforms	*.inf_mswv
	Play List	ARB Sequencing List	*.wvs
"DM"	Data List	Digital modulation data	*.dm_iqd *.tdm
	Control List	Data to control digital modulation	*.dm_iqc
	Settings	Digital modulation settings	*.dm
	User Standard	Digital modulation user standard	*.dm_stu
	User Mapping	Digital modulation user mapping	*.vam
	User Filter	Digital modulation user filter	*.vaf
"NRP Settings"	Settings	NRP Settings	*.nrp
EX-IQ-BOX	User Settings	EX-IQ-BOX User Defined Settings	*.iqbox
"Fading"	Fading	Fading data	*.fad

Function/Digital Standard	List type	Contents	File suffix
"GSM/EDGE"	Settings	GSM/EDGE settings	*.gsm
	Slot	User-defined slot data	*.gsm_slu
	Frame	User-defined frame data	*.gsm_fu
	Slot	Higher symbol rate slot	*.gsm_hslu
	Frame	Higher symbol rate frame	*.gsm_hfu
"Bluetooth"	Bluetooth Settings	Complete setting of the Bluetooth menu	*.bto
"TETRA"	TETRA Settings	Complete setting of the TETRA menu	*.tetra
"3GPP FDD"	Settings	Complete setting of the 3GPP (FDD) menu	*.3g
	Settings	Channel coding enhanced DPCH channels (downlink)	*.3g_ccod_dl_s
	Settings	Channel coding enhanced DPDCH channels (uplink)	*.3g_ccod_ul
"CDMA2000"	Settings	Complete setting of the CDMA2000 menu	*.cdma2k
"TD-SCDMA2000"	Settings	Complete setting of the TD-SCDMA2000 menu	*.tdscdma
	Settings	Test Model for TD-SCDMA2000	*.tdtmd
1xEV-DO	Settings	Complete setting of the 1xEV-DO menu	*.evdo
"IEEE 802.11 WLAN"	Settings	Complete setting of the IEEE 802.11 WLAN menu	*.wlan
"IEEE 802.11 n WLAN"	Settings	Complete setting of the IEEE 802.11n WLAN menu	*.wlann
	Settings	Beamforming data	*.bmf
"IEEE 802.16 WiMAX"	Settings	Complete setting of the IEEE 802.16 WiMAX menu	*.wimax
"EUTRA/LTE"	Settings	Complete setting of the EUTRA/LTE menu	*.eutra
	Settings	TDD Settings	*.lte_tdd
	Settings	User-defined IQ-File	*.iqw
"GPS"	Settings	Complete setting of the GPS/A-GPS menu	*.gps
	Settings	GPS Almanac Settings	*.txt *.alm *.al3
	Settings	GPS Waypoints File	*.txt
	Settings	GPS Generated Almanac File	*rs_al *.rs_yuma
	Settings	GPS Ionospheric File	*.rs_ion
	Settings	GPS Navigation Data	*.rs_nav

Function/Digital Standard	List type	Contents	File suffix
	Settings	GPS UTC File	*.rs_utc *.rs_acq
"FM-Stereo"	Settings	Complete setting of the FM-Stereo menu	*.fmstereo
	Settings	FM-Stereo Group Type Settings	*.fm_gt
	Settings	FM-Stereo Group Hex Type Settings	*.fm_ghex
	Waveform File	Waveform File	*.wav
"Sirius"	Settings	Complete setting of the Sirius menu	*.sirius
"XM-Radio"	Settings	Complete setting of the XM-Radio menu	*.xmradio
	Settings	XM-Radio TWTA Data	*.twta
"DVB"	Settings	Complete setting of the DVB menu	*.dvb
	Settings	DVB Transport Stream	*.gts *.ts *.trp
"DAB/T-DMB"	Settings	Complete setting of the DAB/T-DMB menu	*.dab
	Settings	DAB ETI Files	*.eti *.xeti
NFC	Settings	Complete setting of the NFC menu	*.nfc

7.13.3 Examples

In these examples, the current instrument setting is stored in the file `test1.savrcl` in the directory `D:\user\`.

Storing and Loading Current Settings

1. Store the current setting in an intermediate memory with the number 4. This setting can be called using command `*RCL` and the associated number of the memory, for example `*RCL 4`.
`*SAV 4`
2. To store the settings in a file in a specific directory, specify the complete path.
`MMEM:STOR:STAT 4, "D:\user\test.savrcl"`
3. To store the settings in a file in the default drive, set the default drive and specify only the file name.
`MMEM:MSIS 'D:\user\'*SAV 4`
`MMEM:STOR:STAT 4, "test.savrcl"`
4. Load the file `test.savrcl` in the user directory.
`MMEM:LOAD:STAT 4, 'D:\user\test.savrcl'`
5. Activate the instrument setting of the file `test.savrcl`.

```
*RCL 4
```

Working with Files and Directories

1. Read out all files in the specified directory.

```
MMEM:CAT? 'E:\user'
```

```
Response: 127145265,175325184,"test,DIR,0","temp,DIR,0",
"readme.txt,ASC,1324","state.savrcl,STAT,5327",
"waveform.wv,BIN,2342"
```

the directory `E:\user` contains the subdirectories `test` and `temp` as well as the files `readme.txt`, `state.savrcl` and `waveform.wv` which have different file types.

Tip: To query only the subdirectories of the current or specified directory, perform:

```
MMEM:DCAT? 'E:\user'
```

```
Response: 'test', 'temp'
```

To query only the number of subdirectories in the current or specified directory, perform:

```
MMEM:DCAT:LENG? 'E:\user'
```

```
Response: 2
```

2. To query the number of files in the current or specified directory, perform:

```
MMEM:CAT:LENG? 'E:\user'
```

```
Response: 3
```

3. Create a new subdirectory for mass memory storage in the specified directory.

```
MMEM:MDIR 'E:\new'
```

4. Copy the file `state` to a new file.

```
MMEM:COPY 'D:\user\state.savrcl','E:\new'
```

5. Rename the file `state`.

```
MMEM:MOVE 'state.savrcl','state_new.savrcl'
```

6. Remove the `test` directory.

```
MMEM:RDIR 'E:\test'
```

7.13.4 Remote Control Commands

:MMEMory:CATalog?	548
:MMEMory:CATalog:LENGth?	548
:MMEMory:CDIRectory	549
:MMEMory:COPY	549
:MMEMory:DATA	549
:MMEMory:DCATalog?	550
:MMEMory:DCATalog:LENGth?	551
:MMEMory:DELeTe	551
:MEMory:HFRee?	551
:MMEMory:LOAD:STATE	552

:MMEMory:MDIRectory.....	552
:MMEMory:MOVE.....	552
:MMEMory:MSIS.....	553
:MMEMory:RDIRectory.....	553
:MMEMory:STORe:STATe.....	553

:MMEMory:CATalog? <path>

Returns the content of a particular directory.

Query parameters:

<path> string
String parameter to specify the directory.
If you leave out the path, the command returns the contents of the directory selected with `:MMEMory:CDIRectory`.
The path may be relative or absolute.

Return values:

<UsedDiskSpace> Byte size of all files in the directory.
<FreeDiskSpace> Remaining disk space in bytes.
<FileInfo> <NameFileN>,<SuffixFileN>,<SizeFileN>
List of files, separated by commas
<NameFileN>
Name of the file.
<SuffixFileN>
Type of the file. Possible suffixes are: ASCii, BINary, DIRectory
<SizeFileN>
Size of the file in bytes.

Example: See "[Working with Files and Directories](#)" on page 547.

Usage: Query only

Manual operation: See "[Directory, File List and File Name](#)" on page 160

:MMEMory:CATalog:LENGth? <Path>

Returns the number of files in the current or in the specified directory.

Query parameters:

<Path> string
String parameter to specify the directory. If the directory is omitted, the command queries the content of the current directory, queried with `:MMEMory:CDIRectory` command.

Return values:

<FileCount> integer
Number of files.

Example: See "[Working with Files and Directories](#)" on page 547.

Usage: Query only

:MMEMory:CDIRectory <Directory>

Changes the default directory for mass memory storage. The directory is used for all subsequent `MMEM` commands if no path is specified with them.

Parameters:

<Directory> <directory_name>
String containing the path to another directory. The path can be relative or absolute.
To change to a higher directory, use two dots '..'.

Example: See "[Working with Files and Directories](#)" on page 547.

Usage: SCPI confirmed

Manual operation: See "[Directory, File List and File Name](#)" on page 160

:MMEMory:COPY <SourceFile>[,<DestinationFile>]

Copies an existing file to a new file. Instead of just a file, this command can also be used to copy a complete directory together with all its files.

Setting parameters:

<SourceFile> string
String containing the path and file name of the source file

<DestinationFile> string
String containing the path and name of the target file. The path can be relative or absolute.
If <DestinationFile> is not specified, the <SourceFile> is copied to the current directory, queried with the `:MMEMory:CDIRectory` command.

Note: Existing files with the same name in the destination directory are overwritten without an error message.

Example: See "[Working with Files and Directories](#)" on page 547.

Usage: Setting only
SCPI confirmed

Manual operation: See "[Copy](#)" on page 166

:MMEMory:DATA <Filename>, <BinaryBlock>

:MMEMory:DATA? <Filename>

The setting command writes the block data <BinaryBlock> to the file identified by <Filename>. Set the GPIB-bus terminator to `EOI` to ensure correct data transfer.

The query command transfers the specified file from the instrument to the GPIB-bus and then on to the controller. It is important to ensure that the intermediate memory on the controller is large enough to take the file. The setting for the GPIB-bus terminator is irrelevant.

Tip: Use this command to read/transfer stored instrument settings or waveforms directly from/to the instrument.

Parameters:

<BinaryBlock> #<number><length_entry><data>
 #: Hash sign; always comes first in the binary block
 <number>: the first digit indicates how many digits the subsequent length entry has
 <length_entry>: indicates the number of subsequent bytes
 <data>: binary block data for the specified length.
 For files with a size with more than 9 digits (Gigabytes) the instrument allows the syntax # (<Length>), where <Length> is the file size in decimal format.

Parameters for setting and query:

<Filename> string
 String parameter to specify the name of the file.

Example: MMEMory:DATA 'D:\user\test.txt',#15hallo
 Writes the block data to the file test.txt.
 The digit 1 indicates a length entry of 1 digit; the digit 5 indicate a length of the binary data (hallo) in bytes.
 MMEMory:DATA? 'D:\user\test.txt'
 sends the data of the file test.txt from the instrument to the controller in the form of a binary block.
 Response: #15hallo

Usage: SCPI confirmed

:MMEMory:DCATalog? <path>

Returns the subdirectories of a particular directory.

Query parameters:

<path> String parameter to specify the directory. If the directory is omitted, the command queries the content of the current directory, queried with :MMEMory:CDIRectory command.

Return values:

<Catalog> <file_entry>
 Names of the subdirectories separated by colons. The first two strings are related to the parent directory.

Example: See "[Working with Files and Directories](#)" on page 547.

Usage: Query only

:MMEMory:DCATalog:LENGth? [<Path>]

Returns the number of subdirectories in the current or specified directory.

Query parameters:

<Path> String parameter to specify the directory. If the directory is omitted, the command queries the contents of the current directory, to be queried with `:MMEMory:CDIRectory` command.

Return values:

<DirectoryCount> integer
Number of parent and subdirectories.

Example: See "[Working with Files and Directories](#)" on page 547.

Usage: Query only

:MMEMory:DELeTe <Filename>

Removes a file from the specified directory.

Setting parameters:

<Filename> string
String parameter to specify the name and directory of the file to be removed.

Example: See "[Working with Files and Directories](#)" on page 547.

Usage: Event
SCPI confirmed

Manual operation: See "[Cut](#)" on page 166

:MEMory:HFRee?

Returns the used and available memory in Kb.

Return values:

<TotalPhysMemKb> integer
Total physical memory.

<ApplicMemKb> integer
Application memory.

<HeapUsedKb> integer
Used heap memory.

<HeapAvailableKb> integer
Available heap memory.

Usage: Query only

:MMEMory:LOAD:STATe <SavRclStateNumb>, <file_name>

Loads the specified file stored under the specified name in an internal memory.

After the file has been loaded, the instrument setting must be activated using an *RCL command.

Setting parameters:

<SavRclStateNumb> Determines to the specific <number> to be used with the *RCL command, e.g. *RCL 4.

<file_name> String parameter to specify the file name with extension *.savrcl.

Example: See ["Storing and Loading Current Settings"](#) on page 546.

Usage: Setting only

Manual operation: See ["Recall"](#) on page 162

:MMEMory:MDIRectory <Directory>

Creates a subdirectory for mass memory storage in the specified directory. If no directory is specified, a subdirectory is created in the default directory. This command can also be used to create a directory tree.

Setting parameters:

<Directory> string
String parameter to specify the new directory.

Example: See ["Working with Files and Directories"](#) on page 547.

Usage: Event

Manual operation: See ["Create New Directory"](#) on page 167

:MMEMory:MOVE <SourceFile>, <DestinationFile>

Moves an existing file to a new location or, if no path is specified, renames an existing file.

Setting parameters:

<SourceFile> string
String parameter to specify the name of the file to be moved.

<DestinationFile> string
String parameters to specify the name of the new file.

Example: See ["Working with Files and Directories"](#) on page 547.

Usage: Event
SCPI confirmed

Manual operation: See ["Rename "](#) on page 167

:MMEMory:MSIS <Msis>

Defines the drive or network resource (in the case of networks) for instruments with windows operating system, using `msis` (MSIS = Mass Storage Identification String).

This setting applies to all `MMEMory` commands that do not explicitly specify the drive.

Parameters:

<Msis> string
*RST: D:\

Example: See ["Storing and Loading Current Settings"](#) on page 546.

Usage: SCPI confirmed

:MMEMory:RDIRectory <Directory>

Removes an existing directory from the mass memory storage system. If no directory is specified, the subdirectory with the specified name is deleted in the default directory.

Setting parameters:

<Directory> string
String parameter to specify the directory to be deleted.

Example: See ["Working with Files and Directories"](#) on page 547.

Usage: Event

:MMEMory:STORE:STATE <savrcl_state_nr>, <file_name>

Stores the current instrument setting in the specified file.

The instrument setting must first be stored in an internal memory with the same number using the common command `*SAV`.

Setting parameters:

<savrcl_state_nr> Corresponds to the specific <number> defined with the `*SAV` command, e.g. `*SAV 4`.

<file_name> String parameter to specify the file name with extension `*.savrcl`.

Example: See ["Storing and Loading Current Settings"](#) on page 546.

Usage: Event

Manual operation: See ["Save"](#) on page 160

7.14 OUTPut Subsystem

The `OUTPut` system contains the commands which set the properties of the RF `OUTPUT` connectors and `USER` connectors.

The properties of the LF output connector are set in the [SOURce:LFOutput Subsystem](#) system.

:OUTPut<hw>:AFIXed:RANGe:LOWer?	554
:OUTPut<hw>:AFIXed:RANGe:UPPer?	554
:OUTPut<hw>:AMODe	555
:OUTPut<hw>:BLANK:LIST:STATe	555
:OUTPut:BLANK:POLarity	555
:OUTPut<hw>:IMPedance?	555
:OUTPut<hw>:PROTection:CLEar	556
:OUTPut<hw>:PROTection:STATe	556
:OUTPut<hw>:PROTection:TRIPped?	556
:OUTPut<hw>[:STATe]	557
:OUTPut<hw>[:STATe]:PON	557
:OUTPut:USER<ch>:SOURce	557

:OUTPut<hw>:AFIXed:RANGe:LOWer?

Queries the minimum level which can be set when the attenuator is fixed, see : [OUTPut<hw>:AMODe](#).

Return values:

<Lower> float
Increment: 0.01

Example: `OUTP:AFIX:RANG:LOW?`
queries the minimum level for the FIXed setting.

Example: Response: -50
The minimum level is -50 dBm.

Usage: Query only

Manual operation: See "[Fixed Range \(PEP\) In](#)" on page 219

:OUTPut<hw>:AFIXed:RANGe:UPPer?

Queries the maximum level which can be set when the attenuator is fixed, see : [OUTPut<hw>:AMODe](#).

Return values:

<Upper> float
Increment: 0.01

Example: `OUTP:AFIX:RANG:UPP?`
queries the maximum level for the FIXed setting for the RF output.

Example: Response: -27
The maximum level is -27 dBm.

Usage: Query only

Manual operation: See "[Fixed Range \(PEP\) In](#)" on page 219

:OUTPut<hw>:AMODe <AMode>

Selects the mode of the attenuator at the RF output (Attenuator MODE).

Parameters:

<AMode> AUTO | FIXed

AUTO

The electronically switching attenuator switches with a 5 dB step width at fixed switching points.

FIXed

The attenuator is fixed at the current position. The uninterrupted level settings are made if automatic level control is activated (SOURce:POWer:ALC ON).

*RST: AUTO

Example:

POW:ALC ON

activates automatic level control for RF output.

OUTP:AMOD FIX

sets the fixed mode with uninterrupted level for RF output.

Manual operation: See "[Attenuator Mode](#)" on page 218

:OUTPut<hw>:BLANK:LIST:STATe <State>

The command activates/deactivates RF output blanking.

Parameters:

<State> 0 | 1 | OFF | ON

*RST: ON

Example:

OUTP:BLAN:LIST:STAT ON

activates the RF Output blanking.

Manual operation: See "[Blank RF Output \(Default ON\) - List Mode](#)" on page 276

:OUTPut:BLANK:POLarity <Polarity>

The command sets the polarity of the No Signal (Blank) Marker.

Parameters:

<Polarity> NORMal | INVerted

*RST: NORMal

Example:

OUTP:BLAN:POL NORM

Manual operation: See "[Polarity \(No Signal Marker\)](#)" on page 146

:OUTPut<hw>:IMPedance?

Queries the impedance of the RF outputs. It enables you to convert the output level units between V and W. The impedances cannot be changed.

Return values:

<Impedance> G1K | G50 | G10K
 *RST: G50
 Default unit: Ohm

Example:

OUTP:IMP
 queries the impedance of RF output.
 Response: 50
 the impedance is 50 ohms

Usage:

Query only

:OUTPut<hw>:PROTection:CLEAr

Resets the protective circuit after it has been tripped. The state of the output is again determined by `OUTPut:STATe`.

The RF outputs of the R&S Signal Generator (starting from serial number 101001) are protected by a protective circuit which deactivates the output in the case of an externally applied overvoltage. This does not change the value of `OUTPut:STATe`.

Example:

OUTP:PROT:CLE
 resets the protective circuit for RF output.

Usage:

Event

Manual operation: See "[Overload](#)" on page 232

:OUTPut<hw>:PROTection:STATe <State>

The command attenuates the RF output signal for about 40 dB to protect external devices against internal signals.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: OFF

Example:

OUTP:PROT:STAT ON
 attenuates the RF Output signal for about 40 dB.

Manual operation: See "[Protect RF Output - ALC](#)" on page 222

:OUTPut<hw>:PROTection:TRIPped?

Queries the state of the protective circuit.

Return values:

<Tripped> 0 | 1 | OFF | ON
 *RST: 0

Example: `OUTP:PROT:TRIP`
 Queries the state of the protective circuit for RF output A.
 Response: 0
 The protective circuit has not tripped.
 Response: 1
 The protective circuit has tripped.

Usage: Query only

Manual operation: See "[Overload](#)" on page 232

:OUTPut<hw>[:STATe] <State>

Activates and deactivates the RF output signal (RF ON / RF OFF).

Parameters:
 <State> 0 | 1 | OFF | ON
 *RST: 0

Example: `OUTP OFF`
 deactivates the RF output.

Manual operation: See "[RF On](#)" on page 200

:OUTPut<hw>[:STATe]:PON <Pon>

Selects the state of the RF output when the instrument is switched on.

Parameters:
 <Pon> OFF | UNCHanged
OFF
 deactivates the output when the instrument is switched on (RF OFF).
UNCHanged
 restores the initial state of the RF output before the last turn off.
 sets the output status as it was when the instrument was switched off.
 *RST: UNCHanged

Example: `OUTP:PON OFF`
 RF output A is deactivated when the instrument is switched on.

Manual operation: See "[Power-On State - RF Signal](#)" on page 220

:OUTPut:USER<ch>:SOURce <Source>

The command selects the signal for the specified USER interface.

Some signals which can be applied at the USER interface are permanently assigned and some are assigned using a dedicated command (e.g. `OUTP:CW:SOURce` for the CW control signal).

The general purpose input (GPINput) is available for USER interfaces 1 and 2 only.

Parameters:

<Source> AMARk4 | BMARK4 | ACW | BCW | ABLank | BBLank | AHOP |
BHOP | BBITclock | BSYMBOLclock | BATTenuator | BBURst |
ATRig | BTRig | GPINput
*RST: USER 1 = AMARker4; USER 2 = ACW; USER 3 =
ABLank; USER 4 = ATRig

Example:

OUTP:USER2 AMAR
causes the marker signal to be output at the USER2 pin of the
AUX I/O interface.
OUTP:CLOC:MODE SYMB
specifies that the internally generated clock pulse is a symbol
clock pulse.
OUTP:CLOC:STAT ON
activates output of the symbol clock pulse at the USER2 pin

Manual operation: See "[User Connector Signal](#)" on page 146

7.15 SENSe, READ and INITiate Subsystems

The SENSe subsystem contains the commands for configuring the power measurements with R&S NRP-Zxx power sensor(s) connected to the generator. The measurement is started and the measurement result retrieved with the READ command. The description of this commands is included in the following.

Up to four sensors can be connected to the signal generator. They are distinguished by means of the suffix under SENSe:

- Power sensor connected to the SENSOR port = SENSe[1]
- power sensor connected first to one of the USB interfaces = SENSe 2
- further power sensors connected second and third via USB = SENSe 3 and SENSe 4

:SENSe<ch>[:POWer]:APERture:DEFault:STATe.....	559
:SENSe<ch>[:POWer]:APERture:TIME.....	559
:INITiate<ch>[:POWer]:CONTInuous.....	559
:READ<ch>[:POWer]?.....	560
:SENSe<ch>[:POWer]:CORRection:SPDevice:STATe.....	560
:SENSe<ch>[:POWer]:DISPlay:PERMANent:STATe.....	561
:SENSe<ch>[:POWer]:DISPlay:PERMANent:PRiority.....	561
:SENSe<ch>[:POWer]:FILTer:LENGth:AUTO?.....	561
:SENSe<ch>[:POWer]:FILTer:LENGth[:USER].....	562
:SENSe<ch>[:POWer]:FILTer:NSRatio.....	562
:SENSe<ch>[:POWer]:FILTer:NSRatio:MTIME.....	563
:SENSe<ch>[:POWer]:FILTer:SONCe.....	563
:SENSe<ch>[:POWer]:FILTer:TYPE.....	563
:SENSe<ch>[:POWer]:LOGGing:STATe.....	564
:SENSe<ch>[:POWer]:FREQUency.....	564

Parameters:

<Continuous> 0 | 1 | OFF | ON
 *RST: OFF

Example:

INIT:CONT ON
 switches local state of continuous power measurement on.

Manual operation: See "State" on page 235

:READ<ch>[:POWER]?

The command triggers the measurement with power sensors and provides the power measurement result of the selected power sensor. The value is provided with the unit set with command `SENSe:UNIT[:POWER]`.

For certain power sensors, e.g. R&S NRP-Z81, two values are returned, first the value for the average level and - separated by a comma - the peak level

Note: The local state is not influenced by this command, measurements results can be retrieved with local state on or off. For long measurement times it is recommended to use a SRQ (MAV bit) for command synchronization.

Suffix:

<ch> 1..3

Return values:

<Power> string

Example:

SENS:UNIT DBM
 selects unit dBm for presentation of measurement result.
 READ1?
 queries the measurement result of the sensor connected to the SENSOR interface.
 Response: -45.6246576745440230
 -45.6 dBm were measured at the given frequency.
 or e.g. for R&S NRP-Z81
 Response:
 -55.62403263352178, -22.419472478812476
 -55,6 dbm is the measured average level, -22.4 dBm is the measured peak level at the given frequency

Usage: Query only

Manual operation: See "Level (Peak)" on page 235

:SENSe<ch>[:POWER]:CORRection:SPDevice:STATe <State>

The command activates the use of the s-parameters correction data of the selected power sensor.

Note: For power sensor with attenuator this command is automatically set to ON.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: OFF

Example:

SENS:POW:CORR:SPD:STAT ON
 activates the use of the s-parameters correction data of power sensor 1.

Manual operation: See ["Use SParameter - Power Sensors"](#) on page 239

:SENSe<ch>[:POWer]:DISPlay:PERManent:STATe <State>

The command switches on and off the permanent indication of the power measurement result in the upper right corner of the block diagram. For each sensor, the type of sensor, the connector, the measurement source and - if set - the offset is indicated.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: ON

Example:

SENS1:POW:DISP:PERM:STAT ON
 the permanent viewer is switched on.

Manual operation: See ["Permanent Display State"](#) on page 236

:SENSe<ch>[:POWer]:DISPlay:PERManent:PRIOrity <Priority>

The command selects which power measurement result (average or peak power) is indicated when permanent display is active.

Parameters:

<Priority> AVERAge | PEAK
 *RST: PEAK

Example:

SENS1:DISP:PERM:STAT ON
 the permanent viewer is switched on.
 SENS1:DISP:PERM:PRI AVER
 the measured average power is indicated.

Manual operation: See ["Display Priority"](#) on page 236

:SENSe<ch>[:POWer]:FILTer:LENGth:AUTO?

The command queries the current filter length for auto filter mode
 (:SENSe<[1]...3>:POWer:FILTer:TYPE AUTO)

Return values:

<Auto> float
 Range: 1 to 65536

Example: SENS1:FILT:TYPE AUTO
selects auto filter mode for the power sensor connected to the SENSOR connector.
SENS1:FILT:LENG:AUTO?
queries the automatically set filter length.
Response: 1024

Usage: Query only

Manual operation: See "[Filter Length](#)" on page 239

:SENSe<ch>[:POWER]:FILTer:LENGth[:USER] <User>

The command selects the filter length for user filter mode (SENSe:POWer:FILTer:TYPE USER). As the filter length works as a multiplier for the time window, a constant filter length results in a constant measurement time. Values 1 and 2ⁿ are settable.

The time window is fixed to 20 ms.

Parameters:

<User> float
Range: 1 to 65536
*RST: 1

Example: SENS:FILT:TYPE USER
selects user filter mode.
SENS:FILT:LENG 16
sets a filter length of 16. The resulting measurement time is 640 ms (2x16x20 ms).

Manual operation: See "[Filter Length](#)" on page 239

:SENSe<ch>[:POWER]:FILTer:NSRatio <NSRatio>

The command defines the noise content for fixed noise filter mode (:SENSe<[1]...3>:POWer:FILTer:TYPE NSRatio). This value determines the proportion of intrinsic noise in the measured result.

Parameters:

<NSRatio> float
Range: 0.001 to 1
Increment: 0.001
*RST: 0.01

Example: SENS1:FILT:TYPE NSR
selects fixed noise filter mode for the power sensor connected to the SENSOR connector.
SENS1:FILT:NSR 0.2
sets a noise content of 0.2.

Manual operation: See "[Noise Content](#)" on page 239

:SENSe<ch>[:POWer]:FILTer:NSRatio:MTIME <MTime>

The command defines the timeout for fixed noise filter mode (:SENSe<[1]...3>:POWer:FILTer:TYPE NSRatio). This value ensures limited settling times.

Parameters:

<MTime> float
 Range: 1 to 999.99
 Increment: 0.01
 *RST: 4
 Default unit: s

Example:

```
SENS1:FILT:TYPE NSR
selects fixed noise filter mode for the power sensor connected to
the SENSOR connector.
SENS1:FILT:NSR .2
sets a noise content of 0.2.
SENS1:FILT:NSR:MTIM 5
limits the settling time to 5 seconds
```

Manual operation: See "[Timeout](#)" on page 239

:SENSe<ch>[:POWer]:FILTer:SONCe

The command activates the search for the optimum filter length for the current measurement conditions. The found filter length can be retrieved with command :SENSe:POWer:FILTer:LENGth:USER?. This command is only available for user filter mode (:SENSe:POWer:FILTer:TYPE USER).

Example:

```
SENS:FILT:TYPE USER
selects user filter mode.
SENS:FILT:SONC
activates the search for the optimum filter length.
SENS:FILT:LENG?
returns the found optimum filter length.
Response: 128
```

Usage: Event

Manual operation: See "[Auto Once](#)" on page 239

:SENSe<ch>[:POWer]:FILTer:TYPE <Type>

The command selects the filter mode. The filter length is the multiplier for the time window and thus directly influences the measurement time.

Parameters:

<Type>

AUTO | USER | NSRatio

AUTO

The filter length is automatically selected depending on the measured value. For high values, a short filter length is selected and for low values a long filter length is selected.

USER

The filter length is set manually. As the filter length works as a multiplier for the measurement time, this results in a constant measurement time.

NSRatio

The filter length (averaging factor) is selected so that the sensor's intrinsic noise (2 standard deviations) does not exceed the specified noise content. The desired noise content is entered with command `SENSe:FILTer:NSRatio`.

To avoid very long settling times when the power is low, the averaging factor can be limited with the Timeout parameter (command `SENSe:FILTer:NSRatio:MTIME`).

*RST: AUTO

Example:`SENS:FILT:TYPE AUTO`

selects automatic filter selection.

Manual operation: See "[Filter](#)" on page 238**:SENSe<ch>[:POWer]:LOGGing:STATe** <State>

Activates the recording of the power values, measured by a connected R&S NRP-Z power sensor.

Parameters:

<State>

0 | 1 | OFF | ON

*RST: 0

Example:`SENS:LOGG:STAT ON`

activates recording of the power measurement of the first sensor.

Manual operation: See "[Enable Logging](#)" on page 240**:SENSe<ch>[:POWer]:FREQuency** <Frequency>

The command sets the RF frequency of the source if the user source is selected (`SENSe[:POWer]:SOURce USER`).

Parameters:

<Frequency>

float

*RST: 1 GHz

Example: SENS:SOUR USER
 selects user-defined source.
 SENS:FREQ 2.44 GHz
 enters the RF frequency of the source which is 2.44 GHz.

Manual operation: See "[Frequency](#)" on page 237

:SENSe<ch>[:POWer]:OFFSet <Offset>

The command enters a level offset which is added to the measured level value after activation with command `SENSe[:POWer]:OFFSet:STATe ON`. This allows e.g. an attenuator in the signal path to be considered.

Parameters:

<Offset> float
 Range: -100.0 to 100.0
 *RST: 0
 Default unit: dB

Example: SENS:POW:OFFS 10.0
 sets a level offset of 10 dB

Manual operation: See "[Level Offset](#)" on page 237

:SENSe<ch>[:POWer]:OFFSet:STATe <State>

The command activates the addition of the level offset to the measured value. The level offset value is set with command `SENSe[:POWer]:OFFSet`.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: OFF

Example: SENS1:POW:OFFS 0.4dB
 sets a level offset of 0.4 dB
 SENS1:POW:OFFS:STAT ON
 a level offset of 0.4 dB is added to the measured value.

Manual operation: See "[Level Offset](#)" on page 237

SENSe<ch>[:POWer]:SNUMber?

The command queries the serial number of the sensor.

Return values:

<Snumber> string

Example: SENS:SNUM?
 queries the serial number.

Usage: Query only

Manual operation: See "[Current Sensors](#)" on page 137

:SENSe<ch>[:POWer]:SOURce <Source>

The command selects the signal source for the measurement.

Parameters:

<Source> A | B | USER | RF
*RST: A

Example:

SENS:SOUR A
selects the RF signal as measurement source. The RF frequency is used as the measurement frequency of the sensor and the corresponding correction factor is used. The level setting of the instrument serves as reference level of the measurement.

Manual operation: See "[Source](#)" on page 237

SENSe<ch>[:POWer]:STATus[:DEVice]?

The command queries if a sensor is connected to the signal generator.

The sensor is selected by suffix in the keyword SENSe or READ of the command header. Suffix 1 denotes the sensor connected to the SENSOR connector, suffix 2 the sensor connected first to one of the USB interfaces and suffix 3 the sensor connected second to one of the USB interfaces.

Return values:

<DEVice> 0 | 1 | OFF | ON

Example:

SENS:STAT?
queries if a sensor is connected to the instrument.
Response: 1
a sensor is connected to the POWER SENSOR interface.

Usage: Query only

Manual operation: See "[Sensor](#)" on page 234

SENSe<ch>[:POWer]:SVERsion?

The command queries the software version of the connected R&S NRP power sensor.

Return values:

<Sversion> string

Example:

SENS:POW:SVER?
queries the software version of the R&S NRP power sensor.

Usage: Query only

Manual operation: See "[Current Sensors](#)" on page 137

SENSe<ch>[:POWER]:TYPE?

The command queries the type of sensor. The type is automatically detected.

Return values:

<Type> string

Example:

SENS:TYPE?

queries the type of sensor connected to the POWER SENSOR connector.

Response: NRP-Z21

the R&S NRP-Z21 sensor is used.

Usage:

Query only

Manual operation: See "[Current Sensors](#)" on page 137

:SENSe<ch>[:POWER]:ZERO

The command activates the autozero function. Zeroing is required in regular interval (at least once a day) and if the temperature has varied more than about 5 °C, if the sensor has been replaced or if measurements of signals with very low power are to be performed. The RF power source must be switched off or disconnected from the sensor before starting the autozero function.

Example:

SENS:ZERO

activates autozero function.

Usage:

Event

Manual operation: See "[Zero - Power Sensors](#)" on page 236

:SENSe<ch>:UNIT[:POWER] <Power>

The command selects the unit used for result query with command READ. The power sensor provides the measured value in Watt. In which unit the measured value is returned is selected here and might be either Watt, dBm or dBuV.

Parameters:

<Power> DBM | DBUV | WATT

*RST: DBM

Example:

SENS2:UNIT DBM

selects unit dBm for the measured value returned by command READ.

READ2?

Response: 7.34

7.34 dBm are measured by sensor 2.

Manual operation: See "[Unit](#)" on page 236

7.16 SOURce Subsystem

The SOURce subsystem contains the commands for configuring the digital and analog signals.

SOURce<hw>

For one-path instruments, the keyword SOURce is optional and can be omitted.

• SOURce:AM Subsystem.....	568
• SOURce:AWGN Subsystem.....	571
• SOURce:BB Subsystem.....	580
• SOURce:CORRection Subsystem.....	697
• SOURce:FM Subsystem.....	709
• SOURce:FREQuency Subsystem.....	712
• SOURce:INPut Subsystem.....	720
• SOURce:IQ Subsystem.....	723
• SOURce:IQ:OUTput Subsystem.....	728
• SOURce:LFOutput Subsystem.....	737
• SOURce:LIST Subsystem.....	746
• SOURce:MODulation Subsystem.....	758
• SOURce:PHASe Subsystem.....	759
• SOURce:PM Subsystem.....	760
• SOURce:POWer Subsystem.....	762
• SOURce:PULM Subsystem.....	771
• SOURce:ROSCillator Subsystem.....	774
• SOURce:SWEep Subsystem.....	777

7.16.1 SOURce:AM Subsystem

The AM subsystem contains the commands for setting the amplitude modulation and also the broadband amplitude modulation.

An external modulation signal is input at the EXT MOD connector.

The settings for the internal modulation source (LF generator) are made in the SOURce:LFOutput subsystem.

[SOURce<hw>]:AM:BBANd:SENSitivity?.....	568
[SOURce<hw>]:AM:BBANd[:STATe].....	569
[SOURce<hw>]:AM[:DEPTh].....	569
[SOURce<hw>]:AM:EXTernal:COUPling.....	569
[SOURce<hw>]:AM:INTernal:FREQuency.....	570
[SOURce<hw>]:AM:SENSitivity?.....	570
[SOURce<hw>]:AM:SOURce.....	571
[SOURce<hw>]:AM:STATe.....	571

[SOURce<hw>]:AM:BBANd:SENSitivity?

Queries the sensitivity of the externally applied signal for broadband amplitude modulation.

The returned value reports the sensitivity in V/100%.

Return values:

<Sensitivity> float
Increment: 0.01

Example:

AM:BBAN:SENS?
queries the input sensitivity for the BB-AM modulation signal at the I IN input.
Response: 0.25
the input sensitivity is 0.25 V / 100 % depth

Usage: Query only

Manual operation: See "AM Sensitivity" on page 245

[:SOURce<hw>]:AM:BBANd[:STATe] <State>

Activates the broadband amplitude modulation.

Parameters:

<State> 0 | 1 | OFF | ON
*RST: 0

Example:

AM:BBAN ON
activates BB-AM modulation.

Manual operation: See "State" on page 245

[:SOURce<hw>]:AM[:DEPTH] <Depth>

Sets the modulation depth of the amplitude modulation signal in percent.

Parameters:

<Depth> float
Range: 0 to 100
Increment: See data sheet
*RST: 30

Example:

AM 15PCT
sets the 15% AM modulation depth

Manual operation: See "AM Depth" on page 243

[:SOURce<hw>]:AM:EXTernal:COUPling <Coupling>

Selects the coupling mode for the external amplitude modulation signal.

Parameters:

<Coupling> AC | DC

AC

Uses only the AC signal component of the modulation signal.

DC

Uses the modulation signal as it is, with AC and DC.

*RST: AC

Example:

AM:EXT:COUP AC

selects the coupling mode AC for external amplitude modulation.

Manual operation: See "AM External Coupling" on page 244**[:SOURce<hw>]:AM:INTernal:FREQuency <Frequency>**

Sets the frequency of the LF signal for AM modulation, see also [:SOURce] : LFOutput:FREQuency on page 738.

Parameters:

<Frequency> float

Range: full frequency range

Increment: see the data sheet: Modulation sources > Resolution of frequency setting

*RST: 1E3

Example:

AM:INT:FREQ 5kHz

sets the frequency of the LF generator signal to 5 kHz

[:SOURce<hw>]:AM:SENSitivity?

Queries the input sensitivity of the externally applied signal for amplitude modulation.

The sensitivity depends on the set modulation [:SOURce<hw>] :AM[:DEPT] .

The returned value reports the sensitivity in %/V. It is assigned to the voltage value for full modulation of the input.

Return values:

<Sensitivity> float

Range: 0 to 100

Example:

AM:DEPT 50

sets a modulation depth of 50 %.

AM:SENS?

queries the input sensitivity at the external modulation input.

Response: 50

since the voltage value for full modulation is 1V, the resulting sensitivity is precisely 50 %/V.

Usage:

Query only

Manual operation: See "AM Sensitivity" on page 244

[:SOURce<hw>]:AM:SOURce <Source>

Selects the modulation signal source for amplitude modulation.

You can use both, the internal and an external modulation signal at a time.

Parameters:

<Source> INTernal | EXTernal | INT,EXT

INTernal

Uses the internally generated signal for modulation. To configure the frequency, use the commands of the [Chapter 7.16.10, "SOURce:LFOOutput Subsystem"](#), on page 737 subsystem.

EXTernal

Uses an externally applied modulation signal.

INT,EXT

Uses both, the internal and external modulation signals.

*RST: INT

Example:

AM:SOUR INT
selects the internal modulation source.

Manual operation: See ["AM Source"](#) on page 243

[:SOURce<hw>]:AM:STATe <State>

Activates amplitude modulation.

Parameters:

<State> 0 | 1 | OFF | ON

*RST: 0

Example:

AM:STAT ON
activates AM modulation.

Manual operation: See ["State"](#) on page 243

7.16.2 SOURce:AWGN Subsystem

The SOURce:AWGN subsystem contains the commands for setting the noise generator.

These commands are available in instrument equipped with the option R&S SMJ-K62 (Additive White Gaussian Noise).

[:SOURce<hw>]:AWGN:BRATe	572
[:SOURce<hw>]:AWGN:BWIDth	572
[:SOURce<hw>]:AWGN:BWIDth:NOISe?	573
[:SOURce<hw>]:AWGN:BWIDth:RATio	573
[:SOURce<hw>]:AWGN:CNRatio	573
[:SOURce<hw>]:AWGN:DISP:MODE	574
[:SOURce<hw>]:AWGN:DISP:ORESults	574
[:SOURce<hw>]:AWGN:ENRatio	574
[:SOURce<hw>]:AWGN:FREQuency:RESult?	575

<code>[:SOURce<hw>]:AWGN:FREQuency:TARGet</code>	575
<code>[:SOURce<hw>]:AWGN:MODE</code>	576
<code>[:SOURce<hw>]:AWGN:POWer:CARRier</code>	576
<code>[:SOURce<hw>]:AWGN:POWer:MODE</code>	577
<code>[:SOURce<hw>]:AWGN:POWer:NOISe</code>	577
<code>[:SOURce<hw>]:AWGN:POWer:NOISe:TOTal?</code>	578
<code>[:SOURce<hw>]:AWGN:POWer:RMODE</code>	578
<code>[:SOURce<hw>]:AWGN:POWer:SUM?</code>	579
<code>[:SOURce<hw>]:AWGN:POWer:SUM:PEP?</code>	579
<code>[:SOURce<hw>]:AWGN:STATe</code>	579

`[:SOURce<hw>]:AWGN:BRATe <BRate>`

Sets the bit rate which is used for calculation of bit energy to noise power ratio from carrier/noise ratio for Digital Standard signals.

For "Custom Digital Mod" signals, the bit rate which is used for calculation can be queried with this command.

Valid units are bps, kbps and mabps as well as b/s, kb/s and mab/s.

Parameters:

`<BRate>` float
 Range: 400 bps to 250E6 bps
 Increment: 0.001
 *RST: 100000

Example: `SOURce1:AWGN:BRATe?`
 queries the bit rate which is used for calculation of the Eb/NO value from the C/N value.

Manual operation: See "Bit Rate - AWGN" on page 298

`[:SOURce<hw>]:AWGN:BWIDth <BWidth>`

Sets the system bandwidth. The noise signal at the level which corresponds to the specified carrier/noise ratio is generated in the bandwidth specified here.

This command is available for modes Additive Noise and Noise Only (`SOUR:AWGN:MODE ADD|ONLY`).

Parameters:

`<BWidth>` float
 Range: 1000 to 80E6
 Increment: 100
 *RST: 3.84E6

Example: `SOURce:AWGN:MODE ADD`
`SOURce:AWGN:BWIDth 10 MHz`
 sets a system bandwidth of 10 MHz.

Manual operation: See "System Bandwidth - AWGN" on page 295

[[:SOURce<hw>]:AWGN:BWIDth:NOISe?

This command is available for modes In Additive Noise and Noise Only (SOUR:AWGN:MODE ADD|ONLY) modes, queries the real noise bandwidth.

Return values:

<Noise> float
 Range: 0 to 200E6
 Increment: 100
 *RST: 0

Example: AWGN:BWID:NOIS?
 queries the noise bandwidth.

Usage: Query only

Manual operation: See "[Noise Bandwidth - AWGN](#)" on page 296

[[:SOURce<hw>]:AWGN:BWIDth:RATio <Ratio>

In Additive Noise and Noise Only (SOUR:AWGN:MODE ADD|ONLY) modes, sets the ratio of minimum real noise bandwidth to system bandwidth.

The overall bandwidth is calculated as follows and may not exceed the total bandwidth specified in the data sheet:

Overall Bandwidth = System BW x Min Noise/System BW Ratio

Parameters:

<Ratio> float
 Range: 1 to Max
 Increment: 0.1
 *RST: 1

Example: AWGN:BWID:RAT 2
 sets a minimum noise/system bandwidth ratio of 2.

Manual operation: See "[Minimum Noise/System Bandwidth Ratio - AWGN](#)" on page 295

[[:SOURce<hw>]:AWGN:CNRatio <CnRatio>

In Additive Noise and CW Interferer (SOUR:AWGN:MODE ADD|CW) mode, sets the carrier/interferer ratio. The value range depends on the selected AWGN mode.

Parameters:

<CnRatio> float
 Range: -50 to 40
 Increment: 0.01
 *RST: 0
 Default unit: dB

Example: `AWGN:CNR 10`
sets a carrier/noise ratio of 10 dB.

Manual operation: See "[Carrier/Noise Ratio / Signal/Noise Ratio](#)" on page 298

[:SOURce<hw>]:AWGN:DISP:MODE <Mode>

Selects the display mode to Bseband or RF.

Parameters:

<Mode> RF | BB
*RST: RF

Example: `AWGN:DISP:MODE RF`
sets the display mode to RF

Manual operation: See "[Display Mode - AWGN](#)" on page 296

[:SOURce<hw>]:AWGN:DISP:ORESults <OResults>

(requires option R&S SMJ-B18, Baseband Digital I/Q Out)

In additive Noise and Noise Only (`SOUR:AWGN:MODE ADD|ONLY`) modes and for Display Mode set to Baseband (`AWGN:DISP:MODE BB`), selects the display of output results for the analog (DACIF) or the digital (BBOU) signal path.

Parameters:

<OResults> ANALog | DIGital
*RST: ANALog

Example: `SOURce:AWGN:MODE ONLY`
activates the generation of a pure noise for path A.
`SOURce:AWGN:DISP:MODE BB`
sets the display mode
`SOURce:AWGN:DISP:ORESults DIGital`
displays the output results of the digital signal of path A.

Manual operation: See "[Display Output Results For - AWGN](#)" on page 296

[:SOURce<hw>]:AWGN:ENRatio <EnRatio>

In Additive Noise mode, sets the ratio of bit energy to noise power density.

Depending on the selected reference mode either the noise power (`AWGN:POW:RMOD NOISE`) or the carrier power (`AWGN:POW:RMOD CARRIER`) is adjusted to the set E_b/N_0 ratio.

- `AWGN:POW:RMOD CARRIER`
the noise power is adjusted to the set E_b/N_0 ratio and the carrier power is kept constant.
- `AWGN:POW:RMOD NOISE`

the carrier power is adjusted to the set E_b/N_0 ratio and the noise power is kept constant.

For **Digital Standard** signals, the bit rate used for calculation of E_b/N_0 value from C/N value is defined with command `SOUR:AWGN:BRAT`.

For **Custom Digital Mod** signals the bit rate used for calculation of E_b/N_0 value from C/N value is determined by the selected standard (`SOURce:BB:DM:STANDARD`) and cannot be changed.

Parameters:

<EnRatio> float
 Range: -50 to depends on hardware
 Increment: 0.01
 *RST: 15.84
 Default unit: dB

Example: `AWGN:ENR 10`
 sets a ratio of bit energy to noise power density of 10 dB

Manual operation: See "[E_b/N₀ - AWGN](#)" on page 298

[:SOURce<hw>]:AWGN:FREQuency:RESult?

In CW inerferer mode, queries the actual frequency of the sine.

The actual frequency may differ from the desired frequency, since the resolution is limited to 0.7 Hz.

Return values:

<Result> float
 Range: -40E6 to 40E6
 Increment: 0.01
 *RST: 0

Example: `AWGN:FREQ:RES?`
 queries the actual frequency of the interfering sine

Usage: Query only

Manual operation: See "[Resulting CW Frequency - AWGN](#)" on page 296

[:SOURce<hw>]:AWGN:FREQuency:TARGet <Target>

Sets the desired frequency of the sine in `AWGN:MODE CW` mode.

The resulting frequency may differ from the desired frequency because of the limited frequency resolution of 0.7 Hz.

Parameters:

<Target> float
 Range: -40E6 to 40E6
 Increment: 0.01
 *RST: 0

Example: `AWGN:FREQ:TARG 2kHz`
sets a frequency of 2 kHz for the interfering sine.

Manual operation: See "[Target CW Frequency - AWGN](#)" on page 296

[[:SOURce<hw>]:AWGN:MODE <Mode>

Selects the mode for generating the interfering signal.

Parameters:

<Mode> ONLY | ADD | CW

ADD

The AWGN noise signal is added to the baseband signal.

ONLY

The pure AWGN noise signal is modulated to the carrier. The connection to the baseband is interrupted.

CW

The sine interfering signal is added to the baseband signal.

*RST: ADD

Example: `SOURce:AWGN:MODE ONLY`
`SOURce:AWGN:STATE ON`
selects the generation of a pure noise and activates it

Manual operation: See "[Mode - AWGN](#)" on page 295

[[:SOURce<hw>]:AWGN:POWer:CARRier <Carrier>

available for Additive Noise and CW Interferer (`SOUR:AWGN:MODE ADD|CW`) modes

Sets/queries the carrier or signal power depending on the selected reference mode.

- `SOUR:AWGN:POW:RMOD CARR`
Sets the carrier power. The power of the noise signal is derived from the entered C/N value.
- `SOUR:AWGN:POW:RMOD NOIS`
queries the carrier power which is derived from the entered C/N value. The noise power is set with command `SOUR:AWGN:POW:NOISe`.

Parameters:

<Carrier> float
Increment: 0.01
*RST: 0
Default unit: dBm

Example: `AWGN:DISP:MODE RF`
sets the display mode to RF
`AWGN:POW:CARR?`
queries the carrier power

Manual operation: See "[Carrier Power](#)" on page 299

[[:SOURce<hw>]:AWGN:POWer:MODE <Mode>

In Additive Noise (`SOUR:AWGN:MODE ADD`) mode, selects the mode for setting the noise power.

Parameters:

<Mode> CN | SN | EN

CN|SN

The noise power is set on the basis of the value entered for the carrier/noise or signal/noise ratio

(`SOURce:AWGN:CNRatio|SNRatio`).

Whether a selection of C/N or S/N is enabled, depends on the selected Display Mode (`AWGN:DISP:MODE BB|RF`)

EN

The noise power is set on the basis of the value entered for the ratio of bit energy to noise power density (`AWGN:ENR`).

*RST: CN|SN

Example:

`AWGN:DISP:MODE RF`

sets the display mode to RF

`SOUR:AWGN:POW:MODE CN`

the noise power is set on the basis of the value entered for the carrier/noise ratio (`AWGN:CNR`).

Manual operation: See ["Set Power via - AWGN "](#) on page 297

[[:SOURce<hw>]:AWGN:POWer:NOISe <Noise>

Sets or queries the noise power in the system bandwidth depending on the selected mode:

- `SOUR:AWGN:MODE ADD|CW`
 - `SOUR:AWGN:POW:RMOD CARR`
Queries the noise/interferer power which is derived from the entered C/N value. Use the command `SOURce:AWGN:POWer:CARRier` to set the carrier power.
 - `SOUR:AWGN:POW:RMOD NOIS`
Sets the noise/interferer power. The power of the carrier signal is derived from the selected C/N value.
- "Noise Only" mode
The command sets the noise power.

Parameters:

<Noise> float
Increment: 0.01
Default unit: dBm

Example:

`SOURce:AWGN:POWer:NOISe?`

queries the noise power in the system bandwidth.

Response: 10

the noise power in the system bandwidth is 10 dBm.

Manual operation: See ["Noise Power \(System Bandwidth\) / Interferer Power"](#) on page 299

[:SOURce<hw>]:AWGN:POWer:NOISe:TOTal?

In Additive Noise and CW Interferer (`SOUR:AWGN:MODE ADD|CW`) modes, queries the noise power in the total bandwidth.

Tip: Use the command `[:SOURce<hw>]:AWGN:DISP:ORESuLts` to define the analog or digital signal path before.

Return values:

<Total> float
 Range: -145 to 20
 Increment: 0.01
 *RST: -30

Example: `SOURce:AWGN:POWer:NOISe:TOTal?`
 queries the noise power in the total bandwidth.
 Response: 15
 the noise power in the total bandwidth is 15 dBm.

Usage: Query only

Manual operation: See ["Noise Power \(Total Bandwidth\) - AWGN"](#) on page 300

[:SOURce<hw>]:AWGN:POWer:RMODe <RMode>

In Additive Noise and CW Interferer (`SOUR:AWGN:MODE ADD|CW`) modes and Display Mode set to RF (`AWGN:DISP:MODE RF`), selects the mode for setting the interfering signal.

Parameters:

<RMode> CARRier | NOISe

CARRier
 The carrier power is kept constant when the C/N value or Eb/N0 value is changed. The noise power is adjusted.

NOISe
 The noise power is kept constant when the C/N value or Eb/N0 value is changed. The carrier power is adjusted.

*RST: CARRier

Example: `SOURce:AWGN:MODE ADD`
 selects Additive Noise mode.
`SOURce:AWGN:DISP:MODE RF`
 sets the display mode to RF
`SOURce:AWGN:POWer:RMODe NOISe`
 selects Reference Mode Noise. The noise power is kept constant when the C/N value or Eb/N0 value is changed. The carrier power is adjusted.

Manual operation: See ["Reference Mode - AWGN"](#) on page 297

[:SOURce<hw>]:AWGN:POWer:SUM?

In Additive Noise and CW Interferer (`SOUR:AWGN:MODE ADD|CW`) modes, queries the overall power of the noise signal plus useful signal.

Tip: Use the command `[:SOURce<hw>] :AWGN:DISP:ORESuLts` to define the analog or digital signal path before.

Return values:

<Sum> float
 Range: -145 to 20
 Increment: 0.01
 *RST: 0

Example: `SOURce:AWGN:POWer:SUM?`
 queries the overall power of the noise signal plus useful signal.

Usage: Query only

Manual operation: See "Carrier + Noise Power / Signal + Noise Power (System Bandwidth) / Carrier + Interferer Power / Signal + Interferer Power" on page 300

[:SOURce<hw>]:AWGN:POWer:SUM:PEP?

In Additive Noise and CW Interferer (`SOUR:AWGN:MODE ADD|CW`) modes, queries the peak envelope power of the overall signal comprised of noise signal plus useful signal.

Tip: Use the command `[:SOURce<hw>] :AWGN:DISP:ORESuLts` to define the analog or digital signal path before.

Return values:

<Pep> float
 Range: -145 to 20
 Increment: 0.01
 *RST: 0

Example: `SOURce:AWGN:POWer:SUM:PEP?`
 queries the peak envelope power of the overall signal.

Usage: Query only

Manual operation: See "Carrier + Noise PEP / Signal + Noise PEP (Total Bandwidth) / Carrier + Interferer PEP / Signal + Interferer PEP" on page 300

[:SOURce<hw>]:AWGN:STATe <State>

Activates or deactivates the white noise (AWGN = Averaged White Gaussian Noise).

Use the command `[:SOURce<hw>] :AWGN:MODE` to define the mode the AWGN generator is working in.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 0

Example: SOURce:AWGN:STATe ON

Manual operation: See "State - AWGN" on page 295

7.16.3 SOURce:BB Subsystem

This subsystem contains all commands for digital signal generation. It is divided into several subsystems which are described separately.

OUTPut<ch>

The numeric suffix to OUTPut distinguishes between the available markers.

EXTernal<ch>

The numeric suffix to EXTernal distinguishes between the available external trigger inputs.

- [SOURce:BB Subsystem General Commands](#)..... 580
- [SOURce:BB:ARB Subsystem](#)..... 580
- [SOURce:BB:DM Subsystem](#)..... 629
- [SOURce:BB:GRAPhics Subsystem](#)..... 666
- [SOURce:BB:IMPairment Subsystem](#)..... 669
- [SOURce:BB:MCCW Subsystem](#)..... 672
- [SOURce:BB:MEASurement Subsystem](#)..... 692
- [SOURce:BB:POWer Subsystem](#)..... 695
- [SOURce:BB:PROGress Subsystem General Commands](#)..... 696

7.16.3.1 SOURce:BB Subsystem General Commands

The following section describes the commands for setting the frequency shift and the phase offset for the signal at the "Baseband" block output.

7.16.3.2 SOURce:BB:ARB Subsystem

The ARB subsystem contains the commands for setting the ARB Generator. Settings for clock and trigger interfaces and for external outputs are entered in the SOURce:INPut and SOURce:OUTput subsystems.

Section [Chapter 7.4, "Waveform and List Format"](#), on page 490 describes the ARB waveform format and how it is used to transmit waveforms via the IEC bus.

- [Common Settings](#)..... 581
- [Clock Settings](#)..... 581
- [Trigger Settings](#)..... 583
- [Marker Settings](#)..... 591

- Test Signals Settings..... 593
- SOURce:BB:ARB:MCAR Subsystem..... 596
- SOURce:BB:ARB:WAV Subsystem..... 611
- SOURce:BB:ARB:WSEG Subsystem..... 618

Common Settings

- [\[:SOURce<hw>\]:BB:ARbitrary:PRESet](#)..... 581
- [\[:SOURce<hw>\]:BB:ARbitrary:STATe](#)..... 581

[\[:SOURce<hw>\]:BB:ARbitrary:PRESet](#)

Sets all ARB generator parameters to their default values.

Example: `SOURce1:BB:ARB:PRESet`

Usage: Event

Manual operation: See "[Set To Default](#)" on page 374

[\[:SOURce<hw>\]:BB:ARbitrary:STATe <State>](#)

Activates the standard and deactivates all the other digital standards and digital modulation modes in the same path.

You have to select a waveform first.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 0

Example: `SOURce1:BB:ARbitrary:WAV:SElect 'wave1'`
 loads waveform file from the default directory.
`SOURce1:BB:ARbitrary:TRIGger:SEQ RETR`
 sets trigger mode Retrigger.
`SOURce1:BB:ARbitrary:STATe ON`
 switches on the ARB generator. The selected waveform is output straight away. A trigger event causes restart.

Manual operation: See "[State \(ARB\)](#)" on page 374

Clock Settings

- [\[:SOURce<hw>\]:BB:ARbitrary:CLOCK](#)..... 581
- [\[:SOURce<hw>\]:BB:ARbitrary:CLOCK:MODE](#)..... 582
- [\[:SOURce<hw>\]:BB:ARbitrary:CLOCK:MULTIplier](#)..... 582
- [\[:SOURce<hw>\]:BB:ARbitrary:CLOCK:SOURce](#)..... 583

[\[:SOURce<hw>\]:BB:ARbitrary:CLOCK <Clock>](#)

The command sets the clock rate in samples. Loading a waveform `(ARB:WAV:SEL <name>)` sets the clock rate that is defined in the waveform tag 'clock'. The command subsequently changes the clock rate; see data sheet for value range.

In the case of an external clock source (selection `ARB:CLOCK:SOURce EXTERNAL`) the clock for the external source must be entered with this command.

Parameters:

<Clock> float
Increment: 0.001

Example:

```
BB:ARB:CLOC:SOUR INT
selects the internal clock source for generating waveforms.
BB:ARB:CLOC 0.5 MHz
sets the clock rate to 0.5 MHz.
```

Manual operation: See ["Clock Frequency"](#) on page 376

[:SOURce<hw>]:BB:ARbitrary:CLOCK:MODE <Mode>

The command enters the type of externally supplied clock (`:BB:ARB:CLOCK:SOURce EXTERNAL`). When `MSAMPLE` is used, a multiple of the sample clock is supplied via the `CLOCK` connector and the sample clock is derived internally from this. The multiplier is entered with the command `:BB:ARB:CLOCK:MULTIPLIER`.

Parameters:

<Mode> SAMPLE | MSAMPLE
*RST: SAMPLE

Example:

```
BB:ARB:CLOC:MODE SAMP
selects clock type "Sample", i.e. the supplied clock is a sample
clock.
```

Manual operation: See ["Clock Mode"](#) on page 390

[:SOURce<hw>]:BB:ARbitrary:CLOCK:MULTIPLIER <Multiplier>

The command specifies the multiplier for clock type "Multiple Samples" (`:BB:ARB:CLOCK:MODE MSAM`) in the case of an external clock source.

Parameters:

<Multiplier> integer
Range: 1 to 64
*RST: 4

Example:

```
BB:ARB:CLOC:SOUR EXT
selects the external clock source. The clock is supplied via the
CLOCK connector.
BB:ARB:CLOC:MODE MSAM
selects clock type Multiple Samples, i.e. the supplied clock has a
rate which is a multiple of the sample rate.
BB:ARB:CLOC:MULT 12
The multiplier for the external clock rate is 12.
```

Manual operation: See ["Sample Clock Multiplier"](#) on page 390

[[:SOURce<hw>]:BB:ARbitrary:CLOCK:SOURce <Source>

The command selects the source for the digital modulation clock.

Parameters:

<Source> INTernal | EXTernal | AINTernal

INTernal

The internal clock reference is used.

EXTernal

The external clock reference is supplied to the connector.

*RST: INTernal

Example:

BB:ARB:CLOC:SOUR EXT

selects an external clock reference. The clock is supplied via the connector.

BB:ARB:CLOC:MODE SAMP

enters clock type sample.

Manual operation: See "Clock Source " on page 389

Trigger Settings

[[:SOURce<hw>]:BB:ARbitrary:TRIGger:ARM:EXECute.....	583
[[:SOURce<hw>]:BB:ARbitrary:TRIGger:EXECute.....	584
[[:SOURce<hw>]:BB:ARbitrary:TRIGger[:EXTernal]:SYNChronize:OUTPut.....	584
[[:SOURce<hw>]:BB:ARbitrary:TRIGger:OUTPut:DELay:FIXed.....	585
[[:SOURce<hw>]:BB:ARbitrary:TRIGger:OUTPut<ch>:DELay.....	585
[[:SOURce<hw>]:BB:ARbitrary:TRIGger:OUTPut<ch>:DELay:MAXimum?.....	586
[[:SOURce<hw>]:BB:ARbitrary:TRIGger:OUTPut<ch>:DELay:MINimum?.....	586
[[:SOURce<hw>]:BB:ARbitrary:TRIGger:RMODE?.....	586
[[:SOURce<hw>]:BB:ARbitrary:TRIGger:SLENgth.....	587
[[:SOURce<hw>]:BB:ARbitrary:TRIGger:SLUNit.....	587
[[:SOURce<hw>]:BB:ARbitrary:TRIGger:SMODE.....	588
[[:SOURce<hw>]:BB:ARbitrary:TRIGger:SOURce.....	588
[[:SOURce<hw>]:BB:ARbitrary:TRIGger:DELay:UNIT.....	588
[[:SOURce<hw>]:BB:ARbitrary:TRIGger[:EXTernal<1 2>]:DELay.....	589
[[:SOURce<hw>]:BB:ARbitrary:TRIGger[:EXTernal<1 2>]:TDELay.....	589
[[:SOURce<hw>]:BB:ARbitrary:TRIGger[:EXTernal<1 2>]:RDELay?.....	589
[[:SOURce<hw>]:BB:ARbitrary:TRIGger[:EXTernal<1 2>]:INHibit.....	589
[[:SOURce<hw>]:BB:ARbitrary[:TRIGger]:SEQUence.....	590

[[:SOURce<hw>]:BB:ARbitrary:TRIGger:ARM:EXECute

The command stops waveform output for trigger modes Armed_Auto and Armed_Ret-rigger. A subsequent internal or external trigger event restart waveform output.

Example: `BB:ARB:TRIG:SOUR INT`
sets internal triggering.
`BB:ARB:TRIG:SEQ ARET`
sets Armed_Retrigger mode, i.e. every trigger event causes waveform output to restart.
`BB:ARB:TRIG:EXEC`
executes a trigger, waveform output is started.
`BB:ARB:TRIG:ARM:EXEC`
waveform output is stopped.
`BB:ARB:TRIG:EXEC`
executes a trigger, waveform output is started again.

Usage: Event

Manual operation: See "[Arm](#)" on page 380

[:SOURce<hw>]:BB:ARBitrary:TRIGger:EXECute

The command executes a trigger. The internal trigger source must be selected using the command `ARB:TRIGger:SOURce INTernal` and a trigger mode other than `AUTO` must be selected using the command `:ARB:SEQuence`.

Example: `BB:ARB:TRIG:SOUR INT`
sets internal triggering.
`BB:ARB:SEQ RETR`
sets Retrigger mode, i.e. every trigger event causes signal output to restart.
`BB:ARB:TRIG:EXEC`
executes a trigger.

Usage: Event

Manual operation: See "[Execute Trigger](#)" on page 376

[:SOURce<hw>]:BB:ARBitrary:TRIGger[:EXTernal]:SYNChronize:OUTPut <Output>

(enabled for "Trigger Source" External)

Enables/disables output of the signal synchronous to the external trigger event.

Parameters:

<Output> 0 | 1 | OFF | ON

ON

The signal calculation starts simultaneously with the external trigger event but because of the instrument's processing time the first samples are cut off and no signal is outputted. After elapsing of the internal processing time, the output signal is synchronous to the trigger event.

OFF

The signal output begins after elapsing of the processing time and starts with sample 0, i.e. the complete signal is outputted. This mode is recommended for triggering of short signal sequences with signal duration comparable with the processing time of the instrument.

*RST: ON

Example:

BB:ARB:TRIG:SOUR EXT

sets external triggering.

BB:ARB:TRIG:EXT:SYNC:OUTP ON

enables synchronous output to external trigger

Manual operation: See "[Sync. Output to External Trigger](#)" on page 380**[:SOURce<hw>]:BB:ARbitrary:TRIGger:OUTPut:DELay:FIXed <Fixed>**

The command restricts the marker delay setting range to the dynamic range. In this range the delay can be set without restarting the marker and signal. If a delay is entered in setting ON but is outside this range, the maximum possible delay is set and an error message is output.

The setting always affects every marker.

Parameters:

<Fixed> 0 | 1 | OFF | ON

*RST: 0

Example:

BB:ARB:TRIG:OUTP:DEL:FIX ON

restricts the marker signal delay setting range to the dynamic range.

Manual operation: See "[Fix marker delay to current range](#)" on page 389**[:SOURce<hw>]:BB:ARbitrary:TRIGger:OUTPut<ch>:DELay <Delay>**

Sets the delay between the signal on the marker outputs and the start of the signals.

Parameters:

<Delay> float
 Range: 0 to depends on other values
 Increment: 0.001
 *RST: 0
 Default unit: Symbol

Example:

BB:ARB:TRIG:OUTP2:DEL 16
 sets a delay for the signal on connector MARKER 2.

Manual operation: See "[Marker x Delay](#)" on page 389

[[:SOURce<hw>]:BB:ARbitrary:TRIGger:OUTPut<ch>:DELay:MAXimum?

[[:SOURce<hw>]:BB:ARbitrary:TRIGger:OUTPut<ch>:DELay:MINimum?

The command queries the minimum marker delay for setting :BB:ARB:TRIGger:OUTPut:DELay:FIXed ON.

Return values:

<Minimum> float
 Range: 0 to 16777215
 Increment: 1E-3
 *RST: 0

Example:

BB:ARB:TRIG:OUTP:DEL:FIX ON
 restricts the marker signal delay setting range to the dynamic range.

BB:ARB:TRIG:OUTP:DEL:MIN
 queries the minimum of the dynamic range.

Response: 0
 the minimum for the marker delay setting is 0 samples.

Usage: Query only

Manual operation: See "[Current Range without Recalculation](#)" on page 389

[[:SOURce<hw>]:BB:ARbitrary:TRIGger:RMODE?

The command queries the status of waveform output or all trigger modes with ARB on.

Return values:

<RMode> STOP | RUN
RUN
 The waveform is output. A trigger event occurred in the triggered mode.
STOP
 The waveform is not output. A trigger event did not occur in the triggered modes, or waveform output was stopped by the command :BB:ARB:TRIG:ARM:EXECute (armed trigger modes only).

Example: BB:ARB:TRIG:SOUR EXT
sets external triggering
BB:ARB:TRIG:MODE ARET
selects the Armed_Retrigger mode.
BB:ARB:TRIG:RMOD?
queries the current status of waveform output.
Response: RUN
the waveform is output, an external trigger was executed.

Usage: Query only

Manual operation: See ["Running/Stopped"](#) on page 380

[[:SOURce<hw>]:BB:ARbitrary:TRIGger:SLEnGth <SLength>

The command defines the length of the signal sequence to be output in the Single trigger mode. The unit is defined with command `SOUR:BB:ARB:TRIG:SLUNit`. It is possible to output deliberately just part of the waveform, an exact sequence of the waveform, or a defined number of repetitions of the waveform.

Parameters:

<SLength> integer
Range: 1 to dynamic
*RST: 1
Default unit: sample

Example: BB:ARB:SEQ SING
sets trigger mode Single.
BB:ARB:TRIG:SLUN SAMP
sets unit Samples for the entry of sequence length.
BB:ARB:TRIG:SLEN 200
sets a sequence length of 200 samples. The first 200 samples of the current waveform will be output after the next trigger event.

Manual operation: See ["Signal Duration "](#) on page 379

[[:SOURce<hw>]:BB:ARbitrary:TRIGger:SLUNit <SLUnit>

The command defines the unit for the entry of the length of the signal sequence (`SOUR:BB:ARB:TRIG:SLEN`) to be output in the "Single" trigger mode (`SOUR:BB:ARB:SEQ SING`).

Parameters:

<SLUnit> SEQUENCE | SAMPLe
*RST: SEQUENCE

Example: BB:ARB:SEQ SING
sets trigger mode Single.
BB:ARB:TRIG:SLUN SEQ
sets unit Sequence length for the entry of sequence length.
BB:ARB:TRIG:SLEN 2
sets a sequence length of 2 waveforms. The current waveforms
will be output twice after the next trigger event.

Manual operation: See "[Signal Duration Unit](#)" on page 379

[:SOURce<hw>]:BB:ARbitrary:TRIGger:SMODe <SMode>

The command selects the extended trigger mode for multi segment waveforms.

Parameters:

<SMode> SAME | NEXT | NSEam | SEQuencer
NSEam = Next Segment Seamless
*RST: NEXT

Example: SOUR:BB:ARB:SEQ AUTO
selects trigger mode AUTO.
SOUR:BB:ARB:TRIG:SMOD SAME
the same segment of the waveform is output repeatedly.

Manual operation: See "[Next Segment Mode](#)" on page 383

[:SOURce<hw>]:BB:ARbitrary:TRIGger:SOURce <Source>

Selects the trigger source.

Parameters:

<Source> INTernal|BEXTernal|EXTernal
INTernal
manual trigger or *TRG.
EXTernal | BEXTernal
trigger signal on the TRIGGER 1/2 connector.
*RST: INTernal

Example: SOURce1:BB:ARbitrary:TRIGger:SOURce EXTernal
sets external triggering via the TRIGGER 1 connector.

Manual operation: See "[Trigger Source](#)" on page 380

[:SOURce<hw>]:BB:ARbitrary:TRIGger:DELay:UNIT <TrigDelUnit>

Determines the units the trigger delay is expressed in.

Parameters:

<TrigDelUnit> SAMPLE | TIME
*RST: SAMPLE

Manual operation: See "[External Delay Unit](#)" on page 381

[[:SOURce<hw>]:BB:ARbitrary:TRIGger[:EXTernal<1|2>]:DELay <Delay>

The command specifies the trigger delay (expressed as a number of samples) for external triggering.

Parameters:

<Delay> float
 Range: 0 to depends on other values
 Increment: 0.01
 *RST: 0
 Default unit: sample

Example:

BB:ARB:TRIG:SOUR EXT
 selects an external trigger
 BB:ARB:TRIG:DEL 200
 sets a delay of 200 samples for the trigger.

Manual operation: See "[Trigger Delay](#)" on page 382

[[:SOURce<hw>]:BB:ARbitrary:TRIGger[:EXTernal<1|2>]:TDELay <ExtTimeDelay>

Specifies the trigger delay (in seconds) for external triggering. The value affects all external trigger signals.

Parameters:

<ExtTimeDelay> float
 Range: 0 to 688
 Increment: 1E-9
 *RST: 0

Manual operation: See "[Trigger Delay](#)" on page 382

[[:SOURce<hw>]:BB:ARbitrary:TRIGger[:EXTernal<1|2>]:RDELay?

Queries the time (in seconds) an external trigger event is delayed for.

Return values:

<ResTimeDelay> float
 Range: 0 to 688
 Increment: 250E-12
 *RST: 0

Usage: Query only

Manual operation: See "[Actual Trigger Delay](#)" on page 382

[[:SOURce<hw>]:BB:ARbitrary:TRIGger[:EXTernal<1|2>]:INHibit <Inhibit>

Specifies the number of samples by which a restart is to be inhibited following a trigger event. This command applies only in the case of external triggering.

Parameters:

<Inhibit> integer
 Range: 0 to 67108863
 *RST: 0
 Default unit: sample

Example:

BB:ARB:TRIG:SOUR EXT
 selects an external trigger
 BB:ARB:TRIG:INH 200
 sets a restart inhibit for 200 samples following a trigger event.

Manual operation: See ["Trigger Inhibit"](#) on page 382

[:SOURce<hw>]:BB:ARBitrary[:TRIGger]:SEQuence <Sequence>

The command selects the trigger mode.

Parameters:

<Sequence> AUTO | RETRigger | AAUTO | ARETrigger | SINGLE

AUTO

The waveform is output continuously.

RETRigger

The waveform is output continuously. A trigger event (internal or external) causes a restart.

AAUTO

The waveform is output only when a trigger event occurs. After the trigger event the waveform is output continuously. Waveform output is stopped with command

SOUR:BB:ARB:TRIG:ARM:EXEC and started again when a trigger event occurs.

ARETrigger

The waveform is output only when a trigger event occurs. The device automatically toggles to RETRIG mode. Every subsequent trigger event causes a restart. Waveform output is stopped with command SOUR:BB:ARB:TRIG:ARM:EXEC and started again when a trigger event occurs.

SINGLE

The waveform is output only when a trigger event occurs. After the trigger event the waveform is output once to the set sequence length (SOUR:BB:ARB:TRIG:SLEN). Every subsequent trigger event causes a restart.

*RST: RETRigger

Example:

BB:ARB:SEQ AAUT
 sets the "Armed_auto" trigger mode; the device waits for the first trigger (e.g. with *TRG) and then generates the signal continuously.

Manual operation: See ["Trigger Mode"](#) on page 379

Marker Settings

<code>[:SOURce<hw>]:BB:ARbitrary:TRIGger:OUTPut<ch>:MODE</code>	591
<code>[:SOURce<hw>]:BB:ARbitrary:TRIGger:OUTPut<ch>:OFFTime</code>	591
<code>[:SOURce<hw>]:BB:ARbitrary:TRIGger:OUTPut<ch>:ONTime</code>	591
<code>[:SOURce<hw>]:BB:ARbitrary:TRIGger:OUTPut<ch>:PATTern</code>	592
<code>[:SOURce<hw>]:BB:ARbitrary:TRIGger:OUTPut<ch>:PULSe:DIVider</code>	592
<code>[:SOURce<hw>]:BB:ARbitrary:TRIGger:OUTPut<ch>:PULSe:FREQUency?</code>	593

`[:SOURce<hw>]:BB:ARbitrary:TRIGger:OUTPut<ch>:MODE <Mode>`

The command defines the signal for the selected marker output.

Parameters:

<Mode>

UNCHanged | REStart | PULSe | PATTern | RATio

UNCHanged

A marker signal as defined in the waveform file (tag 'marker mode x') is generated.

REStart

A marker signal is generated at every waveform start.

PULSe

A pulsed marker signal is generated. The pulse frequency (= sample rate/divider) is defined with the

`SOUR:BB:ARB:TRIG:OUTP:PULS:DIV` command and can be queried with the `SOUR:BB:ARB:TRIG:OUTP:PULS:FREQ?` command.

PATTern

A marker signal is generated with the aid of a user-definable bit pattern. The bit pattern is entered with the aid of command `:BB:ARB:TRIGger:OUTPut:PATTern`. The bit pattern is a maximum of 32 bits long.

RATio

A regular marker signal corresponding to the Time Off / Time On specifications in the commands `:ARB:TRIGger:OUTPut:OFFTime` and `:ARB:TRIGger:OUTPut:ONTime` is generated.

*RST: UNCHanged

Example:

`BB:ARB:TRIG:OUTP2:MODE PULS`

selects the pulsed marker signal on output MARKER 2.

`BB:ARB:TRIG:OUTP2:STAT ON`

activates the pulsed marker signal on output MARKER 2.

Manual operation: See "[Marker Mode](#)" on page 388

`[:SOURce<hw>]:BB:ARbitrary:TRIGger:OUTPut<ch>:OFFTime <OffTime>`

`[:SOURce<hw>]:BB:ARbitrary:TRIGger:OUTPut<ch>:ONTime <OnTime>`

The command sets the number of samples in a period (ON time + OFF time) during which the marker signal in setting `:ARB:TRIGger:OUTPut:MODE RATio` on the marker outputs is ON.

Parameters:

<OnTime> integer
 Range: 1 to 14913079
 *RST: 1

Example:

BB:ARB:TRIG:OUTP2:ONT 20
 sets an ON time of 20 samples for marker 2

Manual operation: See "[Marker Mode](#)" on page 388

[:SOURce<hw>]:BB:ARbitrary:TRIGger:OUTPut<ch>:PATTern <Pattern>

The command defines the bit pattern used to generate the marker signal in the setting SOURce:BB:ARB:TRIGger:OUTPut:MODE PATTern 0 is marker off, 1 is marker on.

Parameters:

<Pattern> <32 bits pattern>
 *RST: 0

Example:

BB:ARB:TRIG:OUTP2:PATT #H39FE0000,32
 sets a bit pattern.
 BB:ARB:TRIG:OUTP2:MODE PATT
 activates the marker signal according to a bit pattern on output MARKER 2.

Manual operation: See "[Marker Mode](#)" on page 388

[:SOURce<hw>]:BB:ARbitrary:TRIGger:OUTPut<ch>:PULSe:DIVider <Divider>

The command sets the divider for the pulsed marker signal in the setting SOURce:BB:ARB:TRIGger:OUTPut:MODE PULSe. The pulse frequency is derived by dividing the symbol rate by the divider.

Parameters:

<Divider> integer
 Range: 2 to 1024
 *RST: 2

Example:

BB:ARB:TRIG:OUTP2:PULS:DIV 2
 sets the divider for the marker signal on output MARKER 2 to the value 2.
 BB:ARB:TRIG:OUTP2:FREQ?
 queries the resulting pulse frequency of the marker signal
 Response: 66 000
 the resulting pulse frequency is 66 kHz.

Manual operation: See "[Marker Mode](#)" on page 388

[[:SOURce<hw>]:BB:ARbitrary:TRIGger:OUTPut<ch>:PULSe:FREQUENCY?

The command queries the pulse frequency of the pulsed marker signal in the setting `SOURce:BB:ARB:TRIGger:OUTPut:MODE PULSe`. The pulse frequency is derived by dividing the symbol rate by the divider. The divider is defined with command `:BB:ARB:TRIG:OUTP:PULS:DIV`.

Return values:

<Frequency> float
Increment: 0.001

Example:

```
BB:ARB:TRIG:OUTP2:PULS:DIV 4
sets the divider for the marker signal on the output to the value
4.
BB:ARB:TRIG:OUTP2:MODE PULS
enables the pulsed marker signal.
BB:ARB:TRIG:OUTP2:PULS:FREQ?
queries the pulse frequency of the marker signal.
Response: 33 000
the resulting pulse frequency is 33 kHz.
```

Usage: Query only

Manual operation: See "[Marker Mode](#)" on page 388

Test Signals Settings

[:SOURce<hw>]:BB:ARbitrary:TSIGnal:CIQ:CREate	593
[:SOURce<hw>]:BB:ARbitrary:TSIGnal:RECTangle:CREate	593
[:SOURce<hw>]:BB:ARbitrary:TSIGnal:SINE:CREate	593
[:SOURce<hw>]:BB:ARbitrary:TSIGnal:CIQ:CREate:NAMed	594
[:SOURce<hw>]:BB:ARbitrary:TSIGnal:RECTangle:CREate:NAMed	594
[:SOURce<hw>]:BB:ARbitrary:TSIGnal:SINE:CREate:NAMed	594
[:SOURce<hw>]:BB:ARbitrary:TSIGnal:CIQ:I	594
[:SOURce<hw>]:BB:ARbitrary:TSIGnal:CIQ:Q	594
[:SOURce<hw>]:BB:ARbitrary:TSIGnal:RECTangle:AMPLitude	594
[:SOURce<hw>]:BB:ARbitrary:TSIGnal:RECTangle:FREQUENCY	595
[:SOURce<hw>]:BB:ARbitrary:TSIGnal:RECTangle:OFFSet	595
[:SOURce<hw>]:BB:ARbitrary:TSIGnal:RECTangle:SAMPles	595
[:SOURce<hw>]:BB:ARbitrary:TSIGnal:SINE:FREQUENCY	595
[:SOURce<hw>]:BB:ARbitrary:TSIGnal:SINE:PHASe	596
[:SOURce<hw>]:BB:ARbitrary:TSIGnal:SINE:SAMPles	596

**[[:SOURce<hw>]:BB:ARbitrary:TSIGnal:CIQ:CREate
[:SOURce<hw>]:BB:ARbitrary:TSIGnal:RECTangle:CREate
[:SOURce<hw>]:BB:ARbitrary:TSIGnal:SINE:CREate**

Generates a signal and uses it as output straight away.

Example: `BB:ARB:TSIG:SINE:CRE`
generates a test sine signal and uses it as output straight away.

Usage: Event

Manual operation: See ["Generate Signal RAM \(Sine Test Signal\)"](#) on page 392

```
[ :SOURce<hw>]:BB:ARbitrary:TSIGnal:CIQ:CREate:NAMed <Filename>
[:SOURce<hw>]:BB:ARbitrary:TSIGnal:RECTangle:CREate:NAMed <Filename>
[:SOURce<hw>]:BB:ARbitrary:TSIGnal:SINE:CREate:NAMed <Filename>
```

Generates a signal and saves it to a waveform file.

Setting parameters:

<Filename> string

Example: BB:ARB:TSIG:SINE:CRE:NAM 'sine_test'
generates a test sine signal and saves it into the wavefile
sine_test.

Usage: Setting only

Manual operation: See ["Generate Signal HD \(Sine Test Signal\)"](#) on page 392

```
[ :SOURce<hw>]:BB:ARbitrary:TSIGnal:CIQ:I <I>
[:SOURce<hw>]:BB:ARbitrary:TSIGnal:CIQ:Q <TSig>
```

Sets the value for the Q component of the test signal

Parameters:

<TSig> float
Range: -1 to 1
Increment: 0.001
*RST: 0
Default unit: FS

Example: BB:ARB:TSIG:CIQ:Q 0.5
sets the value for the Q component of the test signal.

Manual operation: See ["Q Value \(Const IQ Test Signal\)"](#) on page 393

```
[ :SOURce<hw>]:BB:ARbitrary:TSIGnal:RECTangle:AMPLitude <Amplitude>
```

Sets the digital amplitude of the rectangular wave.

Parameters:

<Amplitude> float
Range: 0 to 1
Increment: 0.001
*RST: 0.800
Default unit: FS

Example: BB:ARB:TSIG:RECT:AMPL 0.5
sets the amplitude of the test signal

Manual operation: See ["Amplitude \(Rect Test Signal\)"](#) on page 392

[:SOURce<hw>]:BB:ARbitrary:TSIGnal:RECTangle:FREQuency <Frequency>

Sets the frequency of the test signal.

Parameters:

<Frequency> float
 Range: 100 to depends on hardware
 Increment: 0.01
 *RST: 1000

Example: SOURce:BB:ARbitrary:TSIGnal:RECTangle:FREQuency
 100 kHz
 sets the frequency of the test signal of 100 kHz.

Manual operation: See "[Frequency \(Rect Test Signal\)](#)" on page 392

[:SOURce<hw>]:BB:ARbitrary:TSIGnal:RECTangle:OFFSet <Offset>

Sets the DC component.

Parameters:

<Offset> float
 Range: -1 to 1
 Increment: 0.001
 *RST: 0
 Default unit: FS

Example: BB:ARB:TSIG:RECT:OFFS 0.5
 sets the DC component

Manual operation: See "[Offset DC \(Rect Test Signal\)](#)" on page 393

[:SOURce<hw>]:BB:ARbitrary:TSIGnal:RECTangle:SAMPles <Samples>

Sets the number of sample values required for the rectangular signal per period.

Parameters:

<Samples> integer
 Range: 4 to 1000
 *RST: 100

Example: BB:ARB:TSIG:RECT:SAMP 400
 sets 400 samples per period

Manual operation: See "[Samples per Period \(Rect Test Signal\)](#)" on page 392

[:SOURce<hw>]:BB:ARbitrary:TSIGnal:SINE:FREQuency <Frequency>

Sets the frequency of the simple sinusoidal test signal. This signal is used as output via the I channel. A sine wave of the same frequency but optionally phase-shifted is generated on the Q path (ARB:TSIGnal:SINE:POFFset).

Parameters:

<Frequency> float
 Range: 100 to depends on hardware
 Increment: 0.01
 *RST: 1000
 Default unit: Hz

Example:

BB:ARB:TSIG:SINE:FREQ 100 kHz
 sets a sine signal of 100 kHz.

Manual operation: See ["Frequency \(Sine Test Signal\)"](#) on page 391

[:SOURce<hw>]:BB:ARbitrary:TSIGnal:SINE:PHASe <Phase>

The command sets the phase offset of the sine wave on the Q channel relative to the sine wave on the I channel.

Parameters:

<Phase> float
 Range: -180 to 180
 Increment: 0.01
 *RST: 90
 Default unit: DEG

Example:

BB:ARB:TSIG:SINE:PHAS 90
 sets a phase offset of 90 degrees.

Manual operation: See ["Phase Offset Q \(Sine Test Signal\)"](#) on page 391

[:SOURce<hw>]:BB:ARbitrary:TSIGnal:SINE:SAMPles <Samples>

The command sets the sample rate for the sine signal in samples per period.

The resulting clock rate must not exceed the maximum ARB clock rate of 100 MHz.

The maximum value is automatically restricted by reference to the set frequency and has to fulfill the rule $\text{Frequency} * \text{Samples} \leq \text{ARB clock rate}$.

Parameters:

<Samples> integer
 Range: 4 to 1000
 *RST: 100
 Default unit: 100 samples per period

Example:

BB:ARB:TSIG:SINE:SAMP 100
 sets a sample rate of 100 samples per period.

Manual operation: See ["Samples per Period \(Sine Test Signal\)"](#) on page 391

SOURce:BB:ARB:MCAR Subsystem

The `MCARrier` subsystem contains the commands for setting the Multi Carrier Waveform Generator.

Section [Chapter 7.4, "Waveform and List Format"](#), on page 490 describes the ARB waveform format and how it is used to transmit waveforms via the IEC bus.

CARRier<ch>

The numerical suffix under CARRier distinguish between the carriers. The value range is 0 .. 31.

[SOURce<hw>]:BB:ARBitrary:MCARrier:CARRier:COUNT.....	597
[SOURce<hw>]:BB:ARBitrary:MCARrier:CARRier:MODE.....	598
[SOURce<hw>]:BB:ARBitrary:MCARrier:CARRier:SPACing.....	598
[SOURce<hw>]:BB:ARBitrary:MCARrier:CARRier<ch>:CONFLict?.....	599
[SOURce<hw>]:BB:ARBitrary:MCARrier:CARRier<ch>:DELay.....	599
[SOURce<hw>]:BB:ARBitrary:MCARrier:CARRier<ch>:FILE.....	599
[SOURce<hw>]:BB:ARBitrary:MCARrier:CARRier<ch>:FREQuency.....	600
[SOURce<hw>]:BB:ARBitrary:MCARrier:CARRier<ch>:PHASe.....	600
[SOURce<hw>]:BB:ARBitrary:MCARrier:CARRier<ch>:POWER.....	600
[SOURce<hw>]:BB:ARBitrary:MCARrier:POWER:REFerence.....	601
[SOURce<hw>]:BB:ARBitrary:MCARrier:CARRier<ch>:STATe.....	601
[SOURce<hw>]:BB:ARBitrary:MCARrier:CFACTOR:MODE.....	601
[SOURce<hw>]:BB:ARBitrary:MCARrier:CLIPping:CFACTOR.....	602
[SOURce<hw>]:BB:ARBitrary:MCARrier:CLIPping:CUTOFF.....	602
[SOURce<hw>]:BB:ARBitrary:MCARrier:CLIPping[STATe].....	603
[SOURce<hw>]:BB:ARBitrary:MCARrier:CLOAD.....	603
[SOURce<hw>]:BB:ARBitrary:MCARrier:CLOCK?.....	604
[SOURce<hw>]:BB:ARBitrary:MCARrier:CREate.....	604
[SOURce<hw>]:BB:ARBitrary:MCARrier:EDIT:CARRier:DELay:STEP.....	605
[SOURce<hw>]:BB:ARBitrary:MCARrier:EDIT:CARRier:DELay[START].....	605
[SOURce<hw>]:BB:ARBitrary:MCARrier:EDIT:CARRier:EXECute.....	605
[SOURce<hw>]:BB:ARBitrary:MCARrier:EDIT:CARRier:FILE.....	606
[SOURce<hw>]:BB:ARBitrary:MCARrier:EDIT:CARRier:PHASe:STEP.....	606
[SOURce<hw>]:BB:ARBitrary:MCARrier:EDIT:CARRier:PHASe[START].....	607
[SOURce<hw>]:BB:ARBitrary:MCARrier:EDIT:CARRier:POWER:STEP.....	607
[SOURce<hw>]:BB:ARBitrary:MCARrier:EDIT:CARRier:POWER[START].....	607
[SOURce<hw>]:BB:ARBitrary:MCARrier:EDIT:CARRier:START.....	608
[SOURce<hw>]:BB:ARBitrary:MCARrier:EDIT:CARRier:STOP.....	608
[SOURce<hw>]:BB:ARBitrary:MCARrier:EDIT:CARRier:STATe.....	608
[SOURce<hw>]:BB:ARBitrary:MCARrier:OFILe.....	608
[SOURce<hw>]:BB:ARBitrary:MCARrier:PRESet.....	609
[SOURce<hw>]:BB:ARBitrary:MCARrier:SAMPles?.....	609
[SOURce<hw>]:BB:ARBitrary:MCARrier:SETTing:CATalog?.....	609
[SOURce<hw>]:BB:ARBitrary:MCARrier:SETTing:LOAD.....	610
[SOURce<hw>]:BB:ARBitrary:MCARrier:SETTing:STORE.....	610
[SOURce<hw>]:BB:ARBitrary:MCARrier:SETTing:STORE:FAST.....	610
[SOURce<hw>]:BB:ARBitrary:MCARrier:TIME.....	611
[SOURce<hw>]:BB:ARBitrary:MCARrier:TIME:MODE.....	611

[SOURce<hw>]:BB:ARBitrary:MCARrier:CARRier:COUNT <Count>

Sets the number of carriers in the ARB multi carrier waveform.

Parameters:

<Count> integer
 Range: 1 to 512
 *RST: 1

Example:

BB:ARB:MCAR:CARR:COUN 10
 sets 10 carriers for the multi carrier waveform.

Manual operation: See "Number of Carriers" on page 414

[:SOURce<hw>]:BB:ARbitrary:MCARrier:CARRier:MODE <Mode>

The command sets the carrier frequency mode.

Parameters:

<Mode> EQUidistant | ARbitrary

EQUidistant

Sets an equidistant carrier spacing. The carrier frequency in the carrier table is not configurable.

ARbitrary

Enables you to specify the carrier frequency in the carrier table. Carrier spacing is irrelevant.

*RST: EQUidistant

Example:

BB:ARB:MCAR:CARR:MODE EQU
 sets an equidistant carrier spacing. The carrier frequency can not be set.

Manual operation: See "Mode" on page 413

[:SOURce<hw>]:BB:ARbitrary:MCARrier:CARRier:SPACing <Spacing>

The command sets the frequency spacing between adjacent carriers of the multi carrier waveform. The carriers are generated symmetrically around the RF carrier. The maximum carrier spacing is limited to **Carrier spacing = Total baseband bandwidth / (Number of carriers - 1)**.

The total baseband bandwidth is 80 MHz.

Note:In order to avoid wrap-around problems, the effective "Carrier Spacing" might be slightly modified. The "Carrier Spacing" is rounded in that way that the carrier closest to the center RF frequency shows no phase jump assuming that the carrier is unmodulated.

- For odd number of carriers:
 $\text{RoundedCarrierSpacing} = 1 / \text{OutputSignalDuration} * \text{round}(\text{CarrierSpacing} * \text{OutputSignalDuration});$
- For even number of carriers:
 $\text{RoundedCarrierSpacing} = 2 / \text{OutputSignalDuration} * \text{round}(0.5 * \text{CarrierSpacing} * \text{OutputSignalDuration});$

Parameters:

<Spacing> float
 Range: 0.0 to 120E6
 Increment: 0.01
 *RST: 0
 Default unit: Hz

Example:

BB:ARB:MCAR:CARR:SPAC 10 MHz
 sets a carrier spacing of 10 MHz.

Manual operation: See "[Carrier Spacing](#)" on page 414

[[:SOURce<hw>]:BB:ARbitrary:MCARrier:CARRier<ch>:CONFLICT?

Queries carrier conflicts. A conflict arises when the carriers overlap.

Return values:

<Conflict> 0 | 1 | OFF | ON
 *RST: 0

Example:

BB:ARB:MCAR:CARR2:CONF?
 queries the multi carrier conflict state.
 Response: 0 no conflict has occurred.

Usage: Query only

Manual operation: See "[!!!!](#)" on page 423

[[:SOURce<hw>]:BB:ARbitrary:MCARrier:CARRier<ch>:DELay <Delay>

Sets the start delay of the selected carrier.

Parameters:

<Delay> float
 Range: 0 to 1
 Increment: 1E-9
 *RST: 0
 Default unit: s

Example:

BB:ARB:MCAR:CARR15:DEL 5us
 sets a start delay of 50 us for carrier 15.

Manual operation: See "[Delay](#)" on page 422

[[:SOURce<hw>]:BB:ARbitrary:MCARrier:CARRier<ch>:FILE <File>

Selects the file with I/Q data to be modulated onto the selected carrier.

Parameters:

<File> <file name>

Example: `BB:ARB:MCAR:CARR15:FILE "D:\user\IQ_wcdma"`
selects file `IQ_wcdma`. The data of the file is modulated onto carrier 15.

Manual operation: See ["File"](#) on page 423

[:SOURce<hw>]:BB:ARBitrary:MCARrier:CARRier<ch>:FREQUency <Frequency>

Sets or indicates the carrier frequency, depending on the selected carrier frequency mode.

The carrier frequency can be set in "Arbitrary Carrier frequency" mode. For "Equidistant Carrier Spacing", the carrier spacing is determined automatically.

Parameters:

<Frequency> integer
Vvalue range depends on the max bandwidth, see data sheet
Range: -40E6 to 40E6
*RST: 0

Example: `BB:ARB:MCAR:CARR:MODE ARB`
activates ARB multi carrier mode.
`BB:ARB:MCAR:CARR:FREQ 5.0`
sets 5.0 MHz carrier frequency.

Manual operation: See ["Carrier Freq \[MHz\]"](#) on page 422

[:SOURce<hw>]:BB:ARBitrary:MCARrier:CARRier<ch>:PHASe <Phase>

The command sets the start phase of the selected carrier.

The phase settings are only valid if optimization of the crest factor is disabled (`:SOURce:BB:ARB:MCARrier:CFACTOR:MODE OFF`).

Parameters:

<Phase> float
Range: 0 to 359.99
Increment: 0.01
*RST: 0
Default unit: DEG

Example: `BB:ARB:MCAR:CARR15:PHAS 90 DEG`
sets a start phase of 90° for carrier 15.

Manual operation: See ["Phase"](#) on page 422

[:SOURce<hw>]:BB:ARBitrary:MCARrier:CARRier<ch>:POWER <Power>

The command sets the gain of the selected carrier.

Parameters:

<Power> float
 Range: -80 to 0
 Increment: 0.01
 *RST: 0
 Default unit: dB

Example:

BB:ARB:MCAR:CARR15:POW -50 dB
 sets the power of carrier 15 to -50 dB.

Manual operation: See ["Gain"](#) on page 422

[:SOURce<hw>]:BB:ARbitrary:MCARrier:POWer:REFerence <Reference>

Defines the way the individual carriers in a composed multi carrier signal are leveled.

Parameters:

<Reference> RMS | PEAK
 *RST: RMS

Manual operation: See ["Power Reference"](#) on page 416

[:SOURce<hw>]:BB:ARbitrary:MCARrier:CARRier<ch>:STATe <State>

Enables/disables the selected carrier.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 0

Example:

SOURce1:BB:ARbitrary:MCARrier:CARRier15:STATe
 ON

Manual operation: See ["State"](#) on page 422

[:SOURce<hw>]:BB:ARbitrary:MCARrier:CFACTOR:MODE <Mode>

The command sets the mode for optimizing the crest factor by calculating the carrier phases.

Parameters:

<Mode> OFF | MIN | MAX

OFF

There is no automatic setting for minimizing or maximizing the crest factor. The Phase setting (command `BB:ARB:MCAR:CARR:PHAS`) is in use.

MIN

The crest factor is minimized by internally calculating optimized carrier phases. The Phase setting (command `BB:ARB:MCAR:CARR:PHAS`) is invalid.

MAX

The crest factor is maximized by internally calculating optimized carrier phases. The Phase setting (command `BB:ARB:MCAR:CARR:PHAS`) is invalid.

*RST: OFF

Example:`BB:ARB:MCAR:CFAC:MODE OFF`

switches off automatic crest factor optimization. The setting `SOUR:BB:ARB:MCAR:CARR:PHAS` has an effect.

Manual operation: See "[Crest Factor Mode](#)" on page 414**[:SOURce<hw>]:BB:ARbitrary:MCARrier:CLIPping:CFACtor <CFactor>**

Sets the value of the desired crest factor, if baseband clipping is enabled (`BB:ARB:MCAR:CLIP:STAT ON`).

A Target Crest Factor above the crest factor of the unclipped multicarrier signal has no effect.

Parameters:

<CFactor> float

Range: -50 to 50

Increment: 0.01

*RST: 50

Default unit: dB

Example:`BB:ARB:MCAR:CLIP:STAT ON`

enables clipping.

`BB:ARB:MCAR:CLIP:CFAC 37 dB`

sets the target crest factor.

Manual operation: See "[Target Crest Factor](#)" on page 415**[:SOURce<hw>]:BB:ARbitrary:MCARrier:CLIPping:CUTOff <Cutoff>**

Sets the cut off frequency of the final lowpass filter, if baseband clipping is enabled (`BB:ARB:MCAR:CLIP:STAT ON`).

When the cut off frequency is set as half of the output sample rate, a final lowpass filter improves the spectrum of the clipped multicarrier signal, but may also increase the resulting crest factor.

Parameters:

<Cutoff> float
 Range: 0 to 50E6
 Increment: 0.01
 *RST: 50E6
 Default unit: MHz

Example:

```
BB:ARB:MCAR:CLIP:STAT ON
enables clipping
BB:ARB:MCAR:CLIP:CUT 50 MHz
sets the cut off frequency of the filter.
```

Manual operation: See "[Filter Cut Off Frequency](#)" on page 415

[:SOURce<hw>]:BB:ARbitrary:MCARrier:CLIPping[:STATe] <State>

Switches baseband clipping on and off.

Clipping reduces the peak power of the resulting multi carrier signal according to the value set with the command `BB:ARB:MCAR:CLIP:CFAC`.

The resulting clipped peak power is defined by sum of the the RMS level of the unclipped multi carrier signal and the input parameter Target Crest Factor. Note that clipping reduces also the RMS level. Hence the resulting crest factor of the clipped signal is slightly above the Target Crest Factor. In order to get the unclipped parts of the clipped multicarrier signal matched with the unclipped multicarrier signal, the RF output power should be reduced by the difference between resulting crest factor and Target Crest Factor.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 0

Example:

```
BB:ARB:MCAR:CLIP:STAT ON
enables clipping
BB:ARB:MCAR:CLIP:CFAC 37 dB
sets the target crest factor.
```

Manual operation: See "[Clipping](#)" on page 415

[:SOURce<hw>]:BB:ARbitrary:MCARrier:CLOad

Creates a multi carrier waveform using the current entries of the carrier table.

This multi carrier waveform is saved with the file name specified with command `SOUR:BB:ARB:MCAR:OFIL`. The file extension is `*.wv`. Digital standard "ARB" is activated, the new multi carrier waveform is loaded and is output in accordance to the trigger settings.

Example: `MMEM:CDIR 'D:\user\waveform'`
sets the default directory.
`BB:ARB:MCAR:OFIL 'mcar1_2'`
defines the file name `mcar1_2.wv` for the multi carrier waveform.
`BB:ARB:MCAR:CLO`
creates multi carrier waveform `mcar1_2.wv`.
The new multi carrier waveform is loaded and digital standard "ARB" is activated.

Usage: Event

Manual operation: See ["Create and Load"](#) on page 419

[:SOURce<hw>]:BB:ARbitrary:MCARrier:CLOCK?

The command queries the resulting sample rate at which the multi carrier waveform is output by the arbitrary waveform generator. The output clock rate depends on the number of carriers, carrier spacing and input sample rate of the leftmost or rightmost carriers.

Return values:

<Clock> float
Range: 400 to Max
Increment: 1E-3

Example: `BB:ARB:MCAR:CLOC?`
queries the ARB multi carrier output clock rate.

Usage: Query only

Manual operation: See ["Clock Rate"](#) on page 418

[:SOURce<hw>]:BB:ARbitrary:MCARrier:CREate

Creates a multi carrier waveform using the current settings of the carrier table. The multi carrier waveform is saved into the file defined with command `SOUR:BB:ARB:MCAR:OFIL`. The file extension is `*.wv`.

Example: `MMEM:CDIR 'D:\user\waveform'`
sets the default directory.
`BB:ARB:MCAR:OFIL 'multi_wv1'`
defines the file name `multi_wv1.wv` for the multi carrier waveform.
`BB:ARB:MCAR:CRE`
creates multi carrier waveform `multi_wv1.wv`.

Usage: Event

Manual operation: See ["Create"](#) on page 419

[[:SOURce<hw>]:BB:ARbitrary:MCARrier:EDIT:CARRier:DELay:STEP <Step>

The command sets the step width by which the start delays of the carriers in the defined carrier range will be incremented.

Parameters:

<Step> float
 Range: -1 to 1
 Increment: 1E-9
 *RST: 0
 Default unit: s

Example:

BB:ARB:MCAR:EDIT:CARR:DEL 5 us
 sets a start delay of 5 us for the carriers in the carrier range.
 BB:ARB:MCAR:EDIT:CARR:DEL:STEP 1 us
 the start delay is incremented by 1us for each carrier, i.e. the first carrier has a start delay of 5us, the second a start delay of 6 us, etc.

Manual operation: See "Delay Step" on page 421

[[:SOURce<hw>]:BB:ARbitrary:MCARrier:EDIT:CARRier:DELay[:START] <Start>

The command sets the start delay for the individual carriers in the defined carrier range. If the command :BB:ARB:MCAR:EDIT:CARR:DEL:STEP is used to define a step width, the delay entered here applies only to the starting carrier. The delays of the remaining carriers are stepped up or down by the delay value specified in the :BB:ARB:MCAR:EDIT:CARR:DEL:STEP command.

Parameters:

<Start> float
 Range: 0 to 1
 Increment: 1E-9
 *RST: 0
 Default unit: s

Example:

BB:ARB:MCAR:EDIT:CARR:DEL 5us
 sets a start delay of 5 us for the carriers in the carrier range.

Manual operation: See "Delay Start" on page 421

[[:SOURce<hw>]:BB:ARbitrary:MCARrier:EDIT:CARRier:EXECute

The command adopts the settings for the carrier range which has been defined using the :BB:ARB:MCAR:EDIT:CARR:... commands.

Example: BB:ARB:MCAR:EDIT:CARR:STAR 4
the carrier range starts at carrier 2.
BB:ARB:MCAR:EDIT:CARR:STOP 20
the carrier range stops at carrier 20.
BB:ARB:MCAR:EDIT:CARR:STAT ON
sets all the carriers in the carrier range (2 to 20) to ON.
BB:ARB:MCAR:EDIT:CARR:EXEC
transfers the assistant settings for carrier 2 to 20 into the carrier table.

Usage: Event

Manual operation: See "[Apply Assistant Settings](#)" on page 421

[:SOURce<hw>]:BB:ARbitrary:MCARrier:EDIT:CARRier:FILE <File>

Selects input file

Parameters:

<File> string

Example: BB:ARB:MCAR:EDIT:CARR:FILE "D:\user\IQ_wcdma"

Manual operation: See "[Input Waveform File](#)" on page 421

[:SOURce<hw>]:BB:ARbitrary:MCARrier:EDIT:CARRier:PHASe:STEP <Step>

The command sets the step width by which the start phases of the carriers in the defined carrier range will be incremented.

The phase settings are only valid if optimization of the crest factor is disabled (:SOURce:BB:ARB:MCARrier:CFACTOR:MODE OFF).

Parameters:

<Step> float
Range: -359.99 to 359.99
Increment: 0.01
*RST: 0
Default unit: DEG

Example: BB:ARB:MCAR:EDIT:CARR:PHAS 90 DEG
sets a start phase of 90° for the carriers in the carrier range.
BB:ARB:MCAR:EDIT:CARR:PHAS:STEP 1 DEG
the start phase is incremented by 1° for each carrier, i.e. the first carrier has a start phase of 90°, the second a start phase of 91°, etc.

[:SOURce<hw>]:BB:ARbitrary:MCARrier:EDIT:CARRier:PHASe[:START] <Start>

The command sets the start phase for the individual carriers in the defined carrier range. If the command `:BB:ARB:MCAR:EDIT:CARR:PHAS:STEP` is used to define a step width, the phase entered here applies only to the starting carrier. The phases of the remaining carriers are stepped up or down by the phase value specified in the `:BB:ARB:MCAR:EDIT:CARR:PHAS:STEP` command.

The phase settings are only valid if optimization of the crest factor is disabled (`:SOURce:BB:ARB:MCARrier:CFACTOR:MODE OFF`).

Parameters:

<Start> float
 Range: 0 to 359.99
 Increment: 0.01
 *RST: 0
 Default unit: DEG

Example: `BB:ARB:MCAR:EDIT:CARR:PHAS 90 DEG`
 sets a start phase of 90° for the carriers in the carrier range.

Manual operation: See "[Phase Start](#)" on page 421

[:SOURce<hw>]:BB:ARbitrary:MCARrier:EDIT:CARRier:POWer:STEP <Step>

The command sets the step width by which the starting power of the carriers in the defined carrier range will be incremented.

Parameters:

<Step> float
 Range: -80 to 80
 Increment: 0.01
 *RST: 0
 Default unit: dB

Example: `BB:ARB:MCAR:EDIT:CARR:POW -80dB`
 sets a power of -80 dB for the carriers in the carrier range.
`BB:ARB:MCAR:EDIT:CARR:POW:STEP 1 dB`
 the power is incremented by 1dB for each carrier, i.e. the first carrier has -80dB, the second -79dB, etc.

Manual operation: See "[Gain Step](#)" on page 420

[:SOURce<hw>]:BB:ARbitrary:MCARrier:EDIT:CARRier:POWer[:START] <Start>

The command sets the power for the individual carriers in the defined carrier range. If the command `:BB:ARB:MCAR:EDIT:CARR:POW:STEP` is used to define a step width, the power entered here applies only to the starting carrier. The power of the remaining carriers is stepped up or down by the power specified in the `:BB:ARB:MCAR:EDIT:CARR:POW:STEP` command.

Parameters:

<Start> float
 Range: -80 to 0
 Increment: 0.01
 *RST: 0
 Default unit: dB

Example:

BB:ARB:MCAR:EDIT:CARR:POW -50 dB
 sets the power of the carriers in the carrier range to -50 dB.

Manual operation: See "Gain Start" on page 420

[:SOURce<hw>]:BB:ARbitrary:MCARrier:EDIT:CARRier:START <Start>

[:SOURce<hw>]:BB:ARbitrary:MCARrier:EDIT:CARRier:STOP <Stop>

The command selects the last carrier in the carrier range to which the settings with the :BB:ARB:MCAR:EDIT:CARR:. . . commands shall apply.

Parameters:

<Stop> integer
 Range: 0 to 511
 *RST: 0

Example:

BB:ARB:MCAR:EDIT:CARR:STOP 4
 the carrier range stops at carrier 4.

Manual operation: See "Carrier Stop" on page 420

[:SOURce<hw>]:BB:ARbitrary:MCARrier:EDIT:CARRier:STATe <State>

The command switches all the carriers in the selected carrier range on or off.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 1

Example:

BB:ARB:MCAR:EDIT:CARR:STAT ON
 sets all the carriers in the carrier range to ON.

Manual operation: See "Carrier State" on page 420

[:SOURce<hw>]:BB:ARbitrary:MCARrier:OFILe <OFile>

This command defines the output file name for the multi carrier waveform. This file name is used when a waveform is calculated (command SOUR:BB:ARB:MCAR:CLOad or SOUR:BB:ARB:MCAR:CREate). The file extension is *.wv.

Parameters:

<OFile> string

Example: `M MEM:CDIR "D:\user\waveform"`
sets the default directory.
`BB:ARB:MCAR:OFIL 'mcar1_2'`
defines the file name `mcar1_2.wv` for the multi carrier waveform file

Manual operation: See ["File"](#) on page 418

[[:SOURce<hw>]:BB:ARbitrary:MCARrier:PRESet

Sets all ARB multi carrier parameters to their default values.

Example: `SOURce1:BB:ARB:MCARrier:PRESet`

Usage: Event

Manual operation: See ["Set to Default"](#) on page 412

[[:SOURce<hw>]:BB:ARbitrary:MCARrier:SAMPles?

The command queries the resulting file size. The file size is returned in samples.

Return values:

<Samples> integer
Range: 0 to INT_MAX
*RST: 0

Example: `BB:ARB:MCAR:SAMP?`
queries the file size of the currently calculated multi carrier waveform.

Usage: Query only

Manual operation: See ["File Size"](#) on page 418

[[:SOURce<hw>]:BB:ARbitrary:MCARrier:SETTing:CATalog?

Queries the available settings files in the specified default directory. The settings files are used to set the ARB multi carrier submenu. Only files with the file extension `*.arb_multcarr` will be listed.

Return values:

<Catalog> string

Example: `M MEM:CDIR 'D:\user\waveform'`
sets the default directory
`BB:ARB:MCAR:SETT:CAT?`
reads out all the settings files in the default directory.
Response: `mcar1, mcar2`
the directory contains the configuration files
`mcar1.arb_multcarr` and `mcar2.arb_multcarr`.

Usage: Query only

Manual operation: See ["Save/Recall Frame"](#) on page 412

[:SOURce<hw>]:BB:ARbitrary:MCARrier:SETTING:LOAD <Filename>

Loads the settings file. If a settings file with the specified name does not yet exist, it is created. The file extension may be omitted. Only files with the file extension `*.arb_multcarr` will be loaded or created.

Setting parameters:

<Filename> string

Example: BB:ARB:MCAR:SETT:LOAD 'D:\user\new'
creates settings file `new.arb_multcarr`.

Usage: Setting only

Manual operation: See ["Save/Recall Frame"](#) on page 412

[:SOURce<hw>]:BB:ARbitrary:MCARrier:SETTING:STORE <Filename>

The command stores the current settings of submenu "Multi Carrier" in a file in the specified directory. The file extension may be omitted, the files are stored with the file extension `*.arb_multcarr`.

Setting parameters:

<Filename> string

Example: BB:ARB:MCAR:SETT:STOR 'D:\user\mcarr2'
stores settings file `mcarr2.arb_multcarr` in the default directory.

Usage: Setting only

Manual operation: See ["Save/Recall Frame"](#) on page 412

[:SOURce<hw>]:BB:ARbitrary:MCARrier:SETTING:STORE:FAST <Fast>

Determines whether the instrument performs an absolute or a differential storing of the settings.

Enable this function to accelerate the saving process by saving only the settings with values different to the default ones.

Note: This function is not affected by the "Preset" function.

Parameters:

<Fast> 0 | 1 | OFF | ON
*RST: 1

Manual operation: See ["Fast Save"](#) on page 160

[:SOURce<hw>]:BB:ARbitrary:MCARrier:TIME <Time>

Sets the user-defined signal period. This setting is only possible for Signal Period Mode User (BB:ARB:MCAR:TIME:MODE USER).

Parameters:

<Time> float
 Range: 0 to 1E9
 Increment: 1E-9
 *RST: 0
 Default unit: s

Example:

BB:ARB:MCAR:TIME:MODE USER
 selects Signal Period Mode User.
 BB:ARB:MCAR:TIME 10 s
 sets a signal period of 10 seconds

Manual operation: See "Signal Period" on page 416

[:SOURce<hw>]:BB:ARbitrary:MCARrier:TIME:MODE <Mode>

Selects the mode for calculating the resulting signal period of the multi carrier waveform. The resulting period is always calculated for all carriers in the carrier table irrespective of their state (ON/OFF).

Parameters:

<Mode> LONG | SHORT | LCM | USER

LONG

The resulting signal period is defined by the longest I/Q file in the carrier table. Shorter I/Q files are periodically repeated.

SHORT

The resulting signal period is defined by the shortest I/Q file in the carrier table. Only the first part of longer I/Q files is used.

USER

The signal period can be set with command [:SOURce<hw>]:BB:ARbitrary:MCARrier:TIME. Shorter I/Q files are repeated periodically, and only the first part of longer I/Q files is used.

LCM

The output file duration is the least common multiple of all input file durations.

*RST: LONG

Example:

SPOURce1:BB:ARbitrary:MCARrier:TIME:MODE LONG
 selects signal period mode long

Manual operation: See "Signal Period Mode" on page 415

SOURce:BB:ARB:WAV Subsystem

The WAVeform subsystem contains the commands for working with waveform files.

<code>[:SOURce<hw>]:BB:ARbitrary:WAVeform:CATalog?</code>	612
<code>[:SOURce<hw>]:BB:ARbitrary:WAVeform:CATalog:LENGth?</code>	612
<code>:MMEMory:DATA:UNPRotected</code>	613
<code>[:SOURce<hw>]:BB:ARbitrary:WAVeform:CLOCK</code>	614
<code>[:SOURce<hw>]:BB:ARbitrary:WAVeform:DATA</code>	615
<code>[:SOURce<hw>]:BB:ARbitrary:WAVeform:DELeTe</code>	616
<code>[:SOURce<hw>]:BB:ARbitrary:WAVeform:FREE?</code>	616
<code>[:SOURce<hw>]:BB:ARbitrary:WAVeform:HDDStreaming:BLEVel?</code>	616
<code>[:SOURce<hw>]:BB:ARbitrary:WAVeform:HDDStreaming:STATe</code>	617
<code>[:SOURce<hw>]:BB:ARbitrary:WAVeform:POINts?</code>	617
<code>[:SOURce<hw>]:BB:ARbitrary:WAVeform:SELeCt</code>	617
<code>[:SOURce<hw>]:BB:ARbitrary:WAVeform:TAG?</code>	618

`[:SOURce<hw>]:BB:ARbitrary:WAVeform:CATalog?`

Reads out the files in the default directory. The default directory is set using command `MMEM:CDIRectory`. When the names of the waveform files are returned they are separated by commas. Only files with the file extension `*.wv` will be listed.

Return values:

<Catalog> string

Example:

```
MMEM:CDIR 'D:\user\waveform'
```

sets the default directory.

```
BB:ARB:WAV:CAT?
```

reads out all the files in the default directory.

```
Response: sin1, wave
```

the directory contains the waveform files `sin1.wv` and `wave.wv`.

Usage: Query only

`[:SOURce<hw>]:BB:ARbitrary:WAVeform:CATalog:LENGth?`

Reads out the files in the default directory and returns the number of waveform files in this directory. The default directory is set using command `MMEM:CDIRectory`. Only files with the file extension `*.wv` will be listed.

Return values:

<Length> integer

Number of waveform files in default directory

Range: 0 to INT_MAX

*RST: 0

Example: MMEM:CDIR 'D:\user\waveform'
 sets the default directory.
 BB:ARB:WAV:CAT?
 reads out all the files in the default directory.
 Response: sin1, wave
 the directory contains the waveform files sin1.wv and
 wave.wv.
 BB:ARB:WAV:CAT:LEN?
 Response: 2

Usage: Query only

:MMEMory:DATA:UNPRotected <Msus>, <Data>

The **setting** command sends the I/Q data and the marker data to the file defined with the <Msus> parameter. The required tags are created automatically so that the file content follows the waveform file format.

The **query** reads out the I/Q data part or the marker information of the specified file.

Waveform files can also be created with the command `[:SOURce<hw>] :BB:ARBitrary:WAVeform:DATA`. In this case, the *complete content* of the waveform file must be specified, i.e. not only the I/Q or marker data but all required tags.

Parameters:

<Msus>

<Identifier>:<file name>

Mass Storage Unit Specifier

A string that specifies whether I/Q data (NVWFM) or marker data (NVMKR) is transferred and the file name the data is stored in.

If the file with the specified name does not exist, a file is created. Any existing content in the file is *overwritten*.

Complete file path and file extension may also be specified. If omitted, files are stored in the default directory and the extension *.wv is assigned to the file name.

Setting parameters:

<Data> block data
I/Q data or marker binary data, where the number of marker elements should be equal to the number of I/Q samples

I0Q0..IxQx...IN-1QN-1

I_xQ_x... represents binary data (16-bit signed integer in 2's complement notation) containing the I and Q component alternately and starting with the I component. Each component consists of two bytes in MSB format (most significant byte first).

The values of the two bytes in an I component and a Q component are in the range: -32768 to +32767.

M0M1...Mx...MN-1

M_x represents one marker byte, where only the last 4 bits are used. These 4 bits are assigned to the 4 possible markers of the instrument, one bit per marker: Bit₀ = Marker 1, ... Bit₃ = Marker 4.

One 4 bit marker elements is required for every I/Q sample.

Example:

```
:MMEM:DATA:UNPR "NVWFM:/var/user/wave.wv",#232123456789009876543218978
// the specified I/Q data is added to a file named wave.wv
// in the specified directory
:MMEMory:DATA:UNPRotected? "NVWFM:/var/user/wave.wv"
:MMEMory:DATA:UNPRotected "NVMKR:/var/user/wave.wv",#185*7uuf5*
// the specified marker data is added to a file named wave.wv
// in the specified directory
// used are printable values;
// used are only the last 4 bits of a byte
:MMEMory:DATA:UNPRotected? "NVMKR:/var/user/wave.wv"
// note that, the query returns binary values
SOURcel:BB:ARBitrary:WAVeform:CLOCK "/var/user/wave.wv",1.1E6
SOURcel:BB:ARBitrary:WAVeform:CLOCK? "/var/user/wave.wv"
```

[[:SOURce<hw>]:BB:ARBitrary:WAVeform:CLOCK <Filename>, <Clock>

Appends information on the ARB clock rate to specified waveform file. The file must contain I/Q and/or marker data and have been created with the command [:MMEMory:DATA:UNPRotected](#) on page 613.

Parameters:

<Filename> string
Complete file path and file name with file extension (*.wv).
If the file is in the default directory, the file path can be omitted.

Setting parameters:

<Clock> float
Range: 400 to 100E6
Increment: 1E-3
*RST: 1E6

Example: see [:MMEMory:DATA:UNPRotected](#) on page 613

```
[ :SOURce<hw>]:BB:ARbitrary:WAVeform:DATA <Filename>, <Data>
[ :SOURce<hw>]:BB:ARbitrary:WAVeform:DATA? <Tag>
```

The **setting** command writes the binary block data <data> to the file identified by <filename>. The complete content of the waveform file is transmitted as a binary data block.

Tip: To ensure trouble-free data transmission, set the GPIB delimiter to EOI.

The **query** command retrieves the content of the specified tag of the currently selected waveform file or the waveform file specified with the <filename>.

See [Chapter 7.4, "Waveform and List Format"](#), on page 490.

By default, the waveform files are saved in the default directory of the instrument (C:\Program Files\Rohde&Schwarz\SMJFirmware\Lists).

To access waveform files located in another directory, the complete file path and file name are required.

Parameters:

<Filename> string
 Specifies the name of the waveform file the binary data will be copied to.
 The file extension (.wv) may be omitted.

Setting parameters:

<Data> block data
 Contents of the waveform file as a definite length binary block.

Query parameters:

<Tag> 'comment' | 'copyright' | 'date' | 'lacpfilter' | 'marker name' |
 'poweroffset'
 Identifier of the tag which shall be retrieved from the waveform file.

Example:

Setting

```
BB:ARB:WAV:DATA "D:\user\temp\test1", <bin data block>
writes the block data to file test1.wv in the D:\user\temp\ directory.
```

Example:

Query

```
BB:ARB:WAV:SEL 'D:\user\wave1.wv'
BB:ARB:WAV:DATA? 'comment'
queries the content of the 'comment' tag of the currently selected file wave1.wv
Response: "Sine wave for test purposes"
BB:ARB:WAV:DATA? 'D:\user\temp\test1', 'comment'
queries the content of the comment tag of a specific file test1.wv
Response: "Test file"
```

[:SOURce<hw>]:BB:ARBitrary:WAVeform:DELeTe <Filename>

Deletes the specified waveform file. If the file is not on the default path, the path must be specified at the same time. The file extension may be omitted. Only files with the file extension * .wv will be deleted.

Setting parameters:

<Filename> string

Example: BB:ARB:WAV:DEL 'D:\user\wave1.wv'
deletes waveform file wave1.wv.

Usage: Setting only

[:SOURce<hw>]:BB:ARBitrary:WAVeform:FREE?

Queries the free disk space on the default path of the instrument's harddisk.

Return values:

<Free> integer
Range: 0 to INT_MAX
*RST: 1

Example: MMEM:CDIR 'D:\user\waveform'
sets the default directory
BB:ARB:WAV:FREE?
queries the free disk space in directory

Usage: Query only

[:SOURce<hw>]:BB:ARBitrary:WAVeform:HDDStreaming:BLEV?

Queries the filling level of the streaming buffer.

During normal operation, the streaming buffer level should have a value of 90% .. 100%. Buffer level around 0% indicates a buffer underrun and the signal processing will be interrupted.

Adjustment in the parameter value or state usually results in short decreasing of the streaming buffer level but this buffer state should not be mislead with buffer underrun.

Return values:

<BLevel> integer
Range: 0 to 100
*RST: 0

Example: BB:ARB:WAV:HDDS:STAT ON
enables HDD streaming.
BB:ARB:WAV:HDDS:BLEV?
queries the streaming buffer level.
Response: 94%

Usage: Query only

Manual operation: See ["Streaming Buffer"](#) on page 376

[[:SOURce<hw>]:BB:ARbitrary:WAVEform:HDDStreaming:STATe <State>

Enables/disables the streaming of modulation data direct form the hard drive (HDD).

HDD streaming is recommended for processing of large files that require more ARB memory than the currently installed one.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 0

Example: BB:ARB:WAV:HDDS:STAT ON
 enables HDD streaming.

Manual operation: See ["HDD Streaming"](#) on page 376

[[:SOURce<hw>]:BB:ARbitrary:WAVEform:POINTs?

The command queries the number of samples in the waveform file selected using command :ARB:WAV:SEL. Only the file name has to be entered. Only files with the file extension * .wv will be read out.

Return values:

<Points> <waveform filename>
 Range: 0 to 1000
 *RST: 1

Example: BB:ARB:WAV:POINT?
 queries the number of I/Q values pairs in the waveform file.
 Response: 401
 the waveform file contains 401 I/Q values pairs.

Usage: Query only

[[:SOURce<hw>]:BB:ARbitrary:WAVEform:SELEct <Filename>

Selects the waveform file. If the file is not on the default path, the path must be specified.

The file extension may be omitted. Only files with the file extension * .wv will be created or loaded.

Parameters:

<Filename> string

Example: BB:ARB:WAV:SEL 'D:\user\wave1.wv'
 selects waveform file and loads it.

Manual operation: See ["Load Waveform"](#) on page 374

[:SOURce<hw>]:BB:ARbitrary:WAVeform:TAG?

Queries the content of the specified tag of the waveform file, selected with the command `[:SOURce<hw>] :BB:ARbitrary:WAVeform:SElect`.

See also [Chapter 7.4, "Waveform and List Format"](#), on page 490.

Return values:

<Tag> string

Example:

```
BB:ARB:WAV:SEL 'D:\user\wave1.wv'
selects waveform file and loads it
BB:ARB:WAV:TAG? 'comment'
queries the content of the comment tag
Response: "Sine wave for test purposes"
```

Usage: Query only

SOURce:BB:ARB:WSEG Subsystem

The `WSEGment` subsystem contains the commands for setting the Multi Segment Waveform Generator.

Section [Chapter 7.4, "Waveform and List Format"](#), on page 490 describes the ARB waveform format and how it is used to transmit waveforms via the IEC bus.

<code>[:SOURce<hw>]:BB:ARbitrary:WSEGment?</code>	618
<code>[:SOURce<hw>]:BB:ARbitrary:WSEGment:CLOad</code>	619
<code>[:SOURce<hw>]:BB:ARbitrary:WSEGment:CONFigure:BLANK:APPend</code>	620
<code>[:SOURce<hw>]:BB:ARbitrary:WSEGment:CONFigure:CATalog?</code>	620
<code>[:SOURce<hw>]:BB:ARbitrary:WSEGment:CONFigure:CLOCK</code>	620
<code>[:SOURce<hw>]:BB:ARbitrary:WSEGment:CONFigure:CLOCK:MODE</code>	621
<code>[:SOURce<hw>]:BB:ARbitrary:WSEGment:CONFigure:COMMeNt</code>	621
<code>[:SOURce<hw>]:BB:ARbitrary:WSEGment:CONFigure:DELeTe</code>	622
<code>[:SOURce<hw>]:BB:ARbitrary:WSEGment:CONFigure:LEVeL[:MODE]</code>	622
<code>[:SOURce<hw>]:BB:ARbitrary:WSEGment:CONFigure:MARKer:ESEGment</code>	622
<code>[:SOURce<hw>]:BB:ARbitrary:WSEGment:CONFigure:MARKer:FSEGment</code>	623
<code>[:SOURce<hw>]:BB:ARbitrary:WSEGment:CONFigure:MARKer:MODE</code>	623
<code>[:SOURce<hw>]:BB:ARbitrary:WSEGment:CONFigure:OFILe</code>	624
<code>[:SOURce<hw>]:BB:ARbitrary:WSEGment:CONFigure:SEGMeNt:APPend</code>	624
<code>[:SOURce<hw>]:BB:ARbitrary:WSEGment:CONFigure:SEGMeNt:CATalog?</code>	625
<code>[:SOURce<hw>]:BB:ARbitrary:WSEGment:CONFigure:SElect</code>	625
<code>[:SOURce<hw>]:BB:ARbitrary:WSEGment:CREate</code>	625
<code>[:SOURce<hw>]:BB:ARbitrary:WSEGment:NAME?</code>	626
<code>[:SOURce<hw>]:BB:ARbitrary:WSEGment:NEXT</code>	626
<code>[:SOURce<hw>]:BB:ARbitrary:WSEGment:NEXT:EXECute</code>	627
<code>[:SOURce<hw>]:BB:ARbitrary:WSEGment:NEXT:SOURce?</code>	627
<code>[:SOURce<hw>]:BB:ARbitrary:WSEGment:SEQuence:APPend</code>	628
<code>[:SOURce<hw>]:BB:ARbitrary:WSEGment:SEQuence:SElect</code>	628

[:SOURce<hw>]:BB:ARbitrary:WSEGment?

This command queries the currently output segment of the multi segment waveform.

Return values:

<WSegment> integer
 Range: 0 to 1023
 *RST: 0

Example:

BB:ARB:WSEG?
 queries the currently output segment.
 Response 2
 segment 2 is currently output.

Usage: Query only

Manual operation: See "[Current Segment](#)" on page 382

[[:SOURce<hw>]:BB:ARbitrary:WSEgment:CLOad <FilenameInput>

Creates a multi segment waveform using the current entries of the specified configuration file.

This multi segment waveform is saved with the file name specified in the configuration file. The file extension is *.wv. ARB is activated, the new multi segment waveform is loaded and the first segment is output in accordance to the trigger settings.

Setting parameters:

<FilenameInput> string

Example:

M MEM:CDIR 'D:\user\
 sets the default directory.
 BB:ARB:WSEG:CONF:SEL 'multi_sin'
 creates the configuration file multi_sin.inf_mswv in the
 default directory.
 BB:ARB:WSEG:CONF:SEGM:APP 'sinus1'
 includes waveform sinus1.wv as segment 1 in the configura-
 tion file. The waveform must be available in the default directory.
 BB:ARB:WSEG:CONF:SEGM:APP 'sinus2'
 includes waveform sinus2.wv as segment 2 in the configura-
 tion file. The waveform must be available in the default directory.
 BB:ARB:WSEG:CONF:OFIL 'mseg1_2'
 defines the file name mseg1_2.wv for the multi segment wave-
 form.
 BB:ARB:WSEG:CLO 'D:\user\multi_sin.inf_mswv'
 creates multi segment waveform mseg1_2.wv using the set-
 tings of the configuration file multi_sin.inf_mswv.
 The new multi segment waveform is loaded and ARB is activa-
 ted.

Usage: Setting only

Manual operation: See "[Save List](#)" on page 405

[:SOURce<hw>]:BB:ARbitrary:WSEgment:CONFigure:BLANk:APPend
 <SampCount>, <Frequency>

Adds a blank segment to the multi segment file.

Setting parameters:

<SampCount> float
 Specifies the number of samples.
 Range: 512 to 1E7
 Increment: 1
 *RST: 1000

<Frequency> float
 Determines the clock rate.
 Range: 400 Hz to Max (depends on instrument type)
 Increment: 0.001
 *RST: 1E8

Example: SOUR:BB:ARB:WSEG:CONF:SEL "MSegFile"
 selects a multi segment file.
 SOUR:BB:ARB:WSEG:CONF:BLAN:APP 1000,100000000
 adds a blank segment with 1000 samples and 100 MHz clock
 rate to the selected multi segment file

Usage: Setting only

Manual operation: See "[Clock Rate](#)" on page 402

[:SOURce<hw>]:BB:ARbitrary:WSEgment:CONFigure:CATalog?

Queries the available configuration files in the specified default directory. The configuration files are used to create multi segment waveform files.

Return values:

<Catalog> string

Example: MMEM:CDIR 'D:\user\waveform'
 sets the default directory.
 BB:ARB:WSEG:CONF:CAT?
 reads out all the configuration files in the default directory.
 Response: mult1, multi2
 the directory contains the configuration files multi1.inf_mswv
 and multi2.inf_mswv.

Usage: Query only

Manual operation: See "[Load List](#)" on page 405

[:SOURce<hw>]:BB:ARbitrary:WSEgment:CONFigure:CLOCK <Clock>

This command defines the clock rate used for multi segment waveform output in case of Clock Mode "User" (:BB:ARB:WSEG:CONF:CLOCK:MODE USER).

Parameters:

<Clock> float
 Increment: 1E-3
 *RST: max SampleRate

Example:

BB:ARB:WSEG:CONF:CLOC:MODE USER
 selects Clock Mode User.
 BB:ARB:WSEG:CONF:CLOC 50MHz
 defines a clock rate of 50 MHz.

Manual operation: See "[User Clock Rate](#)" on page 404

[:SOURce<hw>]:BB:ARbitrary:WSEgment:CONFigure:CLOCK:MODE <Mode>

Selects the clock rate mode for the multi segment waveform.

Parameters:

<Mode> UNCHanged | HIGHest | USER

UNCHanged
 The segments are output with the clock rate defined in the waveform file.

HIGHest
 The segments are output at the highest available clock rate.

USER
 The segments are output with the clock rate defined with command `[:SOURce<hw>] :BB:ARbitrary:WSEgment:CONFigure:CLOCK`

*RST: UNCHanged

Example:

BB:ARB:WSEG:CONF:CLOC:MODE UNCH
 selects clock mode unchanged. The segments are output with the clock rate defined in the waveform file.

Manual operation: See "[Clock](#)" on page 403

[:SOURce<hw>]:BB:ARbitrary:WSEgment:CONFigure:COMMent <Comment>

This command enters a comment for the configuration file. The configuration file must be specified with command `:BB:ARB:WSEG:CONF:SEL`.

Parameters:

<Comment> string

Example:

BB:ARB:WSEG:CONF:COMM <3gpp_up>
 enters comment "3gpp_up".

Manual operation: See "[Comment](#)" on page 405

[[:SOURce<hw>]:BB:ARbitrary:WSEgment:CONFigure:DELeTe <Filename>

Deletes the configuration file. The configuration files are used to create multi segment waveform files.

Setting parameters:

<Filename> string

Example: MMEM:CDIR 'D:\user\waveform'
sets the default directory.
BB:ARB:WSEG:CONF:DEL 'multil'
deletes configuration file multil.inf_mswv.

Usage: Setting only

Manual operation: See "[Delete](#)" on page 402

[[:SOURce<hw>]:BB:ARbitrary:WSEgment:CONFigure:LEVel[:MODE] <Mode>

This command selects the level mode for the multi segment waveform.

Parameters:

<Mode> UNCHanged | ERMS

UNCHanged

The segments are output exactly as defined in the files.

ERMS

The segments are output so that all segments have the same rms value.

*RST: UNCHanged

Example: BB:ARB:WSEG:CONF:LEV:MODE UNCH
selects level mode unchanged. The segments are output as defined in the waveform file.

Manual operation: See "[Level](#)" on page 403

[[:SOURce<hw>]:BB:ARbitrary:WSEgment:CONFigure:MARKer:ESEgment <Mode>

Enables/disables the generation of an additional marker restart signal in the output waveform file.

If additional marker generation is enabled, the existing marker signals in the individual segment waveform files are not considered.

Parameters:

<Mode> OFF | MRK1 | MRK2 | MRK3 | MRK4

OFF

No additional marker is generated.

MRK1|MRK2|MRK3|MRK4

Generates a restart marker signal at the beginning of each segment for the corresponding marker.

The segment begin is defined by the low-high slope of the marker. This applies for switching between two segments as well as in case of segment replay.

*RST: OFF

Example:

```
BB:ARB:WSEG:CONF:SEL 'ConfComm'
```

```
BB:ARB:WSEG:CONF:MARK:ESEG MRK3
```

Manual operation: See "[Segment Restart](#)" on page 404

[:SOURce<hw>]:BB:ARbitrary:WSEgment:CONFigure:MARKer:FSEgment
<Mode>

Enables/disables the generation of an additional marker restart signal in the output waveform file.

If additional marker generation is enabled, the existing marker signals in the individual segment waveform files are not considered.

Parameters:

<Mode> OFF | MRK1 | MRK2 | MRK3 | MRK4

OFF

No additional marker is generated.

MRK1|MRK2|MRK3|MRK4

Generates a restart marker signal at the beginning of the first segment for the corresponding marker.

Use this setting to generate a restart marker for the complete sequence.

*RST: OFF

Example:

```
BB:ARB:WSEG:CONF:SEL 'ConfComm'
```

```
BB:ARB:WSEG:CONF:MARK:FSEG MRK3
```

Manual operation: See "[Sequence Restart](#)" on page 404

[:SOURce<hw>]:BB:ARbitrary:WSEgment:CONFigure:MARKer:MODE <Mode>

Defines the way the marker information within the separate segments is processed.

Parameters:

<Mode> IGNore | TAKE

IGNore

The marker information carried in the individual segment waveform files is not considered.

TAKE

The output waveform file contains the marker information as configured in the individual waveform files.

*RST: TAKE

Example:

BB:ARB:WSEG:CONF:SEL 'ConfComm'

BB:ARB:WSEG:CONF:MARK:MODE TAKE

Manual operation: See "[Segment Marker](#)" on page 404

[:SOURce<hw>]:BB:ARbitrary:WSEgment:CONFigure:OFILe <OFile>

Defines the file name for the multi segment waveform. The file extension is *.wv.

Parameters:

<OFile> string

Example:

MMEM:CDIR 'D:\user\waveform'

sets the default directory.

BB:ARB:WSEG:CONF:SEL 'multil'

creates the configuration file `multil.inf_mswv` in default directory.

BB:ARB:WSEG:CONF:OFIL 'mseg1_2'

defines the file name `mseg1_2.wv` for the multi segment waveform file created using configuration file `multil.inf_mswv`.

Manual operation: See "[Output file](#)" on page 405

**[:SOURce<hw>]:BB:ARbitrary:WSEgment:CONFigure:SEGment:APPend
<Waveform>**

Appends the specified waveform to the configuration file.

Setting parameters:

<Waveform> string

Example:

MMEM:CDIR 'D:\user\waveform'

sets the default directory

BB:ARB:WSEG:CONF:SEL 'new'

creates the configuration file `new.inf_mswv` in the default directory.

BB:ARB:WSEG:CONF:SEGM:APP 'arb1'

appends waveform `arb1.wv` to configuration file `new`. Waveform `arb1` will be the first segment of a multi segment waveform created with configuration file `new`.

Usage: Setting only

Manual operation: See ["Append"](#) on page 402

[:SOURce<hw>]:BB:ARbitrary:WSEgment:CONFigure:SEGment:CATalog?

Queries the segments of the currently selected configuration file.

Return values:

<Catalog> string

Example:

```
MMEM:CDIR 'D:\user\waveform'
sets the default directory.
BB:ARB:WSEG:CONF:SEL 'multi_sin'
selects the configuration file multi_sin.inf_mswv.
BB:ARB:WSEG:CONF:SEGM:CAT?
queries the segments of the selected configuration file.
Response: arb4, arb2
The configuration file includes the segments arb4.wv and
arb2.wv.
```

Usage: Query only

Manual operation: See ["Append"](#) on page 402

[:SOURce<hw>]:BB:ARbitrary:WSEgment:CONFigure:SElect <Filename>

Selects the configuration file in the default directory.

A path can also be specified, in which case the files in the specified directory are selected. If a configuration file with the specified name does not yet exist, it is created. The file extension may be omitted. Only files with the file extension *.inf_mswv will be selected or created.

Parameters:

<Filename> string

Example:

```
MMEM:CDIR 'D:\user\waveform'
sets the default directory.
BB:ARB:WSEG:CONF:SEL 'new'
create configuration file new.inf_mswv in the default directory.
```

Manual operation: See ["Load List"](#) on page 405

[:SOURce<hw>]:BB:ARbitrary:WSEgment:CREate <FilenameInput>

Creates a multi segment waveform using the current settings of the specified configuration file. The multi segment waveform is saved into the file defined in the configuration file. The file extension is *.wv.

Setting parameters:

<FilenameInput> string

Example:

```
MMEM:CDIR 'D:\user\'
sets the default directory
BB:ARB:WSEG:CONF:SEL 'new'
creates the configuration file new.inf_mswv in the default
directory.
BB:ARB:WSEG:CONF:SEGM:APP 'arb1.wv'
'includes waveform arb1.wv as segment 1 in the configuration
file. The waveform must be available in the default directory.
BB:ARB:WSEG:CONF:OFIL 'multi_wv1'
defines the file name multi_wv1.wv for the multi segment
waveform.
BB:ARB:WSEG:CRE 'D:\user\new.inf_mswv'
creates multi segment waveform multi_wv1.wv using the set-
tings of the configuration file new.inf_mswv.
```

Usage: Setting only

Manual operation: See ["Save List"](#) on page 405

[:SOURce<hw>]:BB:ARbitrary:WSEGment:NAME?

This command queries the name of the waveform of the currently output segment of the multi segment waveform.

Return values:

<Name> string

Example: BB:ARB:WSEG:NAME?
queries the currently output segment.

Usage: Query only

Manual operation: See ["Current Segment"](#) on page 382

[:SOURce<hw>]:BB:ARbitrary:WSEGment:NEXT <Next>

Selects the segment to be output.

Parameters:

<Next> float
Range: 0 to 1023
*RST: 0

Example: `MMEM:CDIR 'D:\user\waveform'`
sets the default directory.
`BB:ARB:WSEG:NEXT 2`
selects segment 2 to be output.
`BB:ARB:TRIG:SMOD NEXT`
selects extended trigger mode next, i.e. the segment specified with command `:BB:ARB:WSEG:NEXT` will be output.
`BB:ARB:SEQ AUTO`
selects trigger mode Auto.
`BB:ARB:WAV:SEL 'multi_wv1'`
loads multi segment waveform `multi_wv1.wv`. Generation of segment 2 starts.
`BB:ARB:WSEG:NEXT 3`
switched at once to output of segment 3.

Manual operation: See ["Next Segment"](#) on page 382

[:SOURce<hw>]:BB:ARbitrary:WSEGment:NEXT:EXECute

Triggers manually switchover to the subsequent segment in the mutli segment file. A manual trigger can be executed only when an internal next segment source (`BB:ARB:WSEG:NEXT:SOUR INT`) has been selected.

To perform a switchover to any segment within the multi segment file, select the next segment with the command `BB:ARB:WSEG:NEXT`.

This command is disabled, if a sequencing play list is enabled.

Example: `BB:ARB:WSEG:NEXT:SOUR INT`
selects internal next segment source.
`BB:ARB:WSEG:NEXT 2`
selects segment 2 to be output.
`BB:ARB:WSEG:NEXT:EXEC`
executes a switchover to the next segment.

Usage: Event

Manual operation: See ["Execute Next Segment"](#) on page 388

[:SOURce<hw>]:BB:ARbitrary:WSEGment:NEXT:SOURce?

Queries the next segment source.

Return values:

<Source> INTernal
*RST: INTernal

Example: `BB:ARB:WSEG:NEXT:SOUR?`
queries the next segment source.

Usage: Query only

Manual operation: See ["Next Segment Source"](#) on page 387

```
[ :SOURce<hw>]:BB:ARBitrary:WSEgment:SEquence:APPend <State>,
    <Segment>, <Count>, <Next>
```

Appends a new segment to the selected sequencing play list.

Setting parameters:

<State>	ON OFF activates/deactivates the appended segment *RST: ON
<Segment>	integer indicates the number of the segment as in the multi segment waveform file Range: 0 to SegmentCount - 1
<Count>	integer defines how many times this segment is repeated Range: 1 to 65535
<Next>	NEXT BLANK ENDLess SEG0 SEG1 ... SEG31 0...maxSegment determines the action after completing the current segment, like for instance which segment is processed after the processing of the current one is finished.

Example: BB:ARB:WSEG:SEQ:SEL 'D:\user\play_list_1'
selects the sequencing list play_list_1.wvs.
BB:ARB:WSEG:SEQ:APP ON,3,15,BLANK
appends the segment number 3 as a new segment to the sequencing list; this segment is activated and will be repeated 15 times and followed by a blank segment.

Usage: Setting only

Manual operation: See "[Append](#)" on page 409

```
[ :SOURce<hw>]:BB:ARBitrary:WSEgment:SEquence:SElect <Filename>
```

Selects the sequencing list (files with extension *.wvs)

Parameters:

<Filename>	string
------------	--------

Example: BB:ARB:WSEG:SEQ:SEL 'D:\user\play_list_1'
selects the sequencing list play_list_1.wvs.

Manual operation: See "[Sequencing List](#)" on page 388

7.16.3.3 SOURce:BB:DM Subsystem

The commands in the SOURce:BB:DM subsystem are described in two sections, separated into configuring digital modulation and lists for digital modulation.

DM General Remote-Control Commands

The following section contains the commands for generating the digital modulation signal.

• Common Settings.....	629
• Clock Settings.....	633
• Trigger Settings.....	635
• Marker Settings.....	641
• Filter Settings.....	644
• Modulation Settings.....	647
• Power Ramp.....	651

Common Settings

[:SOURce<hw>]:BB:DM:PATTern.....	629
[:SOURce<hw>]:BB:DM:PRBS[:LENGth].....	629
[:SOURce<hw>]:BB:DM:PRESet.....	630
[:SOURce<hw>]:BB:DM:SOURce.....	630
[:SOURce<hw>]:BB:DM:SRATe.....	631
[:SOURce<hw>]:BB:DM:STANdard.....	632
[:SOURce<hw>]:BB:DM:STATe.....	632
[:SOURce<hw>]:BB:DM:SWITching:SOURce.....	632
[:SOURce<hw>]:BB:DM:SWITching:STATe.....	633

[:SOURce<hw>]:BB:DM:PATTern <Pattern>

The command selects the data pattern for the internal data when PATTern is selected as the data source. The maximum length is 64 bits.

Parameters:

<Pattern>	string
Range:	#B0,1 to #B111...1,64
*RST:	#B0,1

Example:

```
BB:DM:SOUR PATT
selects Pattern as the data source for digital modulation.
BB:DM:PATT #B01110111010101010,17
generates the user-defined sequence of 0/1 data.
```

[:SOURce<hw>]:BB:DM:PRBS[:LENGth] <Length>

The command defines the length of the pseudo-random sequence in accordance with the following equation:

$$\text{Length} = (2^{\text{Length}}) - 1$$

Parameters:

<Length> 9 | 11 | 15 | 16 | 20 | 21 | 23 | PN9 | PN11 | PN15 | PN16 |
 PN20 | PN21 | PN23
 *RST: 9

Example:

```
BB:DM:SOUR PRBS
```

The internal pseudo-random generator is used as the data source.

```
BB:DM:PRBS 9
```

An internal pseudo-random sequence of 511 bits will be generated.

Manual operation: See ["Data Source"](#) on page 342

[SOURce<hw>]:BB:DM:PRESet

Sets the default settings for digital modulation (*RST values specified for the commands).

Not affected is the state set with the command `SOURce<hw>:BB:DM:STATe`

Example: `SOURce1:BB:DM:PRESet`

Usage: Event

Manual operation: See ["Set To Default"](#) on page 340

[SOURce<hw>]:BB:DM:SOURce <Source>

The command selects the data source.

Parameters:

<Source> ZERO | ONE | PRBS | PATtern | DLIS | SERial | PARallel

ZERO
An internally generated 0 data sequence is used.

ONE
An internally generated 1 data sequence is used.

PRBS
The pseudo-random sequence generator is used as the data source. The length of the random sequence is defined with the aid of command `SOURce:BB:DM:PRBS`.

PATtern
Internally generated data with a fixed pattern is used. The data pattern is defined using command `SOURce:BB:DM:PATtern`.

DLIS
Data from the selected data list is used.

SERial
External data from the serial interface is used.

PARallel
External data from the serial interface is used.

*RST: PRBS

Example:

```
BB:DM:SOUR DLIS
the internal data generator is used.
BB:DM:DLIS:SEL 'test'
the data list test.dm_iqd is used.
```

Manual operation: See "Data Source" on page 342

[[:SOURce<hw>]:BB:DM:SRATE <SRate>

Sets the symbol rate. The value range is dependent on the selected modulation type. On changing to an FSK modulation type, excessively high values are automatically limited to the maximum value that can be set for FSK (see data sheet). The symbol rate can be entered in Hz/kHz/MHz or Symb/s / kSymb/s and MSymb/s.

When a standard is selected (`DM:STANdard`), the symbol rate is automatically set to the appropriate default value.

The value range is dependent on the selected modulation type (`:BB:DM:FORM`). When a standard is selected (`:BB:DM:STAN`), the symbol rate is set to the default value.

Parameters:

<SRate> float

Range: 400 to depends on hardware

Increment: 0.001

*RST: 270833.333

Default unit: Hz

Example:

```
BB:DM:SRAT 10 MHz
sets a symbol rate of 10 MHz.
```

Manual operation: See ["Symbol Rate"](#) on page 345

[:SOURce<hw>]:BB:DM:STANdard <Standard>

Selects the standard.

After selection, modulation parameters "Modulation Type" (:BB:DM:FORMat), "Symbol Rate" (:BB:DM:SRATe), "Filter" (:BB:DM:FILTer:TYPE and :BB:DM:FILTer:PARAmeter:...) and "Coding" (:BB:DM:CODing) are automatically set in accordance with the standard.

The USER parameter cannot be set. A query returns this value if a user-defined Custom Dig Mod setting was loaded or if one of the associated settings was changed subsequent to the selection of a standard. The user defined settings are stored and loaded with commands :BB:DM:STAN:ULIS:... (see ["DM Lists"](#) on page 654).

Parameters:

<Standard> USER | BLUetooth | DECT | ETC | GSM | GSMEdge | NADC | PDC | PHS | TETRa | W3GPp | TDSCdma | CFORward | CREVerse | WORLdspace | TFTS | APCOPH1C4fm | APCOPH1CQpsk | APCOPH2HCpm | APCOPH2HDQpsk | APCOPH2HD8PSKW | APCOPH2HD8PSKN | APCOPH1Lsm | APCOPH1Wcqpsk
*RST: GSM

Example:

BB:DM:STAN DECT
selects digital modulation according to the DECT standard.

Manual operation: See ["Set acc. to Standard"](#) on page 343

[:SOURce<hw>]:BB:DM:STATe <State>

Enables/disables digital modulation. Switching on digital modulation turns off all the other digital standards in the same signal path.

Parameters:

<State> 0 | 1 | OFF | ON
*RST: 0

Example:

SOURce1:BB:DM:STATe ON

Manual operation: See ["State"](#) on page 340

[:SOURce<hw>]:BB:DM:SWITching:SOURce <Source>

Selects the source of the CW control signal for switching between a modulated and an unmodulated signal.

Parameters:

<Source> INTernal | EXTernal

INTernal

The CW signal in the control list is used for the control.
The internal signal can be output on one of the user interfaces.

EXTernal

The control signal on the CW pin of the AUX I/Q connector is used.

*RST: INTernal

Example:

BB:DM:SWIT INT
the CW signal in the control list is used for the control.

Manual operation: See "Source Mod - CW" on page 348

[:SOURce<hw>]:BB:DM:SWITching:STATe <State>

Enables switching between a modulated and an unmodulated signal.

Parameters:

<State> 0 | 1 | OFF | ON

*RST: 0

Example:

BB:DM:SWIT:STAT INT
CW switching is active.

Manual operation: See "State Mod - CW" on page 348

Clock Settings

[\[:SOURce<hw>\]:BB:DM:CLOCK:MODE.....633](#)

[\[:SOURce<hw>\]:BB:DM:CLOCK:MULTiplier.....634](#)

[\[:SOURce<hw>\]:BB:DM:CLOCK:SOURce.....634](#)

[:SOURce<hw>]:BB:DM:CLOCK:MODE <Mode>

The command enters the type of externally supplied clock (:BB:DM:CLOCK:SOURce EXTernal).

The bit clock and the symbol clock differ only in the case of modulations that have more than two states, i.e. that require more than one bit for encoding each state. When MSYMBOL is used, a multiple of the symbol clock is supplied via the CLOCK connector and the symbol clock is derived internally from this. The multiplier is entered with the command :BB:DM:CLOCK:MULTiplier.

It is not possible to select BIT and MSYMBOL in the case of an external serial or external parallel data source (SOUR:BB:DM:SOUR SER and PAR).

Parameters:

<Mode> SYMBol | MSYMBOL | BIT

*RST: SYMBol

Example: `BB:DM:CLOCK:MODE SYMB`
selects clock type Symbols, i.e. the supplied clock is a symbol clock.

Manual operation: See ["Clock Mode"](#) on page 366

[:SOURce<hw>]:BB:DM:CLOCK:MULTiplier <Multiplier>

The command specifies the multiplier for clock type Multiple Symbols (`BB:DM:CLOCK:MODE MSYM`) in the case of an external clock source.

Parameters:

<Multiplier> integer
Range: 1 to 64
*RST: 4

Example: `BB:DM:CLOCK:SOUR EXT`
selects the external clock source. The clock is supplied via the CLOCK connector.
`BB:DM:CLOCK:MODE MSYM`
selects clock type Multiple Symbols, i.e. the supplied clock has a rate which is a multiple of the symbol rate.
`BB:DM:CLOCK:MULT 12`
the multiplier for the external clock rate is 12.

Manual operation: See ["Symbol Clock Multiplier"](#) on page 366

[:SOURce<hw>]:BB:DM:CLOCK:SOURce <Source>

The command selects the source for the digital modulation clock.

Parameters:

<Source> INTernal | EXTernal | COUPled

INTernal

The internal clock reference is used.

EXTernal

The external clock reference is supplied to the CLOCK connector.

COUPled

The clock reference (internal or external) is selected automatically according to the selected data source, i.d. if the data source changes (`BB:DM:DATA:SOUR`) the clock source is automatically changed correspondingly as well.

*RST: INTernal

Example: `BB:DM:CLOCK:SOUR INT`
selects the internal clock reference.

Manual operation: See ["Clock Source"](#) on page 366

Trigger Settings

The numeric suffix to `OUTPut` distinguishes between the available markers.

<code>[:SOURce<hw>]:BB:DM:TRIGger:ARM:EXECute</code>	635
<code>[:SOURce<hw>]:BB:DM:TRIGger:EXECute</code>	635
<code>[:SOURce<hw>]:BB:DM:TRIGger:EXTernal:SYNChronize:OUTPut</code>	636
<code>[:SOURce<hw>]:BB:DM:TRIGger:OUTPut:DELay:FIXed</code>	636
<code>[:SOURce<hw>]:BB:DM:TRIGger:OUTPut<ch>:DELay</code>	637
<code>[:SOURce<hw>]:BB:DM:TRIGger:OUTPut<ch>:DELay:MINimum?</code>	637
<code>[:SOURce<hw>]:BB:DM:TRIGger:OUTPut<ch>:DELay:MAXimum?</code>	637
<code>[:SOURce<hw>]:BB:DM:TRIGger:RMODE?</code>	638
<code>[:SOURce<hw>]:BB:DM:TRIGger:SLENgth</code>	638
<code>[:SOURce<hw>]:BB:DM:TRIGger:SOURce</code>	638
<code>[:SOURce<hw>]:BB:DM:TRIGger:DELay:UNIT</code>	639
<code>[:SOURce<hw>]:BB:DM:TRIGger[:EXTernal<ch>]:DELay</code>	639
<code>[:SOURce<hw>]:BB:DM:TRIGger[:EXTernal]:TDELay</code>	640
<code>[:SOURce<hw>]:BB:DM:TRIGger[:EXTernal]:RDELay?</code>	640
<code>[:SOURce<hw>]:BB:DM:TRIGger[:EXTernal<ch>]:INHibit</code>	640
<code>[:SOURce<hw>]:BB:DM[:TRIGger]:SEQuence</code>	641

`[:SOURce<hw>]:BB:DM:TRIGger:ARM:EXECute`

The command stops signal generation for trigger modes `Armed_Auto` and `Armed_Ret-rigger`. A subsequent internal or external trigger event restart signal generation.

Example:

```
BB:DM:TRIG:SOUR INT
sets internal triggering.
BB:DM:TRIG:SEQ ARET
sets Armed_Retrigger mode, i.e. every trigger event causes sig-
nal generation to restart.
BB:DM:TRIG:EXEC
executes a trigger, signal generation is started.
BB:DM:TRIG:ARM:EXEC
signal generation is stopped.
BB:DM:TRIG:EXEC
executes a trigger, signal generation is started again.
```

Usage: Event

Manual operation: See "[Arm](#)" on page 363

`[:SOURce<hw>]:BB:DM:TRIGger:EXECute`

Executes a trigger. The internal trigger source must be selected using the com-
mand `:BB:DM:TRIG:SOUR INT` and a trigger mode other than `AUTO` must be
selected using the command `:BB:DM:TRIG:SEQ`.

Example: `BB:DM:TRIG:SOUR INT`
sets internal triggering.
`BB:DM:TRIG:SEQ RETR`
sets Retrigger mode, i.e. every trigger event causes signal generation to restart.
`BB:DM:TRIG:EXEC`
executes a trigger.

Usage: Event

Manual operation: See ["Execute Trigger"](#) on page 351

[[:SOURce<hw>]:BB:DM:TRIGger:EXTernal:SYNChronize:OUTPut <Output>

(enabled for "Trigger Source" External)

Enables/disables output of the signal synchronous to the external trigger event.

Parameters:

<Output>

0 | 1 | OFF | ON

ON

The signal calculation starts simultaneously with the external trigger event but because of the instrument's processing time the first samples are cut off and no signal is outputted. After elapsing of the internal processing time, the output signal is synchronous to the trigger event.

OFF

The signal output begins after elapsing of the processing time and starts with sample 0, i.e. the complete signal is outputted. This mode is recommended for triggering of short signal sequences with signal duration comparable with the processing time of the instrument.

*RST: 1

Example: `BB:DM:TRIG:SOUR EXT`
sets external triggering.
`BB:DM:TRIG:EXT:SYNC:OUTP ON`
enables synchronous output to external trigger

Manual operation: See ["Sync. Output to External Trigger"](#) on page 363

[[:SOURce<hw>]:BB:DM:TRIGger:OUTPut:DELay:FIXed <Fixed>

The command restricts the marker delay setting range to the dynamic range. In this range the delay can be set without restarting the marker and signal. If a delay is entered in setting ON but is outside this range, the maximum possible delay is set and an error message is generated.

The numeric suffix in `OUTPut` has no significance for this command, since the setting always affects every marker.

Parameters:

<Fixed> 0 | 1 | OFF | ON
 *RST: 0

Example:

BB:DM:TRIG:OUTP:DEL:FIX ON
 restricts the marker signal delay setting range to the dynamic range.

Manual operation: See "[Marker x Delay](#)" on page 365

[:SOURce<hw>]:BB:DM:TRIGger:OUTPut<ch>:DELay <Delay>

Defines the delay between the signal on the marker outputs and the start of the signal, expressed in terms of symbols. Command [:SOURce<hw>]:BB:DM:TRIGger:OUTPut:DELay:FIXed can be used to restrict the range of values to the dynamic range, i.e. the range within which a delay of the marker signals can be set without restarting the marker and signal.

Parameters:

<Delay> float
 Range: 0 to 16777215
 Increment: 0.001
 *RST: 0

Example:

BB:DM:TRIG:OUTP2:DEL 16
 sets a delay of 16 symbols for the signal on connector MARKER 2.

Manual operation: See "[Marker x Delay](#)" on page 365

**[:SOURce<hw>]:BB:DM:TRIGger:OUTPut<ch>:DELay:MINimum?
 [:SOURce<hw>]:BB:DM:TRIGger:OUTPut<ch>:DELay:MAXimum?**

Queries the maximum marker delay for setting :BB:DM:TRIG:OUTP:DEL:FIX ON.

Return values:

<Maximum> float
 Range: 0 to 16777215
 Increment: 1E-3
 *RST: 2000

Example:

BB:DM:TRIG:OUTP:DEL:FIX ON
 restricts the marker signal delay setting range to the dynamic range.
 BB:DM:TRIG:OUTP:DEL:MAX
 queries the maximum of the dynamic range.
 Response: 2000
 the maximum for the marker delay setting is 2000 symbols.

Usage: Query only

Manual operation: See "[Marker x Delay](#)" on page 365

[[:SOURce<hw>]:BB:DM:TRIGger:RMODE?

Queries the status of signal generation for all trigger modes with digital modulation on.

Return values:

<RMode> STOP | RUN

RUN

The signal is generated. A trigger event occurred in the triggered mode.

STOP

The signal is not generated. A trigger event did not occur in the triggered modes, or signal generation was stopped by the command `:BB:DM:TRIG:ARM:EXECute` (armed trigger modes only).

Example:

```
BB:DM:TRIG:SOUR EXT
sets external triggering
BB:DM:TRIG:MODE ARET
selects the Armed_Retrigger mode
BB:DM:TRIG:RMODE?
queries the current status of signal generation.
Response: RUN
the signal is generated, an external trigger was executed.
```

Usage: Query only

Manual operation: See "[Running - Stopped](#)" on page 362

[[:SOURce<hw>]:BB:DM:TRIGger:SLENgth <SLength>

Defines the length of the signal sequence to be output in the "Single" trigger mode.

Parameters:

<SLength> integer
 Range: 1 to 4294967295
 *RST: 1000
 Default unit: symbol

Example:

```
BB:DM:SEQ SING
sets trigger mode Single.
BB:DM:TRIG:SLEN 200
sets a sequence length of 200 symbols. 200 symbols will be out-
put after the next trigger event.
```

Manual operation: See "[Trigger Signal Duration](#)" on page 362

[[:SOURce<hw>]:BB:DM:TRIGger:SOURce <Source>

Selects the trigger source.

Parameters:

<Source> INTernal|BEXternal|EXTernal
INTernal
 manual trigger or *TRG.
EXTernal | BEXternal
 trigger signal on the TRIGGER 1/2 connector.
 *RST: INTernal

Example:

SOURce1:BB:DM:TRIGger:SOURce EXTernal
 sets external triggering via the TRIGGER 1 connector.

Manual operation: See "[Trigger Source](#)" on page 363

[:SOURCE<hw>]:BB:DM:TRIGger:DELay:UNIT <TrigDelUnit>

Determines the units in that the trigger delay is expressed.

Parameters:

<TrigDelUnit> SAMPle | TIME
 *RST: SAMPle

Example:

```
SOURce1:BB:DM:TRIGger:SEQuence RETR
SOURce1:BB:DM:TRIGger:SOURce EXT
SOURce1:BB:DM:TRIGger:DELay:UNIT TIME
SOURce1:BB:DM:TRIGger:EXTernal:TDELay 100
SOURce1:BB:DM:TRIGger:EXTernal:RDELay?
// Response: 100
SOURce1:BB:DM:TRIGger:DELay:UNIT SAMPle
SOURce1:BB:DM:TRIGger:EXTernal:DELay?
// Response: 27.08
```

Manual operation: See "[External Delay Unit](#)" on page 364

[:SOURCE<hw>]:BB:DM:TRIGger[:EXTernal<ch>]:DELay <Delay>

Sets the trigger delay on external triggering.

Parameters:

<Delay> float
 Range: 0 to 65535
 Increment: 0.01
 *RST: 0
 Default unit: symbol

Example:

```
BB:DM:TRIG:SOUR EXT
selects an external trigger
BB:DM:TRIG:DEL 50
sets a delay of 50 symbols for the trigger.
```

Manual operation: See "[Trigger Delay](#)" on page 364

[:SOURce<hw>]:BB:DM:TRIGger[:EXTernal]:TDElay <ExtTimeDelay>

Specifies the trigger delay for external triggering. The value affects all external trigger signals.

Parameters:

<ExtTimeDelay> float
 Range: 0 to 688
 Increment: 250E-12
 *RST: 0

Example: see [:SOURce<hw>] :BB:DM:TRIGger:DElay:UNIT
 on page 639

Manual operation: See "Trigger Delay" on page 364

[:SOURce<hw>]:BB:DM:TRIGger[:EXTernal]:RDElay?

Queries the time (in seconds) an external trigger event is delayed for.

Return values:

<ResTimeDelay> float
 Range: 0 to 688
 Increment: 250E-12
 *RST: 0

Example: see [:SOURce<hw>] :BB:DM:TRIGger:DElay:UNIT
 on page 639

Usage: Query only

Manual operation: See "Actual Trigger Delay" on page 365

[:SOURce<hw>]:BB:DM:TRIGger[:EXTernal<ch>]:INHibit <Inhibit>

Sets the number of symbols by which a restart is to be inhibited following a trigger event. This command applies only in the case of external triggering.

Parameters:

<Inhibit> integer
 Range: 0 to 67108863
 *RST: 0
 Default unit: symbol

Example: BB:DM:TRIG:SOUR EXT
 selects an external trigger
 BB:DM:TRIG:INH 200
 sets a restart inhibit for 200 symbols following a trigger event.

Manual operation: See "Trigger Inhibit" on page 365

[[:SOURce<hw>]:BB:DM[:TRIGger]:SEQuence <Sequence>

The command selects the trigger mode.

Parameters:

<Sequence>

AUTO | RETRigger | AAUTO | ARETrigger | SINGLE

AUTO

The modulation signal is generated continuously.

RETRigger

The modulation signal is generated continuously. A trigger event (internal or external) causes a restart.

AAUTO

The modulation signal is generated only when a trigger event occurs. After the trigger event the signal is generated continuously. Signal generation is stopped with command

`SOUR:BB:DM:TRIG:ARM:EXEC` and started again when a trigger event occurs.

ARETrigger

The modulation signal is generated only when a trigger event occurs. THE device automatically toggles to RETRIG mode. Every subsequent trigger event causes a restart. Signal generation is stopped with command `SOUR:BB:DM:TRIG:ARM:EXEC` and started again when a trigger event occurs.

SINGLE

The modulation signal is generated only when a trigger event occurs. After the trigger event the signal is generated once to the set sequence length (`SOUR:BB:DM:TRIG:SLen`). Every subsequent trigger event caused a restart.

*RST: AUTO

Example:

`BB:DM:SEQ AAUT`

sets the "Armed_auto" trigger mode; the device waits for the first trigger (e.g. with *TRG) and then generates the signal continuously.

Manual operation: See "[Trigger Mode](#)" on page 362

Marker Settings

<code>[[:SOURce<hw>]:BB:DM:TRIGger:OUTPut<ch>:MODE</code>	641
<code>[[:SOURce<hw>]:BB:DM:TRIGger:OUTPut<ch>:OFFTime</code>	642
<code>[[:SOURce<hw>]:BB:DM:TRIGger:OUTPut<ch>:ONTime</code>	642
<code>[[:SOURce<hw>]:BB:DM:TRIGger:OUTPut<ch>:PATTern</code>	643
<code>[[:SOURce<hw>]:BB:DM:TRIGger:OUTPut<ch>:PULSe:DIVider</code>	643
<code>[[:SOURce<hw>]:BB:DM:TRIGger:OUTPut<ch>:PULSe:FREQuency?</code>	644

[[:SOURce<hw>]:BB:DM:TRIGger:OUTPut<ch>:MODE <Mode>

Defines the signal for the selected marker output.

Parameters:

<Mode>

CLISt | PULSe | PATTeRn | RATIo

CLISt

A marker signal that is defined in the selected control list is generated.

PULSe

A pulsed marker signal is generated. The pulse frequency (= symbol rate/divider) is defined with the

`SOUR:BB:DM:TRIG:OUTP:PULSe:DIVIder` command and can be queried with the

`SOUR:BB:DM:TRIG:OUTP:PULSe:FREQuency?` command.

PATTeRn

A marker signal is generated with the aid of a user-definable bit pattern. The bit pattern is entered with the aid of command

`SOURce:BB:DM:TRIGger:OUTPut:PATTeRn`. The bit pattern is a maximum of 32 bits long.

RATIo

A regular marker signal corresponding to the Time Off / Time On specifications in the commands

`SOURce:BB:DM:TRIGger:OUTPut:OFFT` and

`SOURce:BB:DM:TRIGger:OUTPut:ONT` is generated.

*RST: RATIo

Example:

`BB:DM:TRIG:OUTP2:MODE PULS`

selects the pulsed marker signal on output MARKER 2.

Manual operation: See "[Marker x](#)" on page 365

[:SOURce<hw>]:BB:DM:TRIGger:OUTPut<ch>:OFFTime <OffTime>

Sets the number of symbols in a period (ON time + OFF time) during which the marker signal in setting `SOURce:BB:DM:TRIGger:OUTPut:MODE RATIo` on the marker outputs is OFF.

Parameters:

<OffTime>

integer

Range: 1 to 16777215

*RST: 1

Default unit: symbol

Example:

`BB:DM:TRIG:OUTP2:OFFT 20`

sets an OFF time of 20 symbols for marker signal 2.

Manual operation: See "[Marker x](#)" on page 365

[:SOURce<hw>]:BB:DM:TRIGger:OUTPut<ch>:ONTime <OnTime>

Sets the number of symbols in a period (ON time + OFF time) during which the marker signal in setting `SOURce:BB:DM:TRIGger:OUTPut:MODE RATIo` on the marker outputs is ON.

Parameters:

<OnTime> integer
 Range: 1 to 16777215
 *RST: 1
 Default unit: symbol

Example:

BB:DM:TRIG:OUTP2:ONT 20
 sets an ON time of 20 symbols for marker 2

Manual operation: See "[Marker x](#)" on page 365

[[:SOURce<hw>]:BB:DM:TRIGger:OUTPut<ch>:PATTern <Pattern>

Sets the bit pattern used to generate the marker signal in the setting
 SOURce:BB:DM:TRIGger:OUTPut:MODE PATTern. 0 is marker off, 1 is marker on.

Parameters:

<Pattern> integer
 Range: #B0,1 to #B111...1,32
 *RST: #B,1

Example:

BB:DM:TRIG:OUTP2:PATT #B000000011111111,15
 sets a bit pattern.
 BB:DM:TRIG:OUTP2:MODE PATT
 activates the marker signal according to a bit pattern on output
 MARKER 2.

Manual operation: See "[Marker x](#)" on page 365

[[:SOURce<hw>]:BB:DM:TRIGger:OUTPut<ch>:PULSe:DIVider <Divider>

Sets the divider for Pulse marker mode (SOUR:BB:DM:TRIGr:OUTP:MODE PULSe).
 The resulting pulse frequency is derived by dividing the symbol rate by the divider.

Parameters:

<Divider> integer
 Range: 2 to 1024
 *RST: 2

Example:

BB:DM:TRIG:OUTP2:PULS:DIV 2
 sets the divider to 2 for the marker signal on output MARKER 2.
 BB:DM:TRIG:OUTP2:FREQ?
 queries the resulting pulse frequency of the marker signal.
 Response: 66 000
 the resulting pulse frequency is 66 kHz.

Manual operation: See "[Marker x](#)" on page 365

[[:SOURce<hw>]:BB:DM:TRIGger:OUTPut<ch>:PULSe:FREQuency?

Queries the pulse frequency of the pulsed marker signal in the setting
 SOURce:BB:DM:TRIGger:OUTPut:MODE PULSe. The pulse frequency is derived by
 dividing the symbol rate by the divider.

Return values:

<Frequency> float

Example:

```
BB:DM:TRIG:OUTP2:PULS:DIV 2
sets the divider marker signal on output MARKER 2 to the value
2.
BB:DM:TRIG:OUTP2:MODE PULS
enables the pulsed marker signal.
BB:DM:TRIG:OUTP2:PULS:FREQ?
queries the pulse frequency of the marker signal.
Response: 33 000
the resulting pulse frequency is
```

Usage: Query only

Filter Settings

[[:SOURce<hw>]:BB:DM:FILTer:OSAMpling.....	644
[[:SOURce<hw>]:BB:DM:FILTer:OSAMpling:AUTO.....	645
[[:SOURce<hw>]:BB:DM:FILTer:PARAmeter:COsine[:ROLLoff].....	645
[[:SOURce<hw>]:BB:DM:FILTer:PARAmeter:GAUSS.....	645
[[:SOURce<hw>]:BB:DM:FILTer:PARAmeter:LPASS.....	645
[[:SOURce<hw>]:BB:DM:FILTer:PARAmeter:LPASSEVM.....	645
[[:SOURce<hw>]:BB:DM:FILTer:PARAmeter:PGAuss.....	645
[[:SOURce<hw>]:BB:DM:FILTer:PARAmeter:RCOSine.....	645
[[:SOURce<hw>]:BB:DM:FILTer:PARAmeter:SPHase.....	645
[[:SOURce<hw>]:BB:DM:FILTer:PARAmeter:APCO25.....	645
[[:SOURce<hw>]:BB:DM:FILTer:PARAmeter:COsine:BANDwidth.....	646
[[:SOURce<hw>]:BB:DM:FILTer:PARAmeter:APCO25Lsm:GAUSS.....	646
[[:SOURce<hw>]:BB:DM:FILTer:PARAmeter:APCO25Lsm:LOWPass.....	646
[[:SOURce<hw>]:BB:DM:FILTer:TYPE.....	647
[[:SOURce<hw>]:DM:FILTer:PARAmeter.....	647

[[:SOURce<hw>]:BB:DM:FILTer:OSAMpling <OSampling>

The command sets the upsampling factor.

Parameters:

<OSampling> integer
 Range: 1 to 32
 *RST: 32

Example: BB:DM:FILT:OSAM 32
 sets the upsampling factor to 32.

Manual operation: See "Oversampling" on page 349

```
[[:SOURce<hw>]:BB:DM:FILTer:OSAMpling:AUTO <Auto>
```

The command activates/deactivates the upsampling factor state. If activated, the most sensible parameter values are selected. The value depends on the coherence check. If deactivated, the values can be changed manually.

Parameters:

```
<Auto>          0 | 1 | OFF | ON
                *RST:      1
```

Example:

```
BB:DM:FILT:OSAM:AUTO ON
```

The most sensible parameters are selected automatically.

Manual operation: See "[Oversampling](#)" on page 349

```
[[:SOURce<hw>]:BB:DM:FILTer:PARAMeter:COSSine[:ROLLoff] <Cosine>
```

```
[[:SOURce<hw>]:BB:DM:FILTer:PARAMeter:GAUSSs <Gauss>
```

```
[[:SOURce<hw>]:BB:DM:FILTer:PARAMeter:LPASSs <LPass>
```

```
[[:SOURce<hw>]:BB:DM:FILTer:PARAMeter:LPASSEVM <LPassEvm>
```

```
[[:SOURce<hw>]:BB:DM:FILTer:PARAMeter:PGAUSS <PGauss>
```

```
[[:SOURce<hw>]:BB:DM:FILTer:PARAMeter:RCOSSine <RCosine>
```

```
[[:SOURce<hw>]:BB:DM:FILTer:PARAMeter:SPHase <SPhase>
```

```
[[:SOURce<hw>]:BB:DM:FILTer:PARAMeter:APCO25 <Apco25>
```

The command sets the roll-off factor for filter type APCO25.

On selecting filter APCO25, the filter parameter is set to the default value.

Parameters:

```
<Apco25>        float
                 Range:    0.05 to 0.99
                 Increment: 0.01
                 *RST:     0.2

<Cosine>        float
                 Range:    0.05 to 1.00
                 Increment: 0.01
                 *RST:     0.35

<Gauss>         float
                 Range:    0.15 to 100000
                 Increment: 0.01
                 *RST:     0.3

<LPass>         float
                 Range:    0.05 to 2
                 Increment: 0.01
                 *RST:     0.5

<LPassEvm>     float
                 Range:    0.05 to 2
                 Increment: 0.01
                 *RST:     0.5
```

<PGauss> float
 Range: 0.15 to 2.5
 Increment: 0.01
 *RST: 0.3

<RCosine> float
 Range: 0.05 to 1.00
 Increment: 0.01
 *RST: 0.35

<SPhase> float
 Range: 0.15 to 2.5
 Increment: 0.01
 *RST: 2

Example: BB:DM:FILT:PAR:APCO25 0.2
 sets the roll-off factor to 0.2 for filter type APCO25.

Manual operation: See "[Filter Parameter](#)" on page 349

[[:SOURce<hw>]:BB:DM:FILT:PAR:PARAMeter:COsine:BA NDwidth <FiltParm>

Sets the bandwidth of the cosine filter.

Parameters:

<FiltParm> float
 Range: 400 to 25E6
 Increment: 1E-3
 *RST: 270833.333

Example: :BB:DM:FILT:TYPE COS
 :BB:DM:FILT:PAR:COS:BA ND 7200

Manual operation: See "[Bandwidth](#)" on page 349

[[:SOURce<hw>]:BB:DM:FILT:PAR:PARAMeter:APCO25Lsm:GAUSs <FiltParm>
[[:SOURce<hw>]:BB:DM:FILT:PAR:PARAMeter:APCO25Lsm:LOWPass <FiltParm>

Sets the cut off frequency for the lowpass/ gauss filter.

Parameters:

<FiltParm> float
 Range: 400 to 25E6
 Increment: 1E-3
 *RST: 270833.333

Example: :BB:DM:FILT:TYPE APCO25Lsm
 :BB:DM:FILT:PAR:APCO25L:LOWP 5166.667
 :BB:DM:FILT:PAR:APCO25L:GAUS 1700

Manual operation: See "[Cut Off Frequency Factor](#)" on page 349

[:SOURce<hw>]:BB:DM:FILTer:TYPE <Type>

The command selects the filter type.

When a standard is selected (:BB:DM:STAN), the filter type and filter parameter are set to the default value.

Parameters:

<Type> RCOSine | COSine | GAUSs | LGAuss | CONE | COF705 |
COEqualizer | COFequalizer | C2K3x | APCO25 | SPHase |
RECTangle | USER | PGAuss | LPASs | DIRac | ENPShape |
EWPSshape | LTEFilter | LPASSEVM | APCO25Hcpm |
APCO25Lsm
*RST: GAUSs

Example:

BB:DM:FILT:TYPE COS
selects the Cosine filter type.

Manual operation: See "Filter" on page 349

[:SOURce<hw>]:DM:FILTer:PARAmeter <Parameter>

Sets the filter parameter of the currently selected filter type.

To set the filter type, use command [:SOURce<hw>]:BB:DM:FILTer:TYPE on page 647.

Parameters:

<Parameter> float
Range: 0.05 to 2.5
Increment: 0.01
*RST: 0.35

Example:

BB:DM:FILT:TYPE COS
DM:FILT:PAR 0.5
sets 0.5 roll-off factor for the cosine filter.

Modulation Settings

[:SOURce<hw>]:BB:DM:AQPSk:ANGLE.....	647
[:SOURce<hw>]:BB:DM:ASK:DEPT.....	648
[:SOURce<hw>]:BB:DM:CODing.....	648
[:SOURce<hw>]:BB:DM:FORMat.....	649
[:SOURce<hw>]:BB:DM:FSK:DEVIation.....	649
[:SOURce<hw>]:BB:DM:FSK:VARiable:SYMBol<ch0>:DEVIation.....	650
[:SOURce<hw>]:BB:DM:FSK:VARiable:TYPE.....	650
[:SOURce<hw>]:BB:DM:MDELay?.....	650

[:SOURce<hw>]:BB:DM:AQPSk:ANGLE <Angle>

For AQPSK modulation, sets the angle alpha between the point (0,0) and the I axis.

Parameters:

<Angle> float
 Range: 0 to 180
 Increment: 0.01
 *RST: 0
 Default unit: Deg

Example:

```
BB:DM:FORM AQPS
selects modulation type AQPSK.
BB:DM:AQPS:ANGL 45
```

Manual operation: See "[Angle Alpha](#)" on page 346

[:SOURce<hw>]:BB:DM:ASK:DEPTH <Depth>

The command sets the ASK modulation depth when modulation type ASK is selected.

Parameters:

<Depth> float
 Range: 0 to 100
 Increment: 0.1
 *RST: 100
 Default unit: PCT

Example:

```
BB:DM:FORM ASK
selects the ASK modulation type.
BB:DM:ASK:DEPT 50 PCT
sets a modulation depth of 50 percent.
```

Manual operation: See "[ASK Depth](#)" on page 346

[:SOURce<hw>]:BB:DM:CODing <Coding>

The command selects the modulation coding.

If the modulation type selected (:BB:DM:FORM) is not possible with the coding that has been set, it is automatically set to OFF (:BB:DM:COD OFF).

When a standard is selected (:BB:DM:STAN), the coding is set to the default value.

Parameters:

<Coding> OFF | DIFF | DPHS | DGRay | GRAY | GSM | NADC | PDC |
 PHS | TETRa | APCO25 | PWT | TFTS | INMarsat | VDL |
 EDGE | APCO25FSK | ICO | CDMA2000 | WCDMA |
 APCO258PSK

DPHS
 Phase Difference

DGRay
 Difference + Gray

*RST: INTERNAL

Example: `BB:DM:COD GRAY`
selects GRAY coding. This coding is valid for all modulation types.

Manual operation: See "[Coding](#)" on page 345

[:SOURce<hw>]:BB:DM:FORMat <Format>

Selects the modulation type.

If the coding that is set (`:BB:DM:COD`) is not possible with the modulation type selected, it is automatically set to OFF (`:BB:DM:COD OFF`).

When a standard is selected (`:DM:STAN`), the modulation type is set to the default value.

Parameters:

<Format> ASK | BPSK | P2DBpsk | QPSK | QPSK45 | OQPSk | P4QPsk | P4DQpsk | PSK8 | P8D8psk | P8EDge | QAM16 | QAM32 | QAM64 | QAM256 | QAM1024 | MSK | FSK2 | FSK4 | USER | FSKVar | QAM128 | QEDGe | QAM16EDge | QAM32EDge | AQPSk | QAM4096
*RST: MSK

Example: `BB:DM:FORM QPSK`
selects modulation type QPSK.

Manual operation: See "[Modulation Type](#)" on page 346

[:SOURce<hw>]:BB:DM:FSK:DEViation <Deviation>

Sets the frequency deviation when FSK modulation is selected. The range of values depends on the symbol rate that is set (see data sheet) and the maximum deviation is 10 MHz.

If the symbol rate that is set exceeds the maximum possible value for the chosen frequency deviation, it is suitably adapted (`:BB:DM:SRAT`).

Parameters:

<Deviation> float
Range: 1 to 40E6
Increment: 0.5
*RST: 135416.5

Example: `BB:DM:FORM FSK`
selects FSK modulation.
`BB:DM:FSK:DEV 10 MHz`
sets the frequency deviation to 10 MHz.

Manual operation: See "[FSK Deviation](#)" on page 346

[[:SOURce<hw>]:BB:DM:FSK:VARiable:SYMBol<ch0>:DEViation <Deviation>

The command sets the deviation of the selected symbol for variable FSK modulation mode.

Suffix:

<ch> 0 .. 16

The number of symbols (and therefore the suffix range) depends on the selected FSK modulation type.

Parameters:

<Deviation> float

The range of values depends on the symbol rate that is set (see data sheet) and the maximum deviation is 10 MHz.

Range: -40E6 to 40E6

Increment: 0.5

Default unit: Hz

Example:

BB:DM:FORM FSKV

selects Variable FSK modulation.

BB:DM:FSK:VAR:TYPE FSK16

selects 16FSK modulation.

BB:DM:FSK:VAR:SYMBOL:DEV 135000

sets the frequency deviation of the least significant symbol to 135 kHz.

Manual operation: See "[Deviation xxxx](#)" on page 348

[[:SOURce<hw>]:BB:DM:FSK:VARiable:TYPE <Type>

The command selects the modulation type for Variable FSK.

Parameters:

<Type> FSK4 | FSK8 | FSK16

*RST: FSK4

Example:

BB:DM:FORM FSKV

selects Variable FSK modulation.

BB:DM:FSK:VAR:TYPE FSK16

selects 16FSK modulation.

Manual operation: See "[FSK Type](#)" on page 348

[[:SOURce<hw>]:BB:DM:MDELay?

The command queries the digital modulation delay from the data input to the I/Q output in the case of external modulation.

Return values:

<MDelay> float
 Range: 0 to 1
 Increment: 1E-6
 *RST: 0

Example:

BB:DM:MDEL?
 queries the delay in the case of external modulation.
 Response: 0.4 ms
 the delay is 0.4 ms.

Usage:

Query only

Manual operation: See "Modulation Delay" on page 348

Power Ramp

[:SOURce<hw>]:BB:DM:PRAMP:ATTenuation	651
[:SOURce<hw>]:BB:DM:PRAMP:BBONLY[:STATe]	651
[:SOURce<hw>]:BB:DM:PRAMP:FDELay	652
[:SOURce<hw>]:BB:DM:PRAMP:RDELay	652
[:SOURce<hw>]:BB:DM:PRAMP:SHAPE	652
[:SOURce<hw>]:BB:DM:PRAMP:SOURce	653
[:SOURce<hw>]:BB:DM:PRAMP:TIME	653
[:SOURce<hw>]:BB:DM:PRAMP[:STATe]	653

[\[:SOURce<hw>\]:BB:DM:PRAMP:ATTenuation](#) <Attenuation>

Sets the level attenuation for signal ranges that are flagged with level attribute attenuated by the LEV_ATT control signal.

Parameters:

<Attenuation> float
 Range: 0 to 50
 Increment: 0.1
 *RST: 15
 Default unit: dB

Example:

BB:DM:PRAMP:ATT 15 dB
 sets a level attenuation of 15 dB.

Manual operation: See "Attenuation" on page 360

[\[:SOURce<hw>\]:BB:DM:PRAMP:BBONLY\[:STATe\]](#) <State>

This command selects power ramping in the baseband only or mixed power ramping in the baseband and the RF section.

The **ON** setting is mandatory if, with power ramping active, only the baseband signal is output (I/Q outputs)

Only then can a signal with a defined, predictable level be output.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 0

Example:

BB:DM:PRAM:BBON ON
 selects power ramping in the baseband only.

Manual operation: See ["Baseband Only"](#) on page 360

[:SOURce<hw>]:BB:DM:PRAMP:FDELay <FDelay>

Sets the delay in the falling edge. A positive value gives rise to a delay and a negative value causes an advance.

Parameters:

<FDelay> float
 Range: 0 to 4
 Increment: 0.01
 *RST: 0
 Default unit: symbol

Example:

BB:DM:PRAM:FDEL 1
 The falling edge starts 1 symbol later.

Manual operation: See ["Fall Delay"](#) on page 360

[:SOURce<hw>]:BB:DM:PRAMP:RDELay <RDelay>

Sets the delay in the rising edge. A positive value gives rise to a delay and a negative value causes an advance.

Parameters:

<RDelay> float
 Range: 0 to 4
 Increment: 0.01
 *RST: 0
 Default unit: symbol

Example:

BB:DM:PRAM:RDEL 1
 The rising edge starts 1 symbol later.

Manual operation: See ["Rise Delay"](#) on page 360

[:SOURce<hw>]:BB:DM:PRAMP:SHAPE <Shape>

The command sets the edge shape of the ramp envelope.

Parameters:

<Shape> LINear | COSine
 *RST: COSine

Example: `BB:DM:PRAM:SHAP COS`
selects a cosine-shaped rise and fall for the transmitted power edge.

Manual operation: See "[Ramp Function](#)" on page 359

[:SOURce<hw>]:BB:DM:PRAMP:SOURce <Source>

Sets the source for the power ramp control signals.

Parameters:

<Source> INTernal | EXTernal

INTernal

The internal control signals LEV_ATT and BURST are used. Control signals are stored in dedicated lists. When remote control is in use, the list to be used is defined, selected and enabled with the aid of `SOURce:BB:DM:CLISt:...` commands.

EXTernal

The digital control signals LEV_ATT and BURST are supplied via the control signal inputs on the AUX I/O connector.

*RST: INTernal

Example: `BB:DM:PRAM:SOUR INT`
enables the use of internal control signals for power ramp control.

Manual operation: See "[Source](#)" on page 359

[:SOURce<hw>]:BB:DM:PRAMP:TIME <Time>

Sets the power ramping rise time and fall time for a burst.

Parameters:

<Time> float
Range: 0.25 to 16
Increment: 0.01
*RST: 1
Default unit: symbol

Example: `BB:DM:PRAM:TIME 2`
sets a time of 2 symbols for the edges to rise and fall.

Manual operation: See "[Ramp Time](#)" on page 360

[:SOURce<hw>]:BB:DM:PRAMP[:STATE] <State>

The command enables or disables power ramping.

Parameters:

<State> 0 | 1 | OFF | ON
*RST: 0

Example: BB:DM:PRAM:STAT ON
switches power ramping on.

Manual operation: See "State" on page 359

DM Lists

The following section brings together the commands for defining and managing the data lists and control lists for digital modulation.

Lists are stored as files with specific file extensions in a user-definable directory (see [Table 7-2](#)). To specify the default directory, use the command `:MMEMory:CDIRectory`. To access files in this directory, enter their file name; the path and extension are optional.

Table 7-2: Overview of the used list types

List type	Content	File extension
Data List	Digital modulation data	*.dm_iqd
Control List	Digital modulation control data	*.dm_iqc
User Standards	User settings of digital modulation	*.dm_stu
Usr Filter	Usr filter settings	*.vaf
User Mapping	User mapping settings	*.vam

It is not possible to use other file extensions with the commands. Attempting to do so will cause an error message. If the file extension is changed in any other way (e.g. by directly accessing the file system) the lists are no longer recognized and therefore invalid.



The `CLIST` commands always create a binary control list, even if ASCII format is specified.

Therefore, to create a *.wv file with R&S WinIQSIM2 using a control list, use the input control list in ASCII format. Refer to the example in [Chapter 7.4.4, "Creating an ASCII C-List Manually"](#), on page 509 for more information.

List of Commands

<code>[:SOURce<hw>]:BB:DM:CLIST:CATalog?</code>	655
<code>[:SOURce<hw>]:BB:DM:DLIST:CATalog?</code>	655
<code>[:SOURce<hw>]:BB:DM:FLIST:CATalog?</code>	655
<code>[:SOURce<hw>]:BB:DM:MLIST:CATalog?</code>	655
<code>[:SOURce<hw>]:BB:DM:CLIST:FREE?</code>	655
<code>[:SOURce<hw>]:BB:DM:DLIST:FREE?</code>	655
<code>[:SOURce<hw>]:BB:DM:FLIST:FREE?</code>	656
<code>[:SOURce<hw>]:BB:DM:MLIST:FREE?</code>	656
<code>[:SOURce<hw>]:BB:DM:CLIST:COPY</code>	656
<code>[:SOURce<hw>]:BB:DM:DLIST:COPY</code>	656
<code>[:SOURce<hw>]:BB:DM:CLIST:TAG?</code>	656
<code>[:SOURce<hw>]:BB:DM:DLIST:TAG?</code>	656

<code>[SOURce<hw>]:BB:DM:CLISt:DATA</code>	657
<code>[SOURce<hw>]:BB:DM:CLISt:DELeTe</code>	658
<code>[SOURce<hw>]:BB:DM:CLISt:POINts?</code>	658
<code>[SOURce<hw>]:BB:DM:CLISt:SELeCt</code>	658
<code>[SOURce<hw>]:BB:DM:DLISt:DATA</code>	659
<code>[SOURce<hw>]:BB:DM:DLISt:DATA:APPend</code>	660
<code>[SOURce<hw>]:BB:DM:DLISt:DELeTe</code>	660
<code>[SOURce<hw>]:BB:DM:DLISt:POINts</code>	660
<code>[SOURce<hw>]:BB:DM:DLISt:SELeCt</code>	661
<code>[SOURce<hw>]:BB:DM:FLISt:DELeTe</code>	661
<code>[SOURce<hw>]:BB:DM:FLISt:POINts?</code>	662
<code>[SOURce<hw>]:BB:DM:FLISt:SELeCt</code>	662
<code>[SOURce<hw>]:BB:DM:MLISt:DELeTe</code>	662
<code>[SOURce<hw>]:BB:DM:MLISt:POINts?</code>	663
<code>[SOURce<hw>]:BB:DM:MLISt:SELeCt</code>	663
<code>[SOURce<hw>]:BB:DM:SETTing:CATalog?</code>	663
<code>[SOURce<hw>]:BB:DM:SETTing:DELeTe</code>	664
<code>[SOURce<hw>]:BB:DM:SETTing:LOAD</code>	664
<code>[SOURce<hw>]:BB:DM:SETTing:STORE</code>	664
<code>[SOURce<hw>]:BB:DM:SETTing:STORE:FAST</code>	665
<code>[SOURce<hw>]:BB:DM:STANdard:ULISt:CATalog?</code>	665
<code>[SOURce<hw>]:BB:DM:STANdard:ULISt:DELeTe</code>	665
<code>[SOURce<hw>]:BB:DM:STANdard:ULISt:LOAD</code>	666
<code>[SOURce<hw>]:BB:DM:STANdard:ULISt:STORE</code>	666

`[SOURce<hw>]:BB:DM:CLISt:CATalog?`

`[SOURce<hw>]:BB:DM:DLISt:CATalog?`

`[SOURce<hw>]:BB:DM:FLISt:CATalog?`

`[SOURce<hw>]:BB:DM:MLISt:CATalog?`

Queries the user mapping lists present in the default directory. The default directory is set using command `M MEM:CDIRectory`. When the names of the files are returned they are separated by commas.

The command only reads out files with the `*.vam` extension (see also [Table 7-2](#)).

Return values:

<Catalog> string

Example:

```
BB:DM:FORM USER
selects the User modulation type.
M MEM:CDIR 'D:\user\mapping_List'
sets the default directory for the user mapping lists.
BB:DM:MLIS:CAT?
queries the user mapping lists in the directory.
```

Usage: Query only

Manual operation: See "[Load User Mapping](#)" on page 346

`[SOURce<hw>]:BB:DM:CLISt:FREE?`

`[SOURce<hw>]:BB:DM:DLISt:FREE?`

[[:SOURce<hw>]:BB:DM:FLIS:FREE?

[[:SOURce<hw>]:BB:DM:MLIS:FREE?

Queries the user modulation mapping list free memory.

Return values:

<Free> integer
 Range: 0 to INT_MAX
 *RST: 0

Example:

BB:DM:FORM USER
 selects the User modulation type.
 BB:DM:FLIS:FREE?
 queries the free memory.

Usage: Query only

[[:SOURce<hw>]:BB:DM:CLIS:COPY <Filename>

[[:SOURce<hw>]:BB:DM:DLIS:COPY <Filename>

The command copies the selected data list into the data list specified by <list name>. If a data list with the specified name already exists, it is overwritten. If it does not yet exist, it is created.

The source file has to be available in the default directory. The default directory is set using command `MMEM:CDIRECTORY`. A path can be specified, in which case the source file is copied into the file <list name> in the specified directory. The file extension may be omitted.

Only files with the file extension `*.dm_iqc` will be copied (see also [Table 7-2](#)).

Setting parameters:

<Filename> string

Example:

BB:DM:DLIS 'd_list1'
 selects data list d_list1.
 BB:DM:DLIS:COPY 'd_list2'
 copies the content of data list d_list1 into data list d_list2.
 Any existing content in data list d_list2 is overwritten.

Usage: Setting only

Manual operation: See "[File Manager](#)" on page 352

[[:SOURce<hw>]:BB:DM:CLIS:TAG?

[[:SOURce<hw>]:BB:DM:DLIS:TAG?

The command queries the content of the specified tag in the selected file.

Return values:

<Tag> <control list>,<tag name>

Example: BB:DM:DLIS:TAG 'D_list1','date'
 queries the Date tag in control list D_list1.
 Response:10.10.2008
 the data list was created on 10.10.2008.

Usage: Query only

[[:SOURce<hw>]:BB:DM:CLIST:DATA <Data>

The command sends the data to the currently selected control list. If the list already contains data, it is overwritten. This command only writes data into the data section of the file.

The values for the control signals are sent, arranged in a 8-bit value as follows:

Signal	Order	Decimal value of bits
Marker 1	LSBit	1
Marker 2		2
Marker 3		4
Marker 4		8
Burst =	LSBit	16
LevAtt1	LSBit	32
CWMod	LSBit	64
Hop	MSBit	128

The data can also be sent as a binary block, each binary block being a 2-byte value in which the 16 bits represent the binary values (16-bit unsigned integer, 2 bytes, LSByte first). When binary data transmission is in use, command `:SYSTEM:COMMunicate:GPIB:LTERminator EOI` should be used to set the termination character mode to 'EOI control data message only' so that a random LF in the data sequence is not interpreted as End, thereby prematurely terminating the data transmission. The command `...LTER STANDard` resets the mode.

For query purposes, the command `:FORMat ASCii | PACKed` can be used to switch between the formats. The byte sequence is defined in the IEC bus standard as 'most significant byte first'

Note: C-Lists are created in binary format. However, if you need the C-List in ASCII format, e.g. for creating a waveform file with R&S WinIQSIM2, see the example in [Chapter 7.4.4, "Creating an ASCII C-List Manually"](#), on page 509.

*RST has no effect on data lists. This command is without query.

Setting parameters:

<Data> string

Example: BB:DM:CLIS:SEL 'c_list1'
selects the control list.
BB:DM:CLIS:DATA 0,0,0,0,8,8,8,0,0,0,0...
enters the control values in list c_list1. In the example, only ramps for marker 4 are set.

Usage: Setting only

Manual operation: See "Edit Control List" on page 356

[:SOURce<hw>]:BB:DM:CLIS:DELeT <Filename>

The command deletes the specified control list from the default directory. The default directory is set using command `M MEM:CDIRectory`. A path can also be specified, in which case the files in the specified directory are deleted. The file extension may be omitted. Only files with the file extension `*.dm_iqc` will be deleted.

Setting parameters:

<Filename> <list name>

Example: BB:DM:CLIS:DEL 'c_list3'
deletes control list c_list3.

Usage: Setting only

Manual operation: See "File Manager" on page 352

[:SOURce<hw>]:BB:DM:CLIS:POINtS?

The command queries the number of lines (2 bytes) in the currently selected list.

Return values:

<Points> integer
Range: 0 to INT_MAX
*RST: 0

Example: BB:DM:CLIS:SEL "c_list1"
selects control list c_list1.
BB:DM:CLIS:POIN?
queries the number of lines in the control list.
Response: 20
the control list consists of 20 lines.

Usage: Query only

[:SOURce<hw>]:BB:DM:CLIS:SELeCt <Filename>

The command selects the control list in the default directory. The default directory is set using command `M MEM:CDIRectory`. A path can also be specified, in which case the files in the specified directory are selected. If a control list with the specified name does not yet exist, it is created. The file extension may be omitted. Only files with the file extension `*.dm_iqc` will be selected or created.

Parameters:

<Filename> <list name>

Example:

```
BB:DM:CLIS:SEL 'c_list1'
selects control list c_list1.
```

Manual operation: See ["Functions for handling of control lists"](#) on page 165

```
[:SOURce<hw>]:BB:DM:DLIS:DATA <Data>
[:SOURce<hw>]:BB:DM:DLIS:DATA? [<Start>[, <Count>]]
```

The **Setting** command sends the bit data to the data list selected with the aid of `:BB:DM:DLIS:SELect`. Any existing content in the data list is overwritten. This command only writes data into the data section of the file.

This command sends the bit data to the selected data list, which is overwritten. The data can also be sent as block data in binary or PACKed format, each byte being interpreted as 8 data bits. In this case, command `:SYSTEM:COMMunicate:GPIB:LTERminator EOI` should be used to set the termination character mode to 'EOI control data message only' so that a random LF in the data sequence is not interpreted as End, thereby prematurely terminating the data transmission. The command `...LTERSTAN` resets the mode.

The **query** reads out the data part of the data list. If the query is expanded by using the two parameters <start> and <length>, the list is read out in smaller sections. Start and Length are expressed in bits. Without the parameters the total length is always read out starting from address 1. The command `:FORMat ASCii | PACKed` can be used to select the data format. The byte sequence is defined in the IEC bus standard (read/write most significant byte first). *RST has no effect on data lists.

Parameters:

<Data> integer

Query parameters:

<Start> integer
 Range: 1 to 2147483647

<Count> integer
 Range: 1 to 2147483647

Example:

```
BB:DM:DLIS:SEL 'dlist1'
selects data list dlist1. If the file does not yet exist, it is created.
BB:DM:DLIS:DATA 1,1,1,0,0,0,1,1,0,1...
sends the specified data to file dlist1. Any data already present
is overwritten.
```

Example:

```
BB:DM:DLIS:SEL 'dlist1'
selects data list dlist1.
FORM ASCI
selects ASCII data transmission format.
BB:DM:DLIS:DATA? 2048,1024
queries the data starting at bit 2048 for 1024 bits.
```

Manual operation: See ["Data List Editor"](#) on page 353

[:SOURce<hw>]:BB:DM:DLIS:DATA:APPend <Bits>

The command appends the bit data onto the end of the existing data in the selected data list. This means that existing content in the data list is not overwritten. By this means very long data lists can be built up piecemeal. The data format is as specified in command `SOURce:BB:DM:DLIS:DATA`.

The command cannot be used with an empty data list, such as one that has just been created, for example. In this case the command `SOURce:BB:DM:DLIS:DATA` must first be used to enter modulation data in the list.

*RST has no effect on data lists.

Setting parameters:

<Bits> 0 | 1 {,0 | 1 } | block data

Example: `BB:DM:DLIS:SEL ' d_list2'`
selects data list `d_list2`.
`FORM ASC`
selects ASCII data transmission format.
`BB:DM:DLIS:DATA:APP 1,1,1,0,0,0,1,1,0,1...`
adds the specified numeric data to the existing data in data list `d_list2`.

Usage: Setting only

Manual operation: See ["Data List Editor"](#) on page 353

[:SOURce<hw>]:BB:DM:DLIS:DELeTe <Filename>

The command deletes the specified data list. from the default directory. The default directory is set using command `MMEM:CDIRectory`. A path can also be specified, in which case the files in the specified directory are deleted. The file extension may be omitted. Only files with the file extension `*.dm_iqd` will be deleted.

Setting parameters:

<Filename> string

Example: `BB:DM:DLIS:DEL ' d_list2'`
deletes data list `d_list2`.

Usage: Setting only

Manual operation: See ["File Manager"](#) on page 352

[:SOURce<hw>]:BB:DM:DLIS:POINts <Points>

The command defines the number of bits in the selected data list to be utilized. When a list is being filled with block data, this data is only ever sent in multiples of 8 bits. However the exact number of bits to be exploited can be set to a different figure. The superfluous bits in the list are then ignored.

Parameters:

<Points> integer
 Range: 0 to INT_MAX
 *RST: 0

Example:

BB:DM:DLIS:POIN 234
 defines the number of bits in the data list to be utilized as 234 bits. If the list was filled with block data, at least the last 6 bits will be ignored.

[[:SOURce<hw>]:BB:DM:DLIS:SElect <Select>

The command selects the data list in the default directory. The default directory is set using command `MMEM:CDIRectory`. A path can also be specified, in which case the files in the specified directory are selected. If a data list with the specified name does not yet exist, it is created. The file extension may be omitted. Only files with the file extension `*.dm_iqd` will be selected or created.

The modulation data in this data list is used when the data source is selected using the command `SOURce:BB:DM:SOURce DLIS`.

Parameters:

<Select> <list name>

Example:

BB:DM:DLIS:SEL 'd_list2'
 selects data list `d_list2`.

Manual operation: See ["Functions for handling of data lists"](#) on page 164

[[:SOURce<hw>]:BB:DM:FLIS:DElete <Filename>

Deletes the specified user filter file. The default directory is set using command `MMEM:CDIRectory`. A path can also be specified, in which case the files in the specified directory are read. The file extension may be omitted. Only files with the file extension `*.vaf*.vaf` will be deleted.

Setting parameters:

<Filename> string

Example:

BB:DM:FILT:TYPE USER
 selects the User filter type.
 MMEM:CDIR 'D:\user\Filter_List'
 sets the default directory for the user-defined filters.
 BB:DM:FLIS:DEL user_filter3
 deletes the user-defined filter.

Usage: Setting only

Manual operation: See ["Load User Filter"](#) on page 350

[[:SOURce<hw>]:BB:DM:FLIS:POINts?

Queries the user filter list length.

Return values:

<Points> integer
 Range: 0 to INT_MAX
 *RST: 0

Example: BB:DM:FILT:TYPE USER
 selects the User filter type.
 BB:DM:FLIS:POIN?
 queries the list length.

Usage: Query only

[[:SOURce<hw>]:BB:DM:FLIS:SELEct <Filename>

Selects the user-defined filter (* .vaf).

The directory applicable to the following command is defined with the command `MMEM:CDIRectory`. To access the files in this directory, only the file name is required, without the path and the file extension.

Parameters:

<Filename> string

Example: BB:DM:FILT:TYPE USER
 selects the User filter type.
 MMEM:CDIR 'D:\user\Filter_List'
 sets the default directory for the user-defined filters.
 BB:DM:FLIS:SEL user_filter3
 selects the user-defined filter.

Manual operation: See "[Load User Filter](#)" on page 350

[[:SOURce<hw>]:BB:DM:MLIS:DELEte <Filename>

Deletes the specified user mapping file. The default directory is set using command `MMEM:CDIRectory`. A path can also be specified, in which case the files in the specified directory are read. The file extension may be omitted. Only files with the file extension * .vam will be deleted.

Setting parameters:

<Filename> string

Example: BB:DM:FORM USER
 selects the User modulation type.
 MMEM:CDIR 'D:\user\mapping_List'
 sets the default directory for the user mapping lists.
 BB:DM:MLIS:DEL user_mapping3
 deletes the user mapping list.

Usage: Setting only

Manual operation: See ["Load User Mapping"](#) on page 346

[[:SOURce<hw>]:BB:DM:MLIS:POINTs?

Queries the user modulation mapping list length.

Return values:

<Points> integer
 Range: 0 to INT_MAX
 *RST: 0

Example: BB:DM:FORM USER
 selects the User modulation type.
 BB:DM:MLIS:POIN?
 queries the list length.

Usage: Query only

[[:SOURce<hw>]:BB:DM:MLIS:SElect <Filename>

Selects the user mapping list in the default directory. The default directory is set using command `MMEM:CDIRECTory`. A path can also be specified, in which case the files in the specified directory are selected. If a user mapping list with the specified name does not yet exist, it is created. The file extension may be omitted. Only files with the file extension `*.vam` will be selected or created.

Parameters:

<Filename> string

Example: BB:DM:MLIS:SEL 'c_list1'
 selects the user mapping list `c_list1`.

Manual operation: See ["Load User Mapping"](#) on page 346

[[:SOURce<hw>]:BB:DM:SETTing:CATalog?

Reads out the files with Custom Digital Modulation settings in the default directory. The default directory is set using command `MMEM:CDIRECTory`. Only files with the file extension `*.dm` will be listed.

Return values:

<Catalog> string

Example: MMEM:CDIR 'D:\user\dig_mod'
 sets the default directory.
 BB:DM:SETT:CAT?
 reads out all the files with Custom Digital Modulation settings in the default directory.
 Response: 'DM_1'
 the file `DM_1` with Custom Digital Modulation settings is available.

Usage: Query only
Manual operation: See "Save/Recall" on page 341

[:SOURce<hw>]:BB:DM:SETTING:DELeTe <Filename>

This command deletes the selected file with Custom Digital Modulation settings. The directory is set using command `MMEM:CDIRectory`. A path can also be specified, in which case the files in the specified directory are read. The file extension may be omitted. Only files with the file extension `*.dm` will be deleted.

Setting parameters:

<Filename> string

Example: `BB:DM:STAN:ULIS:DEL 'DM_1'`
 deletes file `DM_1`.

Usage: Setting only
Manual operation: See "Save/Recall" on page 341

[:SOURce<hw>]:BB:DM:SETTING:LOAD <Filename>

This command loads the selected file with Custom Digital Modulation settings. The directory is set using command `MMEM:CDIRectory`. A path can also be specified, in which case the files in the specified directory are read. The file extension may be omitted. Only files with the file extension `*.dm` will be loaded.

Setting parameters:

<Filename> string

Example: `BB:DM:STAN:ULIS:LOAD 'DM_1'`
 loads file `DM_1`.

Usage: Setting only
Manual operation: See "Save/Recall" on page 341

[:SOURce<hw>]:BB:DM:SETTING:STORe <Filename>

This command stores the current Custom Digital Modulation settings into the selected file. The directory is set using command `MMEM:CDIRectory`. A path can also be specified, in which case the files in the specified directory are read. Only the file name has to be entered. User Standards are stored as files with the specific file extensions `*.dm`.

Setting parameters:

<Filename> string

Example: `BB:DM:STAN:ULIS:STOR 'DM_QAM'`
 stores the current Custom Digital Modulation settings into file `DM_QAM`.

Usage: Setting only

Manual operation: See ["Save/Recall"](#) on page 341

[:SOURce<hw>]:BB:DM:SETTing:STORe:FAST <Fast>

Determines whether the instrument performs an absolute or a differential storing of the settings.

Enable this function to accelerate the saving process by saving only the settings with values different to the default ones.

Note: This function is not affected by the "Preset" function.

Parameters:

<Fast> 0 | 1 | OFF | ON
 *RST: 1

Manual operation: See ["Fast Save"](#) on page 160

[:SOURce<hw>]:BB:DM:STANdard:ULIS:t:CATalog?

Reads out the files with Digital Standard settings in the default directory. The default directory is set using command `MMEM:CDIRectory`. Only files with the file extension `*.dm_stu` will be listed.

Return values:

<Catalog> string

Example:

```
MMEM:CDIR 'D:\user\dig_mod'
sets the default directory.
BB:DM:STAN:ULIS:CAT?
reads out all the files with Digital Standard settings in the default
directory.
Response: 'DM_QAM'
the file DM_QAM with Digital Standard settings is available.
```

Usage: Query only

Manual operation: See ["Save/Recall User"](#) on page 345

[:SOURce<hw>]:BB:DM:STANdard:ULIS:DELete <Filename>

Deletes the selected file with Digital Standard settings. The directory is set using command `MMEM:CDIRectory`. A path can also be specified, in which case the files in the specified directory are read. The file extension may be omitted. Only files with the file extension `*.dm_stu` will be deleted.

Setting parameters:

<Filename> string

Example:

```
BB:DM:STAN:ULIS:DEL 'DM_QAM'
deletes file 'DM_QAM'.
```

Usage: Setting only

Manual operation: See ["Save/Recall User"](#) on page 345

[:SOURce<hw>]:BB:DM:STANdard:ULIS:LOAD <Filename>

Loads the selected file with Digital Standard settings. The directory is set using command `MMEM:CDIRectory`. A path can also be specified, in which case the files in the specified directory are read. The file extension may be omitted. Only files with the file extension `*.dm_stu` will be loaded.

Setting parameters:

<Filename> string

Example: `BB:DM:STAN:ULIS:LOAD 'DM_QAM'`
loads file 'DM_QAM'.

Usage: Setting only

Manual operation: See ["Save/Recall User"](#) on page 345

[:SOURce<hw>]:BB:DM:STANdard:ULIS:STORe <Filename>

Stores the current Digital Standard settings into the selected file. The directory is set using command `MMEM:CDIRectory`. A path can also be specified, in which case the files in the specified directory are read. Only the file name has to be entered. User Standards are stored as files with the specific file extensions `*.dm_stu`.

Setting parameters:

<Filename> string

Example: `BB:DM:STAN:ULIS:STOR 'DM_QAM'`
stores the current Digital Standard settings into file 'DM_QAM'.

Usage: Setting only

Manual operation: See ["Save/Recall User"](#) on page 345

7.16.3.4 SOURce:BB:GRAPhics Subsystem

This subsystem contains the commands used to setup the graphical display.

[:SOURce<hw>]:BB:GRAPhics:MODE	666
[:SOURce<hw>]:BB:GRAPhics:SMART:STATE	667
[:SOURce<hw>]:BB:GRAPhics:SRATe:MODE	667
[:SOURce<hw>]:BB:GRAPhics:SRATe:USER	668
[:SOURce<hw>]:BB:GRAPhics:STATe	668
[:SOURce<hw>]:BB:GRAPhics:TRIGger:SOURce	668

[:SOURce<hw>]:BB:GRAPhics:MODE <Mode>

Selects the graphical signal display.

Parameters:

<Mode> IQ | VECTor | CCDF | PSPectrum | CONSTellation | EYEI | EYEQ
 *RST: IQ

Example:

BB:GRAP:MODE VECT
 selects vector diagram.

Manual operation: See "[Mode](#)" on page 170

[:SOURce<hw>]:BB:GRAPhics:SMARt:STATe <State>

Activates/deactivates the "smart graphics".

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 0

Example:

BB:GRAP:SMAR:STAT ON
 Activates smart graphics.

Manual operation: See "[Smart Graphics](#)" on page 170

[:SOURce<hw>]:BB:GRAPhics:SRATe:MODE <Mode>

Sets how the time resolution of the signal is determined. Maximum resolution corresponds to a display covering the entire signal bandwidth. The higher the resolution is, the shorter the length of the displayed signal segment will be for the specified recording depth.

Parameters:

<Mode> AUTO | FULL | USER

AUTO

The resolution is set to an optimum value on the basis of the signal and display type.

FULL

The resolution is set such that the display covers the entire signal bandwidth.

USER

with the command `SOUR:BB:GRAP:SRAT:USER`, the user can determine the resolution by setting the signal bandwidth for which the display is to be generated

*RST: AUTO

Example:

BB:GRAP:SRAT:MODE FULL
 sets the sample rate mode.

Manual operation: See "[Sample Rate Mode](#)" on page 171

[[:SOURce<hw>]:BB:GRAPhics:SRATe:USER <User>

(Enabled for BB:GRAP:SRAT:MODE USER)

Selects the signal bandwidth for which the display is to be generated. The setting range moves between the minimum and maximum bandwidth which is possible for the selected display. The selection is made graphically by moving the pointer.

Parameters:

<User> float
 Range: 0.01 to 100
 Increment: 0.01
 *RST: 10
 Default unit: PCT

Example:

BB:GRAP:SRAT:MODE USER
 sets the sample rate mode.
 BB:GRAP:SRAT:USER 20
 sets the sample rate factor.

Manual operation: See "[Graphics Sample Rate](#)" on page 171

[[:SOURce<hw>]:BB:GRAPhics:STATe <State>

Activates/deactivates the selected graphical display.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 0

Example:

BB:GRAP:STAT ON
 activates the graphical graphics.

Manual operation: See "[State](#)" on page 170

[[:SOURce<hw>]:BB:GRAPhics:TRIGger:SOURce <Source>

Defines the trigger for the starting time of the graphic recording.

Parameters:

<Source> SOFTware | MARKer

SOFTware

Recording of signals is started automatically in specified intervals. This asynchronous method is appropriate when a representative display of the complete signal is desired, as recording starts in a random time reference to the signal.

MARKer

The starting point for recording signals is determined by "Marker 1" in the menu of the active standard.

This synchronous method is appropriate when specific signal segments are to be shown in greater detail. With periodic signals, a static image is obtained by selecting a period length of "Marker 1" that is equal to the signal period.

The displayed signal segment can be shifted as needed by entering a "Marker Delay" in the "Trigger/Marker" menu of the active standard.

*RST: SOFTware

Example:

```
BB:GRAP:TRIG:SOUR MARK
sets the trigger source.
```

Manual operation: See "[Trigger Source](#)" on page 171**7.16.3.5 SOURce:BB:IMPairment Subsystem**

This subsystem contains the commands for the digital I/Q impairments.

Included in this section is also the description of command

SOURce:BB:IQOutput:SOURce that determined the source for the I/Q output connectors.

[:SOURce<hw>]:BB:IMPairment:IQRatio[:MAGNitude]	669
[:SOURce<hw>]:BB:IMPairment:LEAKage:I	670
[:SOURce<hw>]:BB:IMPairment:LEAKage:Q	670
[:SOURce<hw>]:BB:IMPairment:QUADrature[:ANGLE]	670
[:SOURce<hw>]:BB:IMPairment:STATE	671
[:SOURce<hw>]:BB:IMPairment:OPTimization:MODE	671
[:SOURce<hw>]:BB:IMPairment:OPTimization:STATE	671

[\[:SOURce<hw>\]:BB:IMPairment:IQRatio\[:MAGNitude\]](#) <lqRatio>

This command sets the ratio of I modulation to Q modulation (amplification "imbalance"). The input may be either in dB or %. The resolution is 0.001 dB, an input in percent is rounded to the closest valid value in dB. A query returns the value in dB.

Parameters:

```
<lqRatio>                   float
Range:           -1 to 1
Increment:       1E-4
*RST:            0
```

Example: BB:IMP:IQR 3 PCT
sets the imbalance to 3 percent.
BB:IMP:IQR?
queries the imbalance.
Response: 0.259000
the value is returned in dB

Manual operation: See "[Gain Imbalance - Digital Impairments](#)" on page 292

[:SOURce<hw>]:BB:IMPairment:LEAKage:I <I>

This command sets the carrier leakage amplitude for the I-signal component.

Parameters:

<I> float
Range: -10 to 10
Increment: 0.01
*RST: 0
Default unit: PCT

Example: BB:IMP:LEAK:I 3 PCT
sets the leakage for the I-component to 3 percent.

Manual operation: See "[I/Q Offset - Digital Impairments](#)" on page 292

[:SOURce<hw>]:BB:IMPairment:LEAKage:Q <Q>

This command sets the carrier leakage amplitude for the Q-signal component.

Parameters:

<Q> float
Range: -10 to 10
Increment: 0.01
*RST: 0
Default unit: PCT

Example: BB:IMP:LEAK:Q 3 PCT
sets the leakage for the Q-component to 3 percent.

Manual operation: See "[I/Q Offset - Digital Impairments](#)" on page 292

[:SOURce<hw>]:BB:IMPairment:QUADrature[:ANGLE] <Angle>

This command sets the quadrature offset for the digital I/Q signal.

Parameters:

<Angle> float
Range: -10 to 10
Increment: 0.01
*RST: 0
Default unit: DEG

Example: `BB:IMP:QUAD:ANGL -5DEG`
sets the quadrature offset to -5 degrees.

Manual operation: See "[Quadrature Offset - Digital Impairments](#)" on page 292

[:SOURce<hw>]:BB:IMPairment:STATe <State>

The command activates (ON) and deactivates (OFF) the three impairment or correction values LEAKage, QUADrature and IQRatio for the digital baseband signal prior to input into the I/Q modulator.

Parameters:
<State> 0 | 1 | OFF | ON
*RST: 0

Example: `BB:IMP:STAT OFF`
deactivates digital impairment.

Manual operation: See "[State - Digital Impairments](#)" on page 292

[:SOURce<hw>]:BB:IMPairment:OPTimization:MODE <Mode>

This command sets the optimization mode.

Parameters:
<Mode> FAST | QHIGH
FAST
Optimization is reached by compensation for I/Q skew.
QHIGH
Optimization is reached by compensation for I/Q skew and frequency response correction.
*RST: FAST

Example: `BB:IMP:OPT:MODE FAST`
sets the optimization mode Fast.

Manual operation: See "[Optimization Mode - Digital Impairments](#)" on page 293

[:SOURce<hw>]:BB:IMPairment:OPTimization:STATe <State>

Activates and deactivates internal compensation of signal distortions by the I/Q modulator.

Parameters:
<State> 0 | 1 | OFF | ON

Example: `BB:IMP:OPT:STAT ON`
activates internal compensation of signal distortions.

Manual operation: See "[Optimize internal IQ-Impairments for RF Output - Digital Impairments](#)" on page 292

7.16.3.6 SOURce:BB:MCCW Subsystem

This subsystem contains the commands for setting the Multi Carrier CW signals.

Suffixes

SOURce<hw>

For one-path instruments, the keyword SOURce is optional and can be omitted.

The numeric suffix to SOURce distinguishes between signal generation for path A and path B in the case of two-path instruments:

- SOURce [1] = path A
The keyword SOURce is optional and can be omitted
- SOURce2 = path B
The keyword SOURce is mandatory, i.e. the command must contain the keyword with suffix 2.

OUTPut<ch>

The numeric suffix to OUTPut distinguishes between the available markers.

General Settings and Carrier Setup Settings

[:SOURce<hw>]:BB:MCCW:STATe.....	672
[:SOURce<hw>]:BB:MCCW:PRESet.....	673
[:SOURce<hw>]:BB:MCCW:CARRier:COUNT.....	673
[:SOURce<hw>]:BB:MCCW:CARRier:LIST:PHASe.....	673
[:SOURce<hw>]:BB:MCCW:CARRier:LIST:POWer.....	674
[:SOURce<hw>]:BB:MCCW:CARRier:LIST:STATe.....	675
[:SOURce<hw>]:BB:MCCW:CARRier:PHASe.....	675
[:SOURce<hw>]:BB:MCCW:CARRier:POWer.....	676
[:SOURce<hw>]:BB:MCCW:CARRier:SPACing.....	676
[:SOURce<hw>]:BB:MCCW:CARRier:STATe.....	677
[:SOURce<hw>]:BB:MCCW:CFACtor.....	677
[:SOURce<hw>]:BB:MCCW:CFACtor:ACTual?.....	677
[:SOURce<hw>]:BB:MCCW:CFACtor:MODE.....	678
[:SOURce<hw>]:BB:MCCW:CLOCK?.....	678
[:SOURce<hw>]:BB:MCCW:EDIT:CARRier:EXECute.....	679
[:SOURce<hw>]:BB:MCCW:EDIT:CARRier:PHASe:STEP.....	679
[:SOURce<hw>]:BB:MCCW:EDIT:CARRier:PHASe[:START].....	680
[:SOURce<hw>]:BB:MCCW:EDIT:CARRier:POWer:STEP.....	680
[:SOURce<hw>]:BB:MCCW:EDIT:CARRier:POWer[:START].....	681
[:SOURce<hw>]:BB:MCCW:EDIT:CARRier:START.....	681
[:SOURce<hw>]:BB:MCCW:EDIT:CARRier:STATe.....	681
[:SOURce<hw>]:BB:MCCW:EDIT:CARRier:STOP.....	681

[:SOURce<hw>]:BB:MCCW:STATe <State>

Activates the multi carrier CW signal generation and deactivates all the other digital standards and digital modulation modes in the same path.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 0

Example: SOURce1:BB:MCCW:STATe ON

Manual operation: See "State" on page 425

[:SOURce<hw>]:BB:MCCW:PRESet

Sets the multi carrier signal parameters to their default values (*RST values specified for the commands).

Not affected is the state set with the command SOURce<hw>:BB:MCCW:STATe

Example: SOURce1:BB:MCCW:PRESet

Usage: Event

Manual operation: See "Set to Default" on page 425

[:SOURce<hw>]:BB:MCCW:CARRier:COUNT <Count>

Sets the number of carriers in the Multi Carrier CW signal. The total bandwidth is calculated as (Number of carriers - 1) * Carrier spacing and must not exceed the system bandwidth of the instrument (see data sheet).

The carrier spacing (:BB:MCCW:CARRier:SPACing) is reduced if the total bandwidth is not respected when entering the number of carriers.

The number of carriers entered therefore defines the maximum carrier spacing (:BB:MCCW:CARRier:SPACing).

Parameters:

<Count> integer
 Range: 1 to 8192
 *RST: 64

Example: BB:MCCW:CARR:COUN 10
 sets 10 CW carriers for the multi carrier signal.

Manual operation: See "Number of Carriers" on page 426

[:SOURce<hw>]:BB:MCCW:CARRier:LIST:PHASe <Phas0[,Phas1..>]
[:SOURce<hw>]:BB:MCCW:CARRier:LIST:PHASe? [<Start>[, <Count>]]

Sets the start phase of the carrier with the aid of a value list. The first value in the list is assigned to the carrier with index 0, the second value to the carrier with index 1, etc. The maximum length corresponds to the maximum number of multi carriers. There is no need to enter all the values every time. Values not set by the value list are set with the default values provided they have already been explicitly set by a previous command. If this is the case, the values continue to apply until overwritten.

Setting parameters:

<Phas0[,Phas1..]> float
 Range: 0 to 360
 Increment: 0.01
 *RST: 0
 Default unit: DEG

Query parameters:

<Start> integer
 Range: 0 to lastCarrier
 <Count> integer
 Range: 1 to lastCarrier

Return values:

<Phas[,Phas..]> float

Example:

BB:MCCW:CARR:LIST:PHAS 1,20,30,40,50,60
 sets a start phase for carriers 0, 1, 2, 3 and 4.
 BB:MCCW:CARR:LIST:PHAS? 2,3
 queries the phase of carrier 1, 2 and 3.
 Response: 20,30,40

Manual operation: See "[Carrier Table](#)" on page 429

**[[:SOURce<hw>]:BB:MCCW:CARRIER:LIST:POWER <Pow0[,Pow1..]>]
 [[:SOURce<hw>]:BB:MCCW:CARRIER:LIST:POWER? <Start>, <Count>**

Sets the power of the carrier with the aid of a value list. The first value in the list is assigned to the carrier with index 0, the second value to the carrier with index 1, etc. The maximum length corresponds to the maximum number of multi carriers. There is no need to enter all the values every time. Values not set by the value list are set with the default values provided they have already been explicitly set by a previous command. If this is the case, the values continue to apply until overwritten.

Setting parameters:

<Pow0[,Pow1..]> float
 Increment: 0.01

Query parameters:

<Start> integer
 Range: 0 to lastCarrier
 <Count> integer
 Range: 1 to lastCarrier

Return values:

<Pow[,Pow..]> float

Example: BB:MCCW:CARR:LIST:POW -65 dB, -30 dB, -50 dB, . . .
sets the power of carrier 0 to -65 dB, carrier 1 to -30 dB and so on.
BB:MCCW:CARR:LIST:POW? 2, 3
queries the power of carrier 1 and 2.
Response: -30, -50

Manual operation: See "[Carrier Table](#)" on page 429

**[[:SOURce<hw>]:BB:MCCW:CARRier:LIST:STATe <Stat0[,Stat1..]>]
[:SOURce<hw>]:BB:MCCW:CARRier:LIST:STATe? <Start>, <Count>**

Switches the carrier on or off with the aid of a value list. The first value in the list is assigned to the carrier with index 0, the second value to the carrier with index 1, etc. The maximum length corresponds to the maximum number of multi carriers. There is no need to enter all the values every time. Values not set by the value list are set with the default values provided they have already been explicitly set by a previous command. If this is the case, the values continue to apply until overwritten.

Setting parameters:

<Stat0[,Stat1..]> ON | OFF[,ON | OFF,...]

Query parameters:

<Start> integer
Range: 0 to lastCarrier

<Count> integer
Range: 1 to lastCarrier

Return values:

<State[,State..]> select

Example: BB:MCCW:CARR:LIST:STAT 1,0,1,1,0,0 . . .
switches carrier 0 on, carrier 1 off, etc.
BB:MCCW:CARR:LIST:STAT? 2, 4
queries the states of carrier 2, 3, 4 and 5.
Response: 0, 1, 1, 0

Manual operation: See "[Carrier Table](#)" on page 429

[[:SOURce<hw>]:BB:MCCW:CARRier:PHASe <CarrierIndex>, <Phase>

Sets the start phase of the selected carrier.

The phase settings are only valid if optimization of the crest factor is disabled (:SOURce:BB:MCCW:CFACTOR:MODE OFF).

Parameters:

<CarrierIndex> integer
Range: 0 to lastCarrier

<Phase> float
 Sets the start phase of the selected carrier.
 Range: 0 to 359.99
 Increment: 0.01
 *RST: 0
 Default unit: DEG

Example: BB:MCCW:CARR:PHAS 15, 90
 sets a start phase of 90 DEG for carrier 15.

Manual operation: See "[Carrier Table](#)" on page 429

[:SOURce<hw>]:BB:MCCW:CARRier:POWER <CarrierIndex>, <Power>

Sets the power of the selected carrier.

Parameters:

<CarrierIndex> integer
 Range: 0 to lastCarrier

<Power> float
 Sets the power of the selected carrier.
 Range: -80 to 0
 Increment: 0.01
 *RST: 0

Example: BB:MCCW:CARR:POW 15, -50 dB
 sets the power of carrier 15 to -50 dB.

Manual operation: See "[Carrier Table](#)" on page 429

[:SOURce<hw>]:BB:MCCW:CARRier:SPACing <Spacing>

The command sets the carrier spacing.

The carriers are generated symmetrically around the center carrier. The total bandwidth is calculated as ("Number of carriers" - 1) * "Carrier spacing" and must not exceed the system bandwidth of the instrument (see data sheet).

The maximum carrier spacing that can be set is dependent on the chosen number of carriers

The maximum carrier spacing is automatically reduced so that the maximum total bandwidth is not exceeded on entering the number of carriers
 (:BB:MCCW:CARRier:COUNT).

Parameters:

<Spacing> float
 Range: 0 to 120E6
 Increment: 0.01
 *RST: 10E3

Example: `BB:MCCW:CARR:SPAC 10 MHz`
sets a carrier spacing of 10 MHz.

Manual operation: See "[Carrier Spacing](#)" on page 427

[:SOURce<hw>]:BB:MCCW:CARRier:STATe <CarrierIndex>, <State>

Switches the selected carrier on or off.

The counting in remote control differs from the numbers in the carrier table. Index 0 corresponds to number 1 (first line) in the table. Therefore, switching the state of the channel via remote control always switches the state of <channel index> + 1 in the table.

Parameters:

<CarrierIndex> integer
Range: 0 to lastCarrier

<State> select
*RST: 0

Example: `BB:MCCW:CARR:STAT 15, ON`
switches carrier 16 on.

Manual operation: See "[Carrier Table](#)" on page 429

[:SOURce<hw>]:BB:MCCW:CFACtor <CFactor>

Sets the desired crest factor for the multi carrier signal on selection of the command
`SOUR:BB:MCCW:CFAC:MODE SLOW`.

Parameters:

<CFactor> float
Range: 0 to 30
Increment: 0.01
*RST: 3

Example: `BB:MCCW:CFAC:MODE SLOW`
sets the Target Crest optimization mode.
`BB:MCCW:CFAC 10 dB`
sets the desired crest factor to 10 dB.

Manual operation: See "[Desired Crest Factor](#)" on page 428

[:SOURce<hw>]:BB:MCCW:CFACtor:ACTual?

Queries the actual Crest Factor for `BB:MCCW:CFAC:MODE SLOW`.

Return values:

<Actual> float
 Range: 0 to 100
 Increment: 0.01
 *RST: 3

Example:

```
SOUR:BB:MCCW:CFAC:MODE SLOW
BB:MCCW:CFAC:ACT?
Response: 3
```

Usage:

Query only

[[:SOURce<hw>]:BB:MCCW:CFACtor:MODE <Mode>

Sets the mode by which automatic settings will minimize the crest factor or hold it at a chosen value.

Parameters:

<Mode> OFF | CHIRp | SLOW

OFF

Crest factor optimization is switched off. The carrier PHASE setting has an effect.

CHIRp

The crest factor is very rapidly optimized to < 3 dB for multi carrier signals so that all carriers are switched on and have the same amplitude. The computation time is independent of the number of carriers. In other carrier configurations the achievable crest factor is worse.

SLOW

The crest factor entered using `SOURceBB:MCCW:CFACtor` is maintained for all carrier configurations by means of automatic settings. The computation time depends on the number of carriers and on the crest factor that has been set. Computation time increases only when the number of carriers exceeds 256 and the crest factor is above 4 dB.

*RST: CHIRp

Example:

```
BB:MCCW:CFAC:MODE OFF
switches off automatic crest factor optimization.
The setting SOURBB:MCCW:CARR:PHAS has an effect.
```

Manual operation: See ["Optimize Crest Factor Mode"](#) on page 427

[[:SOURce<hw>]:BB:MCCW:CLOCK?

Queries the output clock rate. The output clock rate depends on the number of carriers and the selected carrier spacing.

Return values:

<Clock> float
 Range: 0 to Max
 Increment: 1E-3
 *RST: 0

Example:

BB:MCCW:CLOC?
 queries the output clock rate.
 Response: 256 000 000
 the output clock rate is 256 MHz.

Usage: Query only

Manual operation: See "Clock Frequency" on page 427

[[:SOURce<hw>]:BB:MCCW:EDIT:CARRIER:EXECute

Adopts the settings for the carrier range which has been defined using the :BB:MCCW:EDIT:CARR:... commands.

Example:

BB:MCCW:EDIT:CARR:STAR 4
 the carrier range starts at carrier 4.
 BB:MCCW:EDIT:CARR:STOP 400
 the carrier range stops at carrier 400.
 BB:MCCW:EDIT:CARR:STAT ON
 sets all the carriers in the carrier range to ON.
 BB:MCCW:EDIT:CARR:EXEC
 adopts the settings for all the carriers in the carrier range.
 BB:MCCW:STAT
 starts generation of the multi carrier signal. Carriers 4 to 400 are in the ON state.

Usage: Event

Manual operation: See "Accept" on page 429

[[:SOURce<hw>]:BB:MCCW:EDIT:CARRIER:PHASe:STEP <Step>

Sets the step width by which the start phases of the carriers in the defined carrier range will be incremented.

The phase settings are only valid if optimization of the crest factor is disabled (:SOURce:BB:MCCW:CFACTOR:MODE OFF).

Parameters:

<Step> float
 Range: -359.99 to 359.99
 Increment: 0.01
 *RST: 0

Example: `BB:MCCW:EDIT:CARR:PHAS 90 DEG`
sets a start phase of 90° for the carriers in the carrier range.
`BB:MCCW:EDIT:CARR:PHAS:STEP 1 DEG`
the start phase is incremented by 1° for each carrier, i.e. the first carrier has a start phase of 90°, the second a start phase of 91°, etc.

Manual operation: See "[Phase Step](#)" on page 429

[SOURce<hw>]:BB:MCCW:EDIT:CARRIER:PHASe[:START] <Start>

Sets the start phase for the individual carriers in the defined carrier range. If the command `:BB:MCCW:EDIT:CARR:PHAS:STEP` is used to define a step width, the phase entered here applies only to the starting carrier. The phases of the remaining carriers are stepped up or down by the phase value specified in the `:BB:MCCW:EDIT:CARR:PHAS:STEP` command.

The phase settings are only valid if optimization of the crest factor is disabled (`SOURce:BB:MCCW:CFACTOR:MODE OFF`).

Parameters:

<Start> float
Range: 0 to 359.99
Increment: 0.01
*RST: 0

Example: `BB:MCCW:EDIT:CARR:PHAS 90 DEG`
sets a start phase of 90° for the carriers in the carrier range.

Manual operation: See "[Phase Start](#)" on page 428

[SOURce<hw>]:BB:MCCW:EDIT:CARRIER:POWER:STEP <Step>

Sets the step width by which the starting power of the carriers in the defined carrier range will be incremented.

Parameters:

<Step> float
Range: -80 to 80
Increment: 0.01
*RST: 0

Example: `BB:MCCW:EDIT:CARR:POW -80dB`
sets a power of -80 dB for the carriers in the carrier range.
`BB:MCCW:EDIT:CARR:POW:STEP 1 dB`
the power phase is incremented by dB for each carrier, i.e. the first carrier has -80 dB, the second -79 dB, etc.

Manual operation: See "[Power Step](#)" on page 428

[[:SOURce<hw>]:BB:MCCW:EDIT:CARRIER:POWER[:START] <Start>

Sets the power for the individual carriers in the defined carrier range. If the command `:BB:MCCW:EDIT:CARR:POW:STEP` is used to define a step width, the power entered here applies only to the starting carrier. The power of the remaining carriers is stepped up or down by the power specified in the `:BB:MCCW:EDIT:CARR:POW:STEP` command.

Parameters:

<Start> float
 Range: -80 to 0
 Increment: 0.01
 *RST: 0

Example: `BB:MCCW:EDIT:CARR:POW -50 dB`
 sets the power of the carrier to -50 dB.

Manual operation: See ["Power Start"](#) on page 428

[[:SOURce<hw>]:BB:MCCW:EDIT:CARRIER:START <Start>

Selects the first carrier in the carrier range to which the settings with the `:BB:MCCW:EDIT:CARR:...` commands shall apply.

Parameters:

<Start> integer
 Range: 0 to 8191
 *RST: 0

Example: `BB:MCCW:EDIT:CARR:STAR 4`
 the carrier range starts at carrier 4.

Manual operation: See ["Carrier Start"](#) on page 428

[[:SOURce<hw>]:BB:MCCW:EDIT:CARRIER:STATE <State>

Switches all the carriers in the selected carrier range on or off.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 1

Example: `BB:MCCW:EDIT:CARR:STAT ON`
 sets all the carriers in the carrier range to ON.

Manual operation: See ["Carrier State"](#) on page 428

[[:SOURce<hw>]:BB:MCCW:EDIT:CARRIER:STOP <Stop>

Selects the last carrier in the carrier range to which the settings with the `:BB:MCCW:EDIT:CARR:...` commands shall apply.

Parameters:

<Stop> integer
 Range: 0 to 8191
 *RST: 0

Example: BB:MCCW:EDIT:CARR:STOP 40
 the carrier range stops at carrier 40.

Manual operation: See "[Carrier Stop](#)" on page 428

Trigger Settings

[:SOURce<hw>]:BB:MCCW:TRIGger:ARM:EXECute	682
[:SOURce<hw>]:BB:MCCW:TRIGger:EXECute	682
[:SOURce<hw>]:BB:MCCW:TRIGger:EXTErnal:SYNChronize:OUTPut	683
[:SOURce<hw>]:BB:MCCW:TRIGger:OBASeband:DELay	683
[:SOURce<hw>]:BB:MCCW:TRIGger:OBASeband:INHibit	684
[:SOURce<hw>]:BB:MCCW:TRIGger:RMODE?	684
[:SOURce<hw>]:BB:MCCW:TRIGger:SLENgth	685
[:SOURce<hw>]:BB:MCCW:TRIGger:SOURce	685
[:SOURce<hw>]:BB:MCCW:TRIGger[:EXTErnal<ch>]:DELay	685
[:SOURce<hw>]:BB:MCCW:TRIGger[:EXTErnal<ch>]:INHibit	686
[:SOURce<hw>]:BB:MCCW[:TRIGger]:SEQuence	686

[\[:SOURce<hw>\]:BB:MCCW:TRIGger:ARM:EXECute](#)

Stops signal generation for trigger modes Armed_Auto and Armed_Retrigger. A subsequent internal or external trigger event restart signal generation.

Example:

```
BB:MCCW:TRIG:SOUR INT
sets internal triggering.
BB:MCCW:TRIG:SEQ ARET
sets Armed_Retrigger mode, i.e. every trigger event causes signal
generation to restart.
BB:MCCW:TRIG:EXEC
executes a trigger, signal generation is started.
BB:MCCW:TRIG:ARM:EXEC
signal generation is stopped.
BB:MCCW:TRIG:EXEC
executes a trigger, signal generation is started again.
```

Usage: Event

Manual operation: See "[Arm](#)" on page 433

[\[:SOURce<hw>\]:BB:MCCW:TRIGger:EXECute](#)

Executes a trigger. The internal trigger source must be selected using the command `MCCW:TRIGger:SOURce INTernal` and a trigger mode other than AUTO must be selected using the command `:BB:MCCW:TRIGger:MODE`.

Example: BB:MCCW:TRIG:SOUR INT
sets internal triggering.
BB:MCCW:TRIG:SEQ RETR
sets Retrigger mode, i.e. every trigger event causes signal generation to restart.
BB:MCCW:TRIG:EXEC
executes a trigger.

Usage: Event

Manual operation: See ["Execute Trigger"](#) on page 433

[[:SOURce<hw>]:BB:MCCW:TRIGger:EXTernal:SYNChronize:OUTPut <Output>

(enabled for Trigger Source External)

Enables/disables output of the signal synchronous to the external trigger event.

Parameters:

<Output>

0 | 1 | OFF | ON

ON

The signal calculation starts simultaneously with the external trigger event but because of the instrument's processing time the first samples are cut off and no signal is outputted. After elapsing of the internal processing time, the output signal is synchronous to the trigger event.

OFF

The signal output begins after elapsing of the processing time and starts with sample 0, i.e. the complete signal is outputted. This mode is recommended for triggering of short signal sequences with signal duration comparable with the processing time of the instrument.

*RST: 1

Example: BB:MCCW:TRIG:SOUR EXT
sets external triggering.
BB:MCCW:TRIG:EXT:SYNC:OUTP ON
enables synchronous output to external trigger.

Manual operation: See ["Sync. Output to External Trigger"](#) on page 433

[[:SOURce<hw>]:BB:MCCW:TRIGger:OBASeband:DELay <Delay>

Sets the trigger delay for external triggering.

Parameters:

<Delay>

float

Range: 0 to 65535

Increment: 0.01

*RST: 0

Example: BB:MCCW:TRIG:SOUR EXT
 selects an external trigger
 BB:MCCW:TRIG:DEL 200
 sets a delay of 200 samples for the trigger.

[:SOURce<hw>]:BB:MCCW:TRIGger:OBASeband:INHibit <Inhibit>

Sets the number of samples by which a restart is to be inhibited following a trigger event. This command applies only in the case of external triggering.

Parameters:

<Inhibit> integer
 Range: 0 to 67108863
 *RST: 0

Example: BB:MCCW:TRIG:SOUR EXT
 selects an external trigger
 BB:MCCW:TRIG:INH 200
 sets a restart inhibit for 200 samples following a trigger event.

[:SOURce<hw>]:BB:MCCW:TRIGger:RMODE?

Queries the current status of signal generation for all trigger modes with Multi Carrier CW on.

Return values:

<RMode> STOP | RUN
 RUN
 The signal is generated. A trigger event occurred in the triggered mode.
 STOP
 The signal is not generated. A trigger event did not occur in the triggered modes, or signal generation was stopped by the command BB:MCCW:TRIG:ARM:EXECute (armed trigger modes only).

Example: SOURBB:MCCW:TRIG:SOUR EXT
 sets external triggering
 SOURBB:MCCW:TRIG:MODE ARET
 selects the Armed_Retrigger mode
 SOURBB:MCCW:TRIG:RMODE?
 queries the current status of signal generation.
 Response: RUN
 the signal is generated, an external trigger was executed.

Usage: Query only

Manual operation: See "[Running/Stopped](#)" on page 432

[[:SOURce<hw>]:BB:MCCW:TRIGger:SLEngth <SLength>

Sets the length of the signal sequence to be output in the "Single" trigger mode. The input is to be expressed in samples. It is then possible to output deliberately just part of the waveform, an exact sequence of the waveform, or a defined number of repetitions of the waveform.

Parameters:

<SLength> integer
 Range: 1 to 1000
 *RST: 1

Example:

```
SOURBB:MCCW:SEQ SING
sets trigger mode Single.
SOURBB:MCCW:TRIG:SLEN 200
sets a sequence length of 200 samples. The first 200 samples of
the current waveform will be output after the next trigger event.
```

Manual operation: See "[Signal Duration](#)" on page 432

[[:SOURce<hw>]:BB:MCCW:TRIGger:SOURce <Source>

Selects the trigger source.

Parameters:

<Source> INTernal|BEXTernal|EXTernal
INTernal
 manual trigger or *TRG.
EXTernal | BEXTernal
 trigger signal on the TRIGGER 1/2 connector.
 *RST: INTernal

Example:

```
SOURce1:BB:MCCW:TRIGger:SOURce EXTernal
sets external triggering via the TRIGGER 1 connector.
```

Manual operation: See "[Trigger Source](#)" on page 433

[[:SOURce<hw>]:BB:MCCW:TRIGger[:EXTernal<ch>]:DELay <Delay>

Specifies the trigger delay (expressed as a number of samples) for external triggering.

Parameters:

<Delay> float
 Range: 0 to 65535
 Increment: 0.01
 *RST: 0

Example:

```
BB:MCCW:TRIG:SOUR EXT
selects an external trigger
BB:MCCW:TRIG:DEL 200
sets a delay of 200 samples for the trigger.
```

Manual operation: See "Trigger Delay" on page 434

[:SOURce<hw>]:BB:MCCW:TRIGger[:EXTernal<ch>]:INHibit <Inhibit>

Specifies the number of samples by which a restart is to be inhibited following a trigger event. This command applies only in the case of external triggering.

Parameters:

<Inhibit> integer
 Range: 0 to 67108863
 *RST: 0

Example:

BB:MCCW:TRIG:SOUR EXT
 selects an external trigger
 BB:MCCW:TRIG:INH 200
 sets a restart inhibit for 200 samples following a trigger event.

Manual operation: See "Trigger Inhibit" on page 434

[:SOURce<hw>]:BB:MCCW[:TRIGger]:SEQuence <Sequence>

Selects the trigger mode.

Parameters:

<Sequence> AUTO | RETRigger | AAUTo | ARETrigger | SINGLE

AUTO
 The multi carrier signal is generated continuously.

RETRigger
 The multi carrier signal is generated continuously. A trigger event (internal or external) causes a restart.

AAUTo
 The multi carrier signal is generated only when a trigger event occurs. After the trigger event the signal is generated continuously. Signal generation is stopped with command `SOURBB:MCCW:TRIG:ARM:EXEC` and started again when a trigger event occurs.

ARETrigger
 The multi carrier signal is generated only when a trigger event occurs. The device automatically toggles to RETRIG mode. Every subsequent trigger event causes a restart. Signal generation is stopped with command `SOURBB:MCCW:TRIG:ARM:EXEC` and started again when a trigger event occurs.

SINGLE
 The multi carrier signal is output only when a trigger event occurs. After the trigger event the signal is output once to the set sequence length (`SOURBB:MCCW:TRIG:SLEN`). Every subsequent trigger event causes a restart.

*RST: AUTO

Example: `BB:MCCW:SEQ AAUT`
sets the "Armed_auto" trigger mode; the device waits for the first trigger (e.g. with *TRG) and then generates the signal continuously.

Manual operation: See "Trigger Mode" on page 432

Marker Settings

This section lists the remote control commands, necessary to configure the markers.



The marker delay settings are available for R&S SMx and R&S AMU instruments only.

<code>[:SOURce<hw>]:BB:MCCW:TRIGger:OUTPut:DELay:FIXed</code>	687
<code>[:SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:DELay</code>	688
<code>[:SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:DELay:MAXimum?</code>	688
<code>[:SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:DELay:MINimum?</code>	688
<code>[:SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:MODE</code>	689
<code>[:SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:OFFTime</code>	689
<code>[:SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:ONTime</code>	689
<code>[:SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:PATTern</code>	690
<code>[:SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:PULSe:DIVider</code>	690
<code>[:SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:PULSe:FREQuency?</code>	691

`[:SOURce<hw>]:BB:MCCW:TRIGger:OUTPut:DELay:FIXed <Fixed>`

Restricts the marker delay setting range to the dynamic range. In this range the delay can be set without restarting the marker and signal. If a delay is entered in setting ON but is outside this range, the maximum possible delay is set and an error message is generated.

The numeric suffix in OUTPut has no significance for this command, since the setting always affects every marker.

Parameters:

<Fixed> 0 | 1 | OFF | ON
*RST: 0

Example: `BB:MCCW:TRIG:OUTP:DEL:FIX ON`
restricts the marker signal delay setting range to the dynamic range.

Manual operation: See "Fix marker delay to current range" on page 436

[[:SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:DELay <Delay>

Sets the delay between the signal on the marker outputs and the start of the signals, expressed in terms of samples. Command `:BB:MCCW:TRIGger:OUTPut:DELay:FIXed ON` can be used to restrict the range of values to the dynamic range, i.e. the range within which a delay of the marker signals can be set without restarting the marker and signal.

Parameters:

<Delay> float
 Range: 0 to 16777215
 Increment: 0.001
 *RST: 0

Example:

`BB:MCCW:TRIG:OUTP2:DEL 16`
 sets a delay of 16 samples for the signal on connector MARKER 2.

Manual operation: See "[Marker x Delay](#)" on page 435

[[:SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:DELay:MAXimum?

Queries the maximum marker delay for setting `:BB:MCCW:TRIGger:OUTPut:DELay:FIXed ON`.

Return values:

<Maximum> float
 Range: 0 to 16777215
 Increment: 1E-3

Example:

`BB:MCCW:TRIG:OUTP:DEL:FIX ON`
 restricts the marker signal delay setting range to the dynamic range.
`BB:MCCW:TRIG:OUTP:DEL:MAX`
 queries the maximum of the dynamic range.
 Response: 2000
 the maximum for the marker delay setting is 2000 samples.

Usage: Query only

Manual operation: See "[Current Range without Recalculation](#)" on page 435

[[:SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:DELay:MINimum?

Queries the minimum marker delay for setting `:BB:MCCW:TRIGger:OUTPut:DELay:FIXed ON`.

Return values:

<Minimum> float
 Range: 0 to 16777215
 Increment: 1E-3
 *RST: 0

- Example:** `BB:MCCW:TRIG:OUTP:DEL:FIX ON`
restricts the marker signal delay setting range to the dynamic range.
- `BB:MCCW:TRIG:OUTP:DEL:MIN`
queries the minimum of the dynamic range.
- Response: 0
the minimum for the marker delay setting is 0 samples.
- Usage:** Query only
- Manual operation:** See "[Current Range without Recalculation](#)" on page 435

[[:SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:MODE <Mode>

Defines the signal for the selected marker output.

Parameters:

<Mode>

REStart | PULSe | PATTErn | RATio

REStart

A brief marker signal is generated at the start of the waveform.

PULSe

A pulsed marker signal is generated. The pulse frequency (= sample rate/divider) is defined with the

`SOUR:BB:MCCW:TRIG:OUTP:PULSe:DIVider` command and can be queried with the

`SOUR:BB:MCCW:TRIG:OUTP:PULSe:FREQuency?` command.

PATTErn

A marker signal is generated with the aid of a user-definable bit pattern. The bit pattern is entered with the aid of command

`SOURce:BB:MCCW:TRIGger:OUTPut:PATTErn`. The bit pattern is a maximum of 32 bits long.

RATio

A regular marker signal corresponding to the Time Off / Time On specifications in the commands

`SOURce:BB:MCCW:TRIGger:OUTPut:OFFT` and

`SOURce:BB:MCCW:TRIGger:OUTPut:ONT` is generated.

*RST: REStart

- Example:** `BB:MCCW:TRIG:OUTP2:MODE PULS`
selects the pulsed marker signal on output MARKER 2.

Manual operation: See "[Marker Mode](#)" on page 435

[[:SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:OFFTime <OffTime>

[[:SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:ONTime <OnTime>

Sets the number of samples in a period (ON time + OFF time) during which the marker signal in setting `SOURce:BB:MCCW:TRIGger:OUTPut:MODE RATio` on the marker outputs is ON.

Parameters:

<OnTime> integer
 Range: 1 to 16777215
 *RST: 1

Example:

BB:MCCW:TRIG:OUTP2:ONT 20
 sets an ON time of 20 samples for marker 2.

Manual operation: See "[Marker Mode](#)" on page 435

[:SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:PATTern <Pattern>

Sets the bit pattern used to generate the marker signal in the setting
 SOURce:BB:MCCW:TRIGger:OUTPut:MODE PATTern 0 is marker off, 1 is marker
 on.

Parameters:

<Pattern> <32 bit pattern>
 *RST: 0

Example:

BB:MCCW:TRIG:OUTP2:PATT #HE0F52,20
 sets a bit pattern.
 BB:MCCW:TRIG:OUTP2:MODE PATT
 activates the marker signal according to a bit pattern on output
 MARKER 2.

Manual operation: See "[Marker Mode](#)" on page 435

[:SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:PULSe:DIVider <Divider>

Sets the divider for Pulse marker mode (SOUR:BB:MCCW:TRIG:OUTP:MODE PULSe).
 The resulting pulse frequency is derived by dividing the symbol rate by the divider.

Parameters:

<Divider> integer
 Range: 2 to 1024
 *RST: 2

Example:

BB:MCCW:TRIG:OUTP2:PULS:DIV 2
 sets the divider for the marker signal on output MARKER 2 to
 the value 2.
 BB:MCCW:TRIG:OUTP2:FREQ?
 queries the resulting pulse frequency of the marker signal
 Response: 66 000
 the resulting pulse frequency is 66 kHz.

Manual operation: See "[Marker Mode](#)" on page 435

[[:SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:PULSe:FREQuency?

Queries the pulse frequency of the pulsed marker signal in the setting `SOUR:BB:MCCW:TRIG:OUTP:MODE PULS`. The pulse frequency is derived by dividing the symbol rate by the divider. The divider is defined with command `SOUR:BB:MCCW:TRIG:OUTP:PULS:DIV`.

Return values:

<Frequency> float
Increment: 1E-3

Example:

`BB:MCCW:TRIG:OUTP2:PULS:DIV 4`
sets the divider for the marker signal on output MARKER 2 to the value 4.
`BB:MCCW:TRIG:OUTP2:MODE PULS`
enables the pulsed marker signal
`BB:MCCW:TRIG:OUTP2:PULS:FREQ?`
queries the pulse frequency for the marker signal.
Response: "33 000"
the resulting pulse frequency is 33 kHz.

Usage: Query only

Manual operation: See "[Marker Mode](#)" on page 435

Clock Settings

[:SOURce<hw>]:BB:MCCW:CLOCK:MODE.....	691
[:SOURce<hw>]:BB:MCCW:CLOCK:MULTiplier.....	691
[:SOURce<hw>]:BB:MCCW:CLOCK:SOURce.....	692

[[:SOURce<hw>]:BB:MCCW:CLOCK:MODE <Mode>

Sets the type of externally supplied clock (`:BB:MCCW:CLOCK:SOURce EXTERNAL`). When `MSAMple` is used, a multiple of the sample clock is supplied via the `CLOCK` connector and the sample clock is derived internally from this. The multiplier is entered with the command `BB:MCCW:CLOCK:MULTiplier`.

Parameters:

<Mode> SAMPLE | MSAMple
*RST: SAMPLE

Example:

`BB:MCCW:CLOC:MODE SAMP`
selects clock type "Sample", i.e. the supplied clock is a sample clock.

Manual operation: See "[Clock Mode](#)" on page 436

[[:SOURce<hw>]:BB:MCCW:CLOCK:MULTiplier <Multiplier>

Specifies the multiplier for clock type Multiple Samples (`:BB:MCCW:CLOCK:MODE MSAM`) in the case of an external clock source.

Parameters:

<Multiplier> integer
 Range: 1 to 64
 *RST: 4

Example:

BB:MCCW:CLOC:SOUR EXT
 selects the external clock source. The clock is supplied via the
 CLOCK connector.
 BB:MCCW:CLOC:MODE MSAM
 selects clock type "Multiple Samples", i.e. the supplied clock has
 a rate which is a multiple of the sample rate.
 BB:MCCW:CLOC:MULT 12
 the multiplier for the external clock rate is 12.

Manual operation: See ["Clock Multiplier"](#) on page 436

[:SOURce<hw>]:BB:MCCW:CLOCK:SOURce <Source>

Selects the source for the digital modulation clock.

Parameters:

<Source> INTernal | EXTernal | AINTernal
INTernal
 The internal clock reference is used.
EXTernal
 The external clock reference is supplied to the CLOCK connector.
 *RST: INTernal

Example:

BB:MCCW:CLOC:SOUR EXT
 selects an external clock reference. The clock is supplied via the
 CLOCK connector.

Manual operation: See ["Clock Source"](#) on page 436

7.16.3.7 SOURce:BB:MEASurement Subsystem

This subsystem contains the commands for measuring the level values of the digital baseband signal.



Monitoring the measurement of the digital I/Q baseband signal requires the baseboard version "DacBoard 1141.8190.02" or higher. Up to baseboard version DacBoard 1141.8090.xx only the calculated signal levels are provided.

The currently equipped DacBoard is listed in the dialog "Setup > System > Hardware Config, section Baseband Assembly" (see [Chapter 5.2.3.2, "Hardware Config"](#), on page 132).

[:SOURce<hw>]:BB:MEASurement:CFACtor?

Queries the crest factor of the baseband signal during power measurement.

Return values:

<CFactor> float
 Range: 0 to 100
 Increment: 0.01
 *RST: 0
 Default unit: dB

Example: BB:MEAS:CFAC?
 Queries the measured crest factor of the baseband signal.

Usage: Query only

Manual operation: See "[Crest Factor - Digital Impairments - Measurement](#)" on page 312

[:SOURce<hw>]:BB:MEASurement:DURation <Duration>

Sets the time for the measurement of the digital I/Q baseband signal in the range of 1 s ... 3 h.

Parameters:

<Duration> hh:mm:ss
 Range: 1s to 3h
 *RST: 1s

Example: BB:MEAS:DUR "00:15:30"
 sets the measurement duration to 15 minutes and 30 seconds.

Manual operation: See "[Duration - Digital Impairments - Measurement](#)" on page 312

[:SOURce<hw>]:BB:MEASurement:POWER:PEAK?

Queries the peak power of the baseband signal relative to full scale of 0.5 V (in terms of dB full scale) during measurement.

Return values:

<Peak> float
 Range: -10 to 10
 Increment: 0.01
 *RST: 0
 Default unit: dBfs

Example: BB:MEAS:POW:PEAK?
 Queries the peak power of the baseband signal.

Usage: Query only

Manual operation: See "[Peak Power - Digital Impairments - Measurement](#)" on page 312

[[:SOURce<hw>]:BB:MEASurement:POWER:RMS?

Queries the power of the baseband signal relative to full scale of 0.5 V (in terms of dB full scale) during measurement.

Return values:

<Rms> float
 Range: -100 to 10
 Increment: 0.01
 *RST: 0
 Default unit: dBfs

Example:

BB:MEAS:POW:RMS?

Queries the power of the baseband signal.

Usage:

Query only

Manual operation: See "[Power - Digital Impairments - Measurement](#)" on page 312

[[:SOURce<hw>]:BB:MEASurement:RTIME?

Queries the remaining time until the measurement of the digital I/Q baseband signal is completed.

Return values:

<RTIME> string | hh:mm:ss

Example:

BB:MEAS:RTIM?

Queries the remaining measurement duration.

Usage:

Query only

Manual operation: See "[Remaining Time - Digital Impairments - Measurement](#)" on page 312

[[:SOURce<hw>]:BB:MEASurement:SOURce <Source>

Selects the signal source for the measurement. The power and crest factor can be retrieved either from the interference-free digital I/Q baseband signal or the signal superimposed by the noise generator AWGN.

Parameters:

<Source> BB | BAWGn

BB
 (Baseband Signal without AWGN)
 Selects the measurement of the interference-free baseband signal.

BAWGn
 (Baseband with AWGN)
 Selects the measurement of the baseband signal after an AWGN noise signal is added.

*RST: BB

Example: `BB:MEAS:SOURC BAWG`
selects the measurement of the digital baseband signal interfered with a noise signal.

Manual operation: See ["Signal Source - Digital Impairments - Measurement"](#) on page 312

[:SOURce<hw>]:BB:MEASurement[:STATe] <State>

Activates the measurement of the digital I/Q baseband signal. When activated, information on the peak power, power and crest factor are indicated. Additionally the duration of the measurement can be set.

Parameters:

<State> 0 | 1 | OFF | ON
*RST: 0

Example: `BB:MEAS:STAT ON`
starts measuring the real power values of the digital I/Q baseband signal.

Manual operation: See ["State - Digital Impairments - Measurement"](#) on page 311

7.16.3.8 SOURce:BB:POWER Subsystem

This subsystem contains the commands for retrieving the level values of the digital baseband signal.

[:SOURce<hw>]:BB:CFACTOR?

This command queries the crest factor of the baseband signal.

Return values:

<CFactor> float
Range: 0 to 100
Increment: 0.01
*RST: 0
Default unit: dB

Example: `BB:CFAC`
queries the crest factor of the baseband signal.

Usage: Query only

Manual operation: See ["Crest Factor - Digital Impairments"](#) on page 311

[:SOURce<hw>]:BB:POWER:PEAK?

This command queries the peak power of the baseband signal relative to full scale of 0.5 V (in terms of dB full scale).

Return values:

<Peak> float
 Range: -145 to 30
 Increment: 0.01
 *RST: 0
 Default unit: dBfs

Example:

BB:POW:PEAK
 queries the peak power of the baseband signal.

Usage: Query only

Manual operation: See "[Peak Power - Digital Impairments](#)" on page 311

[[:SOURce<hw>]:BB:POWER:RMS?

This command queries the power of the baseband signal relative to full scale of 0.5V (in terms of dB full scale).

Return values:

<Rms> float
 Range: -145 to 30
 Increment: 0.01
 *RST: 0
 Default unit: dBfs

Example:

BB:POW:RMS
 queries the power of the baseband signal.

Usage: Query only

Manual operation: See "[Power - Digital Impairments](#)" on page 311

7.16.3.9 SOURce:BB:PROGress Subsystem General Commands

In the R&S SMJ, some calculation processes may take longer time. While operating the instrument manually, you can observe the status of an initiated process by the busy indicator. The following commands fulfill the same task in the remote control operation.

Example: Querying the status of the Create Waveform file process

The following is an example on how to use these commands to retrieve information about how many percent of the initiated process are completed.

```
:SOURce1:BB:EUTRa:SETTing:TMOD:DL "E-TM1_1__15MHz"
:SOURce1:BB:EUTRa:SLENgth 100
:SOURce1:BB:PROGress:MCODer?
// 100 (task compleated)
:SOURce1:BB:EUTRa:STATe ON
:BB:PROGress:MCODer?
// 67 (task in progress)
:SOURce1:BB:EUTRa:WAVEform:CREate
```

```

:SOURce1:BB:PROGress:MCODer?
// 25 (task in progress)
// :SOURce1:BB:PROGress:MCODer:DM:FILTer?
// 100

[:SOURce<hw>]:BB:PROGress:MCODer?.....697
[:SOURce<hw>]:BB:PROGress:MCODer:ARBitrary:MCARrier?.....697
[:SOURce<hw>]:BB:PROGress:MCODer:ARBitrary:WSEGment?.....697
[:SOURce<hw>]:BB:PROGress:MCODer:DM:FILTer?..... 697

```

[:SOURce<hw>]:BB:PROGress:MCODer?
[:SOURce<hw>]:BB:PROGress:MCODer:ARBitrary:MCARrier?
[:SOURce<hw>]:BB:PROGress:MCODer:ARBitrary:WSEGment?

Queries the status of an initiated process, like for example the calculation of a signal in accordance to a digital standard, or the calculation of a multi carrier or multi segment waveform file.

Return values:

<WSegment> integer
 Indicates the task progress in percent
 Range: 0 to 100
 *RST: 100

Example: see [Example "Querying the status of the Create Waveform file process"](#) on page 696

Usage: Query only

[:SOURce<hw>]:BB:PROGress:MCODer:DM:FILTer?

Queries the status of an applied offline filtering, like for example during the calculation of a waveform and a multi carrier waveform file.

Return values:

<Filter> integer
 Indicates the task progress in percent
 Range: 0 to 100
 *RST: 100

Example: see [Example "Querying the status of the Create Waveform file process"](#) on page 696

Usage: Query only

7.16.4 SOURce:CORRection Subsystem

The output level is corrected in the CORRection subsystem. Correction is performed by user-defined table values being added to the output level for the respective RF frequency. In the R&S SMJ, this subsystem is used to select, transfer and activate user correction tables.

Each list is stored as a file. The name of the user correction file can be freely selected. The file extension *.uco is assigned automatically and cannot be changed.

The files can be stored in a freely selectable directory and opened from there. The default directory is set using command :MMEMory:CDIRectory on page 549. In the case of files which are stored in the default directory, only the file name has to be specified in commands. Otherwise, the complete absolute path has to be specified with every command. The extension can be omitted in any case.



In the following command examples, the files are stored in the default directory.

The amplitude can also be linearized automatically by means of a R&S NRP power sensor connected to the generator output signal. With the aid of the command [:SOURce<hw>]:CORRection:CSET:DATA[:SENSor<ch>][:POWer]:SONCe, a list with correction values for external test assemblies can be automatically determined, e.g. for compensating the frequency response of cables. The correction values can be acquired any time irrespective of the modulation settings of the generator.

Multi level measurements allow to take into account the changing VSWR for the different attenuator settings (see [:SOURce<hw>]:CORRection:CSET:DATA:POWer:MLEVel<ch>? on page 700).

[:SOURce]:CORRection:CSET:CATalog?	699
[:SOURce<hw>]:CORRection:CSET:DATA:FREQUency	699
[:SOURce<hw>]:CORRection:CSET:DATA:FREQUency:POINts?	699
[:SOURce<hw>]:CORRection:CSET:DATA:POWer	700
[:SOURce<hw>]:CORRection:CSET:DATA:POWer:POINts?	700
[:SOURce<hw>]:CORRection:CSET:DATA:POWer:MLEVel<ch>?	700
[:SOURce<hw>]:CORRection:CSET:DATA:POWer:MLEVel:STATe	701
[:SOURce<hw>]:CORRection:CSET:DATA:POWer:SGAMma:STATe	701
[:SOURce<hw>]:CORRection:CSET:DATA:SGAMma:DELeTe	701
[:SOURce<hw>]:CORRection:CSET:DATA:SGAMma:MAGNitude	702
[:SOURce<hw>]:CORRection:CSET:DATA:SGAMma:MAGNitude:POINts?	702
[:SOURce<hw>]:CORRection:CSET:DATA:SGAMma:PHASe	702
[:SOURce<hw>]:CORRection:CSET:DATA:SGAMma:PHASe:POINts?	703
[:SOURce<hw>]:CORRection:CSET:DATA[:SENSor<ch>][:POWer]:SONCe	703
[:SOURce]:CORRection:CSET:DELeTe	703
[:SOURce<hw>]:CORRection:DEXChange:AFILe:CATalog?	704
[:SOURce<hw>]:CORRection:DEXChange:AFILe:EXTension	704
[:SOURce<hw>]:CORRection:DEXChange:AFILe:SELeCt	705
[:SOURce<hw>]:CORRection:DEXChange:AFILe:SEParator:COLumn	705
[:SOURce<hw>]:CORRection:DEXChange:AFILe:SEParator:DECimal	706
[:SOURce<hw>]:CORRection:DEXChange:EXECute	706
[:SOURce<hw>]:CORRection:DEXChange:MODE	706
[:SOURce<hw>]:CORRection:DEXChange:SELeCt	707
[:SOURce<hw>]:CORRection:CSET[:SELeCt]	707
[:SOURce<hw>]:CORRection:MLEVel:STATe	708

[:SOURce<hw>]:CORRection[:STATe].....	708
[:SOURce<hw>]:CORRection:VALue?.....	708
[:SOURce<hw>]:CORRection:ZERoing:STATe.....	709

[:SOURce]:CORRection:CSET:CATalog?

Requests a list of user correction tables. The individual lists are separated by commas.

The lists are stored with the fixed file extensions *.uco in a directory of the user's choice. The directory applicable to the commands is defined with the command
MMEMoRY:CDIR.

Return values:

<Catalog> string

Example:

```
MMEM:CDIR 'D:\user\ucor'
```

selects the directory for the user correction files.

```
CORR:CSET:CAT?
```

queries which correction tables are available.

```
Response:UCOR1,UCOR2,UCOR3
```

the correction tables UCOR1, UCOR2 and UCOR3 are available.

Usage: Query only

Manual operation: See ["Directory, File List and File Name"](#) on page 160

[:SOURce<hw>]:CORRection:CSET:DATA:FREQuency <Frequency>

Transfers the frequency data to the table selected with :CORRection:CSET:SElect.

The numerical suffix at SOURce must not be used for this command.

Parameters:

<Frequency> Frequency#1[, Frequency#2, ...]
Range: 300 kHz to RFmax (depending on model)

Example:

```
CORR:CSET 'D:\user\ucor1'
```

selects the table ucor1.

```
CORR:CSET:DATA:FREQ 100MHz,102MHz,103MHz,...
```

enters the frequency value in the table ucor1.

Manual operation: See ["Edit User Cor. Data - User Correction"](#) on page 224

[:SOURce<hw>]:CORRection:CSET:DATA:FREQuency:POINts?

The command queries the number of frequency values in the selected table.

The numerical suffix at SOURce must not be used for this command.

Return values:

<Points> integer
Range: 0 to 10000
*RST: 0

Example: CORR:CSET 'D:\user\
 selects the table ucor1.
 CORR:CSET:DATA:FREQ:POIN?
 queries the number of frequency values in the table ucor1.
 Response: 440
 the table ucor1 contains 440 frequency values.

Usage: Query only

[[:SOURce<hw>]:CORRection:CSET:DATA:POWER <Power>

Transfers the level data to the table selected with `[[:SOURce<hw>]:CORRection:CSET[:SELEct]`.

*RST does not affect data lists. The numerical suffix at SOURce must not be used for this command.

Parameters:

<Power> Power#1[, Power#2, ...]

Example: CORR:CSET 'D:\user\ucor1'
 selects the table ucor1.
 CORR:CSET:DATA:POW 1dB, 0.8dB, 0.75dB, ...
 enters the level values in the table ucor1.

Manual operation: See ["Edit User Cor. Data - User Correction"](#) on page 224

[[:SOURce<hw>]:CORRection:CSET:DATA:POWER:POINTs?

Queries the number of level values in the selected table.

The numerical suffix at SOURce must not be used for this command.

Return values:

<Points> integer
 Range: 0 to 10000
 *RST: 0

Example: CORR:CSET 'D:\user\ucor1'
 selects the table ucor1.
 CORR:CSET:DATA:POW:POIN?
 queries the number of level values in the table ucor1.
 Response: 440
 the table ucor1 contains 440 level values.

Usage: Query only

[[:SOURce<hw>]:CORRection:CSET:DATA:POWER:MLEVel<ch>?

Queries the measurement results of a multi channel measurement. The values of each column of the user correction list are queried separately, i.e. the correction values for a specific attenuator setting.

Return values:`<MLevel>` string**Example:**`SOUR:CORR:CSET:DATA:POW:MLEV4?`

queries the level correction values for attenuator setting 10 dB.

Usage:

Query only

Manual operation: See "[Multi Level Values](#)" on page 232**[[:SOURce<hw>]:CORRection:CSET:DATA:POWer:MLEVel:STATe <State>**

The command activates the acquisition of multi level data with a connected power sensor. Separate measurements are made for the different attenuator ranges up to 40 dB. Thus, the changes in VSWR for the different ranges are taken into account, the level accuracy increases. For ranges from 40 dB on the changes in VSWR are negligible. The reference level is set internally and cannot be controlled by the user. The measurement results are entered into additional columns of the User Correction list. The Multi Level Correction measurements are made in addition to a Single Level Correction measurement. When the user correction list is activated, it is possible to select which of the measurements is to be used for level correction (command `SOUR:CORR:MLEV:STAT ON`).

Parameters:

`<State>` 0 | 1 | OFF | ON
`*RST:` 0

Example:`SOUR:CORR:CSET:DATA:POW:MLEV:STAT ON`

activates the acquisition of multi level data with a connected power sensor.

Manual operation: See "[Multi Level Values](#)" on page 232**[[:SOURce<hw>]:CORRection:CSET:DATA:POWer:SGAMma:STATe <State>**

Activates the auto fill process to create a list with SGamma correction data.

SGamma correction is possible when the table is filled with multi level user correction data.

Parameters:

`<State>` 0 | 1 | OFF | ON
`*RST:` 0

Example:`CORR:CSET:DATA:POW:SGAM:STAT ON`

activates the acquisition of multi level gamma correction data with a connected power sensor.

[[:SOURce<hw>]:CORRection:CSET:DATA:SGAMma:DELeTe

Deletes SGamma correction values in the selected table.

Example: `CORR:CSET:DATA:SGAM:DEL D:\user\multilevelucor1'`
deletes the SGamma correction values.

Usage: Event

[[:SOURce<hw>]:CORRection:CSET:DATA:SGAMma:MAGNitude <Magnitude1>[, <MagnitudeN>]

Sets the magnitude of the reflection coefficient of the DUT for SGamma correction (multi level user correction data).

Parameters:

<Magnitude1> float
Range: 0.0 to 1.0
Increment: 0.01

<MagnitudeN> float
Range: 0.0 to 1.0
Increment: 0.01

Example: `CORR:CSET:DATA:POW:SGAM:MAG 0.1,0.2,0.3,0.4`
sets the magnitude values.

[[:SOURce<hw>]:CORRection:CSET:DATA:SGAMma:MAGNitude:POINts?

Queries the number of magnitude entries in the selected multi level user correction table.

Return values:

<Points> integer

Example: `CORR:CSET 'D:\user\multilevelucor1'`
selects the data table `multilevelucor1`.
`CORR:CSET:DATA:SGAM:MAGN:POIN?`
queries the number of magnitude entries.
Response: 40
the table contains 40 magnitude values.

Usage: Query only

[[:SOURce<hw>]:CORRection:CSET:DATA:SGAMma:PHASe <Phase1>[, <PhaseN>]

Sets the phase angle of the reflection coefficient of the DUT for SGamma correction (multi level user correction data).

Parameters:

<Phase1> float
Range: -360 to 360
Increment: 0.1

<PhaseN> float
 Range: -360 to 360
 Increment: 0.1

Example: CORR:CSET:DATA:POW:SGAM:PHAS
 -360.0,-180.0,180.0,360.0
 sets the phase values.

[[:SOURce<hw>]:CORRection:CSET:DATA:SGAMma:PHASe:POINts?

Queries the number of phase entries in the selected multi level user correction table.

Return values:

<Points> integer

Example: CORR:CSET 'D:\user\multilevelucor1'
 selects the data table multilevelucor1.
 CORR:CSET:DATA:SGAM:PHAS:POIN?
 queries the number of phase entries.
 Response: 40
 the table contains 40 phase values.

Usage: Query only

[[:SOURce<hw>]:CORRection:CSET:DATA[:SENSor<ch>]][:POWER]:SONCe

The command fills the selected user correction list with the level values measured by the power sensor for the given frequencies.

To select the used power sensor set the suffix in key word SENSE.

Example: CORR:CSET:DATA:SENS:POW:SONC
 fills the user correction list with level values acquired by the power sensor connector to the SENSOR connector.

Usage: Event

Manual operation: See ["Fill User Correction Data with Sensor"](#) on page 230

[[:SOURce]:CORRection:CSET:DELeTe <Filename>

Deletes the specified table.

The lists are stored with the fixed file extensions *.uco in a directory of the user's choice. The directory applicable to the commands is defined with the command MEMORY:CDIR. A path can also be specified in command SOUR:CORR:CSET:CAT?, in which case the file in the specified directory is deleted.

Setting parameters:

<Filename> <table name>

Example: MMEM:CDIR 'D:\user\ucor'
selects the directory for the user correction files.
CORR:CSET:DEL 'UCOR1'
deletes the table ucor1.

Usage: Setting only

Manual operation: See "[User Cor. Data - User Correction](#)" on page 224

[[:SOURce<hw>]:CORRection:DEXChange:AFILe:CATalog?

Requests a list of available ASCII files for export/import of user correction data. The individual files are separated by commas.

The ASCII files are stored with the fixed file extensions *.txt or *.csv in a directory of the user's choice. The directory applicable to the commands is defined with the command MMEMory:CDIR.

Return values:

<Catalog> string

Example: MMEM:CDIR 'D:\user\import'
selects the directory for the ASCII files with frequency and level value pairs.
CORR:DEXC:AFIL:EXT TXT
selects that ASCII files with extension *.txt are listed.
CORR:DEXC:AFIL:CAT?
queries the available files with extension *.txt.
Response: 'ucor1,ucor2'
the ASCII files ucor1.txt and ucor2.txt are available.

Usage: Query only

[[:SOURce<hw>]:CORRection:DEXChange:AFILe:EXTension <Extension>

Selects the file extension of the ASCII file to be imported or exported. Selection TXT (text file) or CSV (Excel file) is available.

Parameters:

<Extension> TXT | CSV
*RST: TXT

Example: MMEM:CDIR 'D:\user\import'
selects the directory for the ASCII files with frequency and level value pairs.
CORR:DEXC:AFIL:EXT TXT
selects that ASCII files with extension *.txt are listed.
CORR:DEXC:AFIL:CAT?
queries the available files with extension *.txt.
Response: 'list1,list2'
the ASCII files ucor1.txt and ucor2.txt are available.

Manual operation: See "[Extension - User Correction](#)" on page 227

[[:SOURce<hw>]:CORRection:DEXChange:AFILe:SELEct <Filename>

Selects the ASCII file to be imported or exported.

The ASCII files are stored with the fixed file extensions *.txt or *.csv in a directory of the user's choice. The directory applicable to the commands is defined with the command `MMEMoRY:CDIR`. A path can also be specified in command `SOUR:CORR:DEXC:AFIL:SEL`, in which case the files are stored or loaded in the specified directory.

Parameters:

<Filename> <ascii file name>

Example:

```
CORR:DEXC:MODE IMP
selects that ASCII files with frequency and level value pairs are
imported and transferred into user correction lists.
CORR:DEXC:AFIL:SEL 'D:\user\import_ucor.csv'
selects that ASCII file ucor.csv is imported.
CORR:DEXC:SEL 'D:\user\import_ucor_imp'
selects that the ASCII file ucor.csv is imported into user cor-
rection list ucor_imp.
```

Manual operation: See "[Select ASCII Source / Destination - User Correction](#)" on page 228

[[:SOURce<hw>]:CORRection:DEXChange:AFILe:SEParator:COLumn <Column>

Selects the separator between the frequency and level column of the ASCII table.

Parameters:

<Column> TABulator | SEMicolon | COMMa | SPACe
*RST: COMMa

Example:

```
CORR:DEXC:MODE EXP
selects that the user correction list is exported into an ASCII file.
CORR:DEXC:AFIL:SEL 'D:\user\import_ucor.csv'
selects ASCII file ucor.csv as destination for the user correction
list data.
CORR:DEXC:AFIL:SEP:COL TAB
the pairs of frequency and level values are separated by a tabu-
lator.
CORR:DEXC:AFIL:SEP:DEC DOT
selects the decimal separator dot.
CORR:DEXC:SEL 'D:\user\import_ucor_imp'
selects that the user correction list ucor_imp is imported into
ASCII file ucor.csv.
```

Manual operation: See "[Column Separator- User Correction](#)" on page 227

[:SOURce<hw>]:CORRection:DEXChange:AFILe:SEParator:DECimal <Decimal>

Selects the decimal separator used in the ASCII data between '.' (decimal point) and ',' (comma) with floating-point numerals.

Parameters:

<Decimal> DOT | COMMa
*RST: DOT

Example:

```
CORR:DEXC:MODE EXP
selects that the user correction list is exported into an ASCII file.
CORR:DEXC:AFIL:SEL 'D:\user\import_ucor.csv'
selects ASCII file ucor.csv as destination for the user correction
list data.
CORR:DEXC:AFIL:SEP:COL TAB
the pairs of frequency and level values are separated by a tabu-
lator.
CORR:DEXC:AFIL:SEP:DEC DOT
selects the decimal separator dot.
CORR:DEXC:SEL 'D:\user\import_ucor_imp'
selects that the user correction list ucor_imp is imported into
ASCII file ucor.csv.
```

Manual operation: See "[Decimal Point - User Correction](#)" on page 227

[:SOURce<hw>]:CORRection:DEXChange:EXECute

Starts the export or import of the selected file. When import is selected, the ASCII file is imported as user correction list. When export is selected, the user correction list is exported into the selected ASCII file.

Example:

```
CORR:DEXC:MODE IMP
selects that ASCII files with frequency and level value pairs are
imported and transferred into user correction lists.
CORR:DEXC:AFIL:SEL 'D:\user\import_ucor.csv'
selects that ASCII file ucor.csv is imported.
CORR:DEXC:SEL 'D:\user\import_ucor_imp'
selects that the ASCII file ucor.csv is imported into user cor-
rection list ucor_imp.
CORR:DEXC:EXEC
starts the import of the ASCII file data into the user correction
file.
```

Usage: Event

Manual operation: See "[Import / Export - User Correction](#)" on page 228

[:SOURce<hw>]:CORRection:DEXChange:MODE <Mode>

Selects if user correction lists should be imported or exported. Depending on the selection here, the file select command defines either the source or the destination for user correction lists and ASCII files.

Parameters:

<Mode> IMPort | EXPort
 *RST: IMPort

Example:

```
CORR:DEXC:MODE IMP
selects that ASCII files with frequency and level value pairs are
imported and transferred into user correction lists.
CORR:DEXC:AFIL:SEL 'D:\user\ucor.csv'
selects that ASCII file ucor.csv is imported.
CORR:DEXC:SEL 'D:\user\ucor_imp'
selects that the ASCII file ucor.csv is imported into user cor-
rection list ucor_imp.
```

Manual operation: See "[Mode - User Correction](#)" on page 227

[[:SOURce<hw>]:CORRection:DEXChange:SELEct <Filename>

Selects the user correction list to be imported or exported.

The user correction files are stored with the fixed file extensions *.uco in a directory of the user's choice. The directory applicable to the commands is defined with the command `MMEMoRY:CDIR`. A path can also be specified in command `SOUR:CORR:DEXC:SEL`, in which case the files are stored or loaded in the specified directory.

Parameters:

<Filename> string

Example:

```
CORR:DEXC:MODE IMP
selects that ASCII files with frequency and level value pairs are
imported and transferred into user correction lists.
CORR:DEXC:AFIL:SEL 'D:\user\import_ucor.csv'
selects that ASCII file ucor.csv is imported.
CORR:DEXC:SEL 'D:\user\import_ucor_imp'
selects that the ASCII file ucor.csv is imported into user cor-
rection list ucor_imp.
```

Manual operation: See "[Destination / Source - User Correction](#)" on page 228

[[:SOURce<hw>]:CORRection:CSET[:SELEct] <Filename>

Selects or creates a file for the user correction data.

If the file does not exist, the instrument automatically creates a new file with the name you assigned. Note the predefined file extensions under [Chapter 4.7.2.1, "Extensions for User Files"](#), on page 118.

To determine the file location (directory/path) you can either enter it with the command directly, or use the command `MMEMoRY:CDIR`.

To activate level correction use the command `[[:SOURce<hw>]:CORRection[:STATe]`.

Parameters:

<Filename> <table name>

Example:

```
CORR:CSET 'D:\user\ucor1'
selects the table ucor1.
CORR ON
activates level correction. Correction is performed using the
table ucor1.
```

Manual operation: See ["User Cor. Data - User Correction"](#) on page 224

[:SOURce<hw>]:CORRection:MLEVel:STATe <State>

The command activates the use of multi level data for user correction. The setting is only available for user correction list with multi level correction data (see command `SOUR:CORR:CSET:DATA:POW:MLEV:STAT ON`).

Parameters:

<State> 0 | 1 | OFF | ON
*RST: 0

Example:

```
SOUR:CORR:MLEV:STAT ON
activates the use of multi level correction data for user correc-
tion.
```

Manual operation: See ["Use Multi Level Correction - User Correction"](#) on page 224

[:SOURce<hw>]:CORRection[:STATe] <State>

Activates/deactivates level correction. Level correction is performed using the table which has been selected with the command `[:SOURce<hw>]:CORRection:CSET[:SElect]`.

Parameters:

<State> 0 | 1 | OFF | ON
*RST: 0

Example:

```
SOUR:CORR:CSET 'D:\user\ucor1'
selects the table ucor1.
SOUR:CORR ON
activates user correction.
```

Manual operation: See ["State - User Correction"](#) on page 224

[:SOURce<hw>]:CORRection:VALue?

Queries the current value for user correction.

Return values:

<Value> float
 Range: -100 to 100
 Increment: 0.01
 *RST: 0

Example:

CORR:VAL?
 queries the value currently used for level correction.
 Response: -3
 the correction value is - 3 dB.

Usage: Query only

Manual operation: See ["User Correction Value - User Correction"](#) on page 224

[[:SOURce<hw>]:CORRection:ZERoing:STATe <State>

Activates the zeroing procedure before filling the user correction data acquired by a sensor.

Parameters:

<State> 0 | 1 | OFF | ON

Manual operation: See ["Fill User Correction Data with Sensor"](#) on page 230

7.16.5 SOURce:FM Subsystem

The FM subsystem contains the commands for checking the frequency modulation.

The settings for the internal modulation source (LF generator) are made in the [SOURce:LFOuTput](#) subsystem).

For information about the required options, see [Chapter 5.5.11.4, "Frequency Modulation \(FM\)"](#), on page 246.

[:SOURce<hw>]:FM[:DEViation]	709
[:SOURce<hw>]:FM:EXTernal:COUPling	710
[:SOURce<hw>]:FM:INTernal:FREQUency	710
[:SOURce<hw>]:FM:MODE	710
[:SOURce<hw>]:FM:SENSitivity?	711
[:SOURce<hw>]:FM:SOURce	711
[:SOURce<hw>]:FM:STATe	712

[[:SOURce<hw>]:FM[:DEViation] <Deviation>

Sets the deviation of the frequency modulation signal in Hz. The maximum deviation depends on the set RF frequency and the selected modulation mode (see data sheet).

Parameters:

<Deviation> float
 Range: 0 to 80E6
 Increment: 0.01
 *RST: 1000

Example:

FM 5E3
 sets 5 kHz deviation to the frequency modulation signal.

Manual operation: See "FM Deviation" on page 247

[:SOURce<hw>]:FM:EXTernal:COUPling <Coupling>

Selects the coupling mode for the external frequency modulation signal.

Parameters:

<Coupling> AC | DC
AC
 Uses only the AC signal component of the modulation signal.
DC
 Uses the modulation signal as it is, with AC and DC.
 *RST: AC

Example:

FM:EXT:COUP AC
 selects the coupling mode AC for the external frequency modulation signal.

Manual operation: See "FM External Coupling" on page 248

[:SOURce<hw>]:FM:INTernal:FREQuency <Frequency>

Sets the frequency of the LF signal for FM modulation, see also [:SOURce]:LFOutput:FREQuency on page 738.

Parameters:

<Frequency> float
 Range: full frequency range
 Increment: see the data sheet: Modulation sources > Resolution of frequency setting
 *RST: 1E3

Example:

FM:INT:FREQ 5kHz
 sets the frequency of the LF generator signal to 5 kHz

[:SOURce<hw>]:FM:MODE <Mode>

Selects the mode for the frequency modulation.

Parameters:

<Mode> NORMal
NORMal
 Provides full setting range of modulation bandwidth and FM deviation.
 *RST: NORM

Example:

FM:MODE NORM
 selects normal mode for external frequency modulation.

Manual operation: See "FM Mode" on page 247

[:SOURce<hw>]:FM:SENSitivity?

Queries the input sensitivity of the externally applied signal for frequency modulation. The returned value reports the sensitivity in Hz/V. It is assigned to the voltage value for full modulation of the input signal.

The sensitivity depends on the set [:SOURce<hw>]:FM[:DEViation].

Return values:

<Sensitivity> float
 Range: 0 to max
 Increment: 0.01

Example:

FM:DEV 5E3
 sets a modulation deviation of 5 kHz.
 FM:SENS
 queries the input sensitivity at the external modulation input.
 Response: 5E3
 since the voltage value for full modulation is 1V, the resulting sensitivity is precisely 5000 Hz/V.

Usage: Query only

Manual operation: See "FM Sensitivity" on page 247

[:SOURce<hw>]:FM:SOURce <Source>

Selects the modulation signal source for frequency modulation.

You can use both, the internal and an external modulation signal at a time.

Parameters:**<Source>** INTernal | EXTernal | INT,EXT**INT**

Uses the internally generated signal for modulation. To configure the frequency, use the commands of the [Chapter 7.16.10, "SOURce:LFOutput Subsystem"](#), on page 737 subsystem.

EXT

Uses an externally applied modulation signal. The external signal is input at the EXT MOD connector.

INT,EXT

Uses both, the internal and external modulation signals.

*RST: INT

Example:

FM:SOUR INT

selects the internal modulation source.

Manual operation: See ["FM Source"](#) on page 247**[:SOURce<hw>]:FM:STATe <State>**

Activates frequency modulation.

Note: Activation of FM deactivates phase modulation (PM).**Parameters:****<State>** 0 | 1 | OFF | ON

*RST: 0

Example:

FM:STAT ON

Activates FM modulation.

Manual operation: See ["State"](#) on page 246

7.16.6 SOURce:FREQuency Subsystem

This subsystem contains the commands used to define the frequency settings for the RF sources and sweeps.

[:SOURce<hw>]:FREQuency:CENTer.....	713
[:SOURce<hw>]:FREQuency:LOSCillator:MODE.....	714
[:SOURce<hw>]:FREQuency:LOSCillator:OUTPut:STATe.....	714
[:SOURce<hw>]:FREQuency[:CW FIXed].....	714
[:SOURce<hw>]:FREQuency[:CW FIXed]:RCL.....	715
[:SOURce<hw>]:FREQuency:MANual.....	715
[:SOURce<hw>]:FREQuency:MODE.....	716
[:SOURce<hw>]:FREQuency:MULTiplier.....	717
[:SOURce<hw>]:FREQuency:OFFSet.....	717
[:SOURce<hw>]:FREQuency:PHASe:CONTInuous:STATe.....	717
[:SOURce<hw>]:FREQuency:SPAN.....	718
[:SOURce<hw>]:FREQuency:START.....	718

<code>[:SOURce<hw>]:FREQuency:STOP</code>	719
<code>[:SOURce<hw>]:FREQuency:STEP[:INCRement]</code>	719
<code>[:SOURce<hw>]:FREQuency:STEP:MODE</code>	720

`[:SOURce<hw>]:FREQuency:CENTer <Center>`

Sets the center frequency of the RF sweep range.

The range is defined by this center frequency and the specified `[:SOURce<hw>]:FREQuency:SPAN`, according to the formula:

$$f_{\text{CENTer}} - (f_{\text{SPAN}}/2) \dots f_{\text{CENTer}} + (f_{\text{SPAN}}/2)$$

with:

$$f_{\text{SPAN}} = f_{\text{STOP}} - f_{\text{START}}$$

The center frequency directly relates to the span, and the start and stop frequencies. If you change one of these parameters, the center frequency changes accordingly.

$$f_{\text{CENTer}} = (f_{\text{STOP}} + f_{\text{START}})/2$$

Note: You can select any frequency within the setting range. The range is defined with the parameters `[:SOURce<hw>]:FREQuency:START` and `[:SOURce<hw>]:FREQuency:STOP`.

A defined offset and the multiplier factor affect the sweep frequency range and therefore all correlated parameters. The set frequencies are only absolute values, if the offset = 0 and the multiplication factor = 1. The multiplier multiplies the frequencies accordingly, and the offset ≠ 0 shifts the frequencies corresponding to the set value.

$$300 \text{ kHz} * f_{\text{MULTIplier}} + f_{\text{OFFSet}} \dots f_{\text{max}} * f_{\text{MULTIplier}} + f_{\text{OFFSet}}$$

Parameters:

<code><Center></code>	float
Range:	full frequency range
Increment:	see the data sheet: RF characteristics > Resolution of setting
*RST:	depends on model

Example:

```
FREQ:CENT 400 MHz
```

sets the center frequency for the frequency sweep to 400 MHz.

```
FREQ:SPAN 200 MHz
```

sets a span of 200 MHz. This sets the sweep range to 300 MHz to 500 MHz.

Manual operation: See "Center Freq - Frequency Sweep" on page 266

[:SOURce<hw>] :FREQuency:LOSCillator:MODE <Mode>

Parameters:

<Mode> INTernal | EXTernal | COUPled | ECOupled

INTernal

The signal of the internal local oscillator is used. This mode corresponds to a normal operation.

EXTernal

An external signal is used for path A.

Note: Selection of LO Coupling "External" mode, disables all parameters in the "Frequency/Phase/Ref Osc" dialog of the selected path.

*RST: INTernal

Example:

```
FREQ:LOSC:MODE EXT
sets the LO coupling mode to External.
```

Manual operation: See "[Mode - LO Coupling](#)" on page 214

[:SOURce<hw>] :FREQuency:LOSCillator:OUTPut:STATe <State>

Switches on/off the LO output.

Parameters:

<State> 0 | 1 | OFF | ON

*RST: 0

Example:

```
FREQ:LOSC:OUTP:STAT ON
switches on the LO output state.
```

Manual operation: See "[Out State - LO Coupling](#)" on page 214

[:SOURce<hw>] :FREQuency[:CW|FIXed] <Fixed>

Sets the frequency of the RF output signal.

In CW mode, see [FREQ:MODE CW|FIXed](#), the instrument operates at a fixed frequency.

In sweep mode [FREQ:MODE SWE](#), the value applies to the sweep frequency and the instrument processes the frequency settings in defined sweep steps.

You can enter either a numerical frequency value, or decrease or increase the current frequency step by step with [FREQ UP](#) and [FREQ DOWN](#). The frequency is then increased or decreased by the value `[:SOURce<hw>] :FREQuency:STEP [:INCRement]` in [FREQ:STEP:MODE USER](#).

Note:

A defined offset and the multiplier factor affect the sweep range and therefore all correlated parameters. The set frequencies are only absolute values, if the offset = 0 and the multiplication factor = 1. The multiplier multiplies the frequencies accordingly, and the offset ≠ 0 shifts the frequencies corresponding to the set value.

The actual frequency at the RF output does not change, but rather the value queried with `[[:SOUR]:FREQ?`, according to the formula:

$$f_{\text{FREQ}} = f_{\text{RFout}} * f_{\text{MULTIplier}} + f_{\text{OFFSet}}$$

Correlation: `FREQ` for `FREQ:MODE SWE` is linked to the sweep frequency.

Parameters:

<Fixed>	float
Range:	full frequency range
Increment:	see the data sheet: RF characteristics > Resolution of setting
*RST:	100 MHz

Example: `FREQ 500kHz`
sets the frequency of RF output signal A to 500 kHz.

Manual operation: See "[RF Freq](#)" on page 202

[[:SOURce<hw>]:FREQuency[:CW|FIXed]:RCL <Rcl>

Determines whether the RF frequency value is retained or taken from a loaded instrument configuration, when you recall instrument settings with the command `*RCL`.

Parameters:

<Rcl>	INCLude EXCLude
INCLude	Takes the frequency value of the loaded settings.
EXCLude	Retains the current frequency when an instrument configuration is loaded.
*RST:	INCLude

Example: `FREQ:RCL INCL`
takes the frequency from the loaded instrument configuration.

Manual operation: See "[Exclude Frequency](#)" on page 162

[[:SOURce<hw>]:FREQuency:MANual <Manual>

Determines the frequency and triggers a sweep step manually in [SWE:MODE MAN](#).

Note: You can select any frequency within the setting range. The range is defined with the parameters `[[:SOURce<hw>]:FREQuency:START` and `[[:SOURce<hw>]:FREQuency:STOP`. A defined offset and the multiplier factor affect the sweep range and therefore all correlated parameters. The set frequencies are only absolute values, if the offset = 0 and the multiplication factor = 1. The multiplier multiplies the frequencies accordingly, and the offset ≠ 0 shifts the frequencies corresponding to the set value.

$$f_{\text{START}} * f_{\text{MULTIplier}} + f_{\text{OFFset}} \dots f_{\text{STOP}} * f_{\text{MULTIplier}} + f_{\text{OFFset}}$$

Parameters:

<Manual> float
 Range: full frequency range
 Increment: see the data sheet: RF characteristics > Resolution of setting

Example:

SWE:MODE MAN
 sets the Step sweep mode.

Example:

FREQ:MODE SWE
 sets the frequency sweep mode. The sweep start frequency is output.
 FREQ:MAN UP
 triggers the next higher sweep step.
 FREQ:MAN 500MHz
 outputs 500 MHz RF frequency (must e within the sweep frequency range).
 FREQ:MAN DOWN
 triggers the next lower sweep step relative to 500 MHz.

Manual operation: See "[Current Freq - Frequency Sweep](#)" on page 266

[:SOURce<hw>]:FREQuency:MODE <Mode>

Selects the frequency mode for the generating the RF output signal. The selected mode determines the parameters to be used for further frequency settings.

Parameters:

<Mode>

CW | FIXed | SWEep | LIST

CW|FIXed

Sets the fixed frequency mode.

CW and FIXed are synonyms. The instrument operates at a defined frequency, set with command [:SOURce<hw>] : FREQuency [:CW | FIXed] ..

SWEep

Sets the sweep mode. The instrument processes the frequency settings in defined sweep steps. To determine the corresponding frequency values, use the commands [:SOURce<hw>] : FREQuency:START and [:SOURce<hw>] : FREQuency:STOP, or [:SOURce<hw>] : FREQuency:CENTer and [:SOURce<hw>] : FREQuency:SPAN and [:SOURce<hw>] : FREQuency:MANual.

LIST

Sets the list mode. The instrument processes the frequency and level settings by means of values loaded from a list. To configure the list mode settings use the commands of the [SOURce:LIST Subsystem](#)

*RST: CW

Example: `FREQ:MODE SWE`
sets the SWEep mode.

Manual operation: See ["State - Frequency Sweep"](#) on page 262

[:SOURce<hw>]:FREQuency:MULTIplier <Multiplier>

Sets the value for the multiplication factor of a subsequent downstream instrument.

Parameters:

<Multiplier> float
Range: 1 to dynamic
Increment: 0.001
*RST: 1

Example: `FREQ:MULT 1`
sets the multiplication factor to 1.

Manual operation: See ["Multiplier"](#) on page 203

[:SOURce<hw>]:FREQuency:OFFSet <Offset>

Sets the frequency offset of a downstream instrument, for example a mixer.

If you have specified an OFFSet and / or a MULTIplier factor, the actual frequency at the RF output does not change, but rather the value queried with `[:SOUR]:FREQ?`, according to the following formula:

$$f_{\text{FREQ}} = f_{\text{RFout}} * f_{\text{MULTIplier}} + f_{\text{OFFSet}}$$

Parameters:

<Offset> float
Increment: 0.01
*RST: 0

Example: `FREQ:OFFS 500kHz`
sets the frequency offset to 500 kHz.

Manual operation: See ["Offset"](#) on page 203

[:SOURce<hw>]:FREQuency:PHASe:CONTInuous:STATe <State>

Activates/deactivates phase continuous frequency settings. For a given RF frequency setting, phase continuous frequency changes are possible in a limited frequency range (see [Chapter 5.5.3.2, "Phase Continuous Frequency"](#), on page 205).

The output sinewave is phase continuous, i.e there will be no phase discontinuity or glitch when changing the frequency.

Note: Restricted structure of command line. As long as phase continuous mode is active, only one command in a command line is processed. A second command in the command line will be ignored.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 0

Example:

FREQ:PHAS:CONT:STAT ON
 activates phase continuous mode.

Manual operation: See "[Phase Continuous Active](#)" on page 208

**[:SOURce<hw>]:FREQUENCY:SPAN **

Determines the extent of the frequency sweep range. This setting in combination with the center frequency setting ([:SOURce<hw>]:FREQUENCY:CENTer) defines the sweep range.

This parameter is related to the start and stop frequencies. If you change the frequency, the span changes accordingly.

$$f_{\text{SPAN}} = f_{\text{STOP}} - f_{\text{START}}$$

$f_{\text{START}} > f_{\text{STOP}}$ is permitted.

Parameters:

 float
 Range: full frequency range
 Increment: see the data sheet: RF characteristics > Resolution of setting
 *RST: 400E6

Example:

FREQ:CENT 400 MHz
 sets the center frequency of the frequency sweep to 400 MHz.
 FREQ:SPAN 200 MHz
 sets a span of 200 MHz. This sets the sweep range to 300 MHz to 500 MHz.

Manual operation: See "[Span - Frequency Sweep](#)" on page 266

[:SOURce<hw>]:FREQUENCY:START <Start>

Sets the start frequency for the RF sweep.

This parameter relates to the center frequency and span. If you change the frequency, these parameters change accordingly.

$f_{\text{START}} > f_{\text{STOP}}$ is permitted.

$$f_{\text{START}} = (f_{\text{CENTer}} - f_{\text{SPAN}}/2).$$

Note: A defined offset and the multiplier factor affect the sweep range and therefore all correlated parameters. The set frequencies are only absolute values, if the offset = 0 and the multiplication factor = 1. The multiplier multiplies the frequencies accordingly, and the offset $\neq 0$ shifts the frequencies corresponding to the set value.

$$f_{\text{START}} * f_{\text{MULTIplier}} + f_{\text{OFFset}} \dots f_{\text{STOP}} * f_{\text{MULTIplier}} + f_{\text{OFFset}}$$

Parameters:

<Start>	float
Range:	full frequency range
Increment:	see the data sheet: RF characteristics > Resolution of setting
*RST:	100 MHz

Example:

```
FREQ:START 1 MHz
sets the start frequency for the frequency sweep to 1 MHz.
FREQ:STOP 2 GHz
sets the stop frequency for the frequency sweep to 2 GHz.
```

Manual operation: See ["Start Freq - Frequency Sweep"](#) on page 265

[:SOURce<hw>]:FREQuency:STOP <Stop>

Sets the stop frequency for the RF sweep.

This parameter is related to the center frequency and span. If you change the frequency, these parameters change accordingly.

$f_{\text{START}} > f_{\text{STOP}}$ is permitted.

$$f_{\text{STOP}} = (f_{\text{CENTer}} + f_{\text{SPAN}/2}).$$

Note: A defined offset affects the sweep range and consequently all correlating parameters. The set frequencies are only absolute values, if the Offset = 0. Offset ≠ 0 shifts the frequencies according to the offset value.

$$f_{\text{START}} * f_{\text{MULTIplier}} + f_{\text{OFFSet}} \dots f_{\text{STOP}} * f_{\text{MULTIplier}} + f_{\text{OFFSet}}$$

Parameters:

<Stop>	float
Range:	full frequency range
Increment:	see the data sheet: RF characteristics > Resolution of setting
*RST:	500 MHz

Example:

```
FREQ:STOP 2 GHz
sets the stop frequency for the frequency sweep to 2 GHz.
FREQ:STAR 1 MHz
sets the start frequency for the frequency sweep to 1 MHz.
```

Manual operation: See ["Stop Freq - Frequency Sweep"](#) on page 266

[:SOURce<hw>]:FREQuency:STEP[:INCRement] <Increment>

Sets the step width for [FREQ:STEP:MODE USER](#).

To adjust the frequency step by step with this step size, use the `FREQ:UP` and `FREQ:DOWN` commands.

Note: This value also applies to the step width of the rotary knob of the instrument and increases or decreases the frequency accordingly, when you work in user-defined step mode.

Parameters:

<Increment> float
 Range: full frequency range
 Increment: see the data sheet: RF characteristics > Resolution of setting
 *RST: 1E6

Example: `FREQ:STEP 50 kHz`
 sets the step width for the frequency setting to 50 kHz.

Manual operation: See "[Variation Step](#)" on page 204

[[:SOURce<hw>]:FREQuency:STEP:MODE <Mode>

Activates (USER) or deactivates (DECimal) the user-defined step width used when varying the frequency value with the frequency values UP/DOWN. The command is linked to the command "Variation Active" for manual control, i.e. the command also activates/deactivates the user-defined step width used when varying the frequency value with the rotary knob.

Parameters:

<Mode> DECimal | USER
 *RST: DECimal

Example: `FREQ:STEP 50 kHz`
 sets the step width for the frequency setting to 50 kHz.
`FREQ:STEP:MODE USER`
 activates this step width for frequency variation with the rotary knob (manual control) and with frequency values UP/DOWN (remote control).

Manual operation: See "[Variation Active](#)" on page 204

7.16.7 SOURce:INPut Subsystem

The SOURce:INPut subsystem contains the commands for configuring the inputs for trigger, data and control signals. A common trigger threshold and input impedance is effective for all trigger and control signal inputs.

The settings influence the digital modulations, the generation of waveforms or multicarrier signals, and all digital standards. Irrespective of this, a common threshold and input impedance is effective for the serial and parallel data input (Path A only). These data sources are available for digital modulation ("Custom Digital Modulation").

[:SOURce]:INPut:DATA:IMPedance	721
[:SOURce]:INPut:DATA:THReshold	721
[:SOURce<hw>]:INPut:MODext:IMPedance	721
[:SOURce]:INPut:TRIGger:BBANd:SLOPe	722

[:SOURce]:INPut:TRIGger:IMPedance.....	722
[:SOURce]:INPut:TRIGger:LEVel.....	723
[:SOURce]:INPut:TRIGger:SLOPe.....	723

[:SOURce]:INPut:DATA:IMPedance <Impedance>

Sets the impedance of all data inputs.

The setting affects the serial data input DATA at the front of the instrument and the serial data inputs DATA at the AUX I/O interface at the rear of the instrument.

Parameters:

<Impedance> G50 | G1K
 *RST: G1K

Example: INP:DATA:IMP G50
 all data inputs are set to 50 ohm to ground.

Manual operation: See "[Impedance Data Input](#)" on page 142

[:SOURce]:INPut:DATA:THReshold <Threshold>

Sets the high/low threshold of the data inputs in the baseband section. In the case of positive polarity, this threshold determines the point as of which a signal is high (active) or low (inactive).

The setting affects the serial data input DATA at the front of the instrument and the serial data inputs DATA at the AUX I/O interface at the rear of the instrument.

Parameters:

<Threshold> float
 Range: 0.01 to 2
 Increment: 0.01
 *RST: 1
 Default unit: V

Example: INP:DATA:THR 1 V
 a high/low threshold of 1 volt is set at all data inputs of the baseband section. The signal is high (active) for a signal voltage of 1 volt and higher.

Manual operation: See "[Threshold Data Input](#)" on page 142

[:SOURce<hw>]:INPut:MODext:IMPedance <Impedance>

Sets the impedance for an externally applied modulation signal.

Parameters:

<Impedance> HIGH | G50
HIGH
 > 100 kOhm to ground
G50
 50 Ohm to ground
 (requires the extended synthesis assembly (SynEx))
 *RST: HIGH

Example:

INP:MOD:IMP HIGH
 sets > 100 kOhm to ground.

Manual operation: See ["External Input Impedance"](#) on page 244

[:SOURce]:INPut:TRIGger:BBANd:SLOPe <Slope>

Sets the active slope of an externally applied trigger signal at the TRIGGER connectors. The setting is effective for both connectors at the same time.

Parameters:

<Slope> NEGative | POSitive
 *RST: POSitive

Example:

INP:TRIG:BBAN:SLOP NEG
 activates the falling slope of the external trigger signal at the TRIGGER connectors.

Manual operation: See ["Baseband Trigger Input Slope"](#) on page 143

[:SOURce]:INPut:TRIGger:IMPedance <Impedance>

The command sets the impedance of the trigger and control signal inputs and affects:

- TRIGGER inputs
- CLOCK inputs
- CW, BURST, and LEV_ATT inputs (AUX I/O connector)

Parameters:

<Impedance> G50 | G1K
G1K
 1 kOhm to ground
G50
 50 Ohm to ground
 *RST: G1K

Example:

INP:TRIG:IMP G50
 all trigger and control signal inputs are set to 50 ohm to ground.
 This setting is recommended in the case of high clock rates.

Manual operation: See ["Impedance Trigger/Control Input"](#) on page 142

[[:SOURce]:INPut:TRIGger:LEVel <Level>

Sets the high/low threshold of the trigger and control signal inputs in the baseband section. In the case of positive polarity, this threshold determines the point as of which a signal is high (active) or low (inactive).

The command affects:

- TRIGGER inputs
- CLOCK inputs
- CW, BURST, and LEV_ATT inputs (AUX I/O connector)

Parameters:

<Level> float
 Range: 0.01 to 2
 Increment: 0.01
 *RST: 1
 Default unit: V

Example:

INP:TRIG:LEV 1 V
 a high/low threshold of 1 volt is set at all trigger and control signal inputs of the baseband section. In the case of positive polarity, the signal is high (active) for a signal voltage of 1 volt and higher.

Manual operation: See ["Threshold Trigger/Control Input"](#) on page 142

[[:SOURce]:INPut:TRIGger:SLOPe <Slope>

Sets the polarity of the active slope of an externally applied trigger signal at the trigger input (BNC connector at the rear of the instrument).

Parameters:

<Slope> NEGative | POSitive
 *RST: POSitive

Example:

INP:TRIG:SLOP NEG
 activates the falling slope of the external trigger signal at the trigger input.

Manual operation: See ["Instrument Trigger Input Slope"](#) on page 143

7.16.8 SOURce:IQ Subsystem

This subsystem contains the commands for checking the I/Q modulation.

[:SOURce<hw>]:IQ:CREStfactor	724
[:SOURce<hw>]:IQ:GAIN	724
[:SOURce<hw>]:IQ:IMPAirment:IQRatio[:MAGNitude]	725
[:SOURce<hw>]:IQ:IMPAirment:LEAKage:I	725
[:SOURce<hw>]:IQ:IMPAirment:LEAKage:Q	725
[:SOURce<hw>]:IQ:IMPAirment:QUADrature[:ANGLE]	726

<code>[:SOURce<hw>]:IQ:IMPairment[:STATe]</code>	726
<code>[:SOURce<hw>]:IQ:SOURce</code>	726
<code>[:SOURce<hw>]:IQ:STATe</code>	726
<code>[:SOURce<hw>]:IQ:SWAP[:STATe]</code>	727
<code>[:SOURce<hw>]:IQ:WBSTate</code>	727
<code>[:SOURce<hw>]:BB:IQGain</code>	727

`[:SOURce<hw>]:IQ:CREStfactor <CrestFactor>`

Sets the crest factor of the external analog signal.

Parameters:

`<CrestFactor>` float
 Range: 0 to 35
 Increment: 0.01
 *RST: 0
 Default unit: dB

Example:

`IQ:CRESt 10`
 specifies a crest factor of 10 dB for the external analog signal.

Manual operation: See "[Crest Factor - I/Q Mod](#)" on page 287

`[:SOURce<hw>]:IQ:GAIN <Gain>`

Sets the baseband gain for the external analog wideband I/Q signal. Thus, the modulation of the I/Q modulator can be optimized for any measurement requirement. The gain settings for an internal or external baseband signal are performed with command `SOUR:BB:IQGain`.

Parameters:

`<Gain>` DBM3 | DB0 | DB3 | DB6 | AUTO

DBM3

Activates 0 dB gain.
 With this setting, signal distortions are minimized.

DB0

Activates 0 dB gain (standard settings).

DB3

Activates 0 dB gain.
 This setting is recommended for 3GPP signals with very high adjacent channel power ratio (ACPR).

DB6

Activates 0 dB gain.
 With this setting, signal noise is minimized.

*RST: DB3

Example:

`IQ:SOUR ANAL`
 selects an external analog signal as the input signal for the I/Q modulator. The signal must be applied at the inputs I and Q.

Example: IQ:GAIN DB0
sets gain 0 dB (standard).

Manual operation: See "[Baseband Gain-Gain - I/Q Mod](#)" on page 287

[:SOURce<hw>]:IQ:IMPairment:IQRatio[:MAGNitude] <Magnitude>

This command sets the ratio of I modulation to Q modulation (amplification “imbalance”).

Parameters:

<Magnitude> float
Range: -1.0dB to +1.0dB
Increment: 0.005dB
*RST: 0
Default unit: 0dB

Example: IQ:IMP:IQR 0.5 dB
sets the imbalance.

Manual operation: See "[Gain Imbalance - I/Q Mod](#)" on page 285

[:SOURce<hw>]:IQ:IMPairment:LEAKage:I <I>

Sets the carrier offset for the I-channel of the I/Q modulation.

Parameters:

<I> float
Range: -10 to 10
Increment: 0.01
*RST: 0
Default unit: PCT

Example: IQ:IMP:LEAK:I 3 PCT
sets the leakage for the I-channel to 3 percent.

Manual operation: See "[Offset - I/Q Mod](#)" on page 285

[:SOURce<hw>]:IQ:IMPairment:LEAKage:Q <Q>

Sets the carrier leakage amplitude for the Q-channel of the I/Q modulation.

Parameters:

<Q> float
Range: -10 to 10
Increment: 0.01
*RST: 0
Default unit: PCT

Example: IQ:IMP:LEAK:Q 3 PCT
sets the leakage for the Q-channel to 3 percent.

Manual operation: See "[Offset - I/Q Mod](#)" on page 285

[[:SOURce<hw>]:IQ:IMPairment:QUADrature[:ANGLe] <Angle>

Sets the quadrature offset for the I/Q modulation.

Parameters:

<Angle> float
 Range: -10 to 10
 Increment: 0.01
 *RST: 0
 Default unit: DEG

Example: IQ:IMP:QUAD:ANGL -5DEG
 sets the quadrature offset to -5 degrees.

Manual operation: See "[Quadrature Offset - I/Q Mod](#)" on page 285

[[:SOURce<hw>]:IQ:IMPairment[:STATe] <State>

Activates/deactivates the three impairment or correction values LEAKage, QUADrature and IQRatio for the analog signal in the I/Q modulator.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 0

Example: IQ:IMP OFF
 deactivates I/Q impairment.

Manual operation: See "[State - Impairments I/Q Mod](#)" on page 284

[[:SOURce<hw>]:IQ:SOURce <Source>

Selects the input signal for the I/Q modulator.

Selecting ANALog (Wideband I/Q In) switches off:

- SOURce:AM:STATe OFF
- SOURce:BBAM:STATe OFF
- SOURce:BB:DM:STATe OFF
- SOURce:BB:<Dig. Standard>:STATe OFF

Parameters:

<Source> BASEband | ANALog | DIFFerential

Example: IQ:SOUR ANAL
 selects an external analog signal as the input signal. The signal must be applied at the inputs I and Q.

Manual operation: See "[IQ Source - I/Q Mod](#)" on page 284

[[:SOURce<hw>]:IQ:STATe <State>

Activates I/Q modulation.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 0

Example:

`IQ:STAT ON`
 activates I/Q modulation.

Manual operation: See "[State - I/Q Mod](#)" on page 284

[:SOURce<hw>]:IQ:SWAP[:STATe] <State>

When set to ON, this command swaps the I and Q channel.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 0

Example:

`IQ:SWAP ON`
 swaps the I and Q channel.

Manual operation: See "[I/Q-Swap - I/Q Mod](#)" on page 285

[:SOURce<hw>]:IQ:WBSTate <WbState>

Selects optimized setting for wideband modulation signals (>5 MHz) (State ON).

Parameters:

<WbState> 0 | 1 | OFF | ON
 *RST: 0

Example:

`IQ:WBST ON`
 activates optimized setting for wideband signals.

Manual operation: See "[I/Q-Wideband - I/Q Mod](#)" on page 286

[:SOURce<hw>]:BB:IQGain <Iqgain>

This command specifies the baseband gain for the internal baseband signal.

Thus, the modulation of the I/Q modulator can be optimized for any measurement requirement. The gain settings for an external analog wideband signal (**Analog Wideband I/Q In**) are performed with command `:SOURce:IQ:GAIN`

Parameters:

<lqgain> AUTO | DBM3 | DB0 | DB3 | DB6

AUTO

Activates automatic setting. The modulation is automatically optimized for the internally set baseband signal

DBM3

Activates 0 dB gain.

With this setting, signal distortions are minimized.

DB0

Activates 0 dB gain (standard settings).

DB3

Activates 0 dB gain.

DB6

Activates 0 dB gain.

With this setting, signal noise is minimized.

Increment: 0.01 dB

*RST: AUTO

Example:

`IQ:SOUR BAS`

selects the internal baseband signal as the input signal of the I/Q modulator.

`BB:IQG DB6`

sets gain 6dB (best for low noise).

Manual operation: See "[Baseband Gain-Gain - I/Q Mod](#)" on page 287

7.16.9 SOURce:IQ:OUTPut Subsystem

7.16.9.1 Analog I/Q Outputs

This subsystem contains the commands for configuring the differential output.

For information about the required options, see [Chapter 5.7.3.2, "Analog I/Q Output"](#), on page 302.

<code>[:SOURce<hw>]:IQ:OUTPut[:ANALog]:BIAS:COUPling[:STATe]</code>	729
<code>[:SOURce<hw>]:IQ:OUTPut[:ANALog]:BIAS:I</code>	729
<code>[:SOURce<hw>]:IQ:OUTPut[:ANALog]:BIAS:Q</code>	729
<code>[:SOURce<hw>]:IQ:OUTPut[:ANALog]:OFFSet:I</code>	729
<code>[:SOURce<hw>]:IQ:OUTPut[:ANALog]:OFFSet:Q</code>	729
<code>[:SOURce<hw>]:IQ:OUTPut[:ANALog]:BIAS:OPTimization[:RF]:STATe</code>	730
<code>[:SOURce<hw>]:IQ:OUTPut:LEVel</code>	730
<code>[:SOURce<hw>]:IQ:OUTPut[:ANALog]:POWer:PEP:RESult?</code>	730
<code>[:SOURce<hw>]:IQ:OUTPut[:ANALog]:MODE</code>	731
<code>[:SOURce<hw>]:IQ:OUTPut[:ANALog]:TYPE</code>	731

```
[ :SOURce<hw> ] : IQ : OUTPut [ : ANALog ] : BIAS : COUPling [ : STATE ] <State>
```

Couples the bias setting of the I and Q signal components.

If coupling is activated, settings made for the I-signal component ([: SOURce<hw>] : IQ : OUTPut [: ANALog] : BIAS : I) automatically applies to the Q-signal ([: SOURce<hw>] : IQ : OUTPut [: ANALog] : BIAS : Q)

Parameters:

```
<State>          0 | 1 | OFF | ON
*RST:            0
```

Example: IQ : OUTP : BIAS : ANAL : COUP ON
activates I/Q bias coupling.

Manual operation: See "Couple IQ Bias" on page 304

```
[ :SOURce<hw> ] : IQ : OUTPut [ : ANALog ] : BIAS : I <I>  
[ :SOURce<hw> ] : IQ : OUTPut [ : ANALog ] : BIAS : Q <Q>
```

Specifies the amplifier bias of the respective I/Q- component.

Parameters:

```
<Q>              float
                  Range:    -3.6 to 3.6
                  Increment: 0.002
                  *RST:     0
```

Example: IQ : OUTP : ANAL : BIAS : Q 0.1 V
sets a bias of 100 mV for the Q-signal.

Manual operation: See "Bias (EMF)" on page 304

```
[ :SOURce<hw> ] : IQ : OUTPut [ : ANALog ] : OFFSet : I <I>  
[ :SOURce<hw> ] : IQ : OUTPut [ : ANALog ] : OFFSet : Q <Q>
```

Valid only for output type Differential (IQ : OUTP : ANAL : TYPE DIFF).

Sets an offset between the inverting and non-inverting output.

Parameters:

```
<Q>              float
                  Range:    -0.3 to 0.3
                  Increment: 1E-4
                  *RST:     0
```

Example: IQ : OUTP : ANAL : TYPE DIFF
the I/Q-signal components are output differential
: IQ : OUTP : ANAL : OFFS : Q 0.05 V
sets an offset of 50 mV for the I-signal.

Manual operation: See "Offset (EMF)" on page 305

[[:SOURce<hw>]:IQ:OUTPut[:ANALog]:BIAS:OPTimization[:RF]:STATe <State>

Activates/deactivates optimization of level accuracy and imbalance for RF Output. Level accuracy and imbalance can be either optimized for RF output (active) or for differential outputs (not active).

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 1

Example: IQ:OUTP:ANAL:BIAS:OPT:STAT ON
 activates optimization for RF output.

Manual operation: See "[Optimize I/Q Signals for RF Output](#)" on page 302

[[:SOURce<hw>]:IQ:OUTPut:LEVel <Level>

Sets the off-load voltage.

Single ended Output:

- Value range: 20 mV ... 2 V EMF.
- The maximum overall output voltage ($\text{SOUR:IQ:OUTP:POW:PEP} + \text{SOUR:IQ:OUTP:BIAS:I|Q}$) is 3.7 V

Differential Output:

- Value range: 40 mV ... 4 V EMF.
- The maximum overall output voltage ($0.5 * \text{SOUR:IQ:OUTP:POW:PEP} + \text{SOUR:IQ:OUTP:BIAS:I|Q} + 0.5 * \text{SOUR:IQ:OUTP:OFFS:I|Q}$) is 3.7 V

Parameters:

<Level> float
 Range: 0.02 to 4
 Increment: 0.001
 *RST: 1
 Default unit: V

Example: SOURce1:IQ:OUTPut:LEVel 2
 sets a off-load level of 2 V

Manual operation: See "[I/Q Level Vp \(EMF\)](#)" on page 304

[[:SOURce<hw>]:IQ:OUTPut[:ANALog]:POWer:PEP:RESult?

Displays the resulting output off-load voltage of both signal components at the rear panel.

Return values:

<Result> float
 Range: 0.02 to 4
 Increment: 0.001
 *RST: 1

Usage: Query only

Manual operation: See "[Resulting I/Q Level Vp \(EMF\)](#)" on page 304

[:SOURce<hw>] : IQ : OUTPut [: ANALog] : MODE <Mode>

Selects the mode for setting the outputs.

Selection **FIXed** locks all `IQ:OUTPut`-commands except for `IQ:OUTPut:TYPE` and sets them to predefined values (*RST).

Parameters:

<Mode> **FIXed** | **VARiable** | **VATTenuated**

FIXed

The settings are fixed and cannot be changed.

VARiable

The settings can be changed (command `[:SOURce<hw>] : IQ : OUTPut : LEVel` on page 730).

*RST: **FIXed**

Options: **VARiable** requires option R&S SMJ-B16

Manual operation: See "[Mode](#)" on page 303

[:SOURce<hw>] : IQ : OUTPut [: ANALog] : TYPE <Type>

Selects an input type.

Parameters:

<Type> **SINGle** | **DIFFerential**

SINGle

The I/Q-signal components are output single-ended.

DIFFerential

The I/Q-signal components are output differential.
 A bias can be defined.

*RST: **SINGle**

Example:

`IQ:OUTP:ANAL:TYPE DIFF`

the I/Q-signal components are output differential.

Manual operation: See "[I/Q Output Type](#)" on page 302

7.16.9.2 Digital I/Q Outputs

This subsystem contains the commands for configuring the digital I/Q output. The digital signal can be output with the aid of a standardized (LVDS) digital user interface.

For information about the required options, see [Chapter 5.7.3.3, "Digital I/Q Output Settings"](#), on page 306.

<code>[SOURce<hw>]:IQ:OUTPut:DIGital:CDEvice?</code>	732
<code>[SOURce]:IQ:OUTPut:DIGital:OFLow:HOLD:RESet</code>	732
<code>[SOURce]:IQ:OUTPut:DIGital:OFLow:HOLD:STATe?</code>	732
<code>[SOURce]:IQ:OUTPut:DIGital:OFLow:STATe?</code>	733
<code>[SOURce<hw>]:IQ:OUTPut:DIGital:PON</code>	733
<code>[SOURce<hw>]:IQ:OUTPut:DIGital:POWer:LEVel</code>	733
<code>[SOURce<hw>]:IQ:OUTPut:DIGital:POWer:PEP</code>	734
<code>[SOURce<hw>]:IQ:OUTPut:DIGital:POWer:STEP[:INCRement]</code>	734
<code>[SOURce<hw>]:IQ:OUTPut:DIGital:POWer:STEP:MODE</code>	735
<code>[SOURce<hw>]:IQ:OUTPut:POWer:VIA</code>	735
<code>[SOURce<hw>]:IQ:OUTPut:DIGital:SRATe</code>	735
<code>[SOURce<hw>]:IQ:OUTPut:DIGital:SRATe:FIFO[:STATus]?</code>	736
<code>[SOURce<hw>]:IQ:OUTPut:DIGital:SRATe:SOURce</code>	736
<code>[SOURce<hw>]:IQ:OUTPut:DIGital:STATe</code>	737

`[SOURce<hw>]:IQ:OUTPut:DIGital:CDEvice?`

Queries the ID of a connected Rohde&Schwarz instrument.

Return values:

<CDevice> string

Example:

`IQ:OUTP:DIG:CDEV?`
queries the connected device ID.

Usage:

Query only

Manual operation: See ["Connected Device - Digital I/Q Out"](#) on page 309

`[SOURce]:IQ:OUTPut:DIGital:OFLow:HOLD:RESet`

Resets the overflow hold state and LED.

Example:

`SOUR:IQ:OUTP:DIG:OFL:HOLD:RESet`
resets the overflow hold state.

Usage:

Event

Manual operation: See ["Reset - Digital I/Q Out"](#) on page 309

`[SOURce]:IQ:OUTPut:DIGital:OFLow:HOLD:STATe?`

Queries an overflow since the last reset.

To reset the overflow hold state, use one of the following:

- send the command `[SOURce]:IQ:OUTPut:DIGital:OFLow:HOLD:RESet`

- start a new signal generation
- set a new output level

Return values:

<State> 0 | 1 | OFF | ON
 *RST: 0

Example:

SOUR:IQ:OUTP:DIG:OFL:HOLD:STAT?
 Response: "0" (no overflow)

Usage:

Query only

Manual operation: See ["Overflow Hold - Digital I/Q Out"](#) on page 309

[:SOURce]:IQ:OUTPut:DIGital:OFLow:STATe?

Queries the current overflow state of the output signal and indicates that the I/Q output signal is currently clipped.

Return values:

<State> 0 | 1 | OFF | ON
 *RST: 0

Example:

IQ:OUTP:DIG:OFL:STAT?
 queries the overflow state.
 Response: "0" (no overflow).

Usage:

Query only

Manual operation: See ["Overflow - Digital I/Q Out"](#) on page 309

[:SOURce<hw>]:IQ:OUTPut:DIGital:PON <Pon>

Selects the state which the digital I/Q Output is to assume after the instrument is switched on.

Parameters:

<Pon> OFF | UNCHanged
 *RST: OFF

Example:

SOURce:IQ:OUTPut:DIGital:PON OFF
 deactivates the output when the instrument is switched on.

Manual operation: See ["Power-On State - Digital I/Q Out"](#) on page 309

[:SOURce<hw>]:IQ:OUTPut:DIGital:POWER:LEVEL <Level>

Sets the rms level of the digital output signal.

Parameters:

<Level> float
 Range: -90 to 0
 Increment: 0.01
 *RST: 0
 Default unit: dBFS

Example:

`IQ:OUTP:DIG:POW:LEV -10`
 sets the output signal level to -10 dBFS.

Manual operation: See "[Level - Digital I/Q Out](#)" on page 308

[:SOURce<hw>]:IQ:OUTPut:DIGital:POWer:PEP <Pep>

Sets the peak envelope power of the digital output signal (PEP).

Parameters:

<Pep> float
 Range: -90 to 0
 Increment: 0.01
 *RST: 0
 Default unit: dBFS

Example:

`IQ:OUTP:DIG:POW:PEP -10`
 sets the signal output level to -10 dBFS.

Manual operation: See "[Peak Level - Digital I/Q Out](#)" on page 308

[:SOURce<hw>]:IQ:OUTPut:DIGital:POWer:STEP[:INCRement] <Increment>

Sets the step width for the frequency setting if the frequency values UP/DOWN are used and variation mode `SOUR:IQ:OUTP:DIG:POW:STEP:MODE USER` is selected. The command is linked to "Variation Step" for manual operation, i.e. the command also sets the step width of the rotary knob for "Variation Active ON".

Parameters:

<Increment> float
 Range: 0 to 100
 Increment: 0.01
 *RST: 1
 Default unit: dB

Example:

`SOUR:IQ:OUTP:ANAL:POW:STEP:INCR 50 mV`
 sets the step width for the level setting to 50 mV.

Manual operation: See "[Variation Step - Digital I/Q Out](#)" on page 308

[:SOURce<hw>]:IQ:OUTPut:DIGital:POWER:STEP:MODE <Mode>

Activates (USER) or deactivates (DECimal) the user-defined step width used when varying the level value with the level values UP/DOWN. The command is linked to setting "Variation Active" for manual operation, i.e. the command also activates/deactivates the user-defined step width used when varying the level value with the rotary knob.

Parameters:

<Mode> DECimal | USER
 *RST: DECimal

Example:

`IQ:OUTP:DIG:POW:STEP:MODE USER`
 activates the step width for level variation with the rotary knob (manual operation) and with level values UP/DOWN (remote control).

Manual operation: See "[Variation Active - Digital I/Q Out](#)" on page 308

[:SOURce<hw>]:IQ:OUTPut:POWER:VIA <Via>

Activates the selected I/Q output level entry fields of the currently selected signal path in the status bar.

Parameters:

<Via> PEP | LEVel

PEP

The signal level is expressed in terms of a peak envelope power value (PEP). The level entry fields and the corresponding units are displayed in the status bar.

LEVel

The signal level is expressed in terms of a rms value. The level entry field and the corresponding units are displayed in the status bar.

*RST: PEP

Example:

`IQ:OUTP:POW:VIA PEP`
 the I/Q-signal level is set via PEP for the signal of path A.

Manual operation: See "[Set Level Via](#)" on page 308

[:SOURce<hw>]:IQ:OUTPut:DIGital:SRATe <SRate>

Using the sample rate source User, the command sets the sample rate value of the output signal. This command is not active for external clock sources

Parameters:

<SRate> float
 Range: 400 to max
 Increment: 0.001
 *RST: 1E8

- Example:** IQ:OUTP:DIG:SRAT:MODE USER
with sample rate source User the internally generated clock reference signal is selected.
IQ:OUTP:DIG:SRAT 100 MHz
the sample rate for the output signal is set to 100 MHz.
- Manual operation:** See "[Sample Rate Value - Digital I/Q Output](#)" on page 307

[:SOURce<hw>]:IQ:OUTPut:DIGital:SRATe:FIFO[:STATus]?

Queries the state of the signal transmission.

Return values:

- <Status> OK | OFLow | URUN
- OK**
Resampling is working properly.
- OFLow (Overflow)**
The external sample rate frequency is too high which causes an overflow in signal transmission.
- URUN (Underrun)**
The external sample rate is too low which causes an underrun in signal transmission.
- *RST: OK

- Example:** SOUR:BBIN:SRAT:FIFO:STATus?
queries the FIFO Status of the sample rate.

Usage: Query only

Manual operation: See "[FIFO Status - Digital I/Q Output](#)" on page 307

[:SOURce<hw>]:IQ:OUTPut:DIGital:SRATe:SOURce <Source>

Selects the source for setting the sample rate of the digital I/Q output signal.

Note: With a connected R&S EX-IQ-Box either the internal clock source (User defined) or an external clock (Digital I/Q In) can be selected in the settings dialog of the R&S EX-IQ-Box. Therefore, the sample rate source is only indicated in this field.

Parameters:

- <Source> USER | DIN | DOUT | USER | DOUT
- USER**
The internally generated clock reference signal is used. The sample rate is calculated and displayed in the field "Value".
- DOUT**
An external clock reference signal is used. The clock signal is directly fed in via pin CLK2 of the digital output interface (option R&S SMJ-B18, Digital I/Q Out). The sample rate is displayed in the field "Value".
- *RST: USER

Example: `IQ:OUTP:DIG:SRAT:SOUR USER`
the internally generated clock reference signal is selected.

Manual operation: See ["Sample Rate Source - Digital I/Q Output"](#) on page 307

[:SOURce<hw>]:IQ:OUTPut:DIGital:STATe <State>

Switches on and off the digital I/Q output signals.

Parameters:

<State> 0 | 1 | OFF | ON
*RST: 0

Example: `IQ:OUTP:DIG:STAT ON`
the digital I/Q output signals of path A are activated.

Manual operation: See ["State - Digital I/Q Output"](#) on page 306

7.16.10 SOURce:LFOuTput Subsystem

The `SOURce:LFOuTput` subsystem contains the commands for setting the LF signal source in CW and Sweep mode and for analog modulation.

Example

The following example shows how to set an LF sweep.

1. Set the sweep range.
`LFOuTput:FREQuency:STARt 4 kHz`
`LFOuTput:FREQuency:STOP 10 kHz`
2. Select linear or logarithmic sweep spacing.
`LFOuTput:SWEep[:FREQuency]:SPACIng LIN`
3. Set the step width and dwell time.
`LFOuTput:SWEep[:FREQuency]:STEP[:LINear] 100 Hz`
`LFOuTput:SWEep[:FREQuency]:DWELl 20 ms`
4. Determine the sweep mode.
`LFOuTput:SWEep:MODE AUTO`
5. Determine the trigger.
`TRIGger0:SOURce SINGLE`
6. Activate the sweep.
`LFOuTput:FREQuency:MODE SWEep`
7. Trigger the sweep (depending on the mode).
`LFOuTput:SWEep:EXECute`

<code>[:SOURce]:LFOOutput:FREQUency</code>	738
<code>[:SOURce<hw>]:LFOOutput:FREQUency:MANual</code>	738
<code>[:SOURce<hw>]:LFOOutput:FREQUency:MODE</code>	739
<code>[:SOURce<hw>]:LFOOutput:FREQUency:START</code>	739
<code>[:SOURce<hw>]:LFOOutput:FREQUency:STOP</code>	740
<code>[:SOURce]:LFOOutput[:STATe]</code>	740
<code>[:SOURce<hw>]:LFOOutput:SWEep[:FREQUency]:DWELl</code>	741
<code>[:SOURce<hw>]:LFOOutput:SWEep[:FREQUency]:EXECute</code>	741
<code>[:SOURce<hw>]:LFOOutput:SWEep[:FREQUency]:MODE</code>	741
<code>[:SOURce<hw>]:LFOOutput:SWEep[:FREQUency]:POINTs</code>	742
<code>[:SOURce<hw>]:LFOOutput:SWEep[:FREQUency]:RUNNING?</code>	743
<code>[:SOURce<hw>]:LFOOutput:SWEep[:FREQUency]:SHAPE</code>	743
<code>[:SOURce<hw>]:LFOOutput:SWEep[:FREQUency]:SPACing</code>	744
<code>[:SOURce<hw>]:LFOOutput:SWEep[:FREQUency]:STEP[:LINear]</code>	744
<code>[:SOURce<hw>]:LFOOutput:SWEep[:FREQUency]:STEP:LOGarithmic</code>	745
<code>[:SOURce]:LFOOutput:VOLTage</code>	746

`[:SOURce]:LFOOutput:FREQUency <Frequency>`

Sets the frequency of the LF signal in `LFO:FREQ:MODE CW|FIXed` mode.

Note:

- If signal Source "Internal" is set, the instrument performs the analog modulations (AM/FM/φM/PM) with this frequency.
- In sweep mode (`LFO:FREQ:MODE SWEep`), the frequency is coupled with the sweep frequency.

Parameters:

<code><Frequency></code>	float
Range:	full frequency range
Increment:	see the data sheet: Modulation sources > Resolution of frequency setting
*RST:	1E3

Example:

```
LFO:FREQ 5kHz
sets the frequency of the LF signal to 5 kHz
```

Manual operation: See "LF Gen Frequency" on page 243

`[:SOURce<hw>]:LFOOutput:FREQUency:MANual <Manual>`

Determines the frequency and triggers the next sweep step manually in `LFO:SWE[:FREQ]:MODE MAN`, and `LFO:SWE[:FREQ]:MODE STEP`.

Note: You can select any frequency within the setting range. The range is defined with `LFO:FREQ:START` and `LFO:FREQ:STOP`.

Parameters:

<Manual> float
 Range: full frequency range
 Increment: see the data sheet: Modulation sources > Internal modulation generator > Resolution of frequency setting
 *RST: 1000

Example:

```
LFO:SWE:MODE MAN
sets the "Step" sweep mode.
LFO:FREQ:MAN 5 kHz
sets an LF frequency of 5 kHz for the next step in the "Step" sweep mode.
LFO:FREQ:MODE SWE
sets the LF Sweep mode. An LF frequency of 5 kHz is output.
LFO:FREQ:MAN 5.1 kHz
triggers the next sweep step with a frequency of 5.1 kHz.
```

Manual operation: See "[Current Freq](#)" on page 258

[:SOURce<hw>]:LFOOutput:FREQuency:MODE <Mode>

Sets the instrument operating mode, and determines the commands to be used for frequency settings.

Parameters:

<Mode> CW | FIXed | SWEep

CW|FIXed

Sets the CW frequency mode. CW and FIXed are synonyms. The instrument operates at a fixed frequency. To set the LF output frequency use the command [:SOURce] :LFOOutput :FREQuency.

SWEep

Sets the sweep mode. The instrument processes the frequency settings in defined sweep steps. To determine the corresponding frequency values, use the commands [:SOURce<hw>] :LFOOutput :FREQuency :START, [:SOURce<hw>] :LFOOutput :FREQuency :STOP or [:SOURce<hw>] :LFOOutput :FREQuency :MANual.

*RST: CW

Example:

```
LFO:FREQ:MODE SWE
sets the sweep mode.
```

Manual operation: See "[State](#)" on page 255

[:SOURce<hw>]:LFOOutput:FREQuency:START <Start>

Sets the start frequency for the LF sweep.

Parameters:

<Start> float
 Range: full frequency range
 Increment: see the data sheet: Resolution of frequency setting
 *RST: 1 KHz

Example:

```
RST*
activates all presets.
LFO:SWE:MODE AUTO
TRIG0:SOUR SING
LFO:FREQ:STAR 1 kHz
LFO:FREQ:STOP 10 kHz
LFO:FREQ:MODE SWE
LFO:SWE:EXEC
the instrument generates a single sweep cycle from 1 kHz to 10
kHz automatically after a manual trigger event occurs
(:LFOOutput:SWEep:EXECute or *TRG). The step width is 1
kHz linear, with 15 ms dwell time until the signal switches to the
subsequent step.
```

Manual operation: See ["Start Freq"](#) on page 258

[[:SOURce<hw>]:LFOOutput:FREQuency:STOP <Stop>

Sets the stop frequency for the LF sweep.

Parameters:

<Stop> float
 Range: full frequency range
 Increment: see the data sheet: resolution of frequency setting
 *RST: 100 KHz

Example:

```
LFO:FREQ:STOP 10 kHz
sets the stop frequency for the LF sweep to 10 kHz.
```

Manual operation: See ["Stop Freq"](#) on page 258

[[:SOURce]:LFOOutput[:STATe] <State>

Activates/deactivates the LF output.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 0

Example:

```
LFO ON
activates the LF output. The settings under LFO:FREQ and
LFO:SWE become effective.
```

Manual operation: See ["State - LF Output"](#) on page 254

[:SOURce<hw>]:LFOOutput:SWEep[:FREQUENCY]:DWELI <Dwell>

Sets the dwell time for each frequency step of the sweep.

Tip: It is recommended to switch off the "Display Update" for optimum sweep performance especially with short dwell times ([SYSTem:DISPlay:UPDate OFF](#)).

Parameters:

<Dwell>	float
Range:	see data sheet: Dwell time setting range
Increment:	100E-6
*RST:	15E-3

Example: `LFO:SWE:DWEL 20 ms`
sets a dwell time of 20 ms.

Manual operation: See "[Dwell Time - LF Sweep](#)" on page 259

[:SOURce<hw>]:LFOOutput:SWEep[:FREQUENCY]:EXECute

Immediately starts an LF frequency sweep in [LFO:SWE:MODE SINGLE](#).

Example: `LFO:SWE:MODE SING`
sets the single cycle mode of the LF sweep.
`LFO:SWE:EXEC`
starts one cycle of the LF sweep.

Usage: Event

Manual operation: See "[Execute Single Sweep](#)" on page 257

[:SOURce<hw>]:LFOOutput:SWEep[:FREQUENCY]:MODE <Mode>

Sets the cycle mode of the LF sweep.

The assignment of the GPIB commands to the sweep modes is given in the description of the sweep dialogs.

Parameters:

<Mode>

AUTO | MANual | STEP

AUTO

Performs a complete sweep cycle from the start to the end value when a trigger event occurs.

The dwell time determines the time period for the signal to switch to the next step.

MANual

Performs a single sweep step when a manual trigger event occurs.

The trigger system is not active. You can trigger each frequency step of the sweep individually with the command [:SOURce<hw>] :LFOutput:FREQuency:MANual. In manual

mode, use the rotary knob for switching to the next step.

With each step, the frequency increases by the value specified

with the command [:SOURce<hw>] :LFOutput:SWEep [:FREQuency] :STEP [:LINear] or [:SOURce<hw>] :

LFOutput:SWEep [:FREQuency] :STEP:LOGarithmic,

respectively. A frequency value, entered with [:SOURce<hw>] :LFOutput:FREQuency:MANual takes no effect.

With manual control, the frequency increases or decreases (depending on the direction of the rotary encoder) by the value specified under SOUR:LFO:SWE:FREQ:STEP:LIN (linear spacing) or . . . :STEP:LOG (logarithmic spacing).

STEP

Each trigger triggers one sweep step only. The frequency increases by the value entered with [:SOURce<hw>] :

LFOutput:SWEep [:FREQuency] :STEP [:LINear] or [:SOURce<hw>] :LFOutput:SWEep [:FREQuency] :STEP:

LOGarithmic.

*RST: AUTO

Example:

LFO:SWE:MODE AUTO
selects Auto mode.

Manual operation: See "Mode" on page 255

[:SOURce<hw>] :LFOutput:SWEep [:FREQuency] :POINTs <Points>

Determines the number of steps for the LF frequency sweep within the sweep range.

This parameter always applies to the currently set sweep spacing and correlates with the step size as follows:

- for linear sweeps and $f_{\text{START}} < f_{\text{STOP}}$

$$\text{freq_points} = (f_{\text{SPAN}} / \text{step_lin}) + 1$$
 with $f_{\text{SPAN}} = f_{\text{STOP}} - f_{\text{START}}$
 To determine the step size, use the command **SWE:STEP[:LIN]**.
- logarithmic sweeps and $f_{\text{START}} < f_{\text{STOP}}$

$$\text{freq_points} = ((\log f_{\text{STOP}} - \log f_{\text{START}}) / \log \text{step_log}) + 1$$

To determine the logarithmic step size, use the command `SWE:STEP:LOG`.

If you change the number of sweep points, the step size changes accordingly. The sweep range remains the same.

Each sweep spacing mode has assigned the `POINTS` setting separately. Thus, the command refers always to the particular set mode, see `[:SOURce<hw>]:LFOutput:SWEep[:FREQUENCY]:SPACing`.

Parameters:

<Points> integer
Range: 2...max

Example:

```
LFO:FREQ:STAR
sets the start frequency to 2 kHz.
LFO:FREQ:STOP
sets the stop frequency to 20 kHz
LFO:SWE:SPAC LIN
sets linear sweep spacing.
LFO:SWE:POIN 11
sets 11 sweep steps for linear sweep spacing. The sweep step
width (STEP) is automatically set to 2 kHz.
```

[:SOURce<hw>]:LFOutput:SWEep[:FREQUENCY]:RUNNING?

Queries the current status of the LF frequency sweep mode.

Return values:

<State> 0 | 1 | OFF | ON

Example:

```
LFO:SWE:RUNN?
Response "1": the frequency sweep is running.
```

Usage:

Query only

[:SOURce<hw>]:LFOutput:SWEep[:FREQUENCY]:SHAPE <Shape>

Sets the cycle mode for a sweep sequence (shape).

Parameters:

<Shape> SAWTooth | TRIangle

SAWTooth

A sweep runs from the start to the stop frequency. A subsequent sweep starts at the start frequency, that means the shape of the sweep sequence resembles a sawtooth.

TRIangle

A sweep runs from the start to the stop frequency and back, that means the shape of the sweep resembles a triangle. A subsequent sweep starts at the start frequency.

*RST: SAWTooth

Example: SOUR:LFO:SWE:SHAP TRI
selects the sweep cycle with alternating ascending and descending sweep directions.

Manual operation: See "Shape" on page 258

[:SOURce<hw>]:LFOOutput:SWEep[:FREQUENCY]:SPACing <Spacing>

Selects the mode for the calculation of the frequency sweep intervals. The frequency increases or decreases by this value at each step.

Parameters:

<Spacing> LINear | LOGarithmic

LINear

With the linear sweep, the step width is a fixed frequency value which is added to the current frequency. The step width for linear sweep is entered in Hz (see [:SOURce<hw>]:LFOOutput:SWEep[:FREQUENCY]:STEP[:LINear] on page 744).

LOGarithmic

With the logarithmic sweep, the step width is a constant fraction of the current frequency. This fraction is added to the current frequency. The logarithmic step width is entered in % (see [:SOURce<hw>]:LFOOutput:SWEep[:FREQUENCY]:STEP:LOGarithmic on page 745).

*RST: LINear

Example: LFO:SWE:SPAC LIN
selects linear sweep spacing.

Manual operation: See "Spacing" on page 258

[:SOURce<hw>]:LFOOutput:SWEep[:FREQUENCY]:STEP[:LINear] <Linear>

Sets the step size for linear LF frequency sweep steps.

This parameter correlates with the number of steps [:SOURce<hw>]:LFOOutput:SWEep[:FREQUENCY]:POINTS within the sweep range as follows:

$$f_{\text{START}} < f_{\text{STOP}}$$

$$\text{freq_points} = ((f_{\text{START}} - f_{\text{STOP}}) / \text{step_lin}) + 1$$

If you change the step size, the number of steps changes accordingly. The sweep range remains the same.

Parameters:

<Linear> float
Range: full frequency range
Increment: see the data sheet: Modulation sources > Resolution of frequency setting
*RST: 1000

Example: LFO:FREQ:STAR
sets the start frequency to 2 kHz.
LFO:FREQ:STOP
sets the stop frequency to 20 kHz.
LFO:SWE:SPAC LIN
sets linear sweep spacing.
LFO:SWE:STEP 2 kHz
sets the sweep step width to 2 kHz. The number of sweep steps for linear sweep spacing (POINTS) is automatically set to 11.

Manual operation: See "[Step Lin/Log - LF Sweep](#)" on page 259

**[[:SOURce<hw>]:LFOOutput:SWEep[:FREQUENCY]:STEP:LOGarithmic
<Logarithmic>**

Sets the logarithmically determined sweep step size for the LF frequency sweep. It is expressed in percent and you must enter the *value* and the unit *PCT* with the command.

The frequency is increased by a logarithmically calculated fraction of the current frequency according to:

$$\text{step_log}_{\text{step}+1} = f_{\text{step}} + \text{step_log}_{\text{step}} \times f_{\text{step}}$$

$$f_{\text{step}+1} = f_{\text{step}} + \text{step_log}_{\text{step}+1}$$

with $f_{\text{START}} < f_{\text{STOP}}$ and *step* = the current number of the sweep steps

This parameter correlates with the number of steps [LFO:SWE\[:FREQ\]:POIN](#) within the sweep range as follows:

$$\text{freq_points} = ((\log f_{\text{STOP}} - \log f_{\text{START}}) / \log \text{step_log}) + 1$$

If you change the step size, the number of steps changes accordingly. The sweep range remains the same.

Parameters:

<Logarithmic> float
Range: 0.01 to 100
Increment: 0.01
*RST: 1

Example: LFO:FREQ:STAR
sets the start frequency to 1 kHz.
LFO:FREQ:STOP
sets the stop frequency to 100 kHz.
LFO:SWE:SPAC LOG
sets logarithmic sweep spacing.
LFO:SWE:STEP:LOG 10PCT
sets the step width for logarithmic sweep spacing to 10% of the previous frequency in each instance.

Manual operation: See "[Step Lin/Log - LF Sweep](#)" on page 259

[:SOURce]:LFOutput:VOLTage <Voltage>

Sets the voltage of the LF output signal.

Parameters:

<Voltage>	float
Range:	see the data sheet: Internal modulation generator > Output voltage range
Increment:	see the data sheet: resolution of output voltage setting
*RST:	1

Example: LFO:VOLT 2 V
sets the voltage of the LF output to 2 V.

Manual operation: See ["Output Voltage - LF Output"](#) on page 254

7.16.11 SOURce:LIST Subsystem

This subsystem contains the commands for the List mode of the instrument.

The following settings are required to operate the instrument in List mode:

1. Create a list.
If a list which does not exist is selected with the `:LIST:SEL` command, an empty list with the name of the selected list is created.
`SOURce1:LIST:SEL "New_list"`
2. Fill the list with values.
All list components must be of the same length. This does not apply to components of length 1. This is interpreted as if the component has the same length as the other components and as if all values are the same as the first value.
`SOURce1:LIST:FREQ 100 MHz, 110 MHz, 120 MHz...`
`SOURce1:LIST:POW 2dBm, -1dBm, 0dBm...`
3. Select a list.
If a new empty file has been created with the `:LIST:SEL` command, this file is selected, otherwise an existing list must be selected before the List mode is activated.
`SOURce1:LIST:SEL "Old_list"`
4. Set the dwell time.
The dwell time determines the duration of the individual list steps.
`SOURce1:LIST:DWELL 3ms`
5. Set the List mode.
The List mode determines the way in which the list is processed. In the example the list is processed once only or repeatedly depending on the trigger setting.
`SOURce1:LIST:MODE AUTO`
6. Determine the trigger.

In the example each trigger causes the list to be processed once from beginning to end.

```
SOURce:LIST:TRIGger:SOURce SINGLE
```

7. Activate the List mode.

```
SOURce1:FREQuency:MODE LIST
```

8. Trigger the list (depending on the mode).

```
SOURce1:LIST:TRIGger:EXECute
```

9. Deactivate the List mode.

```
SOURce1:FREQuency:MODE CW
```



SCPI refers to the individual lists as segments.

<code>[:SOURce<hw>]:LIST:CATalog?</code>	747
<code>[:SOURce<hw>]:LIST:DELeTe</code>	748
<code>[:SOURce<hw>]:LIST:DELeTe:ALL</code>	748
<code>[:SOURce<hw>]:LIST:DEXChange:AFILe:CATalog?</code>	749
<code>[:SOURce<hw>]:LIST:DEXChange:AFILe:EXTension</code>	749
<code>[:SOURce<hw>]:LIST:DEXChange:AFILe:SELeCt</code>	750
<code>[:SOURce<hw>]:LIST:DEXChange:AFILe:SEParator:COLumn</code>	750
<code>[:SOURce<hw>]:LIST:DEXChange:AFILe:SEParator:DECimal</code>	751
<code>[:SOURce<hw>]:LIST:DEXChange:EXECute</code>	751
<code>[:SOURce<hw>]:LIST:DEXChange:MODE</code>	752
<code>[:SOURce<hw>]:LIST:DEXChange:SELeCt</code>	752
<code>[:SOURce<hw>]:LIST:DWELL</code>	752
<code>[:SOURce<hw>]:LIST:FREE?</code>	753
<code>[:SOURce<hw>]:LIST:FREQuency</code>	753
<code>[:SOURce<hw>]:LIST:FREQuency:POINTs?</code>	754
<code>[:SOURce<hw>]:LIST:INDex</code>	754
<code>[:SOURce<hw>]:LIST:INDex:START</code>	754
<code>[:SOURce<hw>]:LIST:INDex:STOP</code>	755
<code>[:SOURce<hw>]:LIST:LEARn</code>	755
<code>[:SOURce<hw>]:LIST:MODE</code>	755
<code>[:SOURce<hw>]:LIST:POWer</code>	756
<code>[:SOURce<hw>]:LIST:POWer:POINTs?</code>	756
<code>[:SOURce<hw>]:LIST:RESet</code>	757
<code>[:SOURce<hw>]:LIST:SELeCt</code>	757
<code>[:SOURce<hw>]:LIST:TRIGger:EXECute</code>	757
<code>[:SOURce<hw>]:LIST:TRIGger:SOURce</code>	758

`[:SOURce<hw>]:LIST:CATalog?`

Requests a list of available lists. The individual lists are separated by commas.

The lists are stored with the fixed file extensions `*.lsw` in a directory of the user's choice. The directory applicable to the commands is defined with the command `MMEMoRY:CDIR`.

Return values:

<Catalog> string

Example:

```
MMEM:CDIR 'D:\user\Listmode'
selects the directory for the list mode files.
LIST:CAT?
queries the available lists.
Response: 'list1,list2'
the lists list1 and list2 are available.
```

Usage:

Query only

[[:SOURce<hw>]:LIST:DELeTe <Filename>

Deletes the specified list.

The files are stored with the fixed file extensions *.lsw in a directory of the user's choice. The directory applicable to the command is defined with the command `MMEMory:CDIR`. To access the files in this directory, only the file name has to be given, without the path and the file extension. A path can also be specified in command `:SOUR:LIST:CAT?`, in which case the file in the specified directory is deleted.

*RST does not affect data lists.

Setting parameters:

<Filename> string

Example:

```
MMEM:CDIR 'D:\user\Listmode'
selects the directory for the list mode files.
LIST:DEL 'LIST1'
deletes the list list1.
```

Usage:

Setting only

Manual operation: See "[List Mode Data... - List Mode](#)" on page 277

[[:SOURce<hw>]:LIST:DELeTe:ALL

Deletes all lists in the selected directory.

Note: The list mode must be previously disabled to make sure that no records are selected when you set the frequency mode (`[[:SOURce<hw>]:FREQuency:MODE`).

The files are stored with the fixed file extensions *.lsw in a directory of the user's choice. You can select the directory with the commands `:MMEMory:CDIRectory` or `[[:SOURce<hw>]:LIST:CATalog?`.

*RST does not affect data lists.

Example: `MMEM:CDIR 'D:\user\Listmode'`
selects the directory for the list mode files.
`FREQ:MODE SWE`
deactivates the list mode for RF output and activates the sweep mode.
`LIST:DEL:ALL`
deletes all list mode files in the selected directory.

Usage: Event

Manual operation: See "[List Mode Data... - List Mode](#)" on page 277

[[:SOURce<hw>]:LIST:DEXChange:AFILe:CATalog?

Queries the available ASCII files for export or import of list mode data in the current or specified directory.

As response, you get a string containing the existing ASCII files `*.txt` or `*.csv`, separated by commas.

Return values:

<Catalog> string

Example: `MMEM:CDIR 'D:\user\import'`
selects the directory for the ASCII files with frequency and level value pairs.
`LIST:DEXC:AFIL:EXT TXT`
determines the extension `*.txt` for the query.
`LIST:DEXC:AFIL:CAT?`
queries the available files with extension `*.txt`.
Response: `'list1,list2'`
the ASCII files `list1.txt` and `list2.txt` are available.

Usage: Query only

[[:SOURce<hw>]:LIST:DEXChange:AFILe:EXTension <Extension>

Determines the extension of the ASCII file for import or export, or to query existing files.

Parameters:

<Extension> TXT | CSV
*RST: TXT

Example: MMEM:CDIR 'D:\user\import'
 selects the directory for the ASCII files with frequency and level value pairs.
 LIST:DEXC:AFIL:EXT TXT
 selects ASCII files with the extension *.txt for the query.
 LIST:DEXC:AFIL:CAT?
 queries the available files with extension *.txt.
 Response: 'list1,list2'
 the ASCII files list1.txt and list2.txt exist.

Manual operation: See "[Extension - List Mode](#)" on page 279

[:SOURce<hw>]:LIST:DEXChange:AFIL:SElect <Filename>

Selects the ASCII file to be imported or exported.

Parameters:

<Filename> <ascii_file_name>

Example: LIST:DEXC:MODE IMP
 determines that ASCII files with frequency and level value pairs are imported into list mode lists.
 LIST:DEXC:AFIL:EXT TXT
 determines the extension *.txt for the query.
 LIST:DEXC:AFIL:CAT?
 queries the available files with extension *.txt.
 Response: 'list1,list2'
 the ASCII files list1.txt and list2.txt exist.
 LIST:DEXC:AFIL:SEL 'D:\user\list.csv'
 selects list.csv for import.
 LIST:DEXC:SEL 'D:\user\list_imp'
 determines the destination file list_imp.
 LIST:DEXC:EXEC
 imports the ASCII file data into the list file.

Manual operation: See "[Select ASCII Source / Destination - List Mode](#)" on page 280

[:SOURce<hw>]:LIST:DEXChange:AFIL:SEPARATOR:COLumn <Column>

Selects the separator between the frequency and level column of the ASCII table.

Parameters:

<Column> TABulator | SEMicolon | COMMa | SPACe
 *RST: COMMa

Example:

```
LIST:DEXC:MODE EXP
selects that the list is exported into an ASCII file.
LIST:DEXC:AFIL:SEL 'D:\user\list.csv'
determines ASCII file list.csv as destination for the list mode list
data.
LIST:DEXC:AFIL:SEP:COL TAB
defines a tabulator to separate the frequency and level values
pairs.
LIST:DEXC:AFIL:SEP:DEC DOT
selects the decimal separator dot.
LIST:DEXC:SEL 'D:\user\list_imp'
determines the source file list_imp for export into the ASCII file
list.csv.
LIST:DEXC:EXEC
exports the list file data into the ASCII file.
```

Manual operation: See ["Column Separator- List Mode"](#) on page 280

[:SOURce<hw>]:LIST:DEXChange:AFILe:SEParator:DECimal <Decimal>

Sets the decimal separator used in the ASCII data between '.' (decimal point) and ',' (comma) with floating-point numerals.

Parameters:

<Decimal> DOT | COMMa
*RST: DOT

Example: see [\[:SOURce<hw>\]:LIST:DEXChange:AFILe:SEParator:COLumn](#) on page 750

Manual operation: See ["Decimal Point - List Mode"](#) on page 279

[:SOURce<hw>]:LIST:DEXChange:EXECute

Executes the import or export of the selected list file, according to the previously set transfer direction with command [\[:SOURce<hw>\]:LIST:DEXChange:MODE](#).

Example:

```
LIST:DEXC:MODE IMP
determines that ASCII files with frequency and level value pairs
are imported into list mode lists.
LIST:DEXC:AFIL:SEL 'D:\user\list.csv'
selects the ASCII file list.csv for import.
LIST:DEXC:SEL 'D:\user\list_imp'
determines the destination file list_imp.
LIST:DEXC:EXEC
imports the ASCII file data into the list mode file.
```

Usage: Event

Manual operation: See ["Import / Export - List Mode"](#) on page 280

[[:SOURce<hw>]:LIST:DEXChange:MODE <Mode>

Selects if list mode lists should be imported or exported. Depending on the selection here, the file select command defines either the source or the destination for list mode lists and ASCII files.

Parameters:

<Mode> IMPort | EXPort
*RST: IMPort

Example:

```
LIST:DEXC:MODE IMP
selects that ASCII files with frequency and level value pairs are
imported and transferred into list mode lists.
LIST:DEXC:AFIL:SEL 'D:\user\list.csv'
selects that ASCII file list.csv is imported.
LIST:DEXC:SEL 'D:\user\list_imp'
selects that the ASCII file list.csv is imported into list mode
list list_imp.
```

Manual operation: See "[Mode - List Mode](#)" on page 279

[[:SOURce<hw>]:LIST:DEXChange:SElect <Filename>

Selects the list mode list to be imported or exported.

The list mode files are stored with the fixed file extensions *.lsw in a directory of the user's choice. The directory applicable to the commands is defined with the command `MMEMory:CDIR`. A path can also be specified in command `SOUR:LIST:DEXC:SEL`, in which case the files are stored or loaded in the specified directory.

Parameters:

<Filename> <list_name>

Example:

```
LIST:DEXC:MODE IMP
selects that ASCII files with frequency and level value pairs are
imported and transferred into list mode lists.
LIST:DEXC:AFIL:SEL 'D:\user\list.csv'
selects that ASCII file list.csv is imported.
LIST:DEXC:SEL 'D:\user\list_imp'
selects that the ASCII file list.csv is imported into list mode
list list_imp.
```

Manual operation: See "[Select Destination / Source - List Mode](#)" on page 280

[[:SOURce<hw>]:LIST:DWELI <Dwell>

Sets the dwell time. The R&S SMJ generates the signal with the frequency / power value pairs of each list entry for that particular period.

Parameters:

<Dwell> float
 Range: 7E-4 to 100
 Increment: 1E-4
 *RST: 15E-3

Example:

LIST:DWEL 15
 each setting in the list is retained for 15 ms.

Manual operation: See ["Dwell Time - List Mode"](#) on page 276

[[:SOURce<hw>]:LIST:FREE?

Queries on the free storage space for list mode lists.

Return values:

<Free> integer
 Range: 0 to INT_MAX
 *RST: 0

Example:

LIST:FREE?

Usage: Query only

Response: 2147483647;1

[[:SOURce<hw>]:LIST:FREQuency <Frequency>

Fills the FREQuency column of the selected list with data.

*RST does not affect data lists.

Parameters:

<Frequency> <Frequency#1>{, <Frequency#2>, ...} | block data
 The data can be given either as a list of numbers (list can be of any length and list entries must be separated by commas) or as binary block data. When block data is transferred, 8 bytes are always interpreted as a floating-point number with double accuracy (see :FORMat [:DATA] on page 531).
 Range: 300 kHz to RFmax

Example:

LIST:SEL 'D:\user\list3'
 selects list3 for editing. The R&S SMJ generates a new file automatically, if it does not exist yet.
 SOUR:LIST:FREQ 1.4GHz, 1.3GHz, 1.2GHz, ...
 specifies the frequency values in list3. If the list already contains data, it is overwritten.

Manual operation: See ["Edit List Mode Data... - List Mode"](#) on page 277

[[:SOURce<hw>]:LIST:FREQuency:POINts?

The command queries the length (in points) of the FREQuency component of the selected list.

Return values:

<Points> integer
 Range: 0 to INT_MAX
 *RST: 0

Example:

```
LIST:SEL 'D:\user\list3'
selects list3 for editing. The R&S SMJ creates a new file auto-
matically, if it does not exist yet.
LIST:FREQ:POIN?
queries the number of frequency values in the list
Response: 327
```

Usage: Query only

[[:SOURce<hw>]:LIST:INDex <Index>

Sets the list index in step mode (LIST:MODE STEP).

After the trigger signal the frequency and level settings of the selected index are processed in List mode.

Parameters:

<Index> integer
 *RST: 0

Example:

```
LIST:SEL 'D:\user\list3'
selects list3 for use in List mode.
FREQ:MODE LIST
activates List mode. List3 is processed.
LIST:MODE STEP
selects manual, step-by-step processing of the list.
LIST:IND 5
the frequency/level value pair with index 5 is executed.
TRIG:LIST:SOUR SING
selects triggering by means of the single trigger. The list is exe-
cuted once.
SOUR:LIST:TRIG:EXEC
triggers the processing of the selected list.
```

Manual operation: See "[Current Index - List Mode](#)" on page 276

[[:SOURce<hw>]:LIST:INDex:STARt <Start>

Sets the start index of the index range which defines a subgroup of frequency/level value pairs in the current list. Only the values in the set index range (:LIST:INDex:STARt ... :LIST:INDex:STOP) are processed in List mode.

Parameters:

<Start> integer
 Range: 0 to list length
 *RST: 0

Example:

```
LIST:SEL 'D:\user\list3'
```

selects `list3` for use in List mode.

```
LIST:IND:STAR 25
```

sets 25 as start index of the index range.

```
LIST:IND:STOP 49
```

sets 49 as stop index of the index range.

```
FREQ:MODE LIST
```

activates List mode. The frequency/level value pairs from index 25 to index 49 in `list3` are processed. All other entries of the list are ignored.

Manual operation: See "[List Range In - List Mode](#)" on page 278

[:SOURce<hw>]:LIST:INDEX:STOP <Stop>

Sets the stop index of the index range which defines a subgroup of frequency/level value pairs in the current list. Only the values in the set index range (:LIST:INDEX:START ... :LIST:INDEX:STOP) are processed in list mode.

Parameters:

<Stop> integer
 Range: 0 to list length
 *RST: 0

Example: see `[:SOURce<hw>] :LIST:INDEX:START` on page 754

Manual operation: See "[List Range In - List Mode](#)" on page 278

[:SOURce<hw>]:LIST:LEARn

Learns the selected list to determine the hardware setting for all list entries. The results are saved with the list. When the list is activated the first time, these settings are calculated automatically.

Example:

```
LIST:SEL 'D:\user\list3'
```

selects list file. The file is created if it does not yet exist.

```
LIST:LEAR
```

starts learning of the hardware setting for `list3` and stores the setting.

Usage: Event

Manual operation: See "[Learn List Mode Data... - List Mode](#)" on page 276

[:SOURce<hw>]:LIST:MODE <Mode>

Selects how the list is to be processed (similar to `SOURce:SWEep:MODE`).

Parameters:

<Mode> AUTO | STEP

AUTO

Each trigger event triggers a complete list cycle. Possible trigger settings for :LIST:TRIGger:SOURce are AUTO, SINGLE and EXT.

STEP

Each trigger event triggers only one step in the list processing cycle. The list is processed in ascending order.

Possible trigger settings for :LIST:TRIGger:SOURce are SINGLE and EXT

*RST: AUTO

Example:

LIST:MODE STEP

selects step-by-step processing of the list.

Manual operation: See "[Mode - List Mode](#)" on page 274

[:SOURce<hw>]:LIST:POWer <Power>

Fills the Level part of the selected list with data.

*RST does not affect data lists.

Parameters:

<Power> <Power#1>{, <Power#2>, ...} | block data

The data can be given either as a list of numbers (list can be of any length and list entries must be separated by commas) or as binary block data. When block data is transferred, 8 bytes are always interpreted as a floating-point number with double accuracy (see :FORMat[:DATA] on page 531).

Range: Minimum level to Maximum level

Default unit: dBm

Example:

LIST:SEL 'D:\user\list3'

selects list3 for editing. The R&S SMJ generates a new file automatically, if it does not exist yet.

LIST:POW 0dBm, 2dBm, 2dBm, 3dBm, ..

specifies the level values in list3. The number of level values must correspond to the number of frequency values. The previous data is overwritten.

Manual operation: See "[Edit List Mode Data... - List Mode](#)" on page 277

[:SOURce<hw>]:LIST:POWer:POINts?

Queries the length (in points) of the LEVEL part of the selected list.

Return values:

<Points> integer
 Range: 0 to INT_MAX
 *RST: 0

Example:

```
LIST:SEL 'D:\user\list3'
```

selects `list3` for editing. The R&S SMJ generates a new file automatically, if it does not exist yet.

```
LIST:POW:POIN?
```

queries the number of levels in the list file
 Response: 327

Usage: Query only

[:SOURce<hw>]:LIST:RESet

Resets the list to the starting point.

Example: `LIST:RES`
 resets the list to the starting point.

Usage: Event

Manual operation: See "[Reset - List Mode](#)" on page 275

[:SOURce<hw>]:LIST:SElect <Filename>

Selects the specified list. If a new list is to be created, the name can be entered here. The list is created if it does not yet exist. The list selected here is available for the further processing steps (editing) and is used in the instrument when the list mode is activated.

The files are stored with the fixed file extensions `*.lsw` in a directory of the user's choice. The directory applicable to the command is defined with the command `MMEMory:CDIR`. A path can also be specified in which case the list mode file in the specified directory is selected.

*RST does not affect data lists.

Parameters:

<Filename> '<list name>'

Example: `LIST:SEL 'D:\user\list3'`
 selects `list3` for editing.

Manual operation: See "[List Mode Data... - List Mode](#)" on page 277

[:SOURce<hw>]:LIST:TRIGger:EXECute

Starts the processing of a list in list mode. It corresponds to the manual-control command "Execute Single."

Example: SOUR:LIST:TRIG:EXEC
triggers the processing of the selected list.

Usage: Event

Manual operation: See "Execute Single - List Mode" on page 275

[:SOURce<hw>]:LIST:TRIGger:SOURce <Source>

Selects the trigger source processing lists.

The names of the parameters correspond to those under sweep mode. SCPI uses other names for the parameters; these names are also accepted by the instrument. The SCPI names should be used if compatibility is an important consideration. An overview of the various names is given in the following table:

R&S name	SCPI name	Command under manual control
AUTO	IMMediate	MODE AUTO
SINGle	BUS	MODE SINGLE or STEP
EXTernal	EXTernal	MODE EXT TRIG SINGLE or EXT TRIG STEP

Parameters:

<Source>

AUTO | IMMediate | SINGle | BUS | EXTernal

AUTO|IMMediate

The trigger is free-running, i.e. the trigger condition is fulfilled continuously. The selected list in List mode is restarted as soon as it is finished.

SINGle|BUS

The list is triggered by the GPIB commands [:SOURce<hw>]:LIST:TRIGger:EXECute. The list is executed once.

EXTernal

The list is triggered externally via the INST TRIG connector. The list is executed once.

*RST: AUTO

Example: LIST:TRIG:SOUR EXT
selects triggering by means of the external trigger.

Manual operation: See "Mode - List Mode" on page 274

7.16.12 SOURce:MODulation Subsystem

This subsystem contains the command for switching on/off all modulations.

[:SOURce<hw>]:MODulation[:ALL][:STATe] <State>

Activates/deactivates the modulations.

The command `SOUR:MOD:ALL:STAT OFF` switches all modulations off. A subsequent command `SOUR:MOD:ALL:STAT ON` restores the status that was active before the last switch-off. "MOD OFF" is displayed in the info line of the header next to the "Level" field.

Parameters:

<State> 0 | 1 | OFF | ON
*RST: 1

Example:

`MOD:STAT OFF`
switches off all modulations.

Manual operation: See "MOD ON/OFF" on page 240

7.16.13 SOURce:PHASe Subsystem

This subsystem contains the commands for adjusting the phase of the RF output signal relative to a reference signal of the same frequency.

`[:SOURce<hw>]:PHASe.....` 759
`[:SOURce<hw>]:PHASe:REFerence.....` 759

`[:SOURce<hw>]:PHASe <Phase>`

Sets the phase variation relative to the current phase. The variation is specified in RADians.

Parameters:

<Phase> float
Range: -720 to 720
Increment: 0.1
*RST: 0

Example:

`PHAS 0.1 RAD`
changes the phase by 0.1 RAD relative to the current phase.
`PHAS:REF`
adopts the set phase as the current phase.

Manual operation: See "Delta Phase" on page 205

`[:SOURce<hw>]:PHASe:REFerence`

Adopts the phase set with `SOURce:PHASe:ADJust` as the current phase.

Example:

`PHAS 0.1RAD`
changes the phase by 0.1 RAD relative to the current phase.
`PHAS:REF`
adopts the set phase as the current phase.

Usage:

Event

Manual operation: See "Reset Delta Phase Display" on page 205

Parameters:

<Mode> HDEViation | HBANdwidth

HDEViation

Provides full setting range of PhiM deviation. The range of modulation frequency is limited (see data sheet). Recommended for low modulation frequencies and/or high PhiM deviation.

HBANdwidth

Provides maximum range of modulation bandwidth. Recommended for high modulation frequencies.

*RST: HBANdwidth

Example:

PM:MODE LNO
selects Low Noise mode for external phase modulation.

Manual operation: See "[ϕM Mode](#)" on page 250

[[:SOURce<hw>]:PM:SENSitivity?

Queries the input sensitivity of the externally applied signal for phase modulation. The returned value reports the sensitivity in RAD/V. It is assigned to the voltage value for full modulation of the input.

Return values:

<Sensitivity> float

Example:

PM:DEV 1
sets a modulation deviation of 1RAD.
PM:SENS?
queries the input sensitivity at the external modulation input.
Response: 1
since the voltage value for full modulation is 1V, the resulting sensitivity is precisely 1RAD/V.

Usage: Query only

Manual operation: See "[ϕM Sensitivity](#)" on page 251

[[:SOURce<hw>]:PM:SOURce <Source>

Selects the modulation signal source for phase modulation.

You can use both, the internal and an external modulation signal at a time.

Parameters:

<Source> INTernal | EXTernal | INT,EXT

INTernal

Uses the internally generated signal for modulation. To configure the LF signal, use the commands of the [SOURce:LFOutput Subsystem](#) subsystem.

EXTernal

Uses an externally applied modulation signal.

INT,EXT

Uses both, the internal and external modulation signals.

*RST: INT

Example:

```
PM:SOUR INT
selects the internal modulation source.
```

Manual operation: See "[ϕM Source](#)" on page 249

[:SOURce<hw>]:PM:STATe <State>

Activates phase modulation.

Note: Activation of PM deactivates frequency modulation (FM).

Parameters:

<State> 0 | 1 | OFF | ON

*RST: 0

Example:

```
PM:STAT ON
activates PM.
```

Manual operation: See "[State](#)" on page 249

7.16.15 SOURce:POWer Subsystem

This subsystem contains the commands for setting the output level, level control and level correction of the RF signal.

Other units can also be used instead of dBm:

- by entering the unit directly after the numerical value (example :POW 0.5V)
- by changing the DEFault unit in the UNIT system (see the command [:UNIT:POWer](#)).

[:SOURce<hw>]:POWer:ALC:OMODE	763
[:SOURce<hw>]:POWer:ALC:SONCe	763
[:SOURce<hw>]:POWer:ALC[:STATe]	763
[:SOURce<hw>]:POWer:ATTenuation:RFOff:MODE	764
[:SOURce<hw>]:POWer:EMF:STATe	764
[:SOURce<hw>]:POWer[:LEVel][:IMMediate][:AMPLitude]	765
[:SOURce<hw>]:POWer[:LEVel][:IMMediate]:OFFSet	765
[:SOURce<hw>]:POWer[:LEVel][:IMMediate]:RCL	766
[:SOURce<hw>]:POWer:LIMit[:AMPLitude]	766

<code>[:SOURce<hw>]:POWer:MANual</code>	767
<code>[:SOURce<hw>]:POWer:MODE</code>	768
<code>[:SOURce<hw>]:POWer:PEP?</code>	768
<code>[:SOURce<hw>]:POWer:POWer</code>	768
<code>[:SOURce<hw>]:POWer:START</code>	769
<code>[:SOURce<hw>]:POWer:STEP[:INCRement]</code>	769
<code>[:SOURce<hw>]:POWer:STEP:MODE</code>	770
<code>[:SOURce<hw>]:POWer:STOP</code>	770

`[:SOURce<hw>]:POWer:ALC:OMODE <OffMode>`

The command sets the level control mode which becomes active when automatic level control is deactivated (ALC Off).

Parameters:

<code><OffMode></code>	SHOLd
	SHOLd
	Level control is activated briefly if the level or frequency changes ("ALC Off Sample & Hold").
	*RST: SHOLd

Example:

```
POW:ALC OFF
deactivates automatic level control for RF output A.
POW:ALC:OMOD SHOL
level control is briefly activated if the frequency or level changes.
```

`[:SOURce<hw>]:POWer:ALC:SONCe`

Temporarily activates level control for correction purposes.

Example:

```
POW:ALC OFF
deactivates automatic level control for RF output A.
POW:ALC:SONC
level control is performed once only.
```

Usage: Event

Manual operation: See "[Search Once - ALC](#)" on page 222

`[:SOURce<hw>]:POWer:ALC[:STATe] <State>`

Activates/deactivates automatic level control.

Parameters:

<State>	ON OFF AUTO
	ON Internal level control is permanently activated.
	OFF Internal level control is deactivated; Sample & Hold mode is activated.
	AUTO Internal level control is activated/deactivated automatically depending on the operating state.
	*RST: AUTO

Example:

POW:ALC ON
activates automatic level control for RF output A.

Manual operation: See "[State - ALC](#)" on page 222

[:SOURce<hw>]:POWer:ATTenuation:RFOff:MODE <Mode>

Selects the attenuator mode, when the RF signal is switched off.

The setting of the RF OFF mode is not affected by an instrument preset (PRESET key), *RST and the "Save/Recall" function. This parameter is influenced only by the [Factory Preset](#).

Parameters:

<Mode>	UNCHanged FATTenuation
	UNCHanged Freezes the setting of the attenuator when RF is switched off. The attenuator is only activated when RF is switched on. This setting recommended if a constant VSWR (V oltage S tanding W ave R atio) is required.
	FATTenuation Sets attenuation to maximum when the RF signal is switched off. This setting is recommended for applications that require a high level of noise suppression.
	*RST: depends on instrument hardware

Example:

SOUR:POW:ATT:RFOFF:MODE FATT
sets the RF OFF attenuator to maximum.

Manual operation: See "[RF OFF Mode](#)" on page 219

[:SOURce<hw>]:POWer:EMF:STATe <State>

Displays the signal level as voltage of the EMF. The displayed value represents the voltage over a 50 Ohm load.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 0

Example:

POW:EMF:STAT 1
 activates voltage level display.

Manual operation: See ["Display Level as Voltage of EMF - RF Level"](#) on page 220

[:SOURce<hw>]:POWER[:LEVel][:IMMediate][:AMPLitude] <Amplitude>

Sets the RF level applied to the DUT.

Notes:

If specified, a level offset `[:SOURce<hw>]:POWER[:LEVel][:IMMediate]:OFFSet` is included according to the formula:

Minimum level + OFFSet ... Maximum level + OFFSet

In addition to numerical values, you can increase or decrease the values step by step with the UP and DOWN according to the step width defined with `[:SOURce<hw>]:POWER:STEP[:INCRement]`.

The RF output is activated with `:OUTPut<hw>[:STATe]` on page 557 (RF ON / RF OFF).

Parameters:

<Amplitude> Minimum level ... Maximum level
 Determines the RF output level.
 Range: Minimum level to Maximum level
 *RST: -30

Example:

The keywords of this command are largely optional. Therefore, both the long and short form of the command are shown.
`SOUR:POW:LEV:IMM:AMPL 15`
 or
`:POW 15`
 sets the RF level at output A to 15 dBm.

Manual operation: See ["RF Level"](#) on page 216

[:SOURce<hw>]:POWER[:LEVel][:IMMediate]:OFFSet <Offset>

Note: The level offset is also effective for level sweeps!

Specifies the constant level offset of a downstream attenuator/amplifier. If a level offset is entered, the level entered with `:POWER` no longer corresponds to the RF output level.

The following correlation applies:

`POWER = RF output level + POWER:OFFSet.`

Entering a level offset does not change the RF output level, but rather the query value of :POWER.

For more information, see ["RF level vs. RF output level"](#) on page 215.

Only dB is permitted as the unit here. The linear units (V, W, etc.) are not permitted.

The keywords of this command are largely optional. Therefore, both the long and short form of the command are shown in the example.

Parameters:

<Offset> float
 Range: -100 to 100
 Increment: 0.01
 *RST: 0

Example:

SOURce:POWer:LEVel:IMMediate:OFFSet -10
 or
 POW:OFFS 10
 sets the RF level offset to 10 dB

Manual operation: See ["Offset \(Level\)"](#) on page 218

[[:SOURce<hw>]:POWer[:LEVel][:IMMediate]:RCL <Rcl>

Determines whether the RF level is retained or taken from a loaded instrument configuration, when you recall instrument settings with the command *RCL.

Parameters:

<Rcl> INCLUDE | EXCLUDE
INCLUDE
 Takes the level value of the loaded settings.
EXCLUDE
 Retains the current level when an instrument configuration is loaded.
 *RST: INCLUDE

Example:

POW:RCL INCL
 takes the level value from an instrument configuration loaded with command *RCL.

Manual operation: See ["Exclude Level"](#) on page 162

[[:SOURce<hw>]:POWer:LIMit[:AMPLitude] <Amplitude>

Limits the maximum RF output level in CW and SWEEP mode. It does not influence the "Level" display or the response to the POW? query command.

The value is not affected by an instrument preset (PRESET key), *RST and the Save/Recall function. This parameter is influenced only by the factory preset (SYST:FPR) and its factory value is equal to the upper limit.

Parameters:

<Amplitude> float

Minimum level ... Maximum level

The value range for the level setting varies according to the instrument model.

The values are given in the data sheet.

Increment: 0.01

*RST: 30

Example:

SOURce:POWer:LIMit:AMPLitude 10

or

:POW:LIM 10

limits the RF level to maximum +10 dBm.

Manual operation: See "[Limit - RF Level](#)" on page 218**[:SOURce<hw>]:POWer:MANual <Manual>**

In Sweep mode (:SOUR:POW:MODE SWE) the command sets the level for the next sweep step in the Step sweep mode (:SOUR:SWE:POW:MODE MAN). Here only level values between the settings [:SOUR]:POW:STAR and [:SOUR]:POW:STOP are permitted. Each sweep step is triggered by a separate :SOUR:POW:MAN command.

As with the "Level" value entered in the "RF Level" menu, the OFFSet value is also taken into consideration with this command.

The specified value range is therefore only effective if :SOURce:POWer:OFFSet is set to 0. The value range for other OFFSet values can be calculated using the following formula:

$$\text{Minimum level} + \text{OFFSet} \dots \text{Maximum level} + \text{OFFSet}$$
Parameters:

<Manual> float

Minimum level ... Maximum level

The value range for the level setting varies according to the instrument model

The values are given in the data sheet.

Increment: 0.01

*RST: -30

Example:

POW:SWE:MODE MAN

sets the Step sweep mode for RF output A.

POW:MAN -5 dBm

sets an RF level of -5 dBm for the next setting in the Step sweep mode for RF output A.

POW:MODE SWE

sets the Level Sweep mode for RF output A.

POW:MAN -5.5 dBm

triggers the next sweep step with a level of -5.5 dBm.

Manual operation: See "[Current Level - Level Sweep](#)" on page 272

[:SOURce<hw>]:POWER:MODE <Mode>

Sets the instrument operating mode and therefore also the commands used to set the output level.

Parameters:

<Mode> CW | FIXed | SWEep

CW|FIXed

Operates at a constant level.

CW and FIXed are synonyms. To set the output level value, use the command [:SOURce<hw>]:POWER[:LEVel][:IMMediate][:AMPLitude].

SWEep

Operates in power sweep mode.

Set the range and current level with the commands [:SOURce<hw>]:POWER:STARt, [:SOURce<hw>]:POWER:STOP and [:SOURce<hw>]:POWER:MANual.

*RST: CW

Example:

POW:MODE SWEep
selects the SWEep mode using the
POW:STAR; POW:STOP; POW:MAN settings.

Manual operation: See "State - Level Sweep" on page 269

[:SOURce<hw>]:POWER:PEP?

Queries the peak envelope power (PEP) in dBm for digital modulation and all digital standards. This value corresponds to the value shown under the **Level** specification in the PEP lines in the display header.

Return values:

<Pep> float

Example:

POW:PEP?
queries the PEP value for RF output A in the case of digital modulation.
Response: 4
the PEP value for RF output A is 4 dBm.

Usage: Query only

[:SOURce<hw>]:POWER:POWER <Power>

Sets the RF level of the RF output connector.

The level entered with this command corresponds to the level at the RF output, i.e. any offset entry is not taken into consideration.

Note: The SCPI command [:SOURce<hw>]:POWER[:LEVel][:IMMediate][:AMPLitude] sets the level of the "Level" display, i.e. the level containing offset.

Parameters:

<Power> Minimum level ... Maximum level
 The value range for the level setting varies according to the instrument model.
 The values are given in the data sheet.
 Increment: 0.01
 *RST: -30

Example:

SOUR:POW:POW 15
 sets the RF level at output to 15 dBm.

Manual operation: See "[Amplitude](#)" on page 217

[:SOURce<hw>]:POWER:START <Start>

Sets the start level for the RF sweep.

Note: You can select any level within the setting range. The range is defined by this start value and the [:SOURce<hw>]:POWER:STOP value.

A defined offset ([:SOURce<hw>]:POWER[:LEVel] [:IMMediate]:OFFSet) affects the level values according to the formula:

Minimum level + OFFSet ... Maximum level + OFFSet

Parameters:

<Start> float
 Determines the first level value of the sweep setting range.
 Range: full specified level range
 Increment: see the data sheet: Level sweep > Step size setting resolution
 *RST: -30

Example:

POW:STAR -20 dBm
 sets the start level for the level sweep to -15 dBm for RF output A.

Manual operation: See "[Start Level - Level Sweep](#)" on page 271

[:SOURce<hw>]:POWER:STEP[:INCRement] <Increment>

Sets the step width for [POW:STEP:MODE USER](#).

To adjust the level step by step with this step size, use the POW:UP and POW:UP commands.

Note: This value also applies to the step width of the rotary knob of the instrument and increases or decreases the level accordingly, when you work in user-defined step mode.

Parameters:

<Increment> float
 Range: full specified level range
 Increment: see the data sheet: Level sweep > Step size setting resolution
 *RST: 1

Example:

POW:STEP 2
 sets the step width for entering the RF level to 2 dB.

Manual operation: See "[Variation Step](#)" on page 219

[:SOURce<hw>]:POWER:STEP:MODE <Mode>

Activates (USER) or deactivates (DECimal) the user-defined step width used when varying the level value with the level values UP/DOWN. The command is linked to setting "Variation Active" for manual control, i.e. the command also activates/deactivates the user-defined step width used when varying the level value with the rotary knob.

Parameters:

<Mode> DECimal | USER
 *RST: DECimal

Example:

POW:STEP 2
 sets the step width for the level setting to 2 dB.
 POW:STEP:MODE USER
 activates this step width for level variation with the rotary knob (manual control) and with level values UP/DOWN (remote control).

Manual operation: See "[Variation Active](#)" on page 219

[:SOURce<hw>]:POWER:STOP <Stop>

Sets the stop level for the RF sweep.

Note: You can select any level within the setting range. The range is defined by the [:SOURce<hw>]:POWER:START value and this stop value.

A defined offset ([:SOURce<hw>]:POWER[:LEVEL][:IMMEDIATE]:OFFSET) affects the level values according to the formula:

Minimum level + OFFSET ... Maximum level + OFFSET

Parameters:

<Stop> float
 Determines the last level value of the sweep setting range.
 Range: full specified level range
 Increment: see the data sheet: Level sweep > Step size setting resolution
 *RST: -10

Example: POW:STOP 3
sets the stop level for the level sweep to 3 dBm for RF output A.

Manual operation: See ["Stop Level - Level Sweep"](#) on page 272

7.16.16 SOURce:PULM Subsystem

This subsystem contains the commands for setting the pulse modulation.

Programming Examples

Example: Performing pulse modulation

This example shows a command sequence to perform pulse modulation.

```
// *****
// Reset the instrument to start from an initial state
// *****
*RST; *CLS

// *****
// Set the RF signal frequency and level
// *****
SOURce:FREQuency:CW 400000000
SOURce:POWer:LEVel:IMMediate:AMPLitude -25

// *****
// Configure the pulse modulation settings
// *****
// Select the internal modulation generator
SOURce:PULM:SOURce INT
// Set trigger mode
SOURce:PULM:TRIGger:MODE AUTO
// Select pulse mode
SOURce:PULM:MODE DOUB

// *****
// Alternatively configure the pulse modulation settings for
// external modulation source
// *****
// Select the external modulation source
SOURce:PULM:SOURce EXT
// Set the polarity of the externally applied modulation signal.
SOURce:PULM:POLarity NORMal
// Select the impedance for the external pulse modulation trigger input
SOURce:PULM:TRIGger:EXTernal:IMPedance G10K

// *****
// Configure the pulse generator settings
```

```

// *****
// Set pulse period
SOURCE:PULM:PERiod 10 us
// Set pulse width
SOURCE:PULM:WIDth 8 us
// Set double pulse width
SOURCE:PULM:DOUBle:WIDTh 0.0000012
// Set double pulse delay
SOURCE:PULM:DOUBle:DELay 0.0000045

// *****
// Activate the signal output
// *****
SOURCE:PGENERator:OUTPut:STATe 1
SOURCE:PULM:STATe 1
OUTPut1:STATe 1

```

Example: Generating a pulse train signal

This example shows a command sequence to create a pulse train signal.



Prior to the selection of the pulse train mode make sure that you have generated and selected a pulse train data list. Otherwise, the instrument generates an error.

```

// *****
// Reset the instrument to start from an initial state
// *****
*RST; *CLS

// *****
// Set the RF signal frequency and level
// *****
SOURCE:FREQuency:CW 4000000000
SOURCE:POWer:LEVel:IMMediate:AMPLitude -25

// *****
// Create a pulse train data list
// *****
// Select the directory
MMEM:CDIR '/var/user/Lists/'
// Create and/or select the pulse train data file
SOURCE:PULM:TRain:SEL 'P_FIVE'
// Enter the pulse train data
SOURCE:PULM:TRain:ONTime 10ns,30ns,40ns,20ns,10ns
SOURCE:PULM:TRain:OFFTime 30ns,40ns,50ns,40ns,30ns
SOURCE:PULM:TRain:REPetition 10,1,3,10,6

// *****

```

```
// Select pulse train mode
// *****
// Select the internal modulation generator and the pulse mode
SOURCE:PULM:SOURce INTernal
SOURCE:PULM:MODE PTRain

// *****
// Activate the signal output
// *****
SOURCE:PGENERator:OUTPut:STATe 1
SOURCE:PULM:STATe 1
OUTPut1:STATe 1

[:SOURce<hw>]:PULM:POLarity..... 773
[:SOURce<hw>]:PULM:SOURce..... 773
[:SOURce<hw>]:PULM:STATe..... 774
```

[:SOURce<hw>]:PULM:POLarity <Polarity>

Sets the polarity between modulating and modulated signal. This command is effective only for an external modulation signal.

Parameters:

<Polarity> NORMAL | INVERTed

NORMAL
The RF signal is suppressed during the pulse pause.

INVERTed
The RF signal is suppressed during the pulse.

*RST: NORMAL

Example: PULM:SOUR EXT
selects the external modulation source.

Example: PULM:POL INV
selects inverted polarity.

Manual operation: See "Polarity" on page 253

[:SOURce<hw>]:PULM:SOURce <Source>

Selects the source for the pulse modulation signal.

Parameters:

<Source> INTernal | EXTernal

INTernal

The internally generated rectangular signal is used for the pulse modulation. The frequency of the internal signal can be set in the `SOURce:LFOutput` subsystem.

EXTernal

The signal applied externally via the EXT MOD connector is used for the pulse modulation.

*RST: INTernal

Example:

```
PULM:SOUR INT
selects the internal modulation source.
PULM:STAT ON
activates the pulse modulation.
```

Usage: SCPI confirmed**Manual operation:** See "Source" on page 252**[:SOURce<hw>]:PULM:STATe <State>**

Activates the pulse modulation.

Parameters:

<State> 0 | 1 | OFF | ON

*RST: 0

Example:

```
PULM:STAT ON
activates pulse modulation.
```

Manual operation: See "State" on page 252

7.16.17 SOURce:ROSCillator Subsystem

This subsystem contains the commands for setting the external and internal reference frequency.



The settings of the reference oscillator are not affected by an instrument reset (`*RST` on page 486). They are only reset to factory state by the factory-preset (`:SYSTem:FPReset` on page 489).

<code>[:SOURce]:ROSCillator:EXTernal:FREQuency</code>	775
<code>[:SOURce]:ROSCillator:EXTernal:RFOF[:STATe]</code>	775
<code>[:SOURce]:ROSCillator:EXTernal:SBANdwidth</code>	775
<code>[:SOURce]:ROSCillator[:INTernal]:ADJust:VALue</code>	776
<code>[:SOURce]:ROSCillator[:INTernal]:ADJust[:STATe]</code>	776
<code>[:SOURce]:ROSCillator:SOURce</code>	776

[[:SOURce]:ROSCillator:EXTernal:FREQUENCY <Frequency>

Selects the external reference frequency.

Parameters:

<Frequency> 5MHZ | 10MHZ | 13MHZ
*RST: 10MHZ

Example:

ROSC:SOUR EXT
selects the external source. The reference must be input at the REF IN connector.
ROSC:EXT:FREQ 5MHz
selects 5 MHz external reference frequency.

Manual operation: See ["External Reference Frequency"](#) on page 212

[[:SOURce]:ROSCillator:EXTernal:RFOFF[:STATe] <State>

Activates that RF output is automatically switched off, when in external source mode no reference signal is supplied.

This setting ensures that no improper RF signal due to the missing external reference signal is output and used for measurements.

In addition to the error message "Ext Ref missing", the instrument generates the message "RF output deactivated".

Parameters:

<State> 0 | 1 | OFF | ON
*RST: --

Example:

ROSC:SOUR EXT
selects the external source. The reference must be input at the REF IN input.

Example:

ROSC:EXT:RFOFF:STAT ON
In case of a missing external signal, no RF signal is output.

Manual operation: See ["Deactivate RF Output \(if external reference is missing\)"](#) on page 211

[[:SOURce]:ROSCillator:EXTernal:SBANDwidth <SBandwidth>

Sets the synchronization bandwidth for an external reference signal.

Parameters:

<SBandwidth> WIDE | NARRow

NARRow

The synchronization bandwidth is approx. 1 Hz.

WIDE

The synchronization bandwidth is approx. 750 Hz.

Example: ROSC:SOUR EXT
 selects the external source.
 ROSC:EXT:FREQ 10 MHz
 informs the instrument that the external reference has a frequency of 10 MHz.
 ROSC:EXT:SBAN WID
 selects wideband setting for synchronization bandwidth.

Manual operation: See "[Synchronization Bandwidth](#)" on page 212

[:SOURce]:ROSCillator[:INTernal]:ADJust:VALue <Value>

Specifies the frequency correction value (adjustment value).

Parameters:

<Value> integer
 Range: 0 to maximum value (see data sheet)
 Increment: see data sheet
 *RST: ---

Example: ROSC:ADJ:VAL 456
 sets the adjustment value to 456.

Manual operation: See "[Adjustment DAC Value](#)" on page 212

[:SOURce]:ROSCillator[:INTernal]:ADJust[:STATe] <State>

Determines whether the calibrated (OFF) or a user-defined (ON) adjustment value is used for fine adjustment of the frequency. With STATE ON, the instrument is no longer in the calibrated state. However, the calibration value is not changed and the instrument resumes the calibrated state after switching the Adjustment State to Off.

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: --

Example: ROSC:SOUR INT
 selects the internal source.
 ROSC:ADJ ON
 activates use of a user-defined adjustment value.
 ROSC:ADJ:VAL 1400
 sets the adjustment value to 1400.

Manual operation: See "[Adjustment Active](#)" on page 212

[:SOURce]:ROSCillator:SOURce <Source>

Selects the reference frequency source.

Parameters:

<Source> INTernal | EXTernal | ELOop

INTernal

The internal reference oscillator is used.

EXTernal

An external reference signal is used. It must be input at the REF IN connector at the rear of the instrument.

The instrument is informed of the frequency of the external reference signal by means of the command [:SOURce]:

ROSCillator:EXTernal:FREQuency.

*RST: ---

Example:

ROSC:SOUR EXT

selects the external source.

ROSC:EXT:FREQ 5 MHz

informs the instrument that the external reference has a frequency of 5 MHz.

Manual operation: See "Source" on page 211

7.16.18 SOURce:SWEep Subsystem

The SOURce: subsystem contains the commands for configuring RF sweep signals.



- The keyword [:FREQuency] can be omitted, then the commands are SCPI-compliant.
- To activate a RF sweep mode, use the following commands:
 - RF frequency sweep: SOURce:FREQuency:MODE SWEep (SOURce:FREQuency:MODE CW (off))
 - RF level sweep: SOURce:POWer:MODE SWEep (SOURce:POWer:MODE CW (off))
- All sweeps, including the LF sweep, can be set independently from each other.

This example shows how to set up a frequency sweep.

1. Set the sweep range.


```
[SOURce:]FREQuency:CENTer 200 MHz
[SOURce:]FREQuency:SPAN 300 MHz
```
2. Select linear or logarithmic spacing.


```
[SOURce:]SWEep[:FREQuency]:SPACing LIN
```
3. Set the step width and dwell time.


```
[SOURce:]SWEep[:FREQuency]:STEP:LINear 20 MHz
[SOURce:]SWEep[:FREQuency]:DWELL 12 ms
```
4. Select the trigger mode.


```
TRIGger:]FSWep:SOURce SINGLE
```

5. Select the sweep mode and activate the sweep.

```
[SOURce:]SWEep[:FREQuency]:MODE AUTO
[SOURce:]FREQuency:MODE SWEep
```

6. Trigger the sweep.

```
[SOURce:]SWEep[:FREQuency]:EXECute
```



It is recommended that you switch off the "Start/Stop Display Update" for optimum sweep performance, especially with short dwell times (`SYSTem:DISPlay:UPDate OFF`).

<code>[:SOURce<hw>]:SWEep[:FREQuency]:DWELI</code>	778
<code>[:SOURce<hw>]:SWEep[:FREQuency]:EXECute</code>	779
<code>[:SOURce<hw>]:SWEep[:FREQuency]:MODE</code>	779
<code>[:SOURce<hw>]:SWEep[:FREQuency]:POINTs</code>	780
<code>[:SOURce<hw>]:SWEep[:FREQuency]:RETRace</code>	780
<code>[:SOURce<hw>]:SWEep[:FREQuency]:RUNNing?</code>	781
<code>[:SOURce<hw>]:SWEep[:FREQuency]:SHAPE</code>	781
<code>[:SOURce<hw>]:SWEep[:FREQuency]:SPACing</code>	781
<code>[:SOURce<hw>]:SWEep[:FREQuency]:STEP[:LINear]</code>	782
<code>[:SOURce<hw>]:SWEep[:FREQuency]:STEP:LOGarithmic</code>	783
<code>[:SOURce<hw>]:SWEep:POWER:DWELI</code>	784
<code>[:SOURce<hw>]:SWEep:POWER:EXECute</code>	784
<code>[:SOURce<hw>]:SWEep:POWER:MODE</code>	784
<code>[:SOURce<hw>]:SWEep:POWER:POINTs</code>	785
<code>[:SOURce<hw>]:SWEep:POWER:RETRace</code>	786
<code>[:SOURce<hw>]:SWEep:POWER:RUNNing?</code>	786
<code>[:SOURce<hw>]:SWEep:POWER:SHAPE</code>	786
<code>[:SOURce<hw>]:SWEep:POWER:SPACing:MODE?</code>	787
<code>[:SOURce<hw>]:SWEep:POWER:STEP[:LOGarithmic]</code>	787
<code>[:SOURce<hw>]:SWEep:RESet[:ALL]</code>	787

`[:SOURce<hw>]:SWEep[:FREQuency]:DWELI <Dwell>`

Sets the time taken for each frequency step of the sweep.

The keyword `[:FREQuency]` can be omitted (see example). The command is then SCPI-compliant.

Tip: It is recommended to switch off the "Display Update" for optimum sweep performance especially with short dwell times (`SYSTem:DISPlay:UPDate OFF`).

Parameters:

<code><Dwell></code>	float
	Range: 2E-3 to 100
	Increment: 100E-6
	*RST: 15E-3

Example:

```
SWE:DWEL 12 ms
sets a dwell time of 12 ms for a frequency sweep at the RF output.
```

Manual operation: See "Dwell Time - Frequency Sweep" on page 267

[:SOURce<hw>]:SWEep[:FREQuency]:EXECute

Starts an RF frequency sweep cycle manually.

The command is only effective in single mode.

Example:

```
TRIG:FSW:SOUR SING
SOUR:SWE:FREQ:MODE AUT
SWE:FREQ:EXEC
```

triggers a frequency sweep at the RF output.

Usage: Event

Manual operation: See "Execute Single Sweep - Frequency Sweep" on page 265

[:SOURce<hw>]:SWEep[:FREQuency]:MODE <Mode>

Sets the sweep mode.

The keyword [:FREQuency] can be omitted (see example). The command is then SCPI-compliant.

Parameters:

<Mode>

AUTO | MANual | STEP

AUTO

Each trigger triggers exactly one complete sweep.

MANual

The trigger system is not active. Each frequency step of the sweep is triggered individually, either by varying the "Current Frequency" value using the rotary knob under manual control or by means of a `FREQ:MAN` command under remote control. With manual control, the frequency increases or decreases (depending on the direction of the rotary encoder) by the value specified under `FREQ:STEP:INCRement`. With remote control, the frequency is set directly with the command `:FREQ:MAN`.

STEP

Each trigger triggers one sweep step only (Mode Single Step). The frequency increases by the value entered under `SOUR:SWE:FREQ:STEP:LIN` (linear spacing) or `...:STEP:LOG` (logarithmic spacing).

*RST: AUTO

Example:

```
SWE:MODE AUTO
```

selects **Mode Auto** for a frequency sweep at the RF output.

Manual operation: See "Mode - RF Frequency Sweep" on page 262

[[:SOURce<hw>]:SWEep[:FREQUENCY]:POINts <Points>

Determines the number of steps for the RF frequency sweep within the sweep range.

This parameter always applies to the currently set sweep spacing and correlates with the step size as follows:

- for linear sweeps

$$\text{freq_points} = (f_{\text{SPAN}} / \text{step_lin}) + 1$$
 To determine the step size, use the command [SWE:STEP\[:LIN\]](#).
- logarithmic sweeps and $f_{\text{START}} < f_{\text{STOP}}$

$$\text{freq_points} = ((\log f_{\text{STOP}} - \log f_{\text{START}}) / \log \text{step_log}) + 1$$
 To determine the logarithmic step size, use the command [SWE:STEP:LOG](#).

If you change the number of sweep points, the step size changes accordingly. The sweep range remains the same.

Parameters:

<Points> integer
 Range: 2..max

Example:

```
FREQ:STAR
sets the start frequency to 100 MHz.
FREQ:STOP
sets the stop frequency to 500 MHz.
SWE:SPAC LIN
sets linear sweep spacing.
SWE:POIN 401
sets 401 sweep steps for linear sweep spacing. The sweep step
width (STEP) is automatically set to 1 MHz.
```

[[:SOURce<hw>]:SWEep[:FREQUENCY]:RETRace <State>

Activates that the signal changes to the start frequency value while it is waiting for the next trigger event.

You can enable this feature, when you are working with sawtooth shapes in sweep mode "Single" or "External Single".

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 0

Example:

```
TRIG0:SWE:SOUR SING
FREQ:MODE SWE
SWE:SHAP SAWT
SWE:RETR ON
activates retrace function, i.e. the frequency changes to the
value at start frequency while waiting for the next trigger event.
```

[:SOURce<hw>]:SWEep[:FREQuency]:RUNNing?

Queries the current state of the frequency sweep mode.

Return values:

<State> 0 | 1 | OFF | ON

Example:

SWE:RUNN?

Response "1": signal generation in level sweep active.

Usage:

Query only

[:SOURce<hw>]:SWEep[:FREQuency]:SHAPe <Shape>

Sets the cycle mode for a sweep sequence (shape).

Parameters:

<Shape> SAWTooth | TRIangle

SAWTooth

One sweep runs from start to stop frequency. Each subsequent sweep starts at the start frequency, i.e. the shape of the sweep sequence resembles a sawtooth.

TRIangle

One sweep runs from start to stop frequency and back, i.e. the shape of the sweep resembles a triangle. Each subsequent sweep starts at the start frequency.

*RST: SAWTooth

Example:

SOUR:SWE:SHAP TRI

selects the sweep cycle with alternating ascending and descending sweep directions.

Manual operation: See "[Shape - RF Frequency Sweep](#)" on page 266

[:SOURce<hw>]:SWEep[:FREQuency]:SPACing <Spacing>

Selects the mode for the calculation of the frequency sweep intervals. The frequency increases or decreases by this value at each step.

The keyword [:FREQuency] can be omitted. Then the command is SCPI-compliant.

Parameters:

<Spacing> LINear | LOGarithmic

LINear

With the linear sweep, the step width is a fixed frequency value which is added to the current frequency. The step width for linear sweep is entered in Hz (see [:SOURce<hw>]:SWEep[:FREQuency]:STEP[:LINear] on page 782).

LOGarithmic

With the logarithmic sweep, the step width is a constant fraction of the current frequency. This fraction is added to the current frequency. The logarithmic step width is entered in % (see [:SOURce<hw>]:SWEep[:FREQuency]:STEP:LOGarithmic on page 783).

*RST: LINear

Example:

SWE:SPAC LIN

selects linear sweep spacing for a frequency sweep at the RF output.

Manual operation: See "Spacing - Frequency Sweep" on page 266

[[:SOURce<hw>]:SWEep[:FREQuency]:STEP[:LINear] <Linear>

Sets the step size for linear RF frequency sweep steps.

This parameter is related to the number of steps ([:SOURce<hw>]:SWEep[:FREQuency]:POINTS) within the sweep range as follows:

$$f_{\text{START}} < f_{\text{STOP}}$$

$$\text{freq_points} = (f_{\text{SPAN}} / \text{step_lin}) + 1$$

If you change the step size, the number of steps changes accordingly. The sweep range remains the same.

The keywords [:FREQuency] and [:LINear] can be omitted. The command is then SCPI-compliant.

Parameters:

<Linear> float

Range: full frequency range

Increment: see the data sheet: RF characteristics > Resolution of setting

Example:

```
FREQ:STAR 1GHz
sets the start frequency to 1 GHz.
FREQ:STOP 5GHz
sets the stop frequency to 5 GHz.
SWE:SPAC LIN
sets linear sweep spacing.
SWE:STEP 2 MHz
sets the step width for linear sweep spacing to 2 MHz (RF
sweep) at the RF output. The number of sweep steps for linear
sweep spacing (POINTS) is automatically set to 2001.
```

Manual operation: See "[Step Lin/Log - Frequency Sweep](#)" on page 267

[[:SOURce<hw>]:SWEep[:FREQUENCY]:STEP:LOGarithmic <Logarithmic>

Sets a logarithmically determined sweep step size for the RF frequency sweep. It is expressed in percent and you must enter the *value* and the unit *PCT* with the command.

The frequency is increased by a logarithmically calculated fraction of the current frequency according to:

$$\text{step_log}_{n+1} = f_n + \text{step_log}_n \times f_n$$

$$f_{n+1} = f_n + \text{step_log}_{n+1}$$

with $f_{\text{START}} < f_{\text{STOP}}$ and $n = \text{number of sweep steps}$

This parameter correlates with the number of steps [SWE:FREQ:POIN](#) within the sweep range as follows:

$$\text{freq_points} = ((\log f_{\text{STOP}} - \log f_{\text{START}}) / \log \text{step_log}) + 1$$

If you change the step size, the number of steps changes accordingly. The sweep range remains the same.

Parameters:

<Logarithmic>	float
Range:	0.01 to 100
Increment:	1E-3
*RST:	1

Example:

```
FREQ:STAR 1GHz
sets the start frequency to 1 GHz.
FREQ:STOP 5GHz
sets the stop frequency to 5 GHz.
SWE:SPAC LOG
sets logarithmic sweep spacing.
SWE:STEP:LOG 10PCT
sets the step width for logarithmic sweep spacing to 10% of the
previous frequency in each instance (for a frequency sweep).
```

Manual operation: See "[Step Lin/Log - Frequency Sweep](#)" on page 267

[:SOURce<hw>]:SWEep:POWer:DWELI <Dwell>

Sets the time taken for each level step of the sweep.

Tip: It is recommended to switch off the "Display Update" for optimum sweep performance especially with short dwell times ([SYSTem:DISPlay:UPDate OFF](#)).

Parameters:

<Dwell> float
Range: 1E-3 to 100
Increment: 100E-6
*RST: 15E-3

Example: `SWE:POW:DWEL 12 ms`
sets a dwell time of 12 ms for a level sweep at the RF output.

Manual operation: See "[Dwell Time - Level Sweep](#)" on page 272

[:SOURce<hw>]:SWEep:POWer:EXECute

Triggers a sweep.

Example: `SWE:POW:EXEC`
triggers a level sweep at the RF output.

Usage: Event

Manual operation: See "[Execute Single Sweep - Level Sweep](#)" on page 271

[:SOURce<hw>]:SWEep:POWer:MODE <Mode>

Sets the cycle mode of the level sweep.

Parameters:

<Mode> AUTO | MANual | STEP

AUTO

Each trigger triggers exactly one complete sweep.

MANual

The trigger system is not active. Each level step of the sweep is triggered individually, either by varying the "Current Level" value using the rotary knob under manual control or by means of a `POW:MAN` command under remote control.

With manual control, the level increases or decreases (depending on the direction of the rotary encoder) by the value specified under `SOUR:SWE:POW:STEP`. With remote control, the level increases by the value specified under `SWEep:POW:STEP` which each sent `:POW:MAN` command, irrespective the value entered there.

STEP

Each trigger triggers one sweep step only. The level increases by the value entered under `:SWEep:POWer:STEP`.

*RST: AUTO

Example:

`SWE:POW:MODE AUTO`

selects Mode Auto for a level sweep at RF output.

Manual operation: See "[Mode - Level Sweep](#)" on page 269

[[:SOURce<hw>]:SWEep:POWer:POINts <Points>

Determines the number of steps for the RF level sweep within the sweep range.

This parameter always applies to the currently set sweep spacing and correlates with the step size as follows:

$$\text{pow_points} = (\text{f}_{\text{STOP}} - \text{f}_{\text{START}} / \text{step_log}) + 1$$

To determine the step size use the command `SWE:POW:STEP[:LOG]`.

If you change the number of sweep points, the step size changes accordingly. The sweep range remains the same.

Parameters:

<Points> integer

Range: 2...max

Example:

`POW:STAR - 30 dBm`

sets the start frequency to -30 dBm.

`POW:STOP - 10 dBm`

sets the stop frequency to -10 dBm.

`SWE:POW:POIN 20`

sets 20 sweep steps. The sweep step width (`STEP`) is automatically set to 1 dB.

[:SOURce<hw>]:SWEep:POWer:RETRace <State>

Activates that the signal changes to the start level value while it is waiting for the next trigger event.

You can enable this feature, when you are working with sawtooth shapes in sweep mode "Single" or "External Single".

Parameters:

<State> 0 | 1 | OFF | ON
*RST: 0

Example:

```
TRIG0:SWE:SOUR SING
POW:MODE SWE
SWE:POW:SHAP SAWT
SWE:POW:RETR ON
```

activates retrace function, i.e. the level changes to the value at start level while waiting for the next trigger event.

[:SOURce<hw>]:SWEep:POWer:RUNNing?

Queries the current state of the level sweep mode.

Return values:

<State> 0 | 1 | OFF | ON

Example:

```
SWE:POW:RUNN?
```

Response "1": signal generation in level sweep active.

Usage:

Query only

[:SOURce<hw>]:SWEep:POWer:SHAPE <Shape>

Sets the cycle mode for a sweep sequence (shape).

Parameters:

<Shape> SAWTooth | TRIangle

SAWTooth

One sweep runs from the start level to the stop level. The subsequent sweep starts at the start level again, i.e. the shape of sweep sequence resembles a sawtooth.

TRIangle

One sweep runs from start to stop level and back, i.e. the shape of the sweep resembles a triangle. Each subsequent sweep starts at the start level again.

*RST: SAWTooth

Example:

```
SOUR:SWE:POW:SHAP TRI
```

selects the sweep cycle with alternating ascending and descending sweep directions.

Manual operation: See ["Shape - RF Level Sweep"](#) on page 272

[[:SOURce<hw>]:SWEep:POWer:SPACing:MODE?

Queries the sweep spacing mode. The sweep spacing for level sweeps is always linear.

Return values:

<Mode> LINear
*RST: LINear

Example:

SWE:POW:SPAC:MODE?
queries the sweep spacing for a level sweep at RF output.
Result: LIN
linear spacing

Usage: Query only

[[:SOURce<hw>]:SWEep:POWer:STEP[:LOGarithmic] <Logarithmic>

Sets a logarithmically determined sweep step size for the RF level sweep. It is expressed in decibels and you must enter the *value* and the unit *dB* with the command.

The level is increased by a logarithmically calculated fraction of the current level according to:

$$\text{step_size}_{n+1} = \text{Level}_n + \text{step_size}_n \times \text{Level}_n$$

$$\text{Level}_{n+1} = \text{Level}_n + \text{step_size}_{n+1}$$

with $\text{Level}_{\text{START}} < \text{level}_{\text{STOP}}$, $\text{step_size} = \text{SWE:POW:STEP[:LOG]}$ and $n =$ number of sweep steps

This parameter correlates with the number of steps **SWE:POW:POIN** within the sweep range as follows:

$$\text{level_points} = ((\text{Level}_{\text{STOP}} - \text{Level}_{\text{START}}) / \text{step_size}) + 1)$$

If you change the step size, the number of steps changes accordingly. The sweep range remains the same.

Parameters:

<Logarithmic> float
Increment: 0.01
*RST: 1

Example:

SWE:POW:STEP 10dB
sets the step width for logarithmic sweep spacing to 10 dB of the previous level in each instance (for a level sweep).

Manual operation: See "[Step - Level Sweep](#)" on page 272

[[:SOURce<hw>]:SWEep:RESet[:ALL]

Resets all active sweeps to the starting point.

- Example:** SWE:RES
resets all active sweeps to the starting point.
- Usage:** Event
- Manual operation:** See "[Reset Sweep](#)" on page 258

7.17 STATus Subsystem

This system contains the commands for the status reporting system. See also [Chapter 6.5, "Status Reporting System"](#), on page 473 for detailed information.

*RST on page 486 has no effect on the status registers.

Value ranges

- Queries return the current value of the respective register, which permits a check of the device status.
Return values: A decimal value in the range 0 to 32767 ($=2^{15}-1$)
- The configuration commands set the respective register thus determining which status changes of the R&S SMJ cause the status registers to be changed.
Setting values: A decimal value in the range 0 to 32767 ($=2^{15}-1$)

:STATus:OPERation:CONDition.....	788
:STATus:OPERation:ENABLE.....	789
:STATus:OPERation[:EVENT].	789
:STATus:OPERation:NTRansition.....	789
:STATus:OPERation:PTRansition.....	789
:STATus:PRESet.....	790
:STATus:QUEStionable:CONDition.....	790
:STATus:QUEStionable:ENABLE.....	790
:STATus:QUEStionable[:EVENT].	790
:STATus:QUEStionable:NTRansition.....	791
:STATus:QUEStionable:PTRansition.....	791
:STATus:QUEue[:NEXT]?	791

:STATus:OPERation:CONDition <Condition>

Sets the content of the CONDition part of the STATus:OPERation register. This part contains information on the action currently being performed in the instrument. The content is not deleted after being read out because it indicates the current hardware status.

Parameters:

<Condition> string

Example: :STATus:OPERation:CONDition?
queries the Status:Operation:Condition register.

:STATus:OPERation:ENABLE <Enable>

Sets the bits of the ENABLE part of the STATus:OPERation register. This setting determines which events of the Status-Event part are forwarded to the sum bit in the status byte. These events can be used for a service request.

Parameters:

<Enable> string

Example:

:STAT:OPER:ENAB 32767

all events are forwarded to the sum bit of the status byte.

:STATus:OPERation[:EVENT] <Event>

Queries the content of the EVENT part of the STATus:OPERation register. This part contains information on the actions performed in the instrument since the last readout. The content of the EVENT part is deleted after being read out.

Parameters:

<Event> string

Example:

:STAT:OPER:EVEN?

queries the STATus:OPERation:EVENT register.

:STATus:OPERation:NTRansition <Ntransition>

Sets the bits of the NTRansition part of the STATus:OPERation register. If a bit is set, a transition from 1 to 0 in the condition part causes an entry to be made in the EVENT part of the register. The disappearance of an event in the hardware is thus registered, for example the end of an adjustment.

Parameters:

<Ntransition> string

Example:

:STAT:OPER:NTR 0

a transition from 1 to 0 in the condition part of the Status:Operation register does not cause an entry to be made in the EVENT part.

:STATus:OPERation:PTRansition <Ptransition>

Sets the bits of the PTRansition part of the STATus:OPERation register. If a bit is set, a transition from 0 to 1 in the condition part causes an entry to be made in the EVENT part of the register. A new event in the hardware is thus registered, for example the start of an adjustment.

Parameters:

<Ptransition> string

Example:

:STAT:OPER:PTR 32767

all transitions from 0 to 1 in the condition part of the Status:Operation register cause an entry to be made in the EVENT part.

:STATus:PRESet <Preset>

Resets the status registers. All PTRansition parts are set to FFFFh (32767), i.e. all transitions from 0 to 1 are detected. All NTRansition parts are set to 0, i.e. a transition from 1 to 0 in a CONDition bit is not detected. The ENABLE parts of STATus:OPERation and STATus:QUEStionable are set to 0, i.e. all events in these registers are not passed on.

Parameters:

<Preset> string

Example:

STAT:PRESet
resets the status registers.

:STATus:QUEStionable:CONDition <Condition>

Queries the content of the CONDition part of the STATus:QUEStionable register. This part contains information on the action currently being performed in the instrument. The content is not deleted after being read out since it indicates the current hardware status.

Parameters:

<Condition> string

Example:

:STATus:QUEStionable:CONDition?
queries the Status:Questionable:Condition register.

:STATus:QUEStionable:ENABLE <Enable>

Sets the bits of the ENABLE part of the STATus:QUEStionable register. This setting determines which events of the Status-Event part are enabled for the sum bit in the status byte. These events can be used for a service request.

Parameters:

<Enable> string

Example:

STAT:OPER:ENAB 1
problems when performing an adjustment cause an entry to be made in the sum bit.

:STATus:QUEStionable[:EVENT] <Event>

Queries the content of the EVENT part of the STATus:QUEStionable register. This part contains information on the actions performed in the instrument since the last readout. The content of the EVENT part is deleted after being read out.

Parameters:

<Event> string

Example:

STAT:QUES:EVENT?
queries the Status:Questionable:Event register.

:STATus:QUEStionable:NTRansition <Ntransition>

Sets the bits of the NTRansition part of the STATus:QUEStionable register. If a bit is set, a transition from 1 to 0 in the condition part causes an entry to be made in the EVENT part of the register.

Parameters:

<Ntransition> string

Example:

```
STAT:OPER:NTR 0
```

a transition from 1 to 0 in the condition part of the Status:Questionable register does not cause an entry to be made in the EVENT part

:STATus:QUEStionable:PTRansition <PTransition>

Sets the bits of the PTRansition part of the STATus:QUEStionable register. If a bit is set, a transition from 1 to 0 in the condition part causes an entry to be made in the EVENT part of the register.

Parameters:

<PTransition> string

Example:

```
:STAT:OPER:PTR 32767
```

all transitions from 0 to 1 in the condition part of the Status:Questionable register cause an entry to be made in the EVENT part

:STATus:QUEue[:NEXT]?

Queries the oldest entry in the error queue and then deletes it. Positive error numbers denote device-specific errors, and negative error numbers denote error messages defined by SCPI. If the error queue is empty, 0 ("No error") is returned.

The command is identical to [:SYSTem:ERRor\[:NEXT\]?](#) on page 794.

Return values:

<Next> string

Example:

```
:STATus:QUEue?
```

queries the oldest entry in the error queue.
Response: 0, 'no error'
no errors have occurred since the error queue was last read out

Usage: Query only

Manual operation: See "[History](#)" on page 93

7.18 SYSTem Subsystem

The SYSTem subsystem contains a series of commands for general functions which do not directly affect signal generation.

:SYSTem:ERRor:ALL?	792
:SYSTem:ERRor:CODE:ALL?	793
:SYSTem:ERRor:CODE[:NEXT]?	793
:SYSTem:ERRor:COUnT?	794
:SYSTem:ERRor[:NEXT]?	794
:SYSTem:SERRor?	794
:SYSTem:COMMunicate:GPIB:LTERminator	795
:SYSTem:COMMunicate:GPIB[:SELF]:ADDRes	795
:SYSTem:COMMunicate:NETWork[:COMMOn]:WORKgrouP	795
:SYSTem:COMMunicate:NETWork[:IPADdress]:DNS	796
:SYSTem:COMMunicate:NETWork:STATus?	796
:SYSTem:COMMunicate:NETWork:REStart	796
:SYSTem:COMMunicate:GPIB:RESourCe?	796
:SYSTem:COMMunicate:NETWork:RESourCe?	796
:SYSTem:COMMunicate:HISLip:RESourCe?	797
:SYSTem:COMMunicate:SOCKet:RESourCe?	797
:SYSTem:PROTect<ch>[:STATe]	797
:SYSTem:STARtup:COMPLete?	798
:SYSTem:DISPlay:UPDate	798
:SYSTem:DATE	798
:SYSTem:HCLear	799
:SYSTem:TIME	799
:SYSTem:TIME:ZONE	799
:SYSTem:TIME:ZONE:CATalog?	800
:SYSTem:VERSiOn?	800
:SYSTem:BIOS:VERSiOn?	800
:SYSTem:OSYSem?	800
:SYSTem:MMEMory:PATH:USER?	801

:SYSTem:ERRor:ALL?

Queries the error/event queue for all unread items and removes them from the queue. The response is a comma separated list of error number and a short description of the error in FIFO order.

Positive error numbers are instrument-dependent. Negative error numbers are reserved by the SCPI standard.

Return values:

<All> string
 List of: Error/event_number,"Error/event_description">[:Device-dependent info]"
 If the queue is empty, the response is 0, "No error"

Example: `SYST:ERR:ALL?`
 queries all entries in the error queue.
 Response: 0, 'no error'
 No errors have occurred since the error queue was last read out.

Usage: Query only

Manual operation: See "[Del. volatile](#)" on page 92

:SYSTem:ERRor:CODE:ALL?

Queries all entries in the error queue and then deletes them. Only the error numbers are returned and not the entire error text.

Return values:

<All> string

0
 "No error", i.e. the error queue is empty

positive value
 Positive error numbers denote device-specific errors

negative value
 Negative error numbers denote error messages defined by SCPI.

Example: `SYST:ERR:CODE:ALL`
 queries all entries in the error queue.
 Response: 0
 no errors have occurred since the error queue was last read out.

Usage: Query only

:SYSTem:ERRor:CODE[:NEXT]?

Queries the oldest entry in the error queue and then deletes it. Only the error number is returned and not the entire error text.

Return values:

<Next> string

0
 "No error", i.e. the error queue is empty

positive value
 Positive error numbers denote device-specific errors

negative value
 Negative error numbers denote error messages defined by SCPI.

Example: `SYST:ERR:CODE`
 queries the oldest entry in the error queue.
 Response: 0
 No errors have occurred since the error queue was last read out.

Usage: Query only

:SYSTem:ERRor:COUNT?

Queries the number of entries in the error queue. If the error queue is empty, '0' is returned.

Return values:

<Count> string

Example:

SYST:ERR:COUN

queries the number of entries in the error queue.

Response: 1

One error has occurred since the error queue was last read out.

Usage: Query only

:SYSTem:ERRor[:NEXT]?

Queries the error/event queue for the oldest item and removes it from the queue. The response consists of an error number and a short description of the error.

Positive error numbers are instrument-dependent. Negative error numbers are reserved by the SCPI standard.

Return values:

<Next> string
Error/event_number,"Error/event_description>[:Device-dependent info]"
If the queue is empty, the response is 0, "No error"

Example:

SYST:ERR?

queries the oldest entry in the error queue.

Response: 0, 'no error'

No errors have occurred since the error queue was last read out.

Usage: Query only

Manual operation: See "[History](#)" on page 93

:SYSTem:SERRor?

This command returns a list of all errors existing at the time when the query is started. This list corresponds to the display on the info page under manual control.

Return values:

<StaticErrors> string

Example: `SYSTEM:SERRor?`
 queries all errors existing in the error queue.
 Response: -221, 'Settings conflict', 153,
 'Input voltage out of range'
 the two returned errors have occurred since the error queue was
 last queried.

Usage: Query only

:SYSTEM:COMMunicate:GPIB:LTERminator <LTerminator>

Sets the terminator recognition for remote control via GPIB bus.

Parameters:

<LTerminator> STANdard | EOI

EOI

The terminator must be sent together with the line message EOI (End of Line). This setting is recommended for binary block transmissions where a character could coincidentally have the value LF (Line Feed) but is not intended as the terminator. This setting must be selected for block data with undefined length.

STANdard

An LF (Line Feed) is recognized as the terminator regardless of whether it is sent with or without EOI.

*RST: STANdard

Example: `SYSTEM:COMMunicate:GPIB:LTERminator EOI`
 only a character which is sent simultaneously with the line mes-
 sage EOI is accepted as the terminator.

:SYSTEM:COMMunicate:GPIB[:SELF]:ADDRESS <Address>

Sets the GPIB address.

Parameters:

<Address> integer
 Range: 1 to 30
 *RST: 28

Example: `SYSTEM:COMMunicate:GPIB:SELF:ADDRESS 28`
 sets GPIB address.

Manual operation: See "[GPIB channel address](#)" on page 146

:SYSTEM:COMMunicate:NETWork[:COMMON]:WORKgroup <Workgroup>

Sets the individual workgroup name of the instrument.

Parameters:

<Workgroup> string

Example: `SYSTEM:COMMunicate:NETWork:COMMon:WORKgroup`
 `'TEST_09'`
 sets the workgroup name

:SYSTEM:COMMunicate:NETWork[:IPADdress]:DNS <DNS>

Determines the net DNS server to resolve the name.

Parameters:

<DNS> string

Example: `SYST:COMM:NETW:IPAD:DNS 123.456.0.1`

:SYSTEM:COMMunicate:NETWork:STATus?

Queries the network configuration state.

Return values:

<State> 0 | 1 | OFF | ON

Usage: Query only

:SYSTEM:COMMunicate:NETWork:REStart

Restarts the network connection to the instrument, terminates the connection and sets it up again.

Example: `SYSTEM:COMMunicate:NETWork:REStart`

Usage: Event

:SYSTEM:COMMunicate:GPIB:RESource?

Queries the visa resource string for remote control via the GPIB interface.

To change the GPIB address, use the command `:SYSTEM:COMMunicate:GPIB[:SELF]:ADDRESS`.

Return values:

<Resource> string

Example: `SYSTEM:COMMunicate:GPIB:RESource?`
 queries the VISA resource string.
 Response: "GPIB::28::INSTR"

Usage: Query only

Manual operation: See "[Visa Resource Strings](#)" on page 147

:SYSTEM:COMMunicate:NETWork:RESource?

Queries the VISA resource string, used for remote control of the instrument with VXI-11 protocol.

Return values:

<Resource> string

Example:

SYSTEM:COMMunicate:NETWork:RESource?
Response: "TCPIP::192.1.2.3::INSTR"

Usage:

Query only

Manual operation: See "[Visa Resource Strings](#)" on page 147

:SYSTEM:COMMunicate:HISLip:RESource?

Queries the VISA resource string, used for remote control of the instrument with HiSLIP protocol.

Return values:

<Resource> string

Example:

SYSTEM:COMMunicate:HISLip:RESource?
Response: "TCPIP::192.1.2.3::hislip0::INSTR"

Usage:

Query only

Manual operation: See "[Visa Resource Strings](#)" on page 147

:SYSTEM:COMMunicate:SOCKet:RESource?

Queries the visa resource string for remote control via LAN interface, using TCP/IP socket protocol.

Return values:

<Resource> string

Example:

SYSTEM:COMMunicate:SOCKet:RESource?
Response: "TCPIP::10.113.1.150::5025::SOCKET"

Usage:

Query only

Manual operation: See "[Visa Resource Strings](#)" on page 147

:SYSTEM:PROTect<ch>[:STATe] <State>[, <Key>]

Activates/deactivates the specified protection level.

Parameters:

<State> select
 *RST: 1

Setting parameters:**<Key>** integer

The respective functions are disabled when the protection level is activated. No password is required for activation. A password must be entered to deactivate the protection level. The password for the first level is 123456.

This protection level can be used to lock-out internal adjustments.

Example:

```
SYSTem:PROTect1:STATe ON
```

activates protection level 1. Internal adjustments are only possible after deactivating the lock-out.

```
SYSTem:PROTect1:STATe OFF,123456
```

deactivates protection level 1. Internal adjustments are enabled again.

Manual operation: See "[Protection Level/Password](#)" on page 149

:SYSTem:STARtup:COMPLete?

Queries if the startup of the instrument is completed.

Return values:

<Complete> 0 | 1 | OFF | ON

*RST: 0

Example:

```
SYST:STAR:COMP
```

Response: 1

The startup of the instrument is completed.

Usage: Query only

:SYSTem:DISPlay:UPDate <Update>

Switches the update of the display on/off. A switchover from remote control to manual control always sets the status of the update of the display to ON.

Parameters:

<Update> 0 | 1 | OFF | ON

*RST: ON

Example:

```
SYST:DISP:UPD OFF
```

switches update of displayed parameter values off.

Manual operation: See "[Display Update is On/Off](#)" on page 138

:SYSTem:DATE <Year>, <Month>, <Day>

Queries or sets the date for the instrument-internal calendar.

This parameter is protected, in order to prevent accidental changes.

It can be accessed with protection level 1, see `:SYSTem:PROTect<ch>[:STATe]` on page 797.

Parameters:

<Year> <year>,<month>,<day>
 <Month> integer
 Range: 1 to 12
 <Day> integer
 Range: 1 to 31

Example:

SYST:DATE?
 Response: "2011,05,01"
 it is the 1st of May, 2011.

:SYSTem:HCLear

Clears the history.

Example:

SYST:HCL
 Deletes the history entries.

Usage:

Event

:SYSTem:TIME <Hour>, <Minute>, <Second>

Queries or sets the time for the instrument-internal clock.

The parameter is protected, in order to prevent accidental changes.

It can be accessed with protection level 1, see `:SYSTem:PROTect<ch>[:STATe]` on page 797.

Parameters:

<Hour> 0...23,0...59,0...59
 Range: 0 to 23
 <Minute> integer
 Range: 0 to 59
 <Second> integer
 Range: 0 to 59

Example:

SYSTem:TIME?
 Response: "12,0,0" it is precisely 12 pm.

:SYSTem:TIME:ZONE <TimeZone>

Sets the time zone. You can query the list of the available time zones with `:SYSTem:TIME:ZONE:CATalog?`.

Parameters:
<TimeZone> string

:SYSTem:TIME:ZONE:CATalog?

Queries the list of available time zones.

Return values:
<Catalog>

Usage: Query only

:SYSTem:VERSion?

Queries the SCPI version the instrument's command set complies with.

Return values:
<Version> string

Example: SYST:VERS
 queries the SCPI version.
 Response: "1996"
 The instrument complies with the SCPI version from 1996.

Usage: Query only

:SYSTem:BIOS:VERSion?

Queries the BIOS version of the instrument.

Return values:
<Version> string

Example: SYSTem:BIOS:VERSion?
 queries the BIOS version.
 Response: '123456'
 the instrument operates with BIOS version 123456.

Usage: Query only

:SYSTem:OSYStem?

Queries the operating system of the instrument.

Return values:
<OperSystem> string

Example: SYSTem:OSYStem?
 Response: "Windows"

Usage: Query only

:SYSTem:MMEMory:PATH:USER?

Queries the user directory, that means the directory the instrument stores user files on.

Return values:

<PathUser> string

Example:

SYSTem:MMEMory:PATH:USER?

Response: "D:\user\

Usage:

Query only

7.19 TEST Subsystem

The TEST system contains the commands for performing the routines as well as for direct manipulation of the hardware assemblies (:TEST:DIRect).

The self tests return a "0" if the test is performed successfully, otherwise a value other than "0" is returned. None of the commands of this system have an *RST value.

NOTICE

Improper use may destroy the assembly!

The respective hardware assembly responds directly to the :TEST:DIRect command; any safety mechanisms are bypassed. The command is used for servicing purposes and should not be applied by the user.

:TEST:BB:CONNection?.....	801
:TEST<hw>:BBOut:LRATe.....	801
:TEST<hw>:BBOut:TTEST[:STATe].....	802
:TEST:CONNector:AUXio?.....	802
:TEST<hw>:DIRect.....	802

:TEST:BB:CONNection?

Queries the state of the connection between connectors USER1 and USER2.

A 0=PASS response indicates that the connection is established, whereas a response 1=FAIL stands for a faulty connection.

Return values:

<Connection> 0 | 1 | PASS | FAIL

Usage:

Query only

Manual operation: See "[Execute Baseband Connection Selftest](#)" on page 139

:TEST<hw>:BBOut:LRATe <LRate>

The command sets the interface speed.

The "External LVDS Test" is used to check the correct data transmission of the digital baseband outputs (BBOU).

An external cable connection is needed to perform this test successfully. An output must be connected to an input with the digital I/Q cable. Always an input/output pair is tested together. The input and the output can be on the same instrument, or alternatively on two different instruments. Given an arbitrary cable connection, the appropriate Tx test can be activated with different interface speeds (LVDS rate).

On the connected input, this test sequence is received and can be compared with the expected test signal.

Parameters:

<LRate> float
 Range: 66E6 to 100E6
 Increment: 1E6
 *RST: 100E6

Example: TEST:BBOuT:LRATe 90MHZ
 sets the LVDS interface rate to 90 MHz

Manual operation: See "[BBOU LVDS Rate](#)" on page 139

:TEST<hw>:BBOuT:TTESt[:STATe] <State>

Activates the transmission of a known pseudo-random sequence (On).

Parameters:

<State> 0 | 1 | OFF | ON
 *RST: 0

Example: TEST:BBO:TTESt:STAT ON
 starts the transmission of a signal test sequence .

Manual operation: See "[Tx Test](#)" on page 139

:TEST:CONNector:AUXio?

The command triggers a test of the AUX IQ interface (see Service Manual Instrument, section "Performance Test"). This function is only available via remote control.

Example: TEST:CONN:AUX?

Usage: Query only

:TEST<hw>:DIRect <HW_assembly>,<subaddress>,<hex data string>

:TEST<hw>:DIRect? <HW_assembly>,<subaddress>

The respective hardware assembly responds directly to the command; any safety mechanisms are bypassed. This function is only available via remote control.

Example: TEST:DIR 'SSYN',0,#H12345678
 TEST:DIR? 'SSYN',0
 Response: #H12345678

7.20 TRIGger Subsystem

The TRIGger system contains the commands for selecting the trigger source for the RF and LF sweep. The trigger input connectors are configured in the SOURCE:INPut subsystem.

The trigger system of the R&S SMJ is a simplified implementation of the SCPI trigger system. The TRIGger system differs from the SCPI system as follows:

- No INITiate command; the instrument behaves as if INITiate:CONTinuous ON were set.
- Under TRIGger several sweep subsystems exist.

Other commands associated with the trigger system of the R&S SMJ can be found in the modulation and RF signal subsystems.

TRIGger<hw>

- Suffix TRIGger<1|2> is not permitted
- TRIGger0 activates the LF output.

Table 7-3: Cross-reference between the manual and remote control

R&S name	SCPI name	Command under manual control
AUTO	IMMediate	"Auto" mode
SINGLE	BUS	"Single" mode.
EXTernal	EXTernal	"Ext Single" and "Ext Step" mode. Use command LFO:SWEep:MODE to select between the two sweep modes.
EAuto	-	"Ext Start/Stop" mode.

:TRIGger<hw>:FSWeep:SOURce.....	804
:TRIGger<hw>:FSWeep[:IMMediate].....	804
:TRIGger<hw>:LFFSweep.....	805
:TRIGger<hw>:LFFSweep:SOURce.....	805
:TRIGger<hw>:LFFSweep:IMMediate.....	806
:TRIGger<hw>:PSWeep:SOURce.....	806
:TRIGger<hw>:PSWeep[:IMMediate].....	807
:TRIGger<hw>[:SWEep]:SOURce.....	807
:TRIGger<hw>[:SWEep][:IMMediate].....	808
:TRIGger<hw>[:IMMediate].....	809

:TRIGger<hw>:FSWeep:SOURce <Source>

Sets the trigger source for the RF frequency sweep.

The names of the parameters correspond directly to the various settings under manual control. SCPI uses other names for the parameters; these names are also accepted by the instrument. The SCPI names should be used if compatibility is an important consideration.

An overview of the various names is given in [Table 7-3](#).

Parameters:

<Source>

AUTO | IMMEDIATE | SINGLE | BUS | EXTERNAL | EAUTO

AUTO|IMMEDIATE

The trigger is free-running, i.e. the trigger condition is fulfilled continuously. As soon as one sweep is finished, the next sweep is started.

SINGLE|BUS

One complete sweep cycle is triggered by the GPIB commands `[:SOURce<hw>] :SWEep [:FREQuency] :EXECute, :TRIGger<hw>:FSWeep [:IMMEDIATE]` or `*TRG`. The mode has to be set to `AUTO (:SOURce :SWEep :FREQuency :MODE AUTO)`.

EXTERNAL

The sweep is triggered externally via the INST TRIG connector.

EAUTO

The sweep is triggered externally via the INST TRIG connector. As soon as one sweep is finished, the next sweep is started. A second trigger event stops the sweep at the current frequency, a third trigger event starts the trigger at the start frequency, and so on.

`*RST: AUTO`

Example:

`TRIG:FSW:SOUR EXT`

selects triggering with an external trigger.

Manual operation: See "[Mode - RF Frequency Sweep](#)" on page 262

:TRIGger<hw>:FSWeep[:IMMEDIATE]

Immediately starts an RF frequency sweep cycle.

The command is only effective for sweep mode "Single" (`SOUR :SWE :FREQ :MODE AUTO` in combination with `TRIG :FSW :SOUR SING`).

The command corresponds to the manual control "Execute Single Sweep".

- Example:** `SWE:FREQ:MODE AUTO`
sets the triggered sweep mode, i.e. a trigger is required to start the sweep.
- `TRIG:FSW:SOUR SING`
sets the "Single" trigger mode, i.e. a trigger starts a single sweep.
- `TRIG:FSW`
starts a single RF frequency sweep.
- Usage:** Event
- Manual operation:** See ["Execute Single Sweep - Frequency Sweep"](#) on page 265

:TRIGger<hw>:LFFSweep

- Usage:** Event
- Manual operation:** See ["Execute Single Sweep"](#) on page 257

Immediately starts an LF frequency sweep.

The command is effective in sweep mode "Single" (`LFO:SWE:MODE AUTO` in combination with `TRIG:LFFS:SOUR SING`).

:TRIGger<hw>:LFFSweep:SOURce <Source>

Sets the trigger source for the LF sweep. The trigger is triggered by the command `:SOURce:LFOOutput:SWEep[:FREQuency]EXECute`.

The names of the parameters correspond directly to the various settings under manual control. SCPI uses other names for the parameters; these names are also accepted by the instrument. The SCPI names should be used if compatibility is an important consideration.

An overview of the various names is given in the [Table 7-3](#).

Parameters:

<Source>

AUTO | IMMEDIATE | SINGLE | BUS | EXTERNAL | EAUTO

AUTO|IMMEDIATE

The trigger is free-running, i.e. the trigger condition is fulfilled continuously. As soon as one sweep is finished, the next sweep is started.

SINGLE|BUS

One complete sweep cycle is triggered by the GPIB commands `[:SOURCE<hw>] :LFOutput :SWEep [:FREQuency] : EXECute` or `*TRG`.

The mode has to be set to `AUTO ([:SOURCE<hw>] : LFOutput :SWEep [:FREQuency] :MODE)`.

EXTERNAL

The sweep is triggered externally via the INST TRIG connector.

EAUTO

The sweep is triggered externally via the INST TRIG connector. As soon as one sweep is finished, the next sweep is started. A second trigger event stops the sweep at the current frequency, a third trigger event starts the trigger at the start frequency, and so on.

*RST: AUTO

Example:

```
TRIG:LFFS:SOUR EXT
selects triggering with an external trigger.
```

:TRIGger<hw>:LFFSweep:IMMEDIATE

Immediately starts an LF frequency sweep.

The command is effective in sweep mode "Single" (`LFO:SWE:MODE AUTO` in combination with `TRIG:LFFS:SOUR SING`).

Usage: Event

Manual operation: See "[Execute Single Sweep](#)" on page 257

:TRIGger<hw>:PSWeep:SOURce <Source>

Sets the trigger source for the RF level sweep.

The names of the parameters correspond directly to the various settings under manual control. SCPI uses other names for the parameters; these names are also accepted by the instrument. The SCPI names should be used if compatibility is an important consideration.

An overview of the various names is given in [Table 7-3](#).

Parameters:

<Source>

AUTO | IMMEDIATE | SINGLE | BUS | EXTERNAL | EAUTO

AUTO|IMMEDIATE

The trigger is free-running, i.e. the trigger condition is fulfilled continuously. As soon as one sweep is finished, the next sweep is started.

SINGLE|BUS

One complete sweep cycle is triggered by the GPIB commands `[:SOURce<hw>] :SWEep:POWer:EXECute, :TRIGger<hw>:PSWeep[:IMMEDIATE]` or `*TRG`. The mode has to be set to `AUTO (:SOURce:SWEep:LEVel:MODE AUTO)`.

EXTERNAL

The sweep is triggered externally via the INST TRIG connector.

EAUTO

The sweep is triggered externally via the INST TRIG connector. As soon as one sweep is finished, the next sweep is started. A second trigger event stops the sweep at the current frequency, a third trigger event starts the trigger at the start frequency, and so on.

```
*RST:      AUTO
```

Example:

```
TRIG:PSW:SOUR EXT
selects triggering with an external trigger.
```

Manual operation: See "[Mode - Level Sweep](#)" on page 269

:TRIGger<hw>:PSWeep[:IMMEDIATE]

Immediately starts an RF level sweep.

The command is only effective for sweep mode "Single" (`SOURce:SWEep:POWer:MODE AUTO` in combination with `TRIG:PSW:SOUR SING`).

The command corresponds to the manual control "Execute Single Sweep".

Example:

```
SWE:POW:MODE AUTO
selects the triggered sweep mode, i.e. a trigger is required to
start the sweep.
TRIG:PSW:SOUR SING
sets the single trigger mode, i.e. a trigger starts a single sweep.
TRIG:PSW
starts a single RF level sweep.
```

Usage:

Event

Manual operation: See "[Execute Single Sweep - Level Sweep](#)" on page 271

:TRIGger<hw>[:SWEep]:SOURce <Source>

The command sets the trigger source for all sweeps.

The names of the parameters correspond directly to the various settings under manual control. SCPI uses other names for the parameters; these names are also accepted by the instrument. The SCPI names should be used if compatibility is an important consideration.

An overview of the various names is given in the [Table 7-3](#).

Setting parameters:

<Source>	<p>AUTO IMMEDIATE SINGLE BUS EXTERNAL EAUTO</p> <p>AUTO IMMEDIATE The trigger is free-running, i.e. the trigger condition is fulfilled continuously. As soon as one sweep is finished, the next sweep is started.</p> <p>SINGLE BUS One complete sweep cycle is triggered by the GPIB commands :SOURCE:SWEep:POWer FREQuency:EXEC, TRIGger:PSWep FSWep:IMMEDIATE or *TRG. If :SOURCE:SWEep:POWer:MODE is set to STEP, one step is executed. The mode has to be set to AUTO.</p> <p>EXTERNAL The sweep is triggered externally via the INST TRIG connector.</p> <p>EAUTO The sweep is triggered externally via the INST TRIG connector. As soon as one sweep is finished, the next sweep is started. A second trigger event stops the sweep at the current frequency, a third trigger event starts the trigger at the start frequency, and so on.</p> <p>*RST: AUTO</p>
Example:	<p>TRIG0:SOUR EXT selects triggering with an external trigger. The trigger is input via the INST TRIG connector.</p>
Usage:	Setting only
Manual operation:	See " Mode " on page 255

:TRIGger<hw>[:SWEep][:IMMEDIATE]

Starts all sweeps which are activated for the respective path. The command starts all sweeps which are activated.

The sweep to be executed depends on the respective MODE setting (:SOURCE:SWEep:POW|FREQ:MODE and :SOURCE:LFO:SWEep[:FREQ]:MODE).

The command corresponds to the manual-control command "Execute Trigger".

Example: TRIG
 starts all active sweeps.

Usage: Event

Manual operation: See ["Execute Single Sweep - Frequency Sweep"](#) on page 265

:TRIGger<hw>[:IMMEDIATE]

The command immediately starts the activated sweep.

The command performs a single sweep and therefore applies to sweep mode AUTO with sweep source SINGLe. Use the commands

TRIG:F_{SW}|L_{FFS}|P_{SW}|[:SWE]:SOUR SING, and SOUR:SWE:FREQ|POW:MODE, or SOUR:LFO:SWE:[FREQ:]MODE to set the respective single sweep. You can alternatively use an IMMEDIATE command instead of the respective SWEEP:[FREQ:]|POW:EXECUTE command.

Example: TRIG
starts all active sweeps.

Usage: Event

Manual operation: See ["Execute Single Sweep"](#) on page 257

7.21 UNIT Subsystem

The UNIT subsystem contains the commands specifying which units are valid if no unit is indicated in a command. These settings are valid for the entire instrument.

:UNIT:ANGLE <Angle>

Defines the default unit for the phase modulation angle. It is not valid for commands which determine angle values, e.g. RF phase. It does not influence the manual control parameter unit and the display.

Parameters:
<Angle> DEGRee | RADian
*RST: RADian

Example: UNIT:ANGL DEG
sets DEG as a default unit for all commands which determine angle values.

:UNIT:POWer <Power>

Defines the default unit for power parameters. This setting affects the GUI, as well as all remote control commands that determine power values.

Parameters:
<Power> V | DBUV | DBM
*RST: DBM

Example: UNIT:POW V
sets V as a default unit for all commands which determine power values.

8 Maintenance

The instrument does not need periodic maintenance. Only the cleaning of the instrument is essential. The outside of the instrument is suitably cleaned using a soft, line-free dust cloth. Make sure that the air vents are not obstructed.

WARNING

Shock hazard

Before cleaning the instrument, make sure that the instrument is switched off and disconnected from all power supplies.

NOTICE

Instrument damage caused by cleaning agents

Cleaning agents contain substances that may damage the instrument. For example, cleaning agents that contain a solvent may damage the front panel labeling, plastic parts, or the display.

Never use cleaning agents such as solvents (thinners, acetone, etc), acids, bases, or other substances.

The outside of the instrument can be cleaned sufficiently using a soft, lint-free dust cloth.

Follow the instructions in the service manual and the safety instructions when exchanging modules or ordering spares. The order no. for spare parts is included in the service manual. The service manual includes further information particularly on troubleshooting, repair, exchange of modules and alignment.

The address of our support center and a list of all Rohde & Schwarz service centers can be found at the beginning of this manual.

8.1 Storing and Packing

The storage temperature range of the instrument is given in the data sheet. If the instrument is to be stored for a longer period of time, it must be protected against dust.

Repack the instrument as it was originally packed when transporting or shipping. The two protective foam plastic parts prevent the control elements and connectors from being damaged. The antistatic packing foil avoids any undesired electrostatic charging to occur.

If you do not use the original packaging, use a sturdy cardboard box of suitable size and provide for sufficient padding to prevent the instrument from slipping inside the package. Wrap antistatic packing foil around the instrument to protect it from electrostatic charging.

9 Status Information, Error Messages and Troubleshooting

The R&S SMJ distinguishes between a variety of different messages such as status messages, error messages, warnings, or information that are displayed in the "Info" line on the screen, and also entered in the error/event queue of the status reporting system.

This section describes the information and status messages concerning the operating status of the instrument and the types of error messages and warnings. Some error messages require that the error must be eliminated before correct instrument operation can be ensured. The info window with a list of current messages and a detailed description of each message can be opened with the INFO key.

In the remote control mode, error messages are entered in the error/event queue of the status reporting system and can be queried with the command `SYSTEM:ERROR?`. If the error queue is empty, 0 ("No error") is returned. The status reporting system is described in detail in [Chapter 6.5, "Status Reporting System"](#), on page 473.

Section [Chapter 9.5, "Resolving Network Connection Failures"](#), on page 819 provides recommended solutions for network connection errors, and helps you to collect the information required for quick and efficient support.

9.1 Status Information

The status messages are displayed in the header section of the screen. The status information gives the user an overview of the main operating states and settings of the instrument. The states are indicated for information only and do not necessitate any action by the user. Status information is displayed between the frequency and level fields, at the left of the info line or in the info line itself.

9.1.1 Status information displayed between the frequency and level fields

This section gives an overview of the status messages displayed between the frequency and level fields.

RF OFF

The RF output is switched off

MOD OFF

All modulations are switched off

FREQ OFFSET

A frequency offset is set.

The frequency entered and displayed in the "Frequency" field takes any set frequency offset into consideration, e.g. an offset set for a downstream instrument. This means that with a frequency offset the frequency displayed in the header does not correspond to the frequency at the RF output, but rather to the frequency at the output of the downstream instrument.

This allows the target frequency at the output of a downstream instrument to be entered in the frequency field. The signal generator changes the RF output frequency according to the entered offset.

However, the frequency entered and displayed in the "Frequency/Phase" dialog of the "RF" function block always corresponds to the RF output frequency. Any frequency offset is not taken into consideration.

The correlation is as follows:

Freq in header = RF output frequency (= Freq in dialog) + Freq offset (= Offset in dialog)

OVERLOAD

The power of the external signal applied to the RF output is too high. The overload protection is tripped and the connection between the RF output and attenuator is interrupted. The overload protection is reset by pressing the RF ON/OFF key. The RF input is activated when the overload protection is reset.

LEVEL OFFSET

A level offset is set.

The level entered and displayed in the "Level" field takes the offset of any downstream attenuators/amplifiers into consideration by way of calculation. This means that with a level offset the level displayed in the header does not correspond to the level at the RF output, but rather to the level at the output of the downstream instrument.

This allows the target level at the output of downstream instruments to be entered. The signal generator changes the RF output level according to the set offset.

However, the level entered and displayed in the "Level" dialog of the "RF" function block always corresponds to the RF output level. Any level offset is not taken into consideration.

The correlation is as follows:

Level in header = RF output level (= Level in dialog) + Level offset

EXT REF

An external reference is used.

The external signal with selectable frequency and defined level must be input at the REF IN connector. It is output at the REF OUT connector.

BUSY

A setting or calculation is executed.

9.1.2 Status information displayed to the left of the Info line

This section gives an overview of the status messages displayed to the left of the Info line.

REMOTE

Indicates that the instrument is in remote control mode.

The keys on the front panel are usable, but all parameters are in read only mode.

To return to manual control, use the LOCAL key or the command `>L`. The current command must be fully processed before the mode is switched, otherwise the instrument switches immediately back to remote control.

REM-LLO

Indicates that the instrument is in remote control mode with local lockout enabled.

The LOCAL key is locked. To set the local lockout, use the command `&LLO` (local lockout).

The keys on the front panel are usable, but all parameters are in read only mode.

To return to manual operation or to "REMOTE" state, use one of the following commands:

- `&LOCS`
switches directly from "REM-LLO" to manual operation.
- `&REMS`
changes the remote control state from "REM-LLO" to "REMOTE".
- `CALL IBLOC (generator%)` (Visual Basic command)
switches from remote control state to manual operation.

LOC-LLO

For the direct operation the state has been changed from remote control to manual operation (local state). The LOCAL key was disabled with the command `LLO` (local lockout).

With the next activating of the remote control mode, the instrument cannot be switched to manual operation by the operator. The status information changes to "REM-LLO".

The instrument can be switched to manual operation by means of remote control only (e.g. with the Visual Basic command `CALL IBLOC (generator%)`).

SYS CTRL

Indicates that the instrument controls another instrument.

9.1.3 Status information displayed in the Info line

This section gives an overview of the status messages displayed in the Info line.

RFSweep / LevelSweep / LFSweep

The indicated sweep is enabled.

ALC On / Auto / S&H

The status of the automatic level control is indicated:

- ON
automatic level control permanently on
- Auto
automatic level control is automatically adapted to the operating states
- S&H
automatic level control off, recalibration of the level whenever the level or frequency is set (sample and hold mode)

ListMode

List mode is active.

The values of the frequency/level pairs in the selected list are set for the chosen dwell time.

AttFixed

Attenuator fixed mode is active.

The uninterrupted level settings are made in a fixed range without attenuator switching. The variation range is set automatically when this mode is activated. The range is displayed under "Attenuator Fixed Range" in the "Level" dialog.

UCorr

User Correction is active.

The level is corrected by the given values in the selected user correction list. Correction is performed by the user-defined list values being added to the output level for the respective RF frequency. With frequencies which are not contained in the list, the level correction is determined by interpolation of the closest correction values.

OvenCold

The reference oscillator has not yet reached its nominal frequency.

When switching on from the STANDBY mode, the specified frequency accuracy is reached immediately. If the power switch was switched off, the reference oscillator needs some warm-up time to reach its nominal frequency. During this period of time, the output frequency does not yet reach its final value either.

9.2 Error Messages

Messages indicate errors in the instrument. They are displayed in the info line in different colors depending on their importance and display duration. Errors (e.g. no calibration data) are displayed in red, information (e.g. file not found) and warnings in black. Warnings indicate less significant errors (e.g. the instrument operates outside specified data).

9.2.1 Volatile messages

Volatile messages report automatic settings in the instrument (e.g. switching off of incompatible types of modulation) or on illegal entries that are not accepted by the instrument (e.g. range violations). They are displayed in the info line on a yellow background. They are displayed on top of status information or permanent messages.

Volatile messages do not normally demand user actions and disappear automatically after a brief period of time. They are stored in the history, however.

SCPI command: `:SYSTem:ERRor:ALL?` or `:SYSTem:ERRor[:NEXT]?`

9.2.2 Permanent messages

Permanent messages are displayed if an error occurs that impairs further instrument operation, e.g. a hardware fault. The error signaled by a permanent message must be eliminated before correct instrument operation can be ensured.

The message is displayed until the error is eliminated. It covers the status display in the info line. After error elimination, the message automatically disappears and is also recorded in the history.

SCPI command: `:SYSTem:SERRor?`

9.3 SCPI-Error Messages

The SCPI error messages are the same in all SCPI instruments. Detailed information and an overview of all error messages as defined in SCPI standard can be found in the corresponding documentation.

The errors are assigned negative numbers. The error text being entered into the error/event queue or being displayed is printed in bold face on the left together with the error code. Below the error text, there is an explanation as to the respective error.

9.4 Device-Specific Error Messages

The following table contains all error messages specific for the instrument in alphabetical order, as well as an explanation of the error situation. The positive error codes mark the errors specific of the instrument.

The device-specific error messages set bit 3 in the ESR register.



The index provides a list of the error messages sorted according to their error codes.

Error Code	Error	Description	Remedy
50	Extern reference out of range or disconnected	External reference is selected but no external signal is applied or the signal is out of range.	<ul style="list-style-type: none"> Check the selected reference signal source (internal or external) in the "Setup > Reference Oscillator" dialog. Change setting to 'internal' if no appropriate external source is available.
140	This modulation forces other modulations off	<p>A modulation has been switched on which cannot be used at the same time as an already active modulation. The previous modulation has been switched off.</p> <p>Example: Enabling modulation GSM/EDGE switches any active digital modulation off.</p>	
180	Adjustment failed	Adjustment could not be executed	The adjustment data have to be generated first by an internal or external adjustment or to be loaded into the device (see Chapter 5.2.3.1, "Internal Adjustments" , on page 130).
182	Adjustment data missing	Adjustment data are missing.	The adjustment data have to be generated first by an internal or external adjustment or to be loaded into the instrument.
183	Adjustment data invalid	Adjustment data are invalid and must be restored.	The adjustment data have to be generated again by an internal or external adjustment or to be loaded into the instrument.
200	Cannot access hardware	The data transmission to a module was unsuccessful.	The module is not installed, not properly installed or missing.
201	Hardware revision out of date	A later version of certain parts of the instrument is necessary to execute the function selected.	The driver does not support the installed version of a module.
202	Cannot access the EEPROM	A error occurs when writing or reading a EEPROM.	The EEPROM might be defect and has to be replaced.
203	Invalid EEPROM data	Reading a EEPROM is possible, however the data are inconsistent.	
204	Driver initialization failed	Initialization of a driver fails when booting the instrument firmware.	The driver is not compatible with the hardware or software configuration of the instrument.
241	No current list	There is no list selected. To execute the required operation, a list has to be selected in the related menu. If no list is available, a new list must be created.	

Error Code	Error	Description	Remedy
242	Unknown list type specified	The list type selected is not valid for the required operation. For instance, the file extension for waveform list files is *.wv. It is not possible to enter another file extension when selecting a list.	Check the selected list type.
261	Waveform Protected	The selected waveform file cannot be transferred to a controller. The waveform is produced with simulation software R&S WinIQSIM2 and is protected.	
460	Cannot open file	The selected file can not be opened.	Check the path and file name.
461	Cannot write file	The file can not be written.	Check if the file is read-only.
462	Cannot read file	The file can not be read.	Check if the file contents are compatible with the file type.
463	Filename missing	The required operation cannot be executed because the file name is not specified.	A file name has to be entered when creating a new list.
464	Invalid filename extension	The file extension is not valid for the required operation.	Check the file extension. For instance, the file extension for waveform list files is *.wv. It is not possible to enter another file extension when storing a list.
465	File contains invalid data	The selected file contains data that is not valid for the file type. The file extension determines the data that is valid for this file type. If the file extension is changed the lists are no longer recognized and the data are therefore invalid. Example: the extension of a waveform file (= *.wv) was changed to *.txt	Check the file extension.

9.5 Resolving Network Connection Failures

Several issues may cause failures in the network connection to the instrument. This section lists the most likely reasons and the recommended solutions.

Common reasons for network connection failures

- Network connecting cables and cable connectors of poor quality
- Incompatibility between the network interface of the R&S SMJ and certain switches or routers available on the market
- An invalid IP address assigned to the instrument

Possible solutions

NOTICE

Risk of connection errors

Before configuring the network, changing IP addresses or exchanging hardware, consult your network administrator.

Connection errors can affect the entire network.

- Check the network infrastructure. Exchange connecting cables if obvious damage is visible.
- Observe the link status LED on the connected network device. The link status LED is located next to the LAN connector.
If a link failure is detected, connect the instrument to a different device port or to a different network device.
- Check whether the LAN interface is enabled, see "[LAN Connections](#)" on page 151.
- Check whether the IP address of the instrument is within the network's address range.
IP addresses that are set manually may be invalid.

9.6 Obtaining Technical Support

If problems occur, the instrument generates error messages which in most cases will be sufficient for you to detect the cause of an error and find a remedy. Error message types are described in [Chapter 9, "Status Information, Error Messages and Troubleshooting"](#), on page 813.

In addition, our customer support centers are there to assist you in solving any problems that you may encounter with your R&S SMJ. We will find solutions more quickly and efficiently if you provide us with the information listed below.

- The following dialog boxes in the "Setup > System" menu provide useful information:
 - **Hardware Configuration:** hardware assemblies
 - **Software/Options:** the status of all software and hardware options installed on your instrument
- **System Messages:** displayed in the "Info" line and provide information on any errors that may have occurred

Collect the error information and send an e-mail in which you describe the problem to the customer support address for your region as listed at the beginning of the R&S SMJ Getting Started manual.

To remove sensitive data

- ▶ For information on how to handle or remove the sensitive data from your instrument, refer to the description "Resolving Security Issues when working with R&S SMJ", provided at the product homepage.

**Packing and transporting the instrument**

If the instrument needs to be transported or shipped, e.g. due to damage during delivery, observe the notes described in [Chapter 2.3.2, "Unpacking and Checking the Instrument"](#), on page 33.

Annex

A Hardware Interfaces

This section covers hardware related topics, like pin assignment of the GPIB bus interface, monitor and AUX I/O connectors.

The remote control interfaces are described in details in [Chapter 6, "Remote Control Basics"](#), on page 439.

All other interfaces are described in [Chapter 2.1, "Front Panel Tour"](#), on page 19 and [Chapter 2.2, "Rear Panel Tour"](#), on page 27.

For specifications refer to the data sheet.

A.1 GPIB Bus Interface

Pin assignment

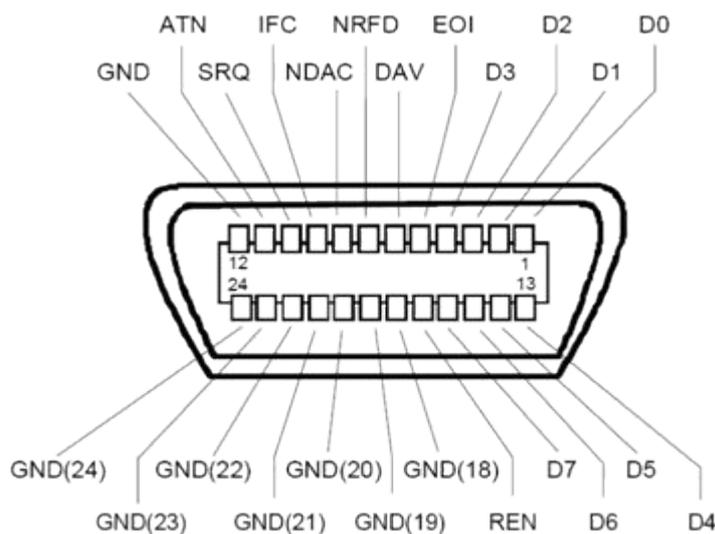


Figure A-1: Pin assignment of GPIB bus interface

Bus lines

- Data bus with 8 lines D0 to D7:
The transmission is bit-parallel and byte-serial in the ASCII/ISO code. D0 is the least significant bit, D7 the most significant bit.
- Control bus with five lines:

IFC (Interface Clear): active LOW resets the interfaces of the instruments connected to the default setting.

ATN (Attention): active LOW signals the transmission of interface messages, inactive HIGH signals the transmission of device messages.

SRQ (Service Request): active LOW enables the connected device to send a service request to the controller.

REN (Remote Enable): active LOW permits switchover to remote control.

EOI (End or Identify): has two functions in connection with ATN:

- ATN=HIGH active LOW marks the end of data transmission.
- ATN=LOW active LOW triggers a parallel poll.

- Handshake bus with three lines:

DAV (Data Valid): active LOW signals a valid data byte on the data bus.

NRFD (Not Ready For Data): active LOW signals that one of the connected devices is not ready for data transfer.

NDAC (Not Data Accepted): active LOW signals that the instrument connected is accepting the data on the data bus.

Interface Functions

Instruments which can be controlled via GPIB bus can be equipped with different interface functions. The interface function for the R&S SMJ are listed in the following table.

Table A-1: GPIB bus interface functions

Control character	Interface function
SH1	Handshake source function (source handshake), full capability
AH1	Handshake sink function (acceptor handshake), full capability
L4	Listener function, full capability, de-addressed by MTA.
T6	Talker function, full capability, ability to respond to serial poll, de-addressed by MLA
SR1	Service request function (Service Request), full capability
PP1	Parallel poll function, full capability
RL1	Remote/Local switch over function, full capability
DC1	Reset function (Device Clear), full capability
DT1	Trigger function (Device Trigger), full capability

A.2 AUX I/O Connector



For an overview of the signals that can be applied at the USER connector, see [Table 5-1](#).


Table A-2: Pin assignment of the AUX I/O Connector connector

Pin	Signal	Description
1 .. 25	Ground \perp	Ground
26	LEV ATT	Signal input/output for controlling the level attenuation. With external envelope curve control ("Custom Digital Modulation" only), the pin is the input for the control signal LEV_ATT. With internal envelope curve control, the control signal LEV_ATT is output for Path A.
27	CW MODE	Signal input for controlling the switchover between the modulated and unmodulated RF signal with activated external modulation/CW switching in the "Custom Digital Modulation" menu. Signal output for the CW control signal with internal source selected. This signal marks the CW mode in which digital modulation is deactivated and the RF signal is output in unmodulated form. In the case of digital standards with selectable modulation mode, the signal indicates the active modulation mode (GSM: (G)MSK = high, 8PSK EDGE = low).
28	not used	not used
29 .. 38	PARDATA0 .. PARDATA9	Parallel data input/output 0...D with 10-bit word width for digital modulation. If the data source "External Parallel" is selected, these pins are the data inputs. If a different data source is selected, the data is output here ("Custom Digital Modulation", Path A).
39	USER 3	USER input/output which can be configured for various purposes.
40	USER 4	USER input/output which can be configured for various purposes.
41	MARKER 3	Output for the freely programmable marker signal 3 of Path A. The output is permanently assigned.
42	not used	not used
43	not used	not used
44	not used	not used
45	BURST	Signal input/output for controlling the burst ramp. With external envelope curve control ("Custom Digital Modulation" only), the pin is the input for the control signal "BURST_RAMP". With internal envelope curve control, the control signal "BURST_RAMP" is output for Path A.
46	EXT TUNE	Tuning input for the internal reference frequency.
47	BITCLK	Output Bit clock for internal mode.
48	USER 2	USER input/output which can be configured for various purposes.
49	SYMBCLK	Symbol clock output for internal mode.
50	not used	not used

A.3 Monitor Connector (MONITOR)

The 15-pin Sub-D female connector MONITOR at the rear panel is intended for connecting an external VGA monitor.

 Table A-3: Pin assignment of the MONITOR connector

Monitor Connector	Pin	Signal	Pin	Signal	Pin	Signal
	1	Red (output)	6	GND	11	(NC)
	2	Green (output)	7	GND	12	(NC)
	3	Blue (output)	8	GND	13	HSYNC (output)
	4	(NC)	9	GND	14	VSYNC (output)
	5	GND	10	GND	15	(NC)

A.4 BERT Connector

The 9-pin Sub-D connector BERT at the rear panel is available for the input signals of the integrated bit error rate tester (option BER/BLE Measurement (R&S SMJ-K80)).

Table A-4: Pin assignment of the BERT connector

Monitor Connector	Pin	Signal	Pin	Signal
	1	GND	6	CLOCK
	2	GND	7	DATA
	3	GND	8	DATA ENABLE
	4	GND	9	RESTART
	5	GND		

The input signals are not terminated in the instrument. The impedance (50 ohm) and the threshold (0.0128..1.998 V) of the inputs can be set in the "BERT" menu.

The following figure shows the circuit diagram of the BERT function.

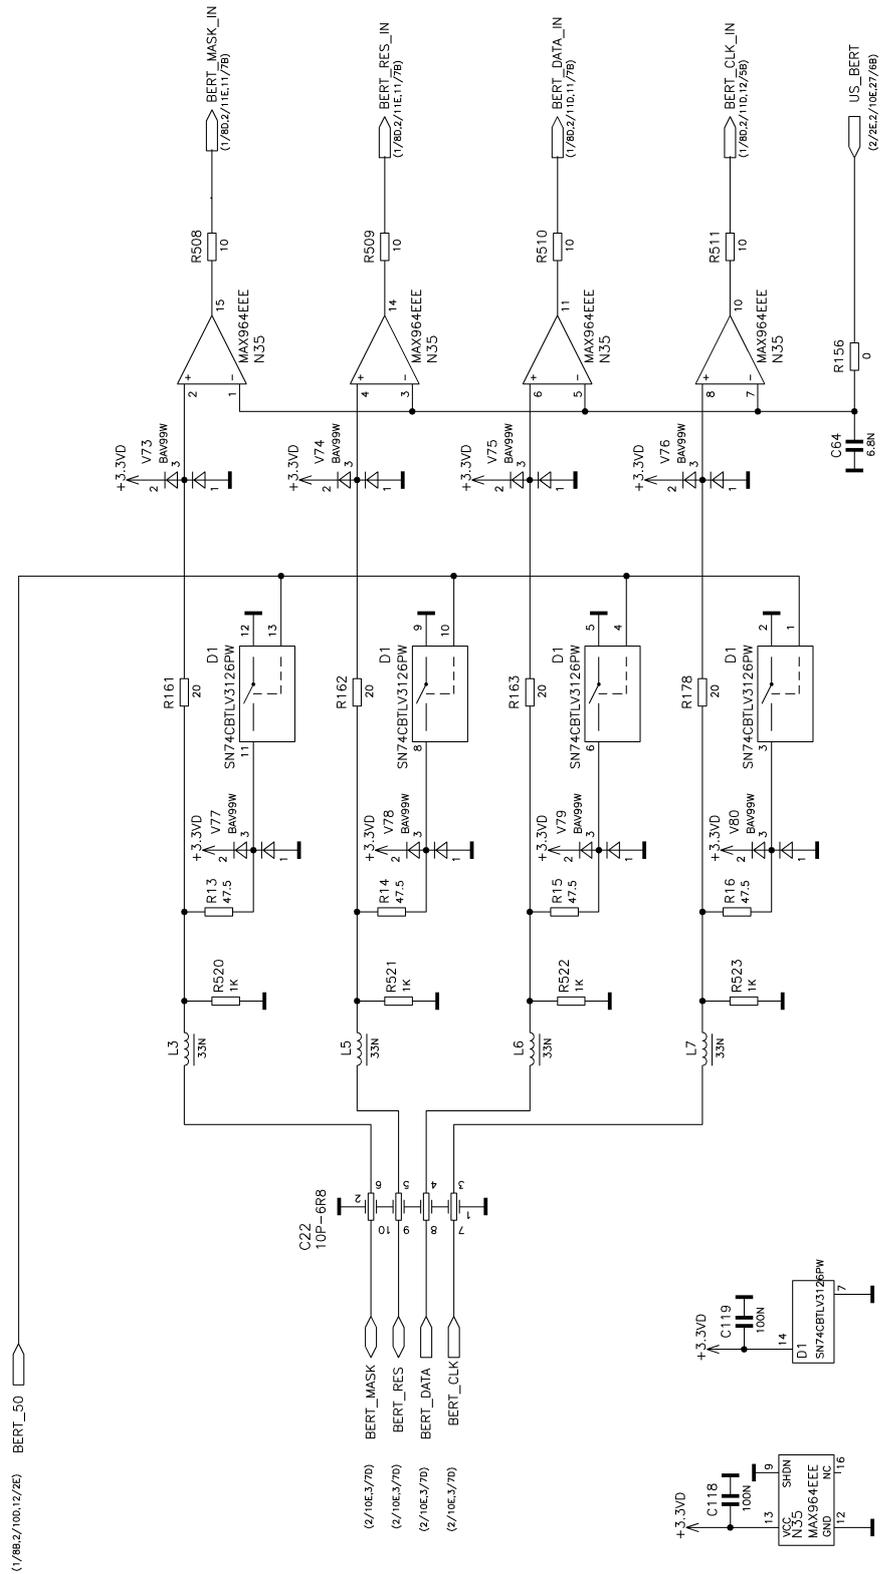


Figure A-2: BERT circuit diagram

List of Commands

:BERT:RESult?	512
:BERT:SEquence	514
:BERT:SETup:CLOCK[:POLarity]	514
:BERT:SETup:DATA[:POLarity]	515
:BERT:SETup:DENable	515
:BERT:SETup:IGNore	516
:BERT:SETup:MCOunt	517
:BERT:SETup:MERRor	517
:BERT:SETup:REStart[:STATe]	517
:BERT:SETup:TImeout	518
:BERT:SETup:TYPE	518
:BERT:START	518
:BERT:STATe	519
:BERT:STOP	519
:BERT:UNIT	520
:BLER:RESult?	512
:BLER:SEquence	514
:BLER:SETup:CLOCK[:POLarity]	514
:BLER:SETup:CORDer	515
:BLER:SETup:DATA[:POLarity]	515
:BLER:SETup:DENable	515
:BLER:SETup:MCOunt	517
:BLER:SETup:MERRor	517
:BLER:SETup:TImeout	518
:BLER:SETup:TYPE	518
:BLER:START	518
:BLER:STATe	519
:BLER:STOP	519
:BLER:UNIT	520
:CALibration<hw>:ALL[:MEASure]?	521
:CALibration<hw>:FMOffset[:MEASure]?	522
:CALibration<hw>:FREquency[:MEASure]?	522
:CALibration<hw>:IQModulator:FULL?	522
:CALibration<hw>:IQModulator:LOCAL?	523
:CALibration<hw>:LEVel:HACCuracy[:STATe]	524
:CALibration<hw>:LEVel:STATe	523
:CALibration<hw>:LEVel[:MEASure]?	523
:CALibration<hw>:ROSCillator[:DATA]	524
:CLOCK:INPut:FREquency?	524
:CLOCK:INPut:SLOPe	525
:CLOCK:OUTPut:MODE	525
:CLOCK:OUTPut:SOURce	525
:DEvice:PRESet	488
:DIAGnostic:INFO:OTIme?	527
:DIAGnostic:INFO:POCcount?	527
:DIAGnostic<hw>:BGInfo:CATalog?	527
:DIAGnostic<hw>:BGInfo?	526

:DISPlay:ANNotation:AMPLitude.....	528
:DISPlay:ANNotation:FREQuency.....	528
:DISPlay:ANNotation[:ALL].....	528
:DISPlay:DIALog:CLOSe.....	529
:DISPlay:DIALog:CLOSe:ALL.....	529
:DISPlay:DIALog:ID?.....	529
:DISPlay:DIALog:OPEN.....	529
:DISPlay:PSAVe:HOLDoff.....	530
:DISPlay:PSAVe[:STATe].....	530
:DISPlay:UPDate.....	530
:FORMat:BORDer.....	531
:FORMat:SREGister.....	532
:FORMat[:DATA].....	531
:HCOPy:DATA?.....	533
:HCOPy:DEVice.....	533
:HCOPy:DEVice:LANGuage.....	533
:HCOPy:FILE[:NAME].....	534
:HCOPy:FILE[:NAME]:AUTO:DIRectory.....	535
:HCOPy:FILE[:NAME]:AUTO:DIRectory:CLear.....	535
:HCOPy:FILE[:NAME]:AUTO:FILE?.....	535
:HCOPy:FILE[:NAME]:AUTO:STATe.....	539
:HCOPy:FILE[:NAME]:AUTO?.....	534
:HCOPy:FILE[:NAME]:AUTO[:FILE]:DAY:STATe.....	536
:HCOPy:FILE[:NAME]:AUTO[:FILE]:DAY?.....	536
:HCOPy:FILE[:NAME]:AUTO[:FILE]:MONTH:STATe.....	537
:HCOPy:FILE[:NAME]:AUTO[:FILE]:MONTH?.....	537
:HCOPy:FILE[:NAME]:AUTO[:FILE]:NUMBer?.....	537
:HCOPy:FILE[:NAME]:AUTO[:FILE]:PREFix.....	538
:HCOPy:FILE[:NAME]:AUTO[:FILE]:PREFix:STATe.....	538
:HCOPy:FILE[:NAME]:AUTO[:FILE]:YEAR:STATe.....	538
:HCOPy:FILE[:NAME]:AUTO[:FILE]:YEAR?.....	538
:HCOPy:IMAGe:FORMat.....	539
:HCOPy:IMAGe:SIZE.....	539
:HCOPy:PRINter:COLor[:STATe].....	540
:HCOPy:PRINter:LIST?.....	540
:HCOPy:PRINter:PAGE:MARGins.....	540
:HCOPy:PRINter:PAGE:ORientation.....	541
:HCOPy:PRINter:PAGE:SIZE.....	541
:HCOPy:PRINter:PAGE:UNIT.....	541
:HCOPy:PRINter[:NAME].....	540
:HCOPy:REGion.....	539
:HCOPy[:EXECute].....	534
:INITiate<ch>[:POWer]:CONTInuous.....	559
:KBOard:LANGuage.....	542
:KBOard:LAYout.....	542
:MEMory:HFRee?.....	551
:MMEMory:CATalog:LENGth?.....	548
:MMEMory:CATalog?.....	548
:MMEMory:CDIRectory.....	549
:MMEMory:COPI.....	549

:MMEMory:DATA.....	549
:MMEMory:DATA:UNPRotected.....	613
:MMEMory:DCATalog:LENGth?.....	551
:MMEMory:DCATalog?.....	550
:MMEMory:DELeTe.....	551
:MMEMory:LOAD:STATe.....	552
:MMEMory:MDIRectory.....	552
:MMEMory:MOVE.....	552
:MMEMory:MSIS.....	553
:MMEMory:RDIRectory.....	553
:MMEMory:STORe:STATe.....	553
:OUTPut:BLANK:POLarity.....	555
:OUTPut:USER<ch>:SOURce.....	557
:OUTPut<hw>:AFIXed:RANGe:LOWer?.....	554
:OUTPut<hw>:AFIXed:RANGe:UPPer?.....	554
:OUTPut<hw>:AMODE.....	555
:OUTPut<hw>:BLANK:LIST:STATe.....	555
:OUTPut<hw>:IMPedance?.....	555
:OUTPut<hw>:PROTection:CLEar.....	556
:OUTPut<hw>:PROTection:STATe.....	556
:OUTPut<hw>:PROTection:TRIPped?.....	556
:OUTPut<hw>[:STATe].....	557
:OUTPut<hw>[:STATe]:PON.....	557
:READ<ch>[:POWER]?.....	560
:SENSe<ch>:UNIT[:POWER].....	567
:SENSe<ch>[:POWER]:APERTure:DEFault:STATe.....	559
:SENSe<ch>[:POWER]:APERTure:TIME.....	559
:SENSe<ch>[:POWER]:CORRection:SPDevice:STATe.....	560
:SENSe<ch>[:POWER]:DISPlay:PERManent:PRiority.....	561
:SENSe<ch>[:POWER]:DISPlay:PERManent:STATe.....	561
:SENSe<ch>[:POWER]:FILTer:LENGth:AUTO?.....	561
:SENSe<ch>[:POWER]:FILTer:LENGth[:USER].....	562
:SENSe<ch>[:POWER]:FILTer:NSRatio.....	562
:SENSe<ch>[:POWER]:FILTer:NSRatio:MTIME.....	563
:SENSe<ch>[:POWER]:FILTer:SONCe.....	563
:SENSe<ch>[:POWER]:FILTer:TYPE.....	563
:SENSe<ch>[:POWER]:FREQuency.....	564
:SENSe<ch>[:POWER]:LOGGing:STATe.....	564
:SENSe<ch>[:POWER]:OFFSet.....	565
:SENSe<ch>[:POWER]:OFFSet:STATe.....	565
:SENSe<ch>[:POWER]:SOURce.....	566
:SENSe<ch>[:POWER]:ZERO.....	567
:SOURce<hw>:PRESet.....	489
:STATus:OPERation:CONDition.....	788
:STATus:OPERation:ENABle.....	789
:STATus:OPERation:NTRansition.....	789
:STATus:OPERation:PTRansition.....	789
:STATus:OPERation[:EVENT].....	789
:STATus:PRESet.....	790
:STATus:QUEStionable:CONDition.....	790

:STATus:QUESTionable:ENABle.....	790
:STATus:QUESTionable:NTRansition.....	791
:STATus:QUESTionable:PTRansition.....	791
:STATus:QUESTionable[:EVENT].....	790
:STATus:QUEue[:NEXT]?.....	791
:SYSTem:BIOS:VERSion?.....	800
:SYSTem:COMMunicate:GPIB:LTERminator.....	795
:SYSTem:COMMunicate:GPIB:RESourcE?.....	796
:SYSTem:COMMunicate:GPIB[:SELF]:ADDResS.....	795
:SYSTem:COMMunicate:HISLip:RESourcE?.....	797
:SYSTem:COMMunicate:NETWork:RESourcE?.....	796
:SYSTem:COMMunicate:NETWork:REStart.....	796
:SYSTem:COMMunicate:NETWork:STATus?.....	796
:SYSTem:COMMunicate:NETWork[:COMMOn]:WORKgrouP.....	795
:SYSTem:COMMunicate:NETWork[:IPAdDress]:DNS.....	796
:SYSTem:COMMunicate:SOCKet:RESourcE?.....	797
:SYSTem:DATE.....	798
:SYSTem:DISPlay:UPDate.....	798
:SYSTem:ERRor:ALL?.....	792
:SYSTem:ERRor:CODE:ALL?.....	793
:SYSTem:ERRor:CODE[:NEXT]?.....	793
:SYSTem:ERRor:COUNT?.....	794
:SYSTem:ERRor[:NEXT]?.....	794
:SYSTem:FPReset.....	489
:SYSTem:HCLear.....	799
:SYSTem:MMEMory:PATH:USER?.....	801
:SYSTem:OSYStem?.....	800
:SYSTem:PRESet.....	489
:SYSTem:PROTect<ch>[:STATe].....	797
:SYSTem:SERRor?.....	794
:SYSTem:STARtup:COMPLete?.....	798
:SYSTem:TIME.....	799
:SYSTem:TIME:ZONE.....	799
:SYSTem:TIME:ZONE:CATalog?.....	800
:SYSTem:VERSion?.....	800
:TEST:BB:CONNecTion?.....	801
:TEST:CONNecTion:AUXio?.....	802
:TEST<hw>:BBOut:LRATE.....	801
:TEST<hw>:BBOut:TTEST[:STATe].....	802
:TEST<hw>:DIRect.....	802
:TRIGger:BERT[:IMMediate].....	521
:TRIGger:BLER[:IMMediate].....	521
:TRIGger<hw>:FSWeep:SOURce.....	804
:TRIGger<hw>:FSWeep[:IMMediate].....	804
:TRIGger<hw>:LFFSweep.....	805
:TRIGger<hw>:LFFSweep:IMMediate.....	806
:TRIGger<hw>:LFFSweep:SOURce.....	805
:TRIGger<hw>:PSWeep:SOURce.....	806
:TRIGger<hw>:PSWeep[:IMMediate].....	807
:TRIGger<hw>[:IMMediate].....	809

:TRIGger<hw>[:SWEep]:SOURce.....	807
:TRIGger<hw>[:SWEep][:IMMediate].....	808
:UNIT:ANGLE.....	809
:UNIT:POWer.....	809
[:SOURce]:CORRection:CSET:CATalog?.....	699
[:SOURce]:CORRection:CSET:DELeTe.....	703
[:SOURce]:INPut:BERT:IMPedance.....	520
[:SOURce]:INPut:BERT:THReshold.....	520
[:SOURce]:INPut:DATA:IMPedance.....	721
[:SOURce]:INPut:DATA:THReshold.....	721
[:SOURce]:INPut:TRIGger:BBANd:SLOPe.....	722
[:SOURce]:INPut:TRIGger:IMPedance.....	722
[:SOURce]:INPut:TRIGger:LEVel.....	723
[:SOURce]:INPut:TRIGger:SLOPe.....	723
[:SOURce]:IQ:OUTPut:DIGital:OFLow:HOLD:RESet.....	732
[:SOURce]:IQ:OUTPut:DIGital:OFLow:HOLD:STATe?.....	732
[:SOURce]:IQ:OUTPut:DIGital:OFLow:STATe?.....	733
[:SOURce]:LFOutput:FREQuency.....	738
[:SOURce]:LFOutput:VOLTagE.....	746
[:SOURce]:LFOutput[:STATe].....	740
[:SOURce]:ROSCillator:EXTernal:FREQuency.....	775
[:SOURce]:ROSCillator:EXTernal:RFOF[:STATe].....	775
[:SOURce]:ROSCillator:EXTernal:SBANdwidth.....	775
[:SOURce]:ROSCillator:SOURce.....	776
[:SOURce]:ROSCillator[:INTernal]:ADJust:VALue.....	776
[:SOURce]:ROSCillator[:INTernal]:ADJust[:STATe].....	776
[:SOURce<hw>]:AM:BBANd:SENSitivity?.....	568
[:SOURce<hw>]:AM:BBANd[:STATe].....	569
[:SOURce<hw>]:AM:EXTernal:COUPling.....	569
[:SOURce<hw>]:AM:INTernal:FREQuency.....	570
[:SOURce<hw>]:AM:SENSitivity?.....	570
[:SOURce<hw>]:AM:SOURce.....	571
[:SOURce<hw>]:AM:STATe.....	571
[:SOURce<hw>]:AM[:DEPTH].....	569
[:SOURce<hw>]:AWGN:BRATe.....	572
[:SOURce<hw>]:AWGN:BWIDth.....	572
[:SOURce<hw>]:AWGN:BWIDth:NOISe?.....	573
[:SOURce<hw>]:AWGN:BWIDth:RATio.....	573
[:SOURce<hw>]:AWGN:CNRatio.....	573
[:SOURce<hw>]:AWGN:DISP:MODE.....	574
[:SOURce<hw>]:AWGN:DISP:ORESults.....	574
[:SOURce<hw>]:AWGN:ENRatio.....	574
[:SOURce<hw>]:AWGN:FREQuency:RESult?.....	575
[:SOURce<hw>]:AWGN:FREQuency:TARGet.....	575
[:SOURce<hw>]:AWGN:MODE.....	576
[:SOURce<hw>]:AWGN:POWer:CARRier.....	576
[:SOURce<hw>]:AWGN:POWer:MODE.....	577
[:SOURce<hw>]:AWGN:POWer:NOISe.....	577
[:SOURce<hw>]:AWGN:POWer:NOISe:TOTal?.....	578
[:SOURce<hw>]:AWGN:POWer:RMODE.....	578

[:SOURce<hw>]:AWGN:POWer:SUM:PEP?	579
[:SOURce<hw>]:AWGN:POWer:SUM?	579
[:SOURce<hw>]:AWGN:STATe	579
[:SOURce<hw>]:BB:ARBitrary:CLOCK	581
[:SOURce<hw>]:BB:ARBitrary:CLOCK:MODE	582
[:SOURce<hw>]:BB:ARBitrary:CLOCK:MULTIplier	582
[:SOURce<hw>]:BB:ARBitrary:CLOCK:SOURce	583
[:SOURce<hw>]:BB:ARBitrary:MCARrier:CARRier:COUNT	597
[:SOURce<hw>]:BB:ARBitrary:MCARrier:CARRier:MODE	598
[:SOURce<hw>]:BB:ARBitrary:MCARrier:CARRier:SPACing	598
[:SOURce<hw>]:BB:ARBitrary:MCARrier:CARRier<ch>:CONFLict?	599
[:SOURce<hw>]:BB:ARBitrary:MCARrier:CARRier<ch>:DELay	599
[:SOURce<hw>]:BB:ARBitrary:MCARrier:CARRier<ch>:FILE	599
[:SOURce<hw>]:BB:ARBitrary:MCARrier:CARRier<ch>:FREQUency	600
[:SOURce<hw>]:BB:ARBitrary:MCARrier:CARRier<ch>:PHASe	600
[:SOURce<hw>]:BB:ARBitrary:MCARrier:CARRier<ch>:POWer	600
[:SOURce<hw>]:BB:ARBitrary:MCARrier:CARRier<ch>:STATe	601
[:SOURce<hw>]:BB:ARBitrary:MCARrier:CFACtor:MODE	601
[:SOURce<hw>]:BB:ARBitrary:MCARrier:CLIPping:CFACtor	602
[:SOURce<hw>]:BB:ARBitrary:MCARrier:CLIPping:CUTOFF	602
[:SOURce<hw>]:BB:ARBitrary:MCARrier:CLIPping[STATe]	603
[:SOURce<hw>]:BB:ARBitrary:MCARrier:CLOAD	603
[:SOURce<hw>]:BB:ARBitrary:MCARrier:CLOCK?	604
[:SOURce<hw>]:BB:ARBitrary:MCARrier:CREate	604
[:SOURce<hw>]:BB:ARBitrary:MCARrier:EDIT:CARRier:DELay:STEP	605
[:SOURce<hw>]:BB:ARBitrary:MCARrier:EDIT:CARRier:DELay[START]	605
[:SOURce<hw>]:BB:ARBitrary:MCARrier:EDIT:CARRier:EXECute	605
[:SOURce<hw>]:BB:ARBitrary:MCARrier:EDIT:CARRier:FILE	606
[:SOURce<hw>]:BB:ARBitrary:MCARrier:EDIT:CARRier:PHASe:STEP	606
[:SOURce<hw>]:BB:ARBitrary:MCARrier:EDIT:CARRier:PHASe[START]	607
[:SOURce<hw>]:BB:ARBitrary:MCARrier:EDIT:CARRier:POWer:STEP	607
[:SOURce<hw>]:BB:ARBitrary:MCARrier:EDIT:CARRier:POWer[START]	607
[:SOURce<hw>]:BB:ARBitrary:MCARrier:EDIT:CARRier:START	608
[:SOURce<hw>]:BB:ARBitrary:MCARrier:EDIT:CARRier:STATe	608
[:SOURce<hw>]:BB:ARBitrary:MCARrier:EDIT:CARRier:STOP	608
[:SOURce<hw>]:BB:ARBitrary:MCARrier:OFILe	608
[:SOURce<hw>]:BB:ARBitrary:MCARrier:POWer:REFerence	601
[:SOURce<hw>]:BB:ARBitrary:MCARrier:PRESet	609
[:SOURce<hw>]:BB:ARBitrary:MCARrier:SAMPles?	609
[:SOURce<hw>]:BB:ARBitrary:MCARrier:SETTing:CATalog?	609
[:SOURce<hw>]:BB:ARBitrary:MCARrier:SETTing:LOAD	610
[:SOURce<hw>]:BB:ARBitrary:MCARrier:SETTing:STORE	610
[:SOURce<hw>]:BB:ARBitrary:MCARrier:SETTing:STORE:FAST	610
[:SOURce<hw>]:BB:ARBitrary:MCARrier:TIME	611
[:SOURce<hw>]:BB:ARBitrary:MCARrier:TIME:MODE	611
[:SOURce<hw>]:BB:ARBitrary:PRESet	581
[:SOURce<hw>]:BB:ARBitrary:STATe	581
[:SOURce<hw>]:BB:ARBitrary:TRIGger:ARM:EXECute	583
[:SOURce<hw>]:BB:ARBitrary:TRIGger:DELay:UNIT	588
[:SOURce<hw>]:BB:ARBitrary:TRIGger:EXECute	584

[:SOURce<hw>]:BB:ARBitrary:TRIGger:OUTPut:DELay:FIXed.....	585
[:SOURce<hw>]:BB:ARBitrary:TRIGger:OUTPut<ch>:DELay.....	585
[:SOURce<hw>]:BB:ARBitrary:TRIGger:OUTPut<ch>:DELay:MAXimum?.....	586
[:SOURce<hw>]:BB:ARBitrary:TRIGger:OUTPut<ch>:DELay:MINimum?.....	586
[:SOURce<hw>]:BB:ARBitrary:TRIGger:OUTPut<ch>:MODE.....	591
[:SOURce<hw>]:BB:ARBitrary:TRIGger:OUTPut<ch>:OFFTime.....	591
[:SOURce<hw>]:BB:ARBitrary:TRIGger:OUTPut<ch>:ONTime.....	591
[:SOURce<hw>]:BB:ARBitrary:TRIGger:OUTPut<ch>:PATTern.....	592
[:SOURce<hw>]:BB:ARBitrary:TRIGger:OUTPut<ch>:PULSe:DIVider.....	592
[:SOURce<hw>]:BB:ARBitrary:TRIGger:OUTPut<ch>:PULSe:FREQuency?.....	593
[:SOURce<hw>]:BB:ARBitrary:TRIGger:RMODE?.....	586
[:SOURce<hw>]:BB:ARBitrary:TRIGger:SLENGth.....	587
[:SOURce<hw>]:BB:ARBitrary:TRIGger:SLUNit.....	587
[:SOURce<hw>]:BB:ARBitrary:TRIGger:SMODE.....	588
[:SOURce<hw>]:BB:ARBitrary:TRIGger:SOURce.....	588
[:SOURce<hw>]:BB:ARBitrary:TRIGger[:EXTernal]:SYNChronize:OUTPut.....	584
[:SOURce<hw>]:BB:ARBitrary:TRIGger[:EXTernal<1 2>]:DELay.....	589
[:SOURce<hw>]:BB:ARBitrary:TRIGger[:EXTernal<1 2>]:INHibit.....	589
[:SOURce<hw>]:BB:ARBitrary:TRIGger[:EXTernal<1 2>]:RDELay?.....	589
[:SOURce<hw>]:BB:ARBitrary:TRIGger[:EXTernal<1 2>]:TDELay.....	589
[:SOURce<hw>]:BB:ARBitrary:TSIGnal:CIQ:CREate.....	593
[:SOURce<hw>]:BB:ARBitrary:TSIGnal:CIQ:CREate:NAMed.....	594
[:SOURce<hw>]:BB:ARBitrary:TSIGnal:CIQ:I.....	594
[:SOURce<hw>]:BB:ARBitrary:TSIGnal:CIQ:Q.....	594
[:SOURce<hw>]:BB:ARBitrary:TSIGnal:RECTangle:AMPLitude.....	594
[:SOURce<hw>]:BB:ARBitrary:TSIGnal:RECTangle:CREate.....	593
[:SOURce<hw>]:BB:ARBitrary:TSIGnal:RECTangle:CREate:NAMed.....	594
[:SOURce<hw>]:BB:ARBitrary:TSIGnal:RECTangle:FREQuency.....	595
[:SOURce<hw>]:BB:ARBitrary:TSIGnal:RECTangle:OFFSet.....	595
[:SOURce<hw>]:BB:ARBitrary:TSIGnal:RECTangle:SAMPles.....	595
[:SOURce<hw>]:BB:ARBitrary:TSIGnal:SINE:CREate.....	593
[:SOURce<hw>]:BB:ARBitrary:TSIGnal:SINE:CREate:NAMed.....	594
[:SOURce<hw>]:BB:ARBitrary:TSIGnal:SINE:FREQuency.....	595
[:SOURce<hw>]:BB:ARBitrary:TSIGnal:SINE:PHASe.....	596
[:SOURce<hw>]:BB:ARBitrary:TSIGnal:SINE:SAMPles.....	596
[:SOURce<hw>]:BB:ARBitrary:WAVeform:CATalog:LENGth?.....	612
[:SOURce<hw>]:BB:ARBitrary:WAVeform:CATalog?.....	612
[:SOURce<hw>]:BB:ARBitrary:WAVeform:CLOCK.....	614
[:SOURce<hw>]:BB:ARBitrary:WAVeform:DATA.....	615
[:SOURce<hw>]:BB:ARBitrary:WAVeform:DELete.....	616
[:SOURce<hw>]:BB:ARBitrary:WAVeform:FREE?.....	616
[:SOURce<hw>]:BB:ARBitrary:WAVeform:HDDStreaming:BLEVel?.....	616
[:SOURce<hw>]:BB:ARBitrary:WAVeform:HDDStreaming:STATe.....	617
[:SOURce<hw>]:BB:ARBitrary:WAVeform:POINts?.....	617
[:SOURce<hw>]:BB:ARBitrary:WAVeform:SELect.....	617
[:SOURce<hw>]:BB:ARBitrary:WAVeform:TAG?.....	618
[:SOURce<hw>]:BB:ARBitrary:WSEGment:CLOAd.....	619
[:SOURce<hw>]:BB:ARBitrary:WSEGment:CONFigure:BLANK:APPend.....	620
[:SOURce<hw>]:BB:ARBitrary:WSEGment:CONFigure:CATalog?.....	620
[:SOURce<hw>]:BB:ARBitrary:WSEGment:CONFigure:CLOCK.....	620

[:SOURce<hw>]:BB:ARBitrary:WSEgment:CONFigure:CLOCK:MODE.....	621
[:SOURce<hw>]:BB:ARBitrary:WSEgment:CONFigure:COMMENT.....	621
[:SOURce<hw>]:BB:ARBitrary:WSEgment:CONFigure:DELeTe.....	622
[:SOURce<hw>]:BB:ARBitrary:WSEgment:CONFigure:LEVel[:MODE].....	622
[:SOURce<hw>]:BB:ARBitrary:WSEgment:CONFigure:MARKer:ESEgment.....	622
[:SOURce<hw>]:BB:ARBitrary:WSEgment:CONFigure:MARKer:FSEgment.....	623
[:SOURce<hw>]:BB:ARBitrary:WSEgment:CONFigure:MARKer:MODE.....	623
[:SOURce<hw>]:BB:ARBitrary:WSEgment:CONFigure:OFILe.....	624
[:SOURce<hw>]:BB:ARBitrary:WSEgment:CONFigure:SEGMENT:APPend.....	624
[:SOURce<hw>]:BB:ARBitrary:WSEgment:CONFigure:SEGMENT:CATalog?.....	625
[:SOURce<hw>]:BB:ARBitrary:WSEgment:CONFigure:SELEct.....	625
[:SOURce<hw>]:BB:ARBitrary:WSEgment:CREate.....	625
[:SOURce<hw>]:BB:ARBitrary:WSEgment:NAME?.....	626
[:SOURce<hw>]:BB:ARBitrary:WSEgment:NEXT.....	626
[:SOURce<hw>]:BB:ARBitrary:WSEgment:NEXT:EXECute.....	627
[:SOURce<hw>]:BB:ARBitrary:WSEgment:NEXT:SOURce?.....	627
[:SOURce<hw>]:BB:ARBitrary:WSEgment:SEQUence:APPend.....	628
[:SOURce<hw>]:BB:ARBitrary:WSEgment:SEQUence:SELEct.....	628
[:SOURce<hw>]:BB:ARBitrary:WSEgment?.....	618
[:SOURce<hw>]:BB:ARBitrary[:TRIGger]:SEQUence.....	590
[:SOURce<hw>]:BB:CFACtor?.....	695
[:SOURce<hw>]:BB:DM:AQPSk:ANGLE.....	647
[:SOURce<hw>]:BB:DM:ASK:DEPTh.....	648
[:SOURce<hw>]:BB:DM:CLISt:CATalog?.....	655
[:SOURce<hw>]:BB:DM:CLISt:COPIY.....	656
[:SOURce<hw>]:BB:DM:CLISt:DATA.....	657
[:SOURce<hw>]:BB:DM:CLISt:DELeTe.....	658
[:SOURce<hw>]:BB:DM:CLISt:FREE?.....	655
[:SOURce<hw>]:BB:DM:CLISt:POINts?.....	658
[:SOURce<hw>]:BB:DM:CLISt:SELEct.....	658
[:SOURce<hw>]:BB:DM:CLISt:TAG?.....	656
[:SOURce<hw>]:BB:DM:CLOCK:MODE.....	633
[:SOURce<hw>]:BB:DM:CLOCK:MULTIplier.....	634
[:SOURce<hw>]:BB:DM:CLOCK:SOURce.....	634
[:SOURce<hw>]:BB:DM:CODing.....	648
[:SOURce<hw>]:BB:DM:DLISt:CATalog?.....	655
[:SOURce<hw>]:BB:DM:DLISt:COPIY.....	656
[:SOURce<hw>]:BB:DM:DLISt:DATA.....	659
[:SOURce<hw>]:BB:DM:DLISt:DATA:APPend.....	660
[:SOURce<hw>]:BB:DM:DLISt:DELeTe.....	660
[:SOURce<hw>]:BB:DM:DLISt:FREE?.....	655
[:SOURce<hw>]:BB:DM:DLISt:POINts.....	660
[:SOURce<hw>]:BB:DM:DLISt:SELEct.....	661
[:SOURce<hw>]:BB:DM:DLISt:TAG?.....	656
[:SOURce<hw>]:BB:DM:FILTer:OSAMpling.....	644
[:SOURce<hw>]:BB:DM:FILTer:OSAMpling:AUTO.....	645
[:SOURce<hw>]:BB:DM:FILTer:PARAmeter:APCO25.....	645
[:SOURce<hw>]:BB:DM:FILTer:PARAmeter:APCO25Lsm:GAUSSs.....	646
[:SOURce<hw>]:BB:DM:FILTer:PARAmeter:APCO25Lsm:LOWPass.....	646
[:SOURce<hw>]:BB:DM:FILTer:PARAmeter:COSSine:BANDwidth.....	646

[[:SOURce<hw>]:BB:DM:FILTer:PARAmeter:COsine[:ROLLoff].....	645
[[:SOURce<hw>]:BB:DM:FILTer:PARAmeter:GAUSS.....	645
[[:SOURce<hw>]:BB:DM:FILTer:PARAmeter:LPASS.....	645
[[:SOURce<hw>]:BB:DM:FILTer:PARAmeter:LPASSEVM.....	645
[[:SOURce<hw>]:BB:DM:FILTer:PARAmeter:PGAuss.....	645
[[:SOURce<hw>]:BB:DM:FILTer:PARAmeter:RCOSine.....	645
[[:SOURce<hw>]:BB:DM:FILTer:PARAmeter:SPHase.....	645
[[:SOURce<hw>]:BB:DM:FILTer:TYPE.....	647
[[:SOURce<hw>]:BB:DM:FLISt:CATalog?.....	655
[[:SOURce<hw>]:BB:DM:FLISt:DELeTe.....	661
[[:SOURce<hw>]:BB:DM:FLISt:FREE?.....	656
[[:SOURce<hw>]:BB:DM:FLISt:POINts?.....	662
[[:SOURce<hw>]:BB:DM:FLISt:SELeCt.....	662
[[:SOURce<hw>]:BB:DM:FORMat.....	649
[[:SOURce<hw>]:BB:DM:FSK:DEViation.....	649
[[:SOURce<hw>]:BB:DM:FSK:VARiable:SYMBOL<ch0>:DEViation.....	650
[[:SOURce<hw>]:BB:DM:FSK:VARiable:TYPE.....	650
[[:SOURce<hw>]:BB:DM:MDELay?.....	650
[[:SOURce<hw>]:BB:DM:MLISt:CATalog?.....	655
[[:SOURce<hw>]:BB:DM:MLISt:DELeTe.....	662
[[:SOURce<hw>]:BB:DM:MLISt:FREE?.....	656
[[:SOURce<hw>]:BB:DM:MLISt:POINts?.....	663
[[:SOURce<hw>]:BB:DM:MLISt:SELeCt.....	663
[[:SOURce<hw>]:BB:DM:PATTern.....	629
[[:SOURce<hw>]:BB:DM:PRAMp:ATTenuation.....	651
[[:SOURce<hw>]:BB:DM:PRAMp:BBONLY[:STATe].....	651
[[:SOURce<hw>]:BB:DM:PRAMp:FDELay.....	652
[[:SOURce<hw>]:BB:DM:PRAMp:RDELay.....	652
[[:SOURce<hw>]:BB:DM:PRAMp:SHAPE.....	652
[[:SOURce<hw>]:BB:DM:PRAMp:SOURce.....	653
[[:SOURce<hw>]:BB:DM:PRAMp:TIME.....	653
[[:SOURce<hw>]:BB:DM:PRAMp[:STATe].....	653
[[:SOURce<hw>]:BB:DM:PRBS[:LENGth].....	629
[[:SOURce<hw>]:BB:DM:PRESet.....	630
[[:SOURce<hw>]:BB:DM:SETTing:CATalog?.....	663
[[:SOURce<hw>]:BB:DM:SETTing:DELeTe.....	664
[[:SOURce<hw>]:BB:DM:SETTing:LOAD.....	664
[[:SOURce<hw>]:BB:DM:SETTing:STORe.....	664
[[:SOURce<hw>]:BB:DM:SETTing:STORe:FAST.....	665
[[:SOURce<hw>]:BB:DM:SOURce.....	630
[[:SOURce<hw>]:BB:DM:SRATe.....	631
[[:SOURce<hw>]:BB:DM:STANdard.....	632
[[:SOURce<hw>]:BB:DM:STANdard:ULISt:CATalog?.....	665
[[:SOURce<hw>]:BB:DM:STANdard:ULISt:DELeTe.....	665
[[:SOURce<hw>]:BB:DM:STANdard:ULISt:LOAD.....	666
[[:SOURce<hw>]:BB:DM:STANdard:ULISt:STORe.....	666
[[:SOURce<hw>]:BB:DM:STATe.....	632
[[:SOURce<hw>]:BB:DM:SWITChing:SOURce.....	632
[[:SOURce<hw>]:BB:DM:SWITChing:STATe.....	633
[[:SOURce<hw>]:BB:DM:TRIGGer:ARM:EXECute.....	635

[:SOURce<hw>]:BB:DM:TRIGger:DELay:UNIT.....	639
[:SOURce<hw>]:BB:DM:TRIGger:EXECute.....	635
[:SOURce<hw>]:BB:DM:TRIGger:EXTernal:SYNChronize:OUTPut.....	636
[:SOURce<hw>]:BB:DM:TRIGger:OUTPut:DELay:FIXed.....	636
[:SOURce<hw>]:BB:DM:TRIGger:OUTPut<ch>:DELay.....	637
[:SOURce<hw>]:BB:DM:TRIGger:OUTPut<ch>:DELay:MAXimum?.....	637
[:SOURce<hw>]:BB:DM:TRIGger:OUTPut<ch>:DELay:MINimum?.....	637
[:SOURce<hw>]:BB:DM:TRIGger:OUTPut<ch>:MODE.....	641
[:SOURce<hw>]:BB:DM:TRIGger:OUTPut<ch>:OFFTime.....	642
[:SOURce<hw>]:BB:DM:TRIGger:OUTPut<ch>:ONTime.....	642
[:SOURce<hw>]:BB:DM:TRIGger:OUTPut<ch>:PATtern.....	643
[:SOURce<hw>]:BB:DM:TRIGger:OUTPut<ch>:PULSe:DIVider.....	643
[:SOURce<hw>]:BB:DM:TRIGger:OUTPut<ch>:PULSe:FREQUency?.....	644
[:SOURce<hw>]:BB:DM:TRIGger:RMODE?.....	638
[:SOURce<hw>]:BB:DM:TRIGger:SLENgth.....	638
[:SOURce<hw>]:BB:DM:TRIGger:SOURce.....	638
[:SOURce<hw>]:BB:DM:TRIGger[:EXTernal]:RDELay?.....	640
[:SOURce<hw>]:BB:DM:TRIGger[:EXTernal]:TDELay.....	640
[:SOURce<hw>]:BB:DM:TRIGger[:EXTernal<ch>]:DELay.....	639
[:SOURce<hw>]:BB:DM:TRIGger[:EXTernal<ch>]:INHibit.....	640
[:SOURce<hw>]:BB:DM[:TRIGger]:SEQUence.....	641
[:SOURce<hw>]:BB:GRAPhics:MODE.....	666
[:SOURce<hw>]:BB:GRAPhics:SMARt:STATe.....	667
[:SOURce<hw>]:BB:GRAPhics:SRATe:MODE.....	667
[:SOURce<hw>]:BB:GRAPhics:SRATe:USER.....	668
[:SOURce<hw>]:BB:GRAPhics:STATe.....	668
[:SOURce<hw>]:BB:GRAPhics:TRIGger:SOURce.....	668
[:SOURce<hw>]:BB:IMPairment:IQRatio[:MAGNitude].....	669
[:SOURce<hw>]:BB:IMPairment:LEAKage:I.....	670
[:SOURce<hw>]:BB:IMPairment:LEAKage:Q.....	670
[:SOURce<hw>]:BB:IMPairment:OPTimization:MODE.....	671
[:SOURce<hw>]:BB:IMPairment:OPTimization:STATe.....	671
[:SOURce<hw>]:BB:IMPairment:QUADrature[:ANGLE].....	670
[:SOURce<hw>]:BB:IMPairment:STATe.....	671
[:SOURce<hw>]:BB:IQGain.....	727
[:SOURce<hw>]:BB:MCCW:CARRier:COUNT.....	673
[:SOURce<hw>]:BB:MCCW:CARRier:LIST:PHASe.....	673
[:SOURce<hw>]:BB:MCCW:CARRier:LIST:POWER.....	674
[:SOURce<hw>]:BB:MCCW:CARRier:LIST:STATe.....	675
[:SOURce<hw>]:BB:MCCW:CARRier:PHASe.....	675
[:SOURce<hw>]:BB:MCCW:CARRier:POWER.....	676
[:SOURce<hw>]:BB:MCCW:CARRier:SPACing.....	676
[:SOURce<hw>]:BB:MCCW:CARRier:STATe.....	677
[:SOURce<hw>]:BB:MCCW:CFACTOR.....	677
[:SOURce<hw>]:BB:MCCW:CFACTOR:ACTual?.....	677
[:SOURce<hw>]:BB:MCCW:CFACTOR:MODE.....	678
[:SOURce<hw>]:BB:MCCW:CLOCK:MODE.....	691
[:SOURce<hw>]:BB:MCCW:CLOCK:MULTiplier.....	691
[:SOURce<hw>]:BB:MCCW:CLOCK:SOURce.....	692
[:SOURce<hw>]:BB:MCCW:CLOCK?.....	678

[:SOURce<hw>]:BB:MCCW:EDIT:CARRier:EXECute.....	679
[:SOURce<hw>]:BB:MCCW:EDIT:CARRier:PHASe:STEP.....	679
[:SOURce<hw>]:BB:MCCW:EDIT:CARRier:PHASe[:START].....	680
[:SOURce<hw>]:BB:MCCW:EDIT:CARRier:POWer:STEP.....	680
[:SOURce<hw>]:BB:MCCW:EDIT:CARRier:POWer[:START].....	681
[:SOURce<hw>]:BB:MCCW:EDIT:CARRier:START.....	681
[:SOURce<hw>]:BB:MCCW:EDIT:CARRier:STATe.....	681
[:SOURce<hw>]:BB:MCCW:EDIT:CARRier:STOP.....	681
[:SOURce<hw>]:BB:MCCW:PRESet.....	673
[:SOURce<hw>]:BB:MCCW:STATe.....	672
[:SOURce<hw>]:BB:MCCW:TRIGger:ARM:EXECute.....	682
[:SOURce<hw>]:BB:MCCW:TRIGger:EXECute.....	682
[:SOURce<hw>]:BB:MCCW:TRIGger:EXTernal:SYNChronize:OUTPut.....	683
[:SOURce<hw>]:BB:MCCW:TRIGger:OBASeband:DElay.....	683
[:SOURce<hw>]:BB:MCCW:TRIGger:OBASeband:INHibit.....	684
[:SOURce<hw>]:BB:MCCW:TRIGger:OUTPut:DElay:FIXed.....	687
[:SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:DElay.....	688
[:SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:DElay:MAXimum?.....	688
[:SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:DElay:MINimum?.....	688
[:SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:MODE.....	689
[:SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:OFFTime.....	689
[:SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:ONTime.....	689
[:SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:PATTern.....	690
[:SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:PULSe:DIVider.....	690
[:SOURce<hw>]:BB:MCCW:TRIGger:OUTPut<ch>:PULSe:FREQuency?.....	691
[:SOURce<hw>]:BB:MCCW:TRIGger:RMODE?.....	684
[:SOURce<hw>]:BB:MCCW:TRIGger:SLENgth.....	685
[:SOURce<hw>]:BB:MCCW:TRIGger:SOURce.....	685
[:SOURce<hw>]:BB:MCCW:TRIGger[:EXTernal<ch>]:DElay.....	685
[:SOURce<hw>]:BB:MCCW:TRIGger[:EXTernal<ch>]:INHibit.....	686
[:SOURce<hw>]:BB:MCCW[:TRIGger]:SEQuence.....	686
[:SOURce<hw>]:BB:MEASurement:CFACTOR?.....	693
[:SOURce<hw>]:BB:MEASurement:DURation.....	693
[:SOURce<hw>]:BB:MEASurement:POWer:PEAK?.....	693
[:SOURce<hw>]:BB:MEASurement:POWer:RMS?.....	694
[:SOURce<hw>]:BB:MEASurement:RTIME?.....	694
[:SOURce<hw>]:BB:MEASurement:SOURce.....	694
[:SOURce<hw>]:BB:MEASurement[:STATe].....	695
[:SOURce<hw>]:BB:POWer:PEAK?.....	695
[:SOURce<hw>]:BB:POWer:RMS?.....	696
[:SOURce<hw>]:BB:PROGress:MCODer:ARBitary:MCARrier?.....	697
[:SOURce<hw>]:BB:PROGress:MCODer:ARBitary:WSEGment?.....	697
[:SOURce<hw>]:BB:PROGress:MCODer:DM:FILTer?.....	697
[:SOURce<hw>]:BB:PROGress:MCODer?.....	697
[:SOURce<hw>]:CORRection:CSET:DATA:FREQuency.....	699
[:SOURce<hw>]:CORRection:CSET:DATA:FREQuency:POINts?.....	699
[:SOURce<hw>]:CORRection:CSET:DATA:POWer.....	700
[:SOURce<hw>]:CORRection:CSET:DATA:POWer:MLEVel:STATe.....	701
[:SOURce<hw>]:CORRection:CSET:DATA:POWer:MLEVel<ch>?.....	700
[:SOURce<hw>]:CORRection:CSET:DATA:POWer:POINts?.....	700

[:SOURce<hw>]:CORRection:CSET:DATA:POWer:SGAMma:STATe.....	701
[:SOURce<hw>]:CORRection:CSET:DATA:SGAMma:DELeTe.....	701
[:SOURce<hw>]:CORRection:CSET:DATA:SGAMma:MAGNitude.....	702
[:SOURce<hw>]:CORRection:CSET:DATA:SGAMma:MAGNitude:POINts?.....	702
[:SOURce<hw>]:CORRection:CSET:DATA:SGAMma:PHASe.....	702
[:SOURce<hw>]:CORRection:CSET:DATA:SGAMma:PHASe:POINts?.....	703
[:SOURce<hw>]:CORRection:CSET:DATA[:SENSor<ch>][:POWer]:SONCe.....	703
[:SOURce<hw>]:CORRection:CSET[:SELeCt].....	707
[:SOURce<hw>]:CORRection:DEXChange:AFILe:CATalog?.....	704
[:SOURce<hw>]:CORRection:DEXChange:AFILe:EXTension.....	704
[:SOURce<hw>]:CORRection:DEXChange:AFILe:SELeCt.....	705
[:SOURce<hw>]:CORRection:DEXChange:AFILe:SEParator:COLumn.....	705
[:SOURce<hw>]:CORRection:DEXChange:AFILe:SEParator:DECimal.....	706
[:SOURce<hw>]:CORRection:DEXChange:EXECute.....	706
[:SOURce<hw>]:CORRection:DEXChange:MODE.....	706
[:SOURce<hw>]:CORRection:DEXChange:SELeCt.....	707
[:SOURce<hw>]:CORRection:MLEVel:STATe.....	708
[:SOURce<hw>]:CORRection:VALue?.....	708
[:SOURce<hw>]:CORRection:ZERoing:STATe.....	709
[:SOURce<hw>]:CORRection[:STATe].....	708
[:SOURce<hw>]:DM:FILTer:PARAmeter.....	647
[:SOURce<hw>]:FM:EXTernal:COUPLing.....	710
[:SOURce<hw>]:FM:INTernal:FREQuency.....	710
[:SOURce<hw>]:FM:MODE.....	710
[:SOURce<hw>]:FM:SENSitivity?.....	711
[:SOURce<hw>]:FM:SOURce.....	711
[:SOURce<hw>]:FM:STATe.....	712
[:SOURce<hw>]:FM[:DEViation].....	709
[:SOURce<hw>]:FREQuency:CENTer.....	713
[:SOURce<hw>]:FREQuency:LOSCillator:MODE.....	714
[:SOURce<hw>]:FREQuency:LOSCillator:OUTPut:STATe.....	714
[:SOURce<hw>]:FREQuency:MANual.....	715
[:SOURce<hw>]:FREQuency:MODE.....	716
[:SOURce<hw>]:FREQuency:MULTiplier.....	717
[:SOURce<hw>]:FREQuency:OFFSet.....	717
[:SOURce<hw>]:FREQuency:PHASe:CONTinuous:STATe.....	717
[:SOURce<hw>]:FREQuency:SPAN.....	718
[:SOURce<hw>]:FREQuency:STARt.....	718
[:SOURce<hw>]:FREQuency:STEP:MODE.....	720
[:SOURce<hw>]:FREQuency:STEP[:INCRement].....	719
[:SOURce<hw>]:FREQuency:STOP.....	719
[:SOURce<hw>]:FREQuency[:CW FIXed].....	714
[:SOURce<hw>]:FREQuency[:CW FIXed]:RCL.....	715
[:SOURce<hw>]:INPut:MODext:IMPedance.....	721
[:SOURce<hw>]:IQ:CREStfactor.....	724
[:SOURce<hw>]:IQ:GAIN.....	724
[:SOURce<hw>]:IQ:IMPairment:IQRatio[:MAGNitude].....	725
[:SOURce<hw>]:IQ:IMPairment:LEAKage:I.....	725
[:SOURce<hw>]:IQ:IMPairment:LEAKage:Q.....	725
[:SOURce<hw>]:IQ:IMPairment:QUADrature[:ANGLE].....	726

[:SOURce<hw>]:IQ:IMPairment[:STATe].....	726
[:SOURce<hw>]:IQ:OUTPut:DiGital:CDEvice?.....	732
[:SOURce<hw>]:IQ:OUTPut:DiGital:PON.....	733
[:SOURce<hw>]:IQ:OUTPut:DiGital:POWer:LEVel.....	733
[:SOURce<hw>]:IQ:OUTPut:DiGital:POWer:PEP.....	734
[:SOURce<hw>]:IQ:OUTPut:DiGital:POWer:STEP:MODE.....	735
[:SOURce<hw>]:IQ:OUTPut:DiGital:POWer:STEP[:INCRement].....	734
[:SOURce<hw>]:IQ:OUTPut:DiGital:SRATE.....	735
[:SOURce<hw>]:IQ:OUTPut:DiGital:SRATE:FIFO[:STATus]?.....	736
[:SOURce<hw>]:IQ:OUTPut:DiGital:SRATE:SOURce.....	736
[:SOURce<hw>]:IQ:OUTPut:DiGital:STATe.....	737
[:SOURce<hw>]:IQ:OUTPut:LEVel.....	730
[:SOURce<hw>]:IQ:OUTPut:POWer:VIA.....	735
[:SOURce<hw>]:IQ:OUTPut[:ANALog]:BIAS:COUPling[:STATe].....	729
[:SOURce<hw>]:IQ:OUTPut[:ANALog]:BIAS:I.....	729
[:SOURce<hw>]:IQ:OUTPut[:ANALog]:BIAS:OPTimization[:RF]:STATe.....	730
[:SOURce<hw>]:IQ:OUTPut[:ANALog]:BIAS:Q.....	729
[:SOURce<hw>]:IQ:OUTPut[:ANALog]:MODE.....	731
[:SOURce<hw>]:IQ:OUTPut[:ANALog]:OFFSet:I.....	729
[:SOURce<hw>]:IQ:OUTPut[:ANALog]:OFFSet:Q.....	729
[:SOURce<hw>]:IQ:OUTPut[:ANALog]:POWer:PEP:RESult?.....	730
[:SOURce<hw>]:IQ:OUTPut[:ANALog]:TYPE.....	731
[:SOURce<hw>]:IQ:SOURce.....	726
[:SOURce<hw>]:IQ:STATe.....	726
[:SOURce<hw>]:IQ:SWAP[:STATe].....	727
[:SOURce<hw>]:IQ:WBState.....	727
[:SOURce<hw>]:LFOutput:FREQuency:MANual.....	738
[:SOURce<hw>]:LFOutput:FREQuency:MODE.....	739
[:SOURce<hw>]:LFOutput:FREQuency:STARt.....	739
[:SOURce<hw>]:LFOutput:FREQuency:STOP.....	740
[:SOURce<hw>]:LFOutput:SWEep[:FREQuency]:DWELl.....	741
[:SOURce<hw>]:LFOutput:SWEep[:FREQuency]:EXECute.....	741
[:SOURce<hw>]:LFOutput:SWEep[:FREQuency]:MODE.....	741
[:SOURce<hw>]:LFOutput:SWEep[:FREQuency]:POINts.....	742
[:SOURce<hw>]:LFOutput:SWEep[:FREQuency]:RUNning?.....	743
[:SOURce<hw>]:LFOutput:SWEep[:FREQuency]:SHAPE.....	743
[:SOURce<hw>]:LFOutput:SWEep[:FREQuency]:SPACing.....	744
[:SOURce<hw>]:LFOutput:SWEep[:FREQuency]:STEP:LOGarithmic.....	745
[:SOURce<hw>]:LFOutput:SWEep[:FREQuency]:STEP[:LINear].....	744
[:SOURce<hw>]:LIST:CATalog?.....	747
[:SOURce<hw>]:LIST:DELeTe.....	748
[:SOURce<hw>]:LIST:DELeTe:ALL.....	748
[:SOURce<hw>]:LIST:DEXChange:AFILe:CATalog?.....	749
[:SOURce<hw>]:LIST:DEXChange:AFILe:EXTension.....	749
[:SOURce<hw>]:LIST:DEXChange:AFILe:SELect.....	750
[:SOURce<hw>]:LIST:DEXChange:AFILe:SEPArator:COLumn.....	750
[:SOURce<hw>]:LIST:DEXChange:AFILe:SEPArator:DECimal.....	751
[:SOURce<hw>]:LIST:DEXChange:EXECute.....	751
[:SOURce<hw>]:LIST:DEXChange:MODE.....	752
[:SOURce<hw>]:LIST:DEXChange:SELect.....	752

[:SOURce<hw>]:LIST:DWELI.....	752
[:SOURce<hw>]:LIST:FREE?.....	753
[:SOURce<hw>]:LIST:FREQUency.....	753
[:SOURce<hw>]:LIST:FREQUency:POINts?.....	754
[:SOURce<hw>]:LIST:INDex.....	754
[:SOURce<hw>]:LIST:INDex:STARt.....	754
[:SOURce<hw>]:LIST:INDex:STOP.....	755
[:SOURce<hw>]:LIST:LEARn.....	755
[:SOURce<hw>]:LIST:MODE.....	755
[:SOURce<hw>]:LIST:POWer.....	756
[:SOURce<hw>]:LIST:POWer:POINts?.....	756
[:SOURce<hw>]:LIST:RESEt.....	757
[:SOURce<hw>]:LIST:SELEct.....	757
[:SOURce<hw>]:LIST:TRIGger:EXECute.....	757
[:SOURce<hw>]:LIST:TRIGger:SOURce.....	758
[:SOURce<hw>]:MODulation[:ALL][:STATe].....	758
[:SOURce<hw>]:PHASe.....	759
[:SOURce<hw>]:PHASe:REFerence.....	759
[:SOURce<hw>]:PM:EXTErnal:COUPling.....	760
[:SOURce<hw>]:PM:MODE.....	760
[:SOURce<hw>]:PM:SENSitivity?.....	761
[:SOURce<hw>]:PM:SOURce.....	761
[:SOURce<hw>]:PM:STATe.....	762
[:SOURce<hw>]:PM[:DEViation].....	760
[:SOURce<hw>]:POWer:ALC:OMODE.....	763
[:SOURce<hw>]:POWer:ALC:SONCe.....	763
[:SOURce<hw>]:POWer:ALC[:STATe].....	763
[:SOURce<hw>]:POWer:ATTenuation:RFOFF:MODE.....	764
[:SOURce<hw>]:POWer:EMF:STATe.....	764
[:SOURce<hw>]:POWer:LIMit[:AMPLitude].....	766
[:SOURce<hw>]:POWer:MANual.....	767
[:SOURce<hw>]:POWer:MODE.....	768
[:SOURce<hw>]:POWer:PEP?.....	768
[:SOURce<hw>]:POWer:POWer.....	768
[:SOURce<hw>]:POWer:STARt.....	769
[:SOURce<hw>]:POWer:STEP:MODE.....	770
[:SOURce<hw>]:POWer:STEP[:INCRement].....	769
[:SOURce<hw>]:POWer:STOP.....	770
[:SOURce<hw>]:POWer[:LEVel][:IMMediate]:OFFSet.....	765
[:SOURce<hw>]:POWer[:LEVel][:IMMediate]:RCL.....	766
[:SOURce<hw>]:POWer[:LEVel][:IMMediate][:AMPLitude].....	765
[:SOURce<hw>]:PULM:POLarity.....	773
[:SOURce<hw>]:PULM:SOURce.....	773
[:SOURce<hw>]:PULM:STATe.....	774
[:SOURce<hw>]:SWEep:POWer:DWELI.....	784
[:SOURce<hw>]:SWEep:POWer:EXECute.....	784
[:SOURce<hw>]:SWEep:POWer:MODE.....	784
[:SOURce<hw>]:SWEep:POWer:POINts.....	785
[:SOURce<hw>]:SWEep:POWer:RETRace.....	786
[:SOURce<hw>]:SWEep:POWer:RUNNing?.....	786

[:SOURce<hw>]:SWEep:POWer:SHApe.....	786
[:SOURce<hw>]:SWEep:POWer:SPACing:MODE?.....	787
[:SOURce<hw>]:SWEep:POWer:STEP[:LOGarithmic].....	787
[:SOURce<hw>]:SWEep:RESet[:ALL].....	787
[:SOURce<hw>]:SWEep[:FREQuency]:DWELI.....	778
[:SOURce<hw>]:SWEep[:FREQuency]:EXECute.....	779
[:SOURce<hw>]:SWEep[:FREQuency]:MODE.....	779
[:SOURce<hw>]:SWEep[:FREQuency]:POINts.....	780
[:SOURce<hw>]:SWEep[:FREQuency]:RETRace.....	780
[:SOURce<hw>]:SWEep[:FREQuency]:RUNNing?.....	781
[:SOURce<hw>]:SWEep[:FREQuency]:SHApe.....	781
[:SOURce<hw>]:SWEep[:FREQuency]:SPACing.....	781
[:SOURce<hw>]:SWEep[:FREQuency]:STEP:LOGarithmic.....	783
[:SOURce<hw>]:SWEep[:FREQuency]:STEP[:LINear].....	782
{[TRACE] LIST [#]: Pos0:State0; Pos1:State1; ...PosN-1:StateN-1}.....	497
{CLOCK: frequency}.....	492
{COMMENT: string}.....	492
{CONTROL LENGTH: ControlLength}.....	495
{CONTROL LIST WIDTH4-Length: #m0m1...mx...mM-1}.....	502
{COPYRIGHT: string}.....	493
{DATA BITLENGTH: BitLength}.....	493
{DATA LIST-Length: #d0d1...dx...dN-1...}.....	493
{DATE: yyyy-mm-dd;hh:mm:ss}.....	494
{EMPTYTAG-Length: #EmptySequence}.....	494
{LEVEL OFFS: RMSOffset_dB,PeakOffset_dB}.....	496
{MWV_SEGMENT_CLOCK_MODE: Mode}.....	500
{MWV_SEGMENT_CLOCK: ClockSeg0, ClockSeg1, ..., ClockSegN-1}.....	501
{MWV_SEGMENT_COUNT: NumOfSeg}.....	499
{MWV_SEGMENT_FILES: "FileNameSeg0.wv", "FileNameSeg1.wv", ..., "FileNameSegN-1.wv"}.....	502
{MWV_SEGMENT_LENGTH: SamplesSeg0, SamplesSeg1, ..., SamplesSegN-1}.....	499
{MWV_SEGMENT_LEVEL_OFFS: RMSOffs_dBSg0,PeakOffs_dBSg0, ..., RMSOffs_dBSgN-1, PeakOffs_dBSgN-1}.....	502
{MWV_SEGMENT_START: SampleStartOffsetSeg0, SampleStartOffsetSeg1, ..., SampleStartOffsetSegN-1}.....	500
{MWV_SEGMENTx_COMMENT: text}.....	502
{SAMPLES: Samples}.....	497
{TYPE: magic, xxxxxxxx}.....	491
{WAVEFORM-Length: #I0Q0I1Q1...IxQx...IN-1QN-1...}.....	498
*CLS.....	484
*ESE.....	484
*ESR?.....	484
*IDN?.....	485
*IST?.....	485
*OPC.....	485
*OPT?.....	485
*PRE.....	486
*PSC.....	486
*RCL.....	486
*RST.....	486
*SAV.....	487

*SRE.....	487
*STB?.....	487
*TRG.....	487
*TST?.....	487
*WAI.....	488
SENSe<ch>[:POWer]:SNUMber?.....	565
SENSe<ch>[:POWer]:STATus[:DEVice]?.....	566
SENSe<ch>[:POWer]:SVERsion?.....	566
SENSe<ch>[:POWer]:TYPE?.....	567

Index

Symbols

*OPC	472
*OPC?	472
*RST	481
*WAI	472
>L	448
>R	448
&LLO	448
50 - Extern reference out of range or disconnected	818
140 - This modulation forces other modulations off	818
180 - Adjustment failed	818
182 - Adjustment data missing	818
183 - Adjustment data invalid	818
200 - Cannot access hardware	818
201 - Hardware revision out of date	818
202 - Cannot access the EEPROM	818
203 - Invalid EEPROM data	818
204 - river initialization failed	818
241 - No current list	818
242 - Unknown list type specified	819
261 - Waveform Protected	819
460 - Cannot open file	819
461 - Cannot write file	819
462 - Cannot read file	819
463 - Filename missing	819
464 - Invalid filename extension	819
465 - File contains invalid data	819

A

Abort button	105
Abort calculation	105
AC supply	28
Accept	
Security Settings	152
Accept - MCCW	429
Accept Carrier Table - MCCW	429
Access denied	96
Additional White Gaussian Noise (option R&S SMJ-K62)	75
Additive Noise	295, 296
Adjust All	131
Adjust FM Offset	522
Adjust I/Q modulator	132
Adjust Level	131
Adjust Synthesis	131
Adjust Synthesis Extension	131
Adjustment active	
Reference oscillator	212
Adjustment frequency	
Reference oscillator	212
Adjustment Path A	131
Adjustments	
All	131
ALC (automatic level control)	220, 763
ALC Auto	816
ALC On	220, 816
ALC S&H	816
ALC Table	816
AM Depth	243
AM External Coupling	244
AM Sensitivity	244, 245
AM Source	243

AM State	243
Amplitude	
Annotation (setup security)	151
Amplitude of test signal	392
Analog Impairments	284
Analog Wideband I/Q In	284
Angle alpha	346
Annotation	
Amplitude (security)	151
Frequency (security)	151
Aperture time	
Power sensors	239
Append	402, 409
Append Blank	403
Application cards	16
Application notes	16
Apply Assistant Settings	421, 605
ARB	
Required options	367
ARB Multi Carrier	
carrier frequency	422
conflict	423, 599
mode	413, 598
ARB sequencer mode	395
ARbitrary Waveform Generator	367
Architecture of the instrument	71
Arm	380, 433
Arm Trigger	583
DM	363
Armed_Auto	379, 590
DM	362
Armed_Retrigger	379, 590
DM	362
Arrow keys	24
ASCII file import/export	
List Mode	273
ASK Depth	346
Assemblies display	132
ATN	823
Attention	823
Attenuation	
DM	360
Attenuator Mode	218
Attenuator Settings	
Fixed Range (PEP) in	219
mode	218
RF OFF Mode	219
AttFixed	816
Auto	379, 590
DM	362
Auto once	
Power Sensors	239
Auto Once - Power Sensors	563
Autonegotiation	
Failed	819
AUX I/O interface	145
Avoiding signal gaps	399
Avoiding wrap-around	399

B

B x T	
DM	349

Bandwidth		
DM	349	
Baseband Connection Selftest	139	
Baseband Gain (I/Q)	287, 727	
Baseband generator (option R&S SMJ-B9/B10/B11)	75	
Baseband input module (option R&S SMJ-B17)	75	
Baseband main module (option R&S SMJ-B13)	75	
Baseband Only	360	
Baseband section	75	
Baseband Trigger Input Slope	143	
BB-AM State	245	
Beamformed signal		
Generation	213	
Bias - I/Q out	304	
Binary data		
Edit, rules	511	
Bit energy to noise power density	298	
Bit Error Rate Measurement	180, 511	
Bit Rate - AWGN	298	
BITCLK	825	
BLER Type	197	
Block Error Rate Measurement	180, 511	
Boolean parameters	467	
Brochures	16	
Browser settings		
LXI	62	
BURST	825	
Burst gate	321	
BUSY	814	
C		
Carrier + Interferer PEP	300	
Carrier + Interferer Power	300	
Carrier + Noise PEP	300	
Carrier + Noise Power	300	
Carrier Delay	422	
Carrier frequency	422	
Carrier Gain	422	
Carrier Graph	418	
Carrier Graph - MCCW	430	
Carrier Index	422	
Carrier leakage	290	
Carrier power - AWGN	299	
Carrier spacing		
Depends on	414	
Carrier Spacing	598	
Carrier Spacing - MCCW	427	
Carrier Start	420, 608	
Carrier Start - MCCW	428	
Carrier State	420, 422, 608	
Carrier State - MCCW	428	
Carrier Stop	420, 608	
Carrier Stop - MCCW	428	
Carrier table	417	
Carrier Table - MCCW	429	
Carrier Table Assistant	420, 608	
Carrier Table Assistant - MCCW	428	
Carrier/Noise Ratio	298	
Case-sensitivity		
SCPI	463	
CCDF display	178	
Center Freq	266	
Change password		
Setup (security)	151	
Channel x	388	
Check front panel	139	
Performing	140	
Settings	140	
Clear status		
Remote	484	
Clipping	415	
Clock Frequency	376	
Clock Input Slope	143	
Clock Mode	390, 436, 582	
DM	366	
Clock Multiplier	390, 436, 582	
DM	366	
Clock Output Mode	143	
Clock Parameter	389	
Clock rate	376, 402	
Clock rate mode	403	
Clock Reference	316	
Clock Slope	190, 198	
Clock Source	389, 436, 583	
DM	366	
Coding		
DM	345	
Colon	468	
Column Separator Import/Export - User Correction data	227	
Comma	468	
Command sequence		
recommendation	481	
Remote	488	
Commands	441	
Colon	468	
Comma	468	
Command line structure	468	
Common	441	
Double dagger	468	
GBIP, addressed	445	
GBIP, universal	445	
Instrument control	441	
Overlapping	470	
Question mark	468	
Quotation mark	468	
SCPI confirmed	441	
Sequential	470	
Syntax elements	468	
White space	468	
Comment	405	
Common commands		
Syntax	462	
Computer name		
Changing	46	
CONDition	476	
Configuration list		
Multi segment waveform	396	
Configure Control Signal	356	
Confirm user password		
Setup (security)	151	
Conflict	423, 599	
Connected device - Digital I/Q Output Settings	309	
Connection to an external controller	48	
Connector		
AUX I/O	29	
BERT	30	
CLOCK	25, 28	
CLOCK OUT	30	
DATA	25, 28	
EXT MOD	29	
GPIB	29	
I	25, 28	

I OUT	28
I OUT BAR	28
IEC/IEEE	29
INSTR TRIG	30
LAN	30
LF	27
LO IN	30
LO OUT	30
MARKER 1, 2	26, 27
MARKER 3	27
Monitor	29
Q	25, 28
Q OUT	28
Q OUT BAR	28
REF IN	28
REF OUT	28
RF	25, 30
SENSOR	26
TRIGGER 1	26
TRIGGER 1, 2	30
USB	26
USB type A	29
USB type B	29
USER	30
Const I/Q test signal	369
Const IQ Test Signal	393
Constellation diagram	176
Control bus	823
Control list	
Edit, rules	511
Select, edit, new	165
Control Lists	
DM	351
Control signals	321
Controller, external	48
Copy	
Several files	167
Copy instrument settings	166
Copy, data editor	354
Counter	132, 527
Couple I/Q Bias	304
Coupling mode	248
Coupling mode - EXT MOD (AM)	244
CRC Order	197
Create	406, 419
Multi carrier waveforms	411
Create and Load	406, 419
Create multi segment waveforms	394
Create New Directory	167
Crest factor - baseband	311
Crest factor - Baseband Signal Power Measurement	312
Crest Factor - MCCW	427
Crest factor (I/Q)	287
Crest Factor Mode	414, 601
Current Freq (LF Sweep)	258
Current Freq (RF Sweep)	266
Current Frequency	132
Current Index	
List Mode	276
Current Level	272
Current range without recalculation	365
Current Range without Recalculation	389, 435, 586
Current Segment	382
Current Sensors	136
Cursor keys	24
Cursor Length	356
Cursor Position	357
Cut	166
Cut Off Frequency Factor	349
Cut, data editor	354
CW (continuous wave)	321
CW Interferer	295
CW Mode	825
CW Switching	348
CW/Mod	321
D	
DATA	825
Data Bits	187
Data Enable	191, 198
Data list	
Edit, rules	511
Select, edit, new	164
Data List	315
Data Lists	
DM	351
Data pattern	
DM	342
Data Polarity	190, 198
Data sheet	16
Data Source	
DM	342
Data Valid	823
DAV	823
DCL	445
Deactivate RF output	211
Decimal Point Import/Export - List Mode data	279
Decimal Point Import/Export - User Correction data	227
DEF	466
Default instrument settings	37, 128, 489
Default settings	374, 412
DM	340
Default settings - MCCW	425
Default values	
Remote	486
Delay	
Marker	365
Delay - Falling Edge of Ramp Envelope	360
Delay - Rising Edge of Ramp Envelope	360
Delay - Trigger	
DM	364
Delay Start	421, 599, 605
Delay Step	421, 605
Delete	402, 409
Delete instrument settings	167, 551
Delta Phase	205
Desired Crest Factor - MCCW	428
Destination - Hardcopy	154
Destination Import/Export	
User Correction data	228
Destination Import/Export - List Mode data	280
Deviation	
FSK Modulation	346
Variable FSK Modulation	348
Device ID	135
Device-specific commands	441
Device-specific error messages	817
DHCP	45
DHCP server	
LAN configuration	46
Differential coding	
DM	345
Differential output	302

- Differential settings storing 160, 342
- Digital I/Q Output - EX-IQ-BOX Settings 307
- Digital I/Q Output peak level - I/Q OUT 308
- Digital I/Q Output Peak Level - I/Q OUT 308
- Digital I/Q Output Power-On State - I/Q OUT 309
- Digital I/Q Output State - I/Q OUT 306
- Digital I/Q Output Step width - I/Q OUT 308
- Digital I/Q Output Variation Active - I/Q OUT 308
- Digital I/Q Output Variation Step - I/Q OUT 308
- Digital output module (option R&S SMJ-B18) 75
- Display 89
- Display I/Q Output Level Via 308
- Display Mode - AWGN 296
- Display Output Results - AWGN 296
- Display priority
 - Power sensors 236
- DISPlay subsystem 528
- DNS server
 - LAN configuration 46
- Documentation Overview 15
- Double dagger 468
- DOWN 466
- Duration - Baseband Signal Power Measurement 312
- Dwell time
 - RF sweep 267
- Dwell Time 259, 272, 276
 - List Mode 276
- E**
- Edge form of ramp envelope
 - DM 359
- Edge slope of ramp envelope 360
- Edit
 - Binary data 511
- Edit User Correction Data 224
- EFC (Electronic Frequency Control) 209
- Electrostatic discharge 32
- EMF - Level display 220
- EMI suppression 32
- ENABLE 476
- Enable registers
 - Remote 486
- Enter License Key 135
- EOI 823
- Error log 820
- Error messages 92, 813
 - Adjustment data invalid (183) 818
 - Adjustment data missing (182) 818
 - Adjustment failed (180) 818
 - Cannot access hardware (200) 818
 - Cannot access the EEPROM (202) 818
 - Cannot open file (460) 819
 - Cannot read file (462) 819
 - Cannot write file (461) 819
 - Driver initialization failed (204) 818
 - Extern reference out of range or disconnected (50) .. 818
 - File contains invalid data (465) 819
 - Filename missing (463) 819
 - Hardware revision out of date (201) 818
 - Invalid EEPROM data (203) 818
 - Invalid filename extension (464) 819
 - No current list (241) 818
 - This modulation forces other modulations off (140) ..818
 - Unknown list type specified (242) 819
 - Waveform Protected (261) 819
- Error Messages 816
 - device-specific 817
 - SCPI 817
- Error messages - display list 794
- Error queue 477
- Error queue query 792, 793, 794
- Error queues
 - recommendations 482
- Errors 187, 194
- ESD 32
- ESE (event status enable register) 478
- ESR 474
- ESR (event status register) 478
- EVENT 476
- Event status enable register (ESE) 478
 - Remote 484
- Event status register (ESR) 478
 - Remote 484
- EX-IQ-BOX Settings - Digital I/Q Output 307
- Exclude Frequency 162
- Exclude Level 162
- Execute Next Segment 388, 627
- Execute Single
 - List Mode 275
- Execute single sweep
 - Frequency sweep 265
- Execute Single Sweep
 - Level Sweep 271
- Execute Single Sweep - LF Sweep 257
- Execute Trigger 351, 376, 380, 433, 584
- Execute:Baseband Connection Selftest 801
- Expiration date of option 134
- Export Deactivation Response 135
- EXT REF 814
- EXT TUNE 825
- Extension Import/Export - List Mode data 279
- Extension Import/Export - User Correction data 227
- External frequency
 - Reference oscillator 212
- External mode - Local Oscillator 212
- External modulation data 315
- External modulation signal 242
 - FM 246
 - φM 248
- External Restart 191
- External Trigger Delay
 - DM 364
- Eye diagram 177
- F**
- Factory Preset 152
- Fall Delay 360
- Fast Save 160, 342
- FIFO Status - Digital I/Q Output Settings 307
- FIFO Status - OK 307
- FIFO Status - Overflow 307
- FIFO Status - Underrun 307
- File 423
- File - Hardcopy dialog 154
- File list 548
- File Management 374
- File menu
 - Save/Recall 159
- File Name - Hardcopy 154, 155
- File setup - Hardcopy 155
- File size 609

- File type selection 166
- Fill Table
- List Mode 277
- Fill Table - List mode 280
- Fill Table From 281
- Fill Table Range 229, 281
- Filter
- DM 349
 - Power Sensors 238
- Filter Cut Off Frequency 415
- Filter Length
- Power Sensors 238
- Filter Length - Power Sensors 561, 562, 563
- Filter parameter
- Impact 336
- Filter Parameter
- DM 349
- Firmware version 134
- Fix marker delay to current range 365, 389, 436, 585
- Floating licences 134
- FM Deviation 247
- FM External Coupling 248
- FM Mode 247
- FM Sensitivity 247
- FM Source 247
- FM State 246
- FM-DC mode 209
- FREQ OFFSET 813
- Frequency
- Annotation (setup security) 151
 - LF Generator 243, 247, 250, 254
 - List Mode 277
 - Multiplier 203
 - PM 253
 - Power sensors 237
 - Pulse modulation 253
 - RF signal 201
 - Set Frequency 201
- Frequency - RF sweep 265, 266
- Frequency - Test Signal ARB 391
- Frequency (status bar)
- RF signal 202
- Frequency dialog
- RF signal 202
- Frequency display 90
- Frequency of test signal 392
- Front panel key emulation 122
- Front panel test
- Performing 140
- FSK Deviation 346
- FSK Type (Variable FSK) 348
- Full Range 132
- Fuses 35
- G**
- Gain 600
- Impairment 289
- Gain (I/Q) 287
- Gain Imbalance 289
- Gain Start 420
- Gain Step 420
- Generate Signal HD 392, 393, 394, 594
- Generate Signal HD - Test Signal 594
- Generate Signal HD - Test Signal ARB 594
- Generate Signal RAM 392, 393, 394, 593
- Generate Signal RAM - Test Signal ARB 593
- GET 445
- Getting started 71
- Global Trigger/Clock Settings 390, 437
- Global Trigger/Clock/External Input Settings 141
- Goto local
- Remote channel settings 147
- GPIO 147
- bus address 146
 - Characteristics 444
 - interface messages 445
 - Remote control interface 439
- GPIO address 446
- Graphical display of output signal 168
- Graphics block 168
- GTL 445
- H**
- Hardcopy - Destination 154, 533
- Hardcopy - File setup 155
- Hardcopy Device Size 539
- Hardcopy dialog - File 154
- Hardcopy Format 539
- Hardware Config 132
- Hardware options 133
- HDD Streaming 376
- High Accuracy Level Adjustment 131, 524
- High quality optimization 293
- HiSLIP
- Protocol 443
 - Resource string 442
- HOP (hopping) 145
- I**
- I Offset 290
- I Value - Test Signal ARB 393
- I/Q diagram 174
- I/Q modulation 282, 284
- I/Q modulation - baseband gain 287, 727
- I/Q modulation - Crest factor 287
- I/Q modulation - gain 287
- I/Q Swap - I/Q 285
- I/Q Wideband - I/Q 286
- I/QOutput Type - I/Q out 302
- Identification
- Remote 485
- IFC 445, 823
- Imbalance
- I/Q digital 292
- Imbalance - I/Q analog 285, 725
- Impairments analog 284
- Impairments digital 292, 311, 312, 671
- Impedance 190, 198
- External input 244, 248, 251, 253
- Impedance Data Input (ser/par) 142
- Impedance trigger/control signal input (ser/par) 142
- Import License Key 135
- Import/Export
- List Mode data 280
 - User Correction data 227, 228
- Import/Export - List Mode data 279
- INF 466
- INFO key 92
- Input
- BURST 825
 - CW Mode 825

DATA	825
EXT TUNE	825
LEV-ATT	825
USER 2	825
USER 3	825
USER 4	825
Input connector	25, 26, 28, 29, 30
Input Waveform File	421
Installed Assembly	133
Instrument Config	132
Instrument messages	440
Instrument settings	
Recall	161, 486, 552
Save	159, 487, 553
Instrument Trigger	143
Interface	
functions (GPIB bus)	824
Interface - AUX I/O	145
Interface Clear	823
Interface messages	440, 444
Interfaces	
GPIB	444
Internal adjustments	
Setup	130
Internal Baseband I/Q In	284
Interrupt	479
IP address	442
Changing	45
Not recognized	819
Remote Desktop	52
IST	474
IST flag	
Remote	485
K	
Key	
Arrow key	25
BACKSPACE	24
CLOSE	23
Cursor key	25
DIAGRAM	22
ENTER	24
ESC	22
FILE	22, 158
FREQ	22
HCOPY	20
HELP	20
HIDE	23
INFO	20
INSERT	24
LEVEL	22
LOCAL	20
MENU	23
MOD ON/OFF	22, 240
ON/OFF	23
PRESET	20, 37, 128
REARR	23
RECALCULATE	22
RF ON/OFF	22
SETUP	20, 129
TOGGLE	23
WINBAR	23
Key - HELP	157
Key - LOCAL	153
Key combinations	120
Keyboard	
Layout	144
Keyboard emulation	122
Keyboard Language	542
Keypad	23
Keywords	
see Mnemonics	462
L	
LAN	
Configuration	43
Interface	441
IP address	442
Remote control interface	439
VISA	442
VXI protocol	443
LAN connection	
Setup	151
LAN Status - LXI	147
Language Keyboard	542
Layout	
Keyboard	144
Leakage	
I/Q digital	292
Leakage - I/Q digital	670
Learn List Mode Data	276
Lev Att	
see Level attenuation	321
LEV ATT	825
Level	216
limit	218
Power sensors	235
RF output	217
uninterrupted setting	218
Level - Step width	219
Level (Avg.)	
Power sensors	236
Level attenuation	321
Level Attenuation	
DM	360
Level control	220, 763
Level display	90
Level display EMF	220
Level EMF - I/Q out	304
Level limit	
RF level	218
Level mode	403
Level mode - ARB	622
Level offset	218
Power Sensors	237
State (power sensors)	237
LEVEL OFFSET	814
Level Sweep	268
Level user correction	222
LevelSweep	815
LF Gen Frequency	243, 247, 250, 254
LF Gen Voltage	254
LF generator	253
LF Generator	
Frequency	243, 247, 250, 254
LF output	254
LF Output	
State	254

- LF sweep
 - Step lin 259
 - Step log 259
 - Step width 259
- LF Sweep 258
- LFSweep 815
- Licence for software option 134
- License Key 134
- Limit
 - Level 218
- Linux controller 53
- List Management
 - DM 343
- List mode 273
 - manual processing of lists 274
- List Mode Data 277
- List Range In 278
- ListMode 816
- LLO 445
- LO IN connector 212
- LO OUT output 212
- Load instrument settings 161, 486, 552
- Load list 405
- Load Sequencing List 409
- Load Waveform 374
- LOC-LLO 815
- Local oscillator 212
- Local to remote switchover 447, 448
- Login
 - Operating system 43
- LVDS Rate Selftest 139
- LXI 147
 - Browser interface 62
 - Browser settings 62
 - Configuration 60
 - LAN configuration 64
 - Ping 66
 - Remote trace (SCPI) 68
 - Web Control 67
- M**
- Maintenance 130
- Malfunctions
 - reacting 482
- Manual Remote Control 48
- Manual trigger 351
- Manual Trigger 376, 584
- Map output connector user x to 146
- Marker 324
- MARKER 3 825
- Marker CH x 591
- Marker Channel x
 - DM 365
- Marker Delay 365
- Marker Mode 388, 435
- Marker output signals 324
- Marker Pattern 592
- Marker Positions 357
- Marker trace
 - Periodical 495
- Marker x Delay 389, 435
- MAX 466
- Max Data Bits 189
- Max Errors 189, 197
- Max Received Blocks 197
- Maximum deviation 250
 - FM 247
- Measured external clock 390, 436
- Measured External Clock 367
- Menu structure
 - Access denied 96
 - Header 96
 - Menu area 96
- Messages
 - Commands 441
 - Instrument 440
 - Instrument responses 441
 - Interface 440
- MIN 466
- Minimum Noise/System Bandwidth Ratio - AWGN 295
- Mnemonics 462
 - Optional 464
- MOD OFF 813
- MOD ON/OFF Key 240
- Mode 189, 196, 413, 598
 - FM 247
 - Level Sweep 269
 - LF Gen 255
 - LF sweep 255
 - List Mode 274
 - ϕ M 250
 - RF frequency sweep 262
- Mode - LO Coupling 214
- Mode Import/Export - List Mode data 279
- Mode Import/Export - User Correction data 227
- Modular design 71
- Modulation
 - AM 242
 - BB-AM 244
 - DM 347
 - FM 246
 - PM 251
 - Pulse modulation 251
 - ϕ M 248
- Modulation - BB-AM 245
- Modulation data external 315
- Modulation Delay for ext. Data 348
- Modulation depth - AM 243
- Modulation deviation
 - FM 247
 - ϕ M 250
- Modulation I/Q 284
- Modulation input 29
- Modulation Type
 - DM 346
- Multi Carrier CW 424, 672
- Multi carrier waveforms 411
- Multi Segment table 401
- Multi segment waveform sequencing 395
- Multi Segment Waveforms 394
- Multi transmitter measurements 220
- Multiple files
 - Copy 167
- Multiplier 582
 - DM 366
 - Frequency 203
- N**
- NAN 466
- Navigation keys 24
- NDAC 823

- Network
 - Connection fails 819
- New list 406
- New password
 - Setup (security) 150
- New Sequencing List 409
- Next Segment 382
- Next Segment Mode 383
- NINF 466
- No Clock BERT 187
- No Clock BLER 195
- No Sync BERT 187
- No Sync BLER 195
- No-load voltage (EMF) 220
- Noise Bandwidth - AWGN 296
- Noise generator, switching on 295
- Noise Only 295, 296
- Noise power - AWGN 299
- Noise power Total Bandwidth - AWGN 300
- NRFD 823
- NRP-Z Info 136
- NRP-Z power viewer
 - use SParameter 239
- NTransition 476
- Number of Carriers 414
- Number of Carriers - MCCW 426
- Number of licences 134
- Numeric values
 - Special 466
- O**
- Offset 285
 - RF signal 203
- Offset - I/Q out 305
- Offset - Level 218
- Offset DC 393
- Old password
 - Setup (security) 150
- ON/OFF Ratio Marker 325, 388, 591
 - DM 365
- Online help 15
 - Working with 112
- Online manual 15
- Operating concept 71
- Operating manual 15
- Operating system 41
 - Login 43
 - service packs 42
- Operation complete
 - Remote 485
- Operation hours 133, 527
- Optimization
 - Fast 293
 - High quality 293
- Optimize Crest Factor 414, 601
- Optimize Crest Factor - MCCW 427
- Optimize I/Q Signals for RF Output 302
- Optimize internal I/Q-Impairments for RF Output 292
- Option
 - ARB Baseband Generator 367
 - Baseband Generator (B9/B10/B11) 313
 - Baseband Main Module (B13) 313
 - Hardware 133
 - R&S SMBV-K18 (Digital Baseband Connectivity) 306
 - Software 133
- Option - R&S SMx-B16 (Differential Output) 302
- Option: expiration date 134
- Options
 - Identification (remote) 485
- Options - Hardcopy 154
- Orientation- Hardcopy 541
- Oscillator
 - Reference 209
 - Source (reference) 211
- Out State - LO Coupling 214
- Output
 - BITCLK 825
 - BURST 825
 - DATA 825
 - LEV-ATT 825
 - LF 254
 - MARKER 3 825
 - SYMBCLK 825
 - USER 2 825
 - USER 3 825
 - USER 4 825
- Output connector 25, 26, 27, 28, 29, 30
- Output file
 - Multi segment waveform 396
- Output File 405, 418
- Output Mode - IQ Out 303
- Output queue 474
- Output Voltage - LF output 254
- OvenCold 816
- Overflow - Digital I/Q Output Settings 309
- Overflow Hold - Digital I/Q Output Settings 309
- Overlapping commands 470
 - Preventing 472
- Overload 232
- OVERLOAD 814
- Oversampling 644
 - DM 349
- Oversampling Auto State 645
- Oversampling factor 370
- P**
- Packing 811
- Paper size - Hardcopy 541
- Parallel poll register enable
 - Remote 486
- Parameters
 - Block data 468
 - Boolean 467
 - SCPI 465
 - Special numeric values 466
 - String 468
 - Text 467
 - Units 466
- Part numbers 132
- Password
 - Change (security password) 151
 - Confirm (security password) 151
 - New (security password) 150
 - Old (security password) 150
 - Remote Desktop 52
- Paste 166
- Paste, data editor 354
- Path reset 489
- Pattern
 - DM 342
- Pattern Ignore 192
- PCI bus 133

- Peak power - Baseband Signal Power Measurement 312
 - Peak power of baseband 311
 - Period 402
 - Periodical
 - Marker trace 495
 - Periodical markers 503
 - Permanent display
 - Power sensors 236
 - Phase
 - RF signal 204, 205
 - Phase coherence
 - Several instruments 213
 - Phase continuous Active 208
 - Phase continuous frequency
 - Settings 204
 - Phase Offset Q - Test Signal 596
 - Phase Offset Q - Test Signal ARB 391
 - Phase Start 421, 600
 - Phase Start - MCCW 428
 - Phase Step 421, 606
 - Phase Step - MCCW 429
 - PhiM
 - see ϕ M 248
 - Ping
 - LXI 66
 - Play list 388, 396, 406, 407
 - Play list file
 - Sequencing list file 396
 - Playlist
 - See play list 396
 - PM Frequency 253
 - Point-to-point connection 44
 - Polarity
 - Pulse Modulation 253
 - Polarity - No signal (blank) marker 146
 - Power 311
 - List Mode 277
 - Power - AWGN 299
 - Power - Baseband Signal Power Measurement 312
 - Power of starting carrier 420, 600
 - Power of starting carrier - MCCW 428
 - Power ramping 321
 - DM 359
 - Power reference 416
 - Power sensors
 - Aperture time 239
 - Auto once 239
 - Display priority 236
 - Filter 238
 - Frequency 237
 - Level 235
 - Level (Avg.) 236
 - Level offset 237
 - Permanent display 236
 - Power viewer 234
 - Source 237
 - State 235
 - State (level offset) 237
 - Type 235
 - Unit 236
 - Use default aperture time 239
 - zero 236
 - Power spectrum 179
 - Power Start 600
 - Power Start - MCCW 428
 - Power Step 607
 - Power Step - MCCW 428
 - Power-On Count 132, 133
 - Power-On Counter 527
 - Power-On State 220
 - PPC 445
 - PPE 474
 - PPU 445
 - PRBS 190
 - PRBS generator 314
 - PRBS Type
 - DM 342
 - Preset 37
 - Preset - instrument settings 128
 - Preset instrument settings 37, 489
 - Protect RF Output - ALC 222, 556
 - Protection 148
 - Protocol
 - VXI 443
 - PTRansition 476
 - Pulse Divider Marker 324, 388, 592
 - DM 365
 - Pulse Frequency Marker 324, 388, 593
 - DM 365
 - Pulse modulation 251
 - Frequency 253
 - Repetition frequency 253
 - Source 252
 - State 252
 - ϕ M
 - Mode 250
 - Modulation deviation 250
 - Source 249
 - ϕ M External Coupling 251
 - ϕ M Sensitivity 251
 - ϕ M State 249
- ## Q
- Q Offset 290
 - Q Value - Test Signal ARB 393
 - Quadrature Offset 290
 - Quadrature Offset - I/Q analog 285
 - Quadrature Offset - I/Q digital 292, 670
 - Queries 441, 469
 - Status 480
 - Question mark 468, 469
 - Questionable status register 478, 479
 - Quick Start Guide 15
 - Quotation mark 468
- ## R
- Rackmounting 35
 - Ramp Function 359
 - Ramp Time 360
 - Ratio Noise/System Bandwidth - AWGN 295
 - Recall instrument settings 161, 162, 486, 552
 - Recall intermediate 486
 - Recall Intermediate 163
 - Received Blocks 194
 - Recommendations
 - remote control programming 481
 - Rect test signal 369
 - Rect Test Signal 392
 - Reference
 - Source (oscillator) 211
 - Reference frequency
 - External 212

- Reference Mode - AWGN 297
 - Reference oscillator 209
 - Adjustment active 212
 - Adjustment frequency 212
 - External frequency 212
 - RF off state 211
 - Settings 211
 - Source 211
 - synchronization bandwidth 212
 - Registers 474
 - Release notes 16
 - REM-LLO 815
 - Remaining Time - Baseband Signal Power Measurement 312
 - REMOTE 815
 - Remote access 48
 - Remote channel
 - GPIO address 146
 - Remote channel settings 146
 - Goto local 147
 - GPIO resource (VISA resource string) 147
 - HISLIP resource (VISA resource string) 147
 - Network resource (Ethernet resource string) 147
 - Serial 147
 - Socket resource (VISA resource string) 147
 - USB VISA resource string 147
 - Remote control
 - Basics 439
 - GPIO address 446
 - Interfaces 439
 - Protocols 439
 - Remote Control
 - GPIO 449
 - Remote control switchover 447
 - Remote Desktop 50
 - Remote operation 50
 - Remote trace
 - LXI 68
 - Removing sensitive data 820
 - REN 823
 - Rename 167
 - File 552
 - Required options
 - ARB 367
 - Resart Marker 404
 - Reset 265
 - List Mode 275
 - Reset - Digital I/Q Output Settings 309
 - Reset - RF sweep 265
 - Reset Delta Phase Display 205
 - Reset instrument settings 37, 128, 489
 - Reset path 489
 - Reset values
 - Remote 486
 - Result 187, 194
 - Resulting CW Frequency - AWGN 296
 - Resulting I/Q Level EMF 304
 - Retrigger 379, 590
 - DM 362
 - Reverse power protection 232
 - Revisions 132
 - RF frequency
 - Multiplier 203
 - Settings 202
 - RF Frequency
 - Set frequency (dialog) 202
 - RF frequency vs. RF output frequency 201
 - RF Level
 - limit 218
 - RF OFF 199, 813
 - RF off state
 - Reference oscillator 211
 - RF ON 199
 - RF ON/OFF key 199
 - RF output
 - Power-on state 220
 - RF Output 199
 - RF output level 217
 - RF output state 200
 - RF section 76
 - RF signal
 - Frequency 201
 - Frequency dialog 202
 - Frequency offset 203
 - Multiplier 203
 - Offset 203
 - Phase 204
 - Phase adjustment 205
 - Set frequency (status bar) 202
 - User variation 203
 - RF State 200
 - RF sweep
 - Step lin 267
 - Step log 267
 - Step width 267
 - RFI signal generator, switching on 295
 - RFSweep 815
 - Rise Delay 360
 - Roll off factor
 - DM 349
 - Rotary knob 24
 - Run Update 136
 - Running 380, 432
 - DM 362
- ## S
- SAMBA/SMB
 - How to 167
 - Sample Rate Source - Digital I/Q Output Settings 307
 - Sample Rate Value- Digital I/Q Output Settings 307
 - Sample-and-Hold mode 763
 - Sample&Hold mode 220
 - Samples 402
 - Samples per Period 392
 - Samples per Period - Test Signal 596
 - Samples per Period - Test Signal ARB 391
 - Save
 - Control list, DM 358
 - DM 354
 - Save As
 - Control list, DM 358
 - Save immediate 159
 - Save instrument settings 159, 487, 553
 - Save intermediate 487
 - Save List 405
 - Save Sequencing List 409
 - Save/Recall 412
 - SCPI
 - Parameters 465
 - Syntax 462
 - Version 439
 - SCPI - error messages 817
 - SCPI confirmed commands 441

- SCPI remote trace
 - LXI 68
- Screen Saver 143
- SDC 445
- Search Once - ALC 222
- Security
 - Accept settings 152
 - Annotation amplitude (setup) 151
 - Annotation frequency (setup) 151
 - Change password (setup) 151
 - Confirm password (setup) 151
 - New password (setup) 150
 - Old password (setup) 150
 - Security password 150
- Security password
 - Security 150
 - Setup 150
- Security Password
 - Setup 151
- Security settings
 - LAN connection 151
- Security Settings
 - Security Password 151
 - USB Device 151
- Segment # 401
- Segment Down 402, 409
- Segment Marker 404
- Segment Up 402, 409
- Select ASCII Destination
 - User Correction data 228
- Select ASCII Destination - List Mode data 280
- Select ASCII Source
 - User Correction data 228
- Select file 164
- Select List 277
- Select NRP File 136
- Select operation
 - File menu 159
- Select Preset Type 357
- Select Ramp to Edit 356
- Select sensor
 - Power viewer 234
- Self-test
 - Remote 487
- Selftest
 - Baseband Connection Selftest 139
 - LVDS Rate 139
 - Tx Test 139
- Selftest:Execute:Baseband Connection Selftest 801
- Sensor
 - Power viewer 234
- Sequencing Graphic 409
- Sequencing List 388, 406, 407
- Sequential commands 470
- Serial bus 133
- Serial numbers 132
- Service manual 16
- Service packs 42
- Service request (SRQ) 477, 479
- Service request enable register (SRE) 477
 - Remote 487
- Set acc. to Standard
 - DM 343
- Set frequency
 - RF signal 202
- Set Noise power via 297
- Set to default 374, 412
 - DM 340
- Set to default - MCCW 425
- Setting commands 441
- Setting not possible 96
- Setting parameters 98
- Settings
 - Check front panel 140
 - Reference oscillator 211
- Setup
 - Accept security settings 152
 - Annotation amplitude (security) 151
 - Annotation frequency (security) 151
 - Change password (security) 151
 - Confirm password (security) 151
 - Internal adjustments 130
 - New password (security) 150
 - Old password (security) 150
 - Performing the front panel test 140
 - Security password 150
- Setup key 129
- Shape
 - RF Level Sweep 272
- Shape - LF Frequency Sweep 258
- Shape - RF Sweep 266
- Show level permanent - Power Sensors 561
- Signal + Interferer PEP 300
- Signal + Interferer Power 300
- Signal + Noise PEP 300
- Signal + Noise Power 300
- Signal Duration 379, 416, 432
- Signal Duration Unit 379
- Signal Duration Unit - Trigger 587
- Signal Level (RMS) 696
- Signal Period Mode 415
- Signal/Noise Ratio 298
- Sine test signal 369
- Sine Test Signals 391
- Slope - External baseband trigger 143
- Softkey 95
- Software options 133
- Source
 - FM 247
 - Level Sweep Trigger 269
 - LF sweep trigger 255
 - List Mode 274
 - Power sensors 237
 - Pulse modulation 252
 - φM 249
 - Reference oscillator 211
 - Reference Oscillator 776
 - RF frequency sweep trigger 262
- Source - AM 243
- Source - Baseband Signal Power Measurement 312
- Source - Power Sensors 566
- Source Import/Export
 - User Correction data 228
- Source Power Ramp Control 359
- Spacing
 - Level Sweep 272
- Spacing - LF Sweep 258
- Spacing - RF Sweep 266
- Span (RF sweep) 266
- SPD 445
- SPE 445
- Special characters
 - SCPI 465

Spectrum display	179	S&H	816
SRE	474	SYS CTRL	815
SRE (service request enable register)	477	Table	816
SRQ	823	UCorr	816
SRQ (service request)	477, 479	Status registers	474
Standard		CONDITION	476
DM	343	ENABLE	476
Standard settings	374, 412	EVENT	476
DM	340	model	475
Standard settings - MCCW	425	NTRansition	476
Standby mode	20	parts	475
Start		PTRansition	476
Power Sensors	559	Status reporting system	473
Start delay	421, 599	Application	479
Start Freq	265	Common commands	484
Start Freq - LF sweep	258	STB	474
Start Level	271	Step	
Start phase	421, 600	Level Sweep	272
Start phase - MCCW	428	Step lin	
Start select, data editor	353	LF sweep	259
Start/Stop Display Update	138	RF sweep	267
Starting gain	420	Step log	
Starting power	600	LF sweep	259
Starting power - MCCW	428	RF sweep	267
Startup complete	798	Step width	
State	186, 194, 374	Frequency	203
Adjustment (reference oscillator)	212	Level Sweep	272
ALC	222	LF sweep	259
DM	340	RF sweep	267
LF Output	254	Stop Freq - LF Sweep	258
List mode	274	Stop Freq - RF Sweep	266
Power sensors	235	Stop Level	272
Pulse modulation	252	Stopped	380, 432
ϕ M	249	DM	362
State - AWGN	295	Storing	811
State - Baseband Signal Power Measurement	311	Streaming Buffer	376, 616
State - digital Impairments	292, 671	Suffixes	464
State - MCCW	425	Support	820
State - User Correction	224	Sweep	
State Power Ramp Control	359	RF frequency sweep	262
Status		Start Level	271
Queries	480	Stop Level	272
Status byte		Trigger	265, 271
Remote	484, 487	Sweep - Center frequency	266
Status byte (STB)	477	Sweep - LF start frequency	258
Status information	813	Sweep - LF stop frequency	258
Status Information	135	Sweep - Trigger	257
status messages		Sweep shape	
FREQ OFFSET	813	RF Level Sweep	272
MOD OFF	813	Sweep shape - LF Frequency Sweep	258
OVERLOAD	814	Sweep shape - RF Sweep	266
RF OFF	813	Sweep spacing	
Status messages		Level Sweep	272
ALC On	816	Sweep spacing - RF Sweep	266
AttFixed	816	Symantec Antivirus	59
Auto	816	SYMBCLK	825
BUSY	814	Symbol Clock Multiplier	
EXT REF	814	DM	366
LEVEL OFFSET	814	Symbol Rate	
LevelSweep	815	DM	345
LFSweep	815	Sync. Output to External Trigger	363, 380, 433
ListMode	816	Synchronization bandwidth	
LOC-LLO	815	reference oscillator	212
OvenCold	816	Syntax elements	
REM-LLO	815	SCPI	468
REMOTE	815	SYS CTRL	815
RFSweep	815	System Bandwidth - AWGN	295

- System directory 543
- T**
- Tag type
- Clock 492
 - Control length 495
 - Emptytag length 494
 - Level offset 496
 - Magic 491
 - Samples 497
 - Segment count 499
 - Segment length 499
 - Segment start 500
 - Trace list 497
 - Waveform length 498
- Tag Type 501
- Comment 492
 - Control List Width4 502
 - Copyright 493
 - Data Bitlength 493
 - Data List 493
 - Date 494
 - Segment Clock Mode 500
 - Segment Comment 502
 - Segment Files 502
 - Segment Level Offset 502
- Target Crest Factor 415
- Target CW Frequency - AWGN 296
- Test
- Check front panel 140
- Test signal
- ARB generator 369
- Test Signal 391, 392
- Threshold 190, 198
- Threshold data input (ser/par) 142
- Threshold trigger/control signal input 142
- Trigger 189, 196
- BERT 521
 - BLER 521
 - Event (remote) 487
- Trigger Delay 382, 434
- Actual 365, 382
 - Expressed in time 364, 381
 - Resulting 365, 382
 - Unit 364, 381
- Trigger Delay External
- DM 364
- Trigger Delay Other Baseband
- DM 364
- Trigger Example 388
- Trigger Inhibit 365, 382, 434
- Trigger Input Slope 143
- Trigger Mode 379, 590
- Armed 432
 - Auto 432
 - DM 362
 - Retrigger 432
 - Single 432
- Trigger parameters
- DM 361
- Trigger Signal Duration 362
- Trigger signals 323
- Trigger source
- LF sweep 255
 - RF frequency sweep 262
- Trigger Source 380, 433
- DM 363
 - Level Sweep 269
 - List Mode 274
- Trigger Source - Graphics 171
- Triggering
- Multi segment waveform 397
 - Segment 397
- Triggering sweep manually 271
- Troubleshooting 813
- Tx Test Selftest 139
- Type
- Power sensors 235
 - Type - Power Sensors 567
- U**
- UCorr 816
- Ultr@VNC 53
- Uninterrupted level setting 218
- Unit 186, 194
- Power sensors 236
- Units 466
- Input 23
- UNIX controller 53
- Unmodulated signal 321
- UP 466
- Update - Setup System 137
- Update sensor 136
- USB Device - Setup 151
- Use default aperture time
- Power sensors 239
- Use Level Adjustment Data 132
- Use SParameter
- NRP-Z power viewer 239
- Use SParameters - Power Sensors 560
- USER 2 825
- USER 3 825
- USER 4 825
- User Clock 404, 620
- User Correction 222
- User Correction Data 224
- User Filter
- Catalog 350
 - Delete 350
 - Load 350
- User ID
- Remote Desktop 52
- User Mapping
- Catalog, DM 346
 - Delete, DM 346
 - Load, DM 346
- User Marker - AUX I/O Configuration 260, 268, 273, 278
- User Marker / AUX I/O Settings 390, 437
- User variation
- RF frequency settings 203
 - Variation active 204
 - Variation step 204
- V**
- Value - User Correction 224
- Variable FSK
- Deviation 348
- Variation Active 204
- Variation step 204
- Variation Step 203, 219

Vector diagram	175
Vector modulation	282
Virus protection	42
Virus-Protection Software	59
VISA	439, 442
Libraries	440
Resource string	440, 442
VISA resource string	
Ethernet	147
GPIB	147
HISLIP	147
Serial	147
Socket	147
USB	147
Visual check of signal characteristics	168
VNC connection	53
Voltage threshold	142
VXI protocol	443

W

Wait	
Remote	488
Wait Time	144
Warnings	92, 816
Waveform	
Edit, rules	511
Maximum length	371
optimizing	370
Waveform file	
Corrupted, reasons	511
Waveform File	374
Waveform Info	375, 401, 409
Web Control	
LXI	67
White papers	16
White space	468
Wideband setting - I/Q	284
Winbar	95
Windows 7	41
Windows Embedded Standard	
Access	43

Z

Zero	
power sensors	236
Zero - Power Sensors	567
Zoom	358